# INSTRUCTION MANUA

# CMP3-L Pyranometer

Revision: 2/09





# WARRANTY AND ASSISTANCE

This equipment is warranted by CAMPBELL SCIENTIFIC (CANADA) CORP. ("CSC") to be free from defects in materials and workmanship under normal use and service for **twelve (12) months** from date of shipment unless specified otherwise. \*\*\*\*\*\* **Batteries are not warranted.** \*\*\*\*\*\* CSC's obligation under this warranty is limited to repairing or replacing (at CSC's option) defective products. The customer shall assume all costs of removing, reinstalling, and shipping defective products to CSC. CSC will return such products by surface carrier prepaid. This warranty shall not apply to any CSC products which have been subjected to modification, misuse, neglect, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for a particular purpose. CSC is not liable for special, indirect, incidental, or consequential damages.

Products may not be returned without prior authorization. To obtain a Return Merchandise Authorization (RMA), contact CAMPBELL SCIENTIFIC (CANADA) CORP., at (780) 454-2505. An RMA number will be issued in order to facilitate Repair Personnel in identifying an instrument upon arrival. Please write this number clearly on the outside of the shipping container. Include description of symptoms and all pertinent details.

CAMPBELL SCIENTIFIC (CANADA) CORP. does not accept collect calls.

Non-warranty products returned for repair should be accompanied by a purchase order to cover repair costs.



780.454.2505 | fax 780.454.2655 | campbellsci.ca

# PLEASE READ FIRST

### About this manual

Please note that this manual was originally produced by Campbell Scientific Inc. (CSI) primarily for the US market. Some spellings, weights and measures may reflect this origin.

Some useful conversion factors:

Area:  $1 \text{ in}^2 \text{ (square inch)} = 645 \text{ mm}^2$ 

**Length:** 1 in. (inch) = 25.4 mm

1 ft (foot) = 304.8 mm1 yard = 0.914 m

1 mile = 1.609 km

**Mass:** 1 oz. (ounce) = 28.35 g

1 lb (pound weight) = 0.454 kg

**Pressure:** 1 psi (lb/in2) = 68.95 mb **Volume:** 1 US gallon = 3.785 litres

In addition, part ordering numbers may vary. For example, the CABLE5CBL is a CSI part number and known as a FIN5COND at Campbell Scientific Canada (CSC). CSC Technical Support will be pleased to assist with any questions.

# About sensor wiring

Please note that certain sensor configurations may require a user supplied jumper wire. It is recommended to review the sensor configuration requirements for your application and supply the jumper wire is necessary.

# CMP3-L Pyranometer Table of Contents

PDF viewers note: These page numbers refer to the printed version of this document. Use the Adobe Acrobat® bookmarks tab for links to specific sections.

1.	General Description	. 1
2.	Specifications	. 1
3.	Installation	. 2
4.	Wiring	. 4
5.	Example Programs	. 5
	5.1 Input Range 5.2 Multiplier 5.3 Offset 5.4 Example Programs 5.4.1 CR1000 Example Program 5.4.2 CR10X Example Program 5.5 Output Format Considerations	6 7 7
6.	Maintenance1	10
7.	Troubleshooting1	10
Fi	gures	
	3-1. CMP3-L Pyranometer Attached to CM225 Solar Sensor Mounting Stan 4-1. CMP3-L Schematic	
Ta	ables	
	<ul> <li>4-1. Differential Connections to Campbell Scientific Dataloggers</li></ul>	5 6

# CMP3-L Pyranometer

# 1. General Description

This manual provides information for interfacing the CMP3-L Pyranometer to various models of Campbell Scientific dataloggers. The CMP3-L is manufactured by Kipp & Zonen and then cabled by Campbell Scientific. Cable length is user specified.

The CMP3-L is shipped with an instruction manual provided by Kipp & Zonen that contains information concerning the CMP3-L's construction, spectral sensitivity, cosine response, and a simple sensor check out procedure. Included with the sensor and manual is a calibration certificate with the sensor calibration constant and serial number. Cross check this serial number against the serial number on your CMP3-L to ensure that the given calibration constant corresponds to your sensor.

The CMP3-L pyranometer is designed for continuous outdoor use. Due to its flat spectral sensitivity from 300 to 3000 nm, it can be used in natural sunlight, under plant canopies, in green houses or buildings, and inverted to measure reflected solar radiation. Two CMP3-Ls can be used in combination to measure albedo. The CMP3-L can also be used to measure most types of artificial light (Xenon lamps, Halogen lamps, etc.).

The CMP3-L pyranometer consists of a thermopile sensor, housing, dome, and cable. The thermopile is coated with a black absorbent coating. The paint absorbs the radiation and converts it to heat. The resultant temperature difference is converted to a voltage by the copper-constantan thermopile. The thermopile is encapsulated in the housing in such a way that it has a field of view of 180 degrees and the angular characteristics needed to fulfill the cosine response requirements.

# 2. Specifications

The CMP3-L is an ISO Second Class pyranometer. While the worst case accuracy for daily sums given by Kipp & Zonen is  $\pm 10\%$ , the typical accuracy is  $\pm 5\%$ .

### **ISO SPECIFICATIONS:**

Response Time 95%: 18 seconds Zero offset due to 200 W/m² thermal radiation: < 15 W m²² Zero offset due to temperature change of 5°K / hr: <  $\pm$ 4 W m²²

Non stability (% change/year):  $< \pm 1\%$ Non linearity (0 to 1000 W/m<sup>2</sup>):  $< \pm 2.5\%$ 

Directional error (at 80° with

1000 W/m<sup>2</sup> beam):  $< \pm 20 \text{ W m}^{-2}$ 

Temperature Dependence of  $\pm 5\%$  (-10° to + 40°C)

sensitivity:

Tilt response ( $\pm 80^{\circ}$ ) (at 1000 W/m<sup>2</sup>):  $\leq \pm 2\%$ 

OTHER SPECIFICATIONS

Expected accuracy for daily sums:  $\pm 10\%$ 

Spectral range (50% points, nm): 310 to 2800 nm Sensitivity: 5 to 20  $\mu$ V W<sup>-1</sup> m<sup>2</sup>

Typical signal output for atmospheric

applications: 0 to 15 mVImpedance:  $30 \text{ to } 100 \Omega$ Operating Temperature:  $-40^{\circ} \text{ to } +80^{\circ}\text{C}$ Max. irradiance:  $2000 \text{ Wm}^{-2}$ 

Detector: Copper-constantan multi junction

thermopile

Level accuracy: 1 degree

**DIMENSIONS / SHIPPING DIMENSIONS** 

CMP3-L: 3 in dia x 4 in / 8x12x4 in

WEIGHT/SHIPPING WEIGHT

CMP3-L: 1.2 lbs / 1.8 lbs

# 3. Installation

The CMP3-L is usually installed horizontally, but can also be installed at any angle including an inverted position. In all cases it will measure the flux that is incident on the surface that is parallel to the sensor surface.

Site the CMP3-L to allow easy access for maintenance while ideally avoiding any obstructions above the plane of the sensing element. It is important to mount the CMP3-L such that a shadow will not be cast on it at any time.

If this is not possible, try to choose a site where any obstruction over the azimuth range between earliest sunrise and latest sunset has an elevation not exceeding  $5^{\circ}$ . Diffuse solar radiation is less influenced by obstructions near the horizon. For instance, an obstruction with an elevation of  $5^{\circ}$  over the whole azimuth range of  $360^{\circ}$  decreases the downward diffuse solar radiation by only 0.8%.

The sensor should be mounted with the cable pointing towards the nearest magnetic pole, e.g., in the Northern Hemisphere point the cable toward the North Pole.

Tools required for installation on a tripod or tower:

Small and medium Phillips screwdrivers 5/16", 1/2" open end wrenches 5/32" Allen wrench
Tape measure
UV-resistant wire ties
Side-cut pliers
Compass
Step ladder

The CM225 Solar Sensor Mounting Stand is used to attach the CMP3-L to a vertical pipe (1.0 - 2.1" OD) as shown in Figure 3-1. The CMP3-L includes a base with two levelling screws, bubble level, and mounting screws.

### Attach the CMP3-L to the CM225 as follows:

- 1. Loosely mount the pyranometer on the mounting arm. Do not fully tighten the two mounting screws.
- 2. Turn the levelling screws as required to bring the bubble of the spirit level within the ring.
- 3. Tighten the mounting screws to secure the assembly in its final position. Check that the pyranometer is still correctly levelled and adjust as necessary.
- 4. Attach the white plastic sun screen to the pyranometer.

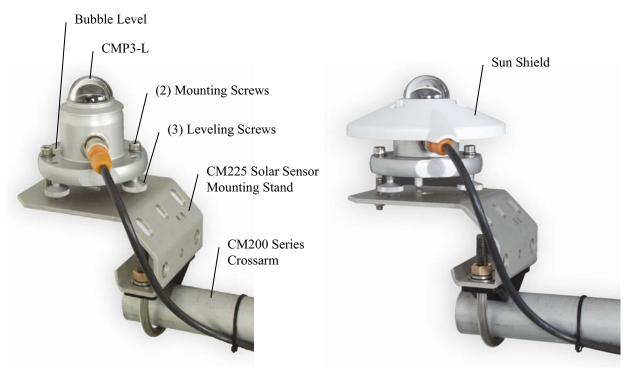


FIGURE 3-1. CMP3-L Pyranometer Attached to CM225 Solar Sensor Mounting Stand

# 4. Wiring

A schematic diagram of the CMP3-L is shown in Figure 4-1.

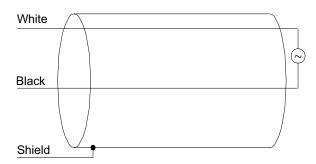


FIGURE 4-1. CMP3-L Schematic

When Short Cut for Windows software is used to create the datalogger program, the sensor should be wired to the channels shown in the wiring diagram created by Short Cut.

A differential voltage measurement is recommended because it has better noise rejection than a single-ended measurement. If a differential channel is not available, a single-ended measurement can be used.

Connections to Campbell Scientific dataloggers for a Differential measurement are given in Table 4-1. A user supplied jumper wire should be connected between the low side of the differential input and ground (AG or  $\frac{1}{2}$ ) to keep the signal in common mode range.

Connections to Campbell Scientific dataloggers for a Single-Ended measurement are given in Table 4-2.

TABLE 4-1. Differential Connections to Campbell Scientific Dataloggers					
Color	Description	CR9000(X) CR5000 CR3000 CR1000 CR800	CR510 CR500 CR10(X)	21X CR7 CR23X	
White	Signal (+)	DIFF Analog High	DIFF Analog High	DIFF Analog High	
Black	Signal (-)	*DIFF Analog Low	*DIFF Analog Low	*DIFF Analog Low	
Shield	Shield	<u></u>	G	<u></u>	

<sup>\*</sup> Jumper to AG or  $\stackrel{\bot}{=}$  with user supplied wire.

**NOTE** 

A CMP3-L purchased from Campbell Scientific has different wiring than a CMP3 purchased directly from Kipp & Zonen.

TABLE 4-2. Single-Ended Connections to Campbell Scientific Dataloggers					
Color	Description	CR9000(X) CR5000 CR3000 CR1000 CR800	CR510 CR500 CR10(X)	21X CR7 CR23X	
White	Signal (+)	Single-Ended Analog	Single-Ended Analog	Single-Ended Analog	
Black	Signal (-)	±	AG	<u></u>	
Shield	Shield	<u></u>	G	<del>-</del>	

# 5. Example Programs

This section is for users who write their own datalogger programs. A datalogger program to measure this sensor can be created using Campbell Scientific's Short Cut Program Builder software. You do not need to read this section to use Short Cut.

Solar radiation can be reported as an average flux density (W m<sup>-2</sup>) or daily total flux density (MJ m<sup>-2</sup>). The appropriate multipliers are listed in Table 5-1. Programming examples are given for both average and daily total solar radiation.

The CMP3-L outputs a low level voltage ranging from 0 to a maximum of up to 20 mV, in natural light, depending on the calibration factor and radiation level.

A differential voltage measurement is recommended because it has better noise rejection than a single-ended measurement. If a differential channel is not available, a single-ended measurement can be used. The acceptability of a single-ended measurement can be determined by simply comparing the results of single-ended and differential measurements made under the same conditions.

Nearby AC power lines, electric pumps, or motors can be a source of electrical noise. If the sensor or datalogger is located in an electrically noisy environment, the measurement should be made with the 60 or 50 Hz rejection integration option as shown in the example programs.

# 5.1 Input Range

The output voltage of the CMP3-L is usually between 5 and 20 mV per 1000 Wm<sup>-2</sup>. When estimating the maximum likely value of sensor output a maximum value of solar radiation of 1100 Wm<sup>-2</sup> can be used for field measurements on a horizontal surface.

Select the input range as follows:

- 1. Estimate the maximum expected input voltage by multiplying the maximum expected irradiance (in Wm<sup>-2</sup>) by the calibration factor (in  $\mu V/Wm^{-2}$ ). Divide the answer by 1000 to give the maximum in millivolt units.
- 2. Select the smallest input range which is greater than the maximum expected input voltage. Normally the 50 mV range for the CR23X, CR5000, CR9000 and CR7, and the 25 mV or 250 mV range for the CR510, CR10X and CR1000 will be suitable. The exact range will depend on the sensitivity of your individual sensor and the maximum expected reading. With some dataloggers an autorange option can be used if measurement time is not critical.

The parameter code for the input range also specifies the measurement integration time. The slow or 60 Hz rejection integration gives a more noise-free reading. A fast integration takes less power and allows for faster throughput.

# 5.2 Multiplier

The multiplier converts the millivolt reading to engineering units. The calibration supplied by the manufacturer gives the output of the sensor (c) as microvolts (V x  $10^{-6}$ ) per Wm<sup>-2</sup>. As the datalogger voltage measurement instructions give a default output in mV, the following equation should be used to calculate the multiplier (m) to give the readings in Wm<sup>-2</sup>:

$$m = 1000/c$$

Other units can be used by adjusting the multiplier as shown in Table 5-1.

Units	Multipliers	<b>Output Processing</b>
W m <sup>-2</sup>	m	Average
MJ m <sup>-2</sup>	m*t*0.000001	Total
kJ m <sup>-2</sup>	m*t*0.001	Total
cal cm <sup>-2</sup>	m*t*0.0239*0.001	Total
cal cm <sup>-2</sup> min <sup>-1</sup>	m*1.434*0.001	Average

# 5.3 Offset

The offset will normally be fixed at zero as the sensor should output no significant signal in dark conditions. In practice, because of the nature of thermopile detector sensors, there will be some offset in dark conditions; sometimes this offset can give negative light readings. This offset varies with several factors, e.g. rate of change of sensor temperature, so it cannot be removed with a fixed offset. Some users may wish to remove small negative readings by including code after the measurement instructions that sets negative readings to zero.

# 5.4 Example Programs

The following programs measure the CMP3-L every 10 seconds and convert the mV output to Wm<sup>-2</sup> and MJm<sup>-2</sup>. A sensor calibration of 15.02  $\mu$ V per Wm<sup>-2</sup> is used for the example programs. Both programs output an hourly average flux (Wm<sup>-2</sup>), and a daily total flux density (MJ m<sup>-2</sup>).

Wiring for the examples is given in Table 5-2.

TABLE 5-2. Wiring for Example Programs					
Color	Description	CR1000	CR10X		
White	Signal (+)	DIFF Analog High	DIFF Analog High		
Black	Signal (-)	*DIFF Analog Low	*DIFF Analog Low		
Shield	Shield	<del>-</del>	G		

<sup>\*</sup> Jumper to AG or  $\stackrel{\bot}{=}$  with user supplied wire.

# 5.4.1 CR1000 Example Program

```
'CR1000
'Declare Variables and Units
Public Solar_Wm2
Public Solar_MJ
Units Solar_Wm2=W/m2
Units Solar MJ=MJ/m<sup>2</sup>
'Hourly Data Table
DataTable(Table1,True,-1)
    DataInterval(0,60,Min,10)
    Average(1,Solar Wm2,FP2,False)
EndTable
'Daily Data Table
DataTable(Table2,True,-1)
    DataInterval(0,1440,Min,10)
    Totalize(1,Solar MJ,IEEE4,False)
EndTable
'Main Program
BeginProg
    Scan(10, Sec, 1, 0)
         'CMP3-L Pyranometer measurement in Wm<sup>-2</sup>:
         'The Multiplier (m) for this example is based upon a sensor calibration (c) of
         '15.02 \mu V/Wm^{-2}, and will be different for each sensor.
         'Multiplier (m) = 1000/c = 66.577896.
```

```
VoltDiff(Solar_Wm2,1,mV25,1,True,0,_60Hz,66.577896,0) 'use the 50 mV range for the CR3000, CR5000 and CR9000 'Set negative readings to zero:
If Solar_Wm2<0 Then Solar_Wm2=0

'Calculate units in MJ, where MJ = m * t * 0.000001. m = Solar_Wm2 from above, and 't = 10 (scan interval)

Solar_MJ=Solar_Wm2*0.00001

'Call Data Tables and Store Data CallTable(Table1)
CallTable(Table2)
NextScan
EndProg
```

# 5.4.2 CR10X Example Program

```
;{CR10X}
*Table 1 Program
  01: 10.0000
                   Execution Interval (seconds)
; CMP3-L measurement in Wm<sup>-2</sup>
1: Volt (Diff) (P2)
  1: 1
                   Reps
                   25 mV 60 Hz Rejection Range
  2: 23
                                                   ;use the 50 mV range for the CR7, 21X and CR23X
                   DIFF Channel
  3:
     1
                                                   ;use the 250 mV range for the CR10X if
                   Loc [ Solar Wm2 ]
                                                   calibration factor is > 25 \mu V/Wm^{-2}
  4:
      3
                   Multiplier
  5:
     66.5778
                   Offset
  6:
      0
; Set negative values to zero
2: If (X \le F) (P89)
 1: 3
                   X Loc [ Solar_Wm2 ]
 2: 4
  3: 0
                   F
  4: 30
                   Then Do
3: Z=F x 10<sup>n</sup> (P30)
 1: 0
 2: 0
                   n, Exponent of 10
                   Z Loc [ Solar_Wm2 ]
 3: 3
4: End (P95)
; Calculate units in MJ, where MJ = m * t * 0.000001.
; m = Solar_Wm2 from above, and t = 10 (scan interval).
5: Z=X*F (P37)
  1: 3
                   X Loc [ Solar_Wm2 ]
  2:
      .00001
  3:
     4
                   Z Loc [ Solar_MJ ]
```

```
6: If time is (P92)
      0
                   Minutes (Seconds --) into a
  1:
  2:
      60
                   Interval (same units as above)
 3:
      10
                   Set Output Flag High (Flag 0)
7: Set Active Storage Area (P80)
  1:
     1
                   Final Storage Area 1
 2:
      101
                   Array ID
8: Real Time (P77)
                   Year, Day, Hour/Minute (midnight = 2400)
  1: 1220
9: Average (P71)
  1:
     1
                   Reps
 2:
      3
                   Loc [ Solar Wm2 ]
10: If time is (P92)
 1:
                   Minutes (Seconds --) into a
      0
  2:
      1440
                   Interval (same units as above)
 3:
      10
                   Set Output Flag High (Flag 0)
11: Set Active Storage Area (P80)
  1: 1
                   Final Storage Area 1
 2:
     102
                   Array ID
12: Real Time (P77)
     1220
                   Year, Day, Hour/Minute (midnight = 2400)
13: Resolution (P78)
                   High Resolution
 1: 1
14: Totalize (P72)
 1: 1
                   Reps
                   Loc [ Solar MJ ]
 2:
15: Resolution (P78)
                   Low Resolution
```

# 5.5 Output Format Considerations

When using the Campbell Scientific floating point data format to store data, the largest number the datalogger can store in Final Storage is 6999 in low resolution mode (FP2) and 99999 in high resolution mode (if available). If the measurement value is totalized, there is some danger of over-ranging the output limits, as shown in the following example:

### **Example**

Assume that daily total flux is desired, and that the datalogger scan rate is 1 second. With a multiplier that converts the readings to units of kJ m<sup>-2</sup> and an average irradiance of 0.5kWm<sup>-2</sup>, the maximum low resolution output limit will be exceeded in less than four hours.

Solution 1 – Change the multiplier in the instruction to (m\*0.0001). This will totalize MJ m<sup>-2</sup> instead of kJ m<sup>-2</sup>.

Solution 2 – Record the average flux density and later multiply the result by the number of seconds in the output interval to arrive at total flux.

Solution 3 – Record the total flux using the high resolution format. The drawback to high resolution is that it requires four bytes of memory per data point, consuming twice as much memory as low resolution. Instruction 78 is used to switch to high resolution in the Edlog dataloggers.

Dataloggers that are programmed in CRBasic can be programmed to store data in IEEE4 format which can represent a wider range of numbers so this is not a consideration for them.

# 6. Maintenance

Inspect and clean the outer dome at regular intervals, e.g. every week or so. Clean any accumulated dust, etc. off the dome and pyranometer body using a soft cloth dampened with water or alcohol. Check that there is no condensation within the dome.

It is also important to check the data returned from the sensor as it will show the first indication of a fault. When doing this you should be aware of several expected phenomena that can cause strange measurements. In particular on clear, windless nights the outer dome temperature of horizontally placed pyranometers can fall as low as the dew point temperature of the air, due to infra-red radiation exchange with the cold sky. (The effective sky temperature can be 30°C lower than the ground temperature, which results in an infra-red emission of -150 Wm<sup>-2</sup>). If this happens, dew, glazed frost or hoar frost can be precipitated on the top of the outer dome and can stay there for several hours in the morning. An ice cap on the dome is a strong diffuser and can increase the pyranometer signal by up to 50% in the first hours after sunrise.

The calibration of the CMP3-L may drift with time and exposure to radiation. Recalibration every two years is recommended. The sensor should be returned to Campbell Scientific, the manufacturer, or a calibration lab with facilities to calibrate radiation sensors.

# 7. Troubleshooting

Symptom: -9999 or radiation values around 0

- Check that the sensor is wired to the Differential channel specified by the measurement instruction.
- 2. Verify that the Range code is correct for the datalogger type.
- 3. Measure the impedance across the red and blue sensor wires. This should be around 100 ohms plus the cable resistance (typically 0.1 ohm/m). If the resistance is very low there may be a short circuit (check the wiring). Resistances somewhat lower than expected could be due to water ingress

- into the sensor or enclosure connectors. If the resistance is infinite, there is a broken connection (check the wiring).
- 4. Disconnect the sensor cable and check the voltage output from the sensor. With the sensor located 8" below a 60 W incandescent light bulb the voltage should be approximately 2.5 mV. No voltage indicates a problem with the sensor.

Symptom: sensor signal is unrealistically high or low

- Check that the right calibration factor has been properly entered into the datalogger program. Please note that each sensor has its own individual calibration factor.
- 2. Check the condition of the sensor cable.

Symptom: sensor signal shows unexpected variations

- 1. Check for the presence of strong sources of electromagnetic radiation (radar, radio etc.)
- 2. Check the condition and the connection of the sensor shield wire.
- 3. Check the condition of the sensor cable.

# **Campbell Scientific Companies**

### Campbell Scientific, Inc. (CSI)

815 West 1800 North Logan, Utah 84321 UNITED STATES www.campbellsci.com info@campbellsci.com

### Campbell Scientific Africa Pty. Ltd. (CSAf)

PO Box 2450 Somerset West 7129 SOUTH AFRICA www.csafrica.co.za cleroux@csafrica.co.za

### Campbell Scientific Australia Pty. Ltd. (CSA)

PO Box 444 Thuringowa Central QLD 4812 AUSTRALIA www.campbellsci.com.au info@campbellsci.com.au

### Campbell Scientific do Brazil Ltda. (CSB)

Rua Luisa Crapsi Orsi, 15 Butantã CEP: 005543-000 São Paulo SP BRAZIL www.campbellsci.com.br suporte@campbellsci.com.br

### Campbell Scientific Canada Corp. (CSC)

11564 - 149th Street NW Edmonton, Alberta T5M 1W7 CANADA www.campbellsci.ca dataloggers@campbellsci.ca

### Campbell Scientific Ltd. (CSL)

Campbell Park
80 Hathern Road
Shepshed, Loughborough LE12 9GX
UNITED KINGDOM
www.campbellsci.co.uk
sales@campbellsci.co.uk

### **Campbell Scientific Ltd. (France)**

Miniparc du Verger - Bat. H 1, rue de Terre Neuve - Les Ulis 91967 COURTABOEUF CEDEX FRANCE www.campbellsci.fr info@campbellsci.fr

### Campbell Scientific Spain, S. L.

Psg. Font 14, local 8 08013 Barcelona SPAIN www.campbellsci.es info@campbellsci.es