

INSTRUCTION MANUAL



CR10TCR
Thermocouple Reference

Revision: 12/96

Copyright (c) 1995-1996
Campbell Scientific, Inc.

Warranty and Assistance

The **CR10TCR THERMOCOUPLE REFERENCE** is warranted by CAMPBELL SCIENTIFIC, INC. to be free from defects in materials and workmanship under normal use and service for twelve (12) months from date of shipment unless specified otherwise. Batteries have no warranty. CAMPBELL SCIENTIFIC, INC.'s obligation under this warranty is limited to repairing or replacing (at CAMPBELL SCIENTIFIC, INC.'s option) defective products. The customer shall assume all costs of removing, reinstalling, and shipping defective products to CAMPBELL SCIENTIFIC, INC. CAMPBELL SCIENTIFIC, INC. will return such products by surface carrier prepaid. This warranty shall not apply to any CAMPBELL SCIENTIFIC, INC. products which have been subjected to modification, misuse, neglect, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for a particular purpose. CAMPBELL SCIENTIFIC, INC. is not liable for special, indirect, incidental, or consequential damages.

Products may not be returned without prior authorization. The following contact information is for US and International customers residing in countries served by Campbell Scientific, Inc. directly. Affiliate companies handle repairs for customers within their territories. Please visit www.campbellsci.com to determine which Campbell Scientific company serves your country. To obtain a Returned Materials Authorization (RMA), contact CAMPBELL SCIENTIFIC, INC., phone (435) 753-2342. After an applications engineer determines the nature of the problem, an RMA number will be issued. Please write this number clearly on the outside of the shipping container. CAMPBELL SCIENTIFIC's shipping address is:

CAMPBELL SCIENTIFIC, INC.

RMA# _____
815 West 1800 North
Logan, Utah 84321-1784

CAMPBELL SCIENTIFIC, INC. does not accept collect calls.

CR10TCR Table of Contents

PDF viewers note: These page numbers refer to the printed version of this document. Use the Adobe Acrobat® bookmarks tab for links to specific sections.

1. General	1
1.1 Specifications.....	1
2. Accuracy — Temperature Sensor	1
3. Installation and Wiring	2
4. Programming	2
5. Instruction 11 Details.....	2
6. Electrically Noisy Environments	3

CR10TCR THERMOCOUPLE REFERENCE

1. GENERAL

The Model CR10TCR Probe contains a thermistor for measuring temperature and is used as a reference temperature for thermocouples measured with the CR10. It is installed between the two terminal stripes in the wiring panel. After all the thermocouples are wired, the wiring panel cover is installed to minimize temperature gradients on the terminal strip.

add to an accuracy of $\pm 0.4^{\circ}\text{C}$ over the range of -24° to 48°C and $\pm 0.9^{\circ}\text{C}$ over the range of -38°C to 53°C . The major error component is the interchangeability specification of the thermistor, tabulated in Table 1. For the range of 0° to 50°C the interchangeability error is predominantly offset. The bridge resistors are 0.1% tolerance with a 10 ppm temperature coefficient. Polynomial errors are tabulated in Table 2 and plotted in Figure 1.

1.1 SPECIFICATIONS

Temperature Measurement Range: -35° to $+50^{\circ}\text{C}$

Thermistor Interchangeability Error: Typically $< \pm 0.2^{\circ}\text{C}$ over 0°C to 60°C ± 0.4 @ -35°C .

Polynomial Linearization Error: $< \pm 0.5^{\circ}\text{C}$ over -35°C to $+50^{\circ}\text{C}$.

TABLE 1. Thermistor Interchangeability Specification

Temperature ($^{\circ}\text{C}$)	Temperature Tolerance ($\pm^{\circ}\text{C}$)
-40	0.40
-30	0.40
-20	0.32
-10	0.25
0 to +50	0.20

2. ACCURACY – TEMPERATURE SENSOR

The overall probe accuracy is a combination of the thermistor's interchangeability specification, the precision of the bridge resistors, and the polynomial error. In a "worst case" all errors

TABLE 2. Polynomial Error

-40 to +56	$< \pm 1.0^{\circ}\text{C}$
-38 to +53	$< \pm 0.5^{\circ}\text{C}$
-24 to +48	$< \pm 0.1^{\circ}\text{C}$

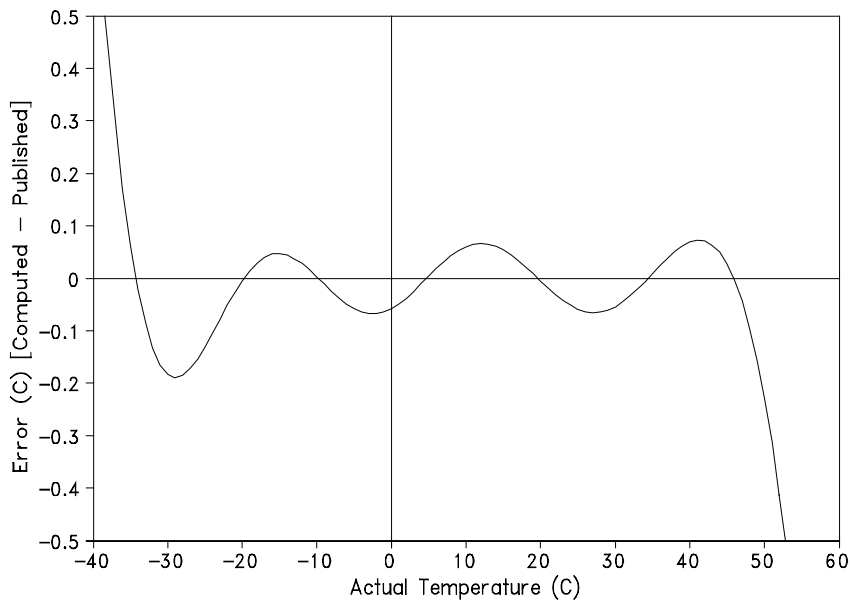


FIGURE 1. Error Produced by Polynomial Fit to Published Values

CR10TCR THERMOCOUPLE REFERENCE

3. INSTALLATION AND WIRING

The wiring diagram for the CR10TCR is shown in Figure 1. The probe requires a single-ended analog input channel and an excitation channel. After the CR10TCR and thermocouple are connected to the datalogger, install the wiring panel cover (Figure 2 and 3).

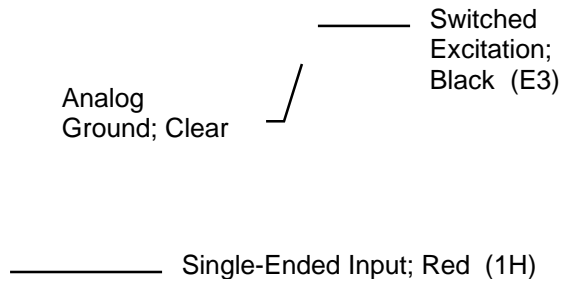


FIGURE 2. Wiring Diagram

FIGURE 3. Wiring Panel, CR10TCR, and Wiring Panel Cover

FIGURE 4. CR10TCR Installed on the CR10 Wiring Panel

4. PROGRAMMING

Instruction 11 is used to measure the CR10TCR. Instruction 11 provides AC excitation, makes a single ended voltage measurement, and calculates temperature with a fifth order polynomial. A multiplier of 1.0 and an offset of

0.0 yields temperature in Celsius. For Fahrenheit, use a multiplier of 1.8 and an offset of 32.

CAUTION: The reference temperature for thermocouples must be in degrees Celsius.

EXAMPLE 1. Sample CR10 Instructions

```
01: P11 Temp 107 Probe
01: 1 Rep
02: 1 IN Chan
03: 3 Excite all reps w/EXchan 3
04: 15* Loc [:Ref_Temp]
05: 1 Mult
06: 0 Offset
```

* Proper entries will vary with program and input location.

5. INSTRUCTION 11 DETAILS

Understanding the details in this section are not necessary for general operation of the CR10TCR with Campbell Scientific's dataloggers.

Instruction 11 outputs a precise 2 VAC excitation and measures the voltage drop due to the sensor resistance (Figure 5). The thermistor resistance changes with temperature. Instruction 11 calculates the ratio of voltage measured to excitation voltage (V_s/V_x) which is related to resistance, as shown below:

$$V_s/V_x = 1000/(R_s + 249000 + 1000)$$

where R_s is the resistance of the thermistor.

See the measurement section of the datalogger manual for more information on bridge measurements.

Instruction 11 then calculates temperature using a fifth order polynomial equation correlating V_s/V_x with temperature. The polynomial coefficients are given in Table 3. The polynomial input is $(V_s/V_x) \cdot 800$.

Resistance and datalogger output at several temperatures are shown in Table 4.

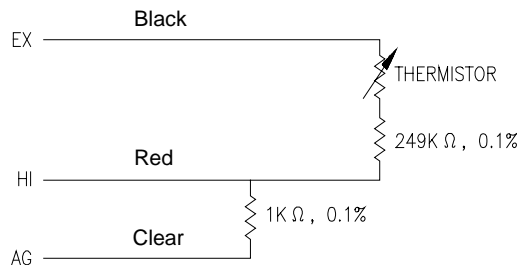


FIGURE 5. CR10TCR Reference Temperature Schematics

TABLE 3. Temperature, Resistance, and Datalogger Output

Temperature °C	Resistance OHMS	Output °C
-40.00	4067212	-39.18
-38.00	3543286	-37.55
-36.00	3092416	-35.83
-34.00	2703671	-34.02
-32.00	2367900	-32.13
-30.00	2077394	-30.18
-28.00	1825568	-28.19
-26.00	1606911	-26.15
-24.00	1416745	-24.11
-22.00	1251079	-22.05
-20.00	1106485	-20.00
-18.00	980100	-17.97
-16.00	869458	-15.95
-14.00	772463	-13.96
-12.00	687276	-11.97
-10.00	612366	-10.00
-8.00	546376	-8.02
-6.00	488178	-6.05
-4.00	436773	-4.06
-2.00	391294	-2.07
0.00	351017	-0.06
2.00	315288	1.96
4.00	283558	3.99
6.00	255337	6.02
8.00	230210	8.04
10.00	207807	10.06
12.00	187803	12.07
14.00	169924	14.06
16.00	153923	16.05
18.00	139588	18.02
20.00	126729	19.99
22.00	115179	21.97
24.00	104796	23.95
26.00	95449	25.94
28.00	87026	27.93
30.00	79428	29.95
32.00	72567	31.97
34.00	66365	33.99
36.00	60752	36.02
38.00	55668	38.05
40.00	51058	40.07
42.00	46873	42.07
44.00	43071	44.05
46.00	39613	46.00
48.00	36465	47.91
50.00	33598	49.77
52.00	30983	51.59
54.00	28595	53.35
56.00	26413	55.05
58.00	24419	56.70
60.00	22593	58.28

TABLE 4. Polynomial Coefficients

Coefficient	Value
C0	-53.4601
C1	90.807
C2	-83.257
C3	52.283
C4	-16.723
C5	2.211

6. ELECTRICALLY NOISY ENVIRONMENTS

AC power lines can be the source of electrical noise. If the datalogger is in an electronically noisy environment, the CR10TCR temperature measurement should be measured with the AC half bridge (Instruction 5) with the 60 Hz rejection integration option on the CR10 (see Section 13 of the datalogger manual for more information on noise). Instruction 11's fast integration will not reject 60 Hz noise.

Example 2. Sample CR10 Instructions Using AC Half Bridge

```

01: P5 AC Half Bridge
01: 1 Rep
02: 22 7.5 mV 60 Hz rejection Range
03: 1 IN Chan
04: 3 Excite all reps w/EXchan 1
05: 2000 mV Excitation
06: 15* Loc [:Ref_Temp]
07: 800 Mult
08: 0 Offset

02: P55 Polynomial
01: 1 Rep
02: 1* X Loc Air Temp
03: 15* F(X) Loc [:Ref_Temp]
04: -53.46 C0
05: 90.807 C1
06: -83.257 C2
07: 52.283 C3
08: -16.723 C4
09: 2.211 C5

```

* Proper entries will vary with program and input location assignments.

CR10TCR THERMOCOUPLE REFERENCE

Campbell Scientific Companies

Campbell Scientific, Inc. (CSI)

815 West 1800 North
Logan, Utah 84321
UNITED STATES
www.campbellsci.com
info@campbellsci.com

Campbell Scientific Africa Pty. Ltd. (CSAf)

PO Box 2450
Somerset West 7129
SOUTH AFRICA
www.csafrica.co.za
sales@csafrica.co.za

Campbell Scientific Australia Pty. Ltd. (CSA)

PO Box 444
Thuringowa Central
QLD 4812 AUSTRALIA
www.campbellsci.com.au
info@campbellsci.com.au

Campbell Scientific do Brazil Ltda. (CSB)

Rua Luisa Crapsi Orsi, 15 Butantã
CEP: 005543-000 São Paulo SP BRAZIL
www.campbellsci.com.br
suporte@campbellsci.com.br

Campbell Scientific Canada Corp. (CSC)

11564 - 149th Street NW
Edmonton, Alberta T5M 1W7
CANADA
www.campbellsci.ca
dataloggers@campbellsci.ca

Campbell Scientific Ltd. (CSL)

Campbell Park
80 Hathern Road
Shepshed, Loughborough LE12 9GX
UNITED KINGDOM
www.campbellsci.co.uk
sales@campbellsci.co.uk

Campbell Scientific Ltd. (France)

Miniparc du Verger - Bat. H
1, rue de Terre Neuve - Les Ulis
91967 COURTABOEUF CEDEX
FRANCE
www.campbellsci.fr
campbell.scientific@wanadoo.fr

Campbell Scientific Spain, S. L.

Psg. Font 14, local 8
08013 Barcelona
SPAIN
www.campbellsci.es
info@campbellsci.es