



Wind Monitor Series

05103, 05108, 05108-45, and 05305



Guarantee

This equipment is guaranteed against defects in materials and workmanship. We will repair or replace products which prove to be defective during the guarantee period as detailed on your invoice, provided they are returned to us prepaid. The guarantee will not apply to:

- Equipment which has been modified or altered in any way without the written permission of Campbell Scientific
- Batteries
- Any product which has been subjected to misuse, neglect, acts of God or damage in transit.

Campbell Scientific will return guaranteed equipment by surface carrier prepaid. Campbell Scientific will not reimburse the claimant for costs incurred in removing and/or reinstalling equipment. This guarantee and the Company's obligation thereunder is in lieu of all other guarantees, expressed or implied, including those of suitability and fitness for a particular purpose. Campbell Scientific is not liable for consequential damage.

Please inform us before returning equipment and obtain a Repair Reference Number whether the repair is under guarantee or not. Please state the faults as clearly as possible, and if the product is out of the guarantee period it should be accompanied by a purchase order. Quotations for repairs can be given on request. It is the policy of Campbell Scientific to protect the health of its employees and provide a safe working environment, in support of this policy a "Declaration of Hazardous Material and Decontamination" form will be issued for completion.

When returning equipment, the Repair Reference Number must be clearly marked on the outside of the package. Complete the "Declaration of Hazardous Material and Decontamination" form and ensure a completed copy is returned with your goods. Please note your Repair may not be processed if you do not include a copy of this form and Campbell Scientific Ltd reserves the right to return goods at the customers' expense.

Note that goods sent air freight are subject to Customs clearance fees which Campbell Scientific will charge to customers. In many cases, these charges are greater than the cost of the repair.



Campbell Scientific Ltd,
80 Hathern Road,
Shepshed, Loughborough, LE12 9GX, UK
Tel: +44 (0) 1509 601141
Fax: +44 (0) 1509 270924
Email: support@campbellsci.co.uk
www.campbellsci.co.uk

About this manual

Please note that this manual was originally produced by Campbell Scientific Inc. primarily for the North American market. Some spellings, weights and measures may reflect this origin.

Some useful conversion factors:

Area:	1 in ² (square inch) = 645 mm ²	Mass:	1 oz. (ounce) = 28.35 g 1 lb (pound weight) = 0.454 kg
Length:	1 in. (inch) = 25.4 mm 1 ft (foot) = 304.8 mm 1 yard = 0.914 m 1 mile = 1.609 km	Pressure:	1 psi (lb/in ²) = 68.95 mb
		Volume:	1 UK pint = 568.3 ml 1 UK gallon = 4.546 litres 1 US gallon = 3.785 litres

In addition, while most of the information in the manual is correct for all countries, certain information is specific to the North American market and so may not be applicable to European users.

Differences include the U.S standard external power supply details where some information (for example the AC transformer input voltage) will not be applicable for British/European use. *Please note, however, that when a power supply adapter is ordered it will be suitable for use in your country.*

Reference to some radio transmitters, digital cell phones and aerials may also not be applicable according to your locality.

Some brackets, shields and enclosure options, including wiring, are not sold as standard items in the European market; in some cases alternatives are offered. Details of the alternatives will be covered in separate manuals.

Part numbers prefixed with a “#” symbol are special order parts for use with non-EU variants or for special installations. Please quote the full part number with the # when ordering.

Recycling information



At the end of this product's life it should not be put in commercial or domestic refuse but sent for recycling. Any batteries contained within the product or used during the products life should be removed from the product and also be sent to an appropriate recycling facility.

Campbell Scientific Ltd can advise on the recycling of the equipment and in some cases arrange collection and the correct disposal of it, although charges may apply for some items or territories.

For further advice or support, please contact Campbell Scientific Ltd, or your local agent.



Campbell Scientific Ltd, 80 Hathern Road, Shepshed, Loughborough, LE12 9GX,
UK Tel: +44 (0) 1509 601141 Fax: +44 (0) 1509 270924
Email: support@campbellsci.co.uk
www.campbellsci.co.uk

Safety

DANGER — MANY HAZARDS ARE ASSOCIATED WITH INSTALLING, USING, MAINTAINING, AND WORKING ON OR AROUND **TRIPODS, TOWERS, AND ANY ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC.** FAILURE TO PROPERLY AND COMPLETELY ASSEMBLE, INSTALL, OPERATE, USE, AND MAINTAIN TRIPODS, TOWERS, AND ATTACHMENTS, AND FAILURE TO HEED WARNINGS, INCREASES THE RISK OF DEATH, ACCIDENT, SERIOUS INJURY, PROPERTY DAMAGE, AND PRODUCT FAILURE. TAKE ALL REASONABLE PRECAUTIONS TO AVOID THESE HAZARDS. CHECK WITH YOUR ORGANIZATION'S SAFETY COORDINATOR (OR POLICY) FOR PROCEDURES AND REQUIRED PROTECTIVE EQUIPMENT PRIOR TO PERFORMING ANY WORK.

Use tripods, towers, and attachments to tripods and towers only for purposes for which they are designed. Do not exceed design limits. Be familiar and comply with all instructions provided in product manuals. Manuals are available at www.campbellsci.eu or by telephoning +44(0) 1509 828 888 (UK). You are responsible for conformance with governing codes and regulations, including safety regulations, and the integrity and location of structures or land to which towers, tripods, and any attachments are attached. Installation sites should be evaluated and approved by a qualified engineer. If questions or concerns arise regarding installation, use, or maintenance of tripods, towers, attachments, or electrical connections, consult with a licensed and qualified engineer or electrician.

General

- Prior to performing site or installation work, obtain required approvals and permits. Comply with all governing structure-height regulations, such as those of the FAA in the USA.
- Use only qualified personnel for installation, use, and maintenance of tripods and towers, and any attachments to tripods and towers. The use of licensed and qualified contractors is highly recommended.
- Read all applicable instructions carefully and understand procedures thoroughly before beginning work.
- Wear a **hardhat** and **eye protection**, and take **other appropriate safety precautions** while working on or around tripods and towers.
- **Do not climb** tripods or towers at any time, and prohibit climbing by other persons. Take reasonable precautions to secure tripod and tower sites from trespassers.
- Use only manufacturer recommended parts, materials, and tools.

Utility and Electrical

- **You can be killed** or sustain serious bodily injury if the tripod, tower, or attachments you are installing, constructing, using, or maintaining, or a tool, stake, or anchor, come in **contact with overhead or underground utility lines**.
- Maintain a distance of at least one-and-one-half times structure height, or 20 feet, or the distance required by applicable law, **whichever is greater**, between overhead utility lines and the structure (tripod, tower, attachments, or tools).
- Prior to performing site or installation work, inform all utility companies and have all underground utilities marked.
- Comply with all electrical codes. Electrical equipment and related grounding devices should be installed by a licensed and qualified electrician.

Elevated Work and Weather

- Exercise extreme caution when performing elevated work.
- Use appropriate equipment and safety practices.
- During installation and maintenance, keep tower and tripod sites clear of un-trained or non-essential personnel. Take precautions to prevent elevated tools and objects from dropping.
- Do not perform any work in inclement weather, including wind, rain, snow, lightning, etc.

Maintenance

- Periodically (at least yearly) check for wear and damage, including corrosion, stress cracks, frayed cables, loose cable clamps, cable tightness, etc. and take necessary corrective actions.
- Periodically (at least yearly) check electrical ground connections.

WHILE EVERY ATTEMPT IS MADE TO EMBODY THE HIGHEST DEGREE OF SAFETY IN ALL CAMPBELL SCIENTIFIC PRODUCTS, THE CUSTOMER ASSUMES ALL RISK FROM ANY INJURY RESULTING FROM IMPROPER INSTALLATION, USE, OR MAINTENANCE OF TRIPODS, TOWERS, OR ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC.

Table of contents

1. Introduction	1
2. Precautions	1
3. Initial inspection	2
4. QuickStart	2
5. Overview	5
6. Specifications	6
7. Installation	8
7.1 Wiring	8
7.2 Programming	9
7.2.1 Wind speed	9
7.2.2 Wind direction	10
7.2.3 WindVector processing instruction	11
7.3 Siting	11
7.4 Assembly and mounting	11
8. Sensor maintenance	14
9. Troubleshooting	15
9.1 Wind direction	15
9.2 Wind speed	16
10. References	16
Appendix A. Importing Short Cut code into CRBasic Editor	17
Appendix B. Example program	18
Appendix C. Wind direction sensor orientation	20
C.1 Determining true north and sensor orientation	20
Appendix D. Wind direction measurement theory	23

1. Introduction

Wind monitors measure horizontal wind speed and direction. The different models are designed for different applications (Table 1-1 [p. 1]). The wind monitors are manufactured by R. M. Young.

Table 1-1: R. M. Young wind monitors models

Model	Description
05103	Standard wind monitor
05108	Heavy-duty wind monitor that greatly extends service life
05108-45	Heavy-duty wind monitor for alpine applications
05305	High-performance wind monitor for air quality applications

NOTE:

This manual provides information only for CRBasic data loggers. For retired Edlog data logger support, see an older manual at www.campbellsci.com/old-manuals .

2. Precautions

- READ AND UNDERSTAND the [Safety](#) section at the front of this manual.
- The wind monitor is a precision instrument. Please handle it with care.
- Do not use cable lengths greater than 30 m (9 ft) in electrically noisy environments.
- The black outer jacket of the cable is Santoprene® rubber. This compound was chosen for its resistance to temperature extremes, moisture, and ultraviolet (UV) degradation. However, this jacket will support combustion in air. It is rated as slow burning when tested according to U.L. 94 H.B. and will pass FMVSS302. Local fire codes may preclude its use inside buildings.
- Wire colour and functions of sensors purchased through Campbell Scientific may not correspond with the wire colours and functions given in the manufacturer's manual. To ensure proper function, follow the wiring provided in **Short Cut** or in the Campbell Scientific manual.

- Wind monitors purchased directly from R. M. Young may not have the 1 MΩ resistor used to short the readings in the dead band to ground.

3. Initial inspection

- Upon receipt of the wind monitor, inspect the packaging and contents for damage. File damage claims with the shipping company. Immediately check package contents against the shipping documentation. Contact Campbell Scientific about any discrepancies.
- The model number and cable length are printed on a label at the connection end of the cable. Check this information against the shipping documents to ensure the expected product and cable length are received.



The wind monitor is shipped in a padded box containing the sensor body, propeller, orientation ring, and a bag containing:

- (1) 1/16 inch hex key wrench from manufacturer (used for bearing replacement)
- (1) Bearing gap gauge (spacer) from manufacturer (used for bearing replacement)
- (1) Calibration sheet
- (1) Ferrite choke from manufacturer

An unthreaded aluminium pipe is also shipped with the sensor. Information about attaching the propeller and using the orientation ring is provided in [Assembly and mounting](#) (p. 11).

4. QuickStart


A video that describes data logger programming using *Short Cut* is available at:

www.campbellsci.eu/videos/cr1000x-datalogger-getting-started-program-part-3.  *Short Cut* is an easy way to program your data logger to measure this sensor and assign data logger wiring terminals. *Short Cut* is available as a download on www.campbellsci.eu.  It is included in installations of *LoggerNet*, *RTDAQ*, or *PC400*.


The following procedure also describes programming with *Short Cut*.

1. Open *Short Cut* and create a new program.
2. Double-click the data logger model.

3. In the **Available Sensors and Devices** box, type 05103, 05106, or 05305 AQ or locate the sensor in the **Sensors > Meteorological > Wind Speed & Direction** folder. Double-click **05103 Wind Speed & Direction Sensor**, **05108 Wind Speed & Direction Sensor**, **05108-45 Wind Speed & Direction Sensor**, or **05305-AQ Wind Speed & Direction Sensor**. The wind speed defaults to metres/second. This can be changed by clicking the Wind Speed box and selecting one of the other options.

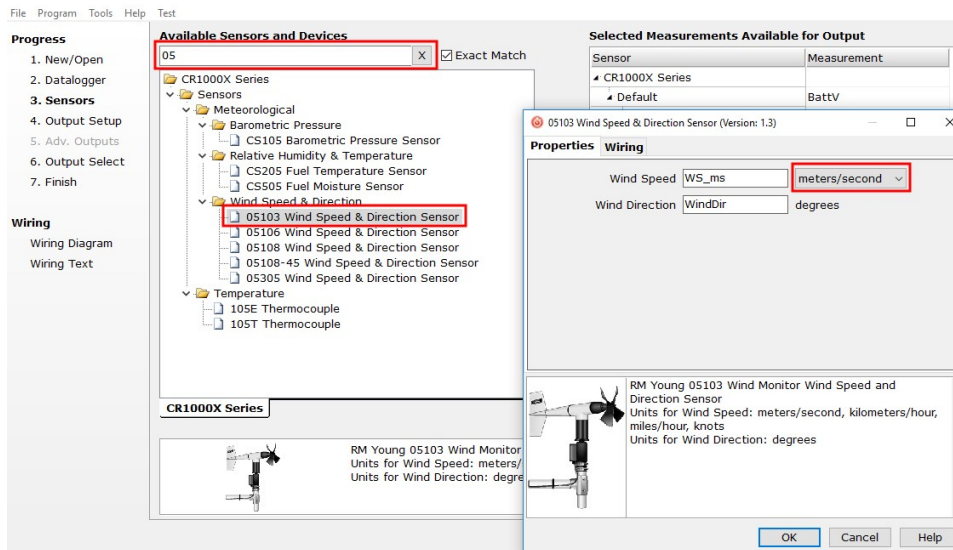

4. Click on the **Wiring** tab to see how the sensor is to be wired to the data logger. Click **OK** after wiring the sensor.

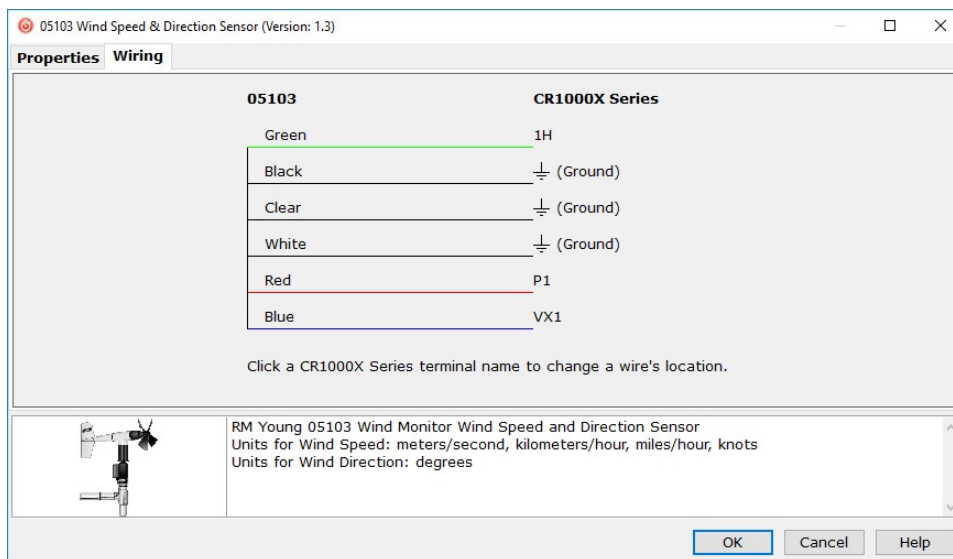

5. Repeat steps three and four for other sensors. Click **Next**.

6. In **Output Setup**, enter the scan rate, **Data Output Storage Intervals**, and meaningful table names.

7. Select the measurement and its associated output options.

8. Click **Finish** and save the program. Send the program to the data logger if the data logger is connected to the computer.
9. If the sensor is connected to the data logger, check the output of the sensor in the data display in **LoggerNet**, **RTDAQ**, or **PC400** to make sure it is making reasonable measurements.

5. Overview

Wind speed is measured by using a helicoid-shaped, four-blade propeller. Rotation of the propeller produces an AC sine wave signal with frequency proportional to wind speed.

Vane position is transmitted by a 10 k Ω potentiometer. With a precision excitation voltage applied, the output voltage is proportional to wind direction.

The R. M. Young Instruction Manual includes additional information on the operating principles, installation, and maintenance of the sensor.

The wind monitors are manufactured by R. M. Young and cabled by Campbell Scientific for use with our data loggers. Cable lengths for the wind monitors are specified when the sensors are ordered. [Table 5-1](#) (p. 5) gives the recommended cable length for mounting the sensor at the top of the tripod/tower by using a CM200-series crossarm.

Table 5-1: Recommended cable lengths

CM106B	CM110	CM115	CM120	UT10	UT20	UT30
4.2 m (14 ft)	4.2 m (14 ft)	5.8 m (19 ft)	7.3 m (24 ft)	4.2 m (14 ft)	7.3 m (24 ft)	11.3 m (37 ft)

NOTE:

Maximum cable length is 304.8 m (1000 ft).

CAUTION:

Do not use cable lengths greater than 30 m (98 ft) in electrically noisy environments.

Features:

- Rugged enough for harsh environments
- Constructed with thermoplastic material that resists corrosion from sea-air environments and atmospheric pollutants
- Ideal for wind profile studies
- Compatible with the LLAC4 4-channel Low Level AC Conversion Module, which increases the number of anemometers one data logger can measure
- Compatible with Campbell Scientific CRBasic data loggers: CR6, CR1000X, CR800 series, CR350 series, CR300 series, CR3000, and CR1000

6. Specifications

Table 6-1 (p. 6), Table 6-2 (p. 7), and Table 6-3 (p. 8) provide the wind speed, wind direction, and physical specifications, respectively.

Table 6-1: Wind speed specifications				
	05103 Wind Monitor	05108 Heavy Duty Wind Monitor	05108-45 Heavy Duty Wind Monitor- Alpine	05305 Wind Monitor- AQ
Range	0 to 100 m/s (0 to 224 mph)			0 to 50 m/s (0 to 112 mph)
Accuracy	± 0.3 m/s (± 0.6 mph) or 1% of reading			± 0.2 m/s (± 0.4 mph) or 1% of reading
Starting threshold	1.0 m/s (2.2 mph)			0.4 m/s (0.9 mph)
Distance constant (63% recovery)	2.7 m (8.9 ft)			2.1 m (6.9 ft)
Output	AC voltage (3 pulses per revolution); 1800 rpm (90 Hz) = 8.8 m/s (19.7 mph)	AC voltage (3 pulses per revolution); 1800 rpm (90 Hz) = 14.9 m/s (33.3 mph)		AC voltage (3 pulses per revolution); 1800 rpm (90 Hz) = 9.2 m/s (20.6 mph)
Resolution	(0.0980 m/s) / (scan rate in seconds) or (0.2192 mph) / (scan rate in seconds)	(0.1666 m/s) / (scan rate in seconds) or (0.3726 mph) / (scan rate in seconds)		(0.1024 m/s) / (scan rate in sec.) or (0.2290 mph) / (scan rate in sec.)

Table 6-2: Wind direction specifications				
	05103 Wind Monitor	05108 Heavy Duty Wind Monitor	05108-45 Heavy Duty Wind Monitor- Alpine	05305 Wind Monitor- AQ
Range	0° to 360° mechanical, 355° electrical (5° open)			
Accuracy	±3°			
Starting threshold	1.1 m/s (2.4 mph)	1.0 m/s (2.0 mph)		0.5 m/s (1.0 mph)
Distance constant (50% recovery)	1.3 m (4.3 ft)			1.2 m (3.9 ft)
Damping ratio	0.3	0.25		0.45
Damped natural wavelength	7.4 m (24.3 ft)			4.9 m (16.1 ft)
Undamped natural wavelength	7.2 m (23.6 ft)			4.4 m (14.4 ft)
Output	analog DC voltage from potentiometer—resistance 10 kΩ; linearity 0.25%; life expectancy 50 million revolutions			
Power	switched excitation voltage supplied by data logger			

Table 6-3: Physical specifications				
	05103 Wind Monitor	05108 Heavy Duty Wind Monitor	05108-45 Heavy Duty Wind Monitor- Alpine	05305 Wind Monitor- AQ
Operating temperature range	-50 to +50 °C, assuming non-riming conditions	-50 to +60 °C, assuming non-riming conditions		-50 to +50 °C, assuming non-riming conditions
Overall height	37 cm (14.6 in)		40 cm (15.7 in)	38 cm (15 in)
Overall length	55 cm (21.7 in)		57 cm (22.4 in)	65 cm (25.6 in)
Propeller diameter	18 cm (7.1 in)			20 cm (7.9 in)
Mounting pipe description	34 mm (1.34 in) outer diameter; standard 1.0 in IPS schedule 40			
Weight	1.5 kg (3.2 lb)	1 kg (2.2 lb)		1.1 kg (2.5 lb)

7. Installation

If you are programming your data logger by using *Short Cut*, skip [Wiring](#) (p. 8) and [Programming](#) (p. 9). *Short Cut* does this work for you. See [QuickStart](#) (p. 2) for a *Short Cut* tutorial.

7.1 Wiring

Connections to Campbell Scientific data loggers are given in [Table 7-1](#) (p. 9). When *Short Cut* software is used to create the data logger program, the sensor is wired to the terminals shown in the wiring diagram created by *Short Cut*.

Table 7-1: Wire colour, wire function, and data logger connection		
Wire colour	Wire function	Data logger connection terminal
Red	WS signal	U configured for pulse input ¹ , P (pulse input), or P_LL (pulse, low-level AC)
Black	WS signal reference	⏏
Green	WD signal	U configured for single-ended analogue input ¹ , SE (single-ended, analogue input)
Blue	WD voltage excitation	U configured for voltage excitation ¹ , EX, VX (voltage excitation)
White	WD signal reference	⏏ (analogue ground)
Clear	Shield	⏏ (analogue ground)
¹ U terminals are automatically configured by the measurement instruction.		

7.2 Programming

Short Cut is the best source for up-to-date data logger programming code. If your data acquisition requirements are simple and you are connecting the sensor to a pulse terminal, you can probably create and maintain a data logger program exclusively by using **Short Cut**. If your data acquisition needs are more complex, the files that **Short Cut** creates are a great source for programming code to start a new program or add to an existing custom program.

NOTE:

Short Cut cannot edit programs after they are imported and edited in **CRBasic Editor**.

A **Short Cut** tutorial is available in [QuickStart](#) (p. 2). If you wish to import **Short Cut** code into **CRBasic Editor** to create or add to a customized program, follow the procedure in [Importing Short Cut code into CRBasic Editor](#) (p. 17). Programming basics for CRBasic data loggers are provided in the following sections. A complete program is provided in [Example program](#) (p. 18). Programming basics and programming examples for Edlog data loggers are provided at www.campbellsci.com/old-manuals [↗](#).

7.2.1 Wind speed

Wind speed is measured by using the **PulseCount()** instruction. Syntax of the **PulseCount()** instruction is:

```
PulseCount(Dest, Reps, PChan, PConfig, POption, Mult, Offset)
```

Set the **PConfig** parameter to **Low Level AC** and the **POption** parameter to **Frequency**.

The expression for wind speed (U) is:

$$U = Mx + B$$

where

M = multiplier

x = number of pulses per second (Hertz)

B = offset

[Table 7-2](#) (p. 10) lists the multipliers to obtain miles/hour or metres/second when the measurement instruction is configured to output Hz.

Table 7-2: Wind speed multiplier		
Model	Miles/hour output	Metres/second output
05103	0.2192	0.0980
05108 or 05108-45	0.3726	0.1666
05305	0.2290	0.1024

Set the offset to zero since the helicoid propeller calibration passes through zero (Gill, 1973; Baynton, 1976).

7.2.2 Wind direction

The wind vane is coupled to a 10 kΩ potentiometer, which has a 5-degree electrical dead band between 355 and 360 degrees. A 1 MΩ resistor between the signal and ground pulls the signal to 0 mV (0 degrees) when wind direction is in the dead band (between 355 and 360 degrees).

Wind direction is measured by the **BRHalf()** instruction.

Some CRBasic measurement sequences can cause the measurement of the wind direction to return a negative wind direction (–30°) while in the dead band. To overcome this problem, all program examples use a delay of 20 ms (20,000 μs) and set any negative wind direction values to 0.0: If WindDir < 0, then WindDir = 0.0.

The excitation voltage, range codes, and multipliers for the different data logger types are listed in [Table 7-3](#) (p. 11). [Wind direction measurement theory](#) (p. 23) has additional information on the **BRHalf()** measurement instruction.

Table 7-3: Parameters for wind direction					
	CR300 Series	CR800, CR850, CR1000	CR1000X	CR6	CR3000
Measurement range	mV2500	mV2500	mV5000	mV5000	mV5000
Excitation voltage	2500 mV	2500 mV	2500 mV	2500 mV	5000 mV
Reverse excitation	NA	True	True	True	True
Delay or settling time	20000 μ s	20000 μ s	20000 μ s	20000 μ s	20000 μ s
Multiplier	355	355	355	355	355
Offset	0	0	0	0	0

7.2.3 WindVector processing instruction

The [WindVector](#) output is used to process and store mean wind speed, unit vector mean wind direction, and standard deviation of the wind direction (optional) by using the measured wind speed and direction samples.

7.3 Siting

Locate wind sensors away from obstructions such as trees or buildings. Generally, there should be a horizontal distance of at least ten times the height of the obstruction between the wind monitor and the obstruction. If the sensors need to be mounted on a roof, the height of the sensors above the roof, should be at least 1.5 times the height of the building. See [References](#) (p. 16) for a list of references that discuss siting wind speed and direction sensors.

7.4 Assembly and mounting

Materials required:

- 5/64-inch hex key wrench
- 1/2-inch open end wrench
- Compass and declination angle for the site (see [Wind direction sensor orientation](#) [p. 20])
- Small screwdriver provided with data logger
- UV resistant cable ties
- 6-inch to 10-inch torpedo level

- Unthreaded aluminium pipe, 1-inch IPS, 12-inch length (shipped with the sensor)
- 1-inch-by-1-inch Nu-Rail crossover fitting
- Wind monitor body
- Propeller
- Orientation ring
- Ferrite choke (shipped with sensor)

The following procedure is for assembling the sensor and mounting it to a crossarm.

1. Remove the plastic nut on the propeller shaft.
2. Place the propeller on the shaft and secure it to its shaft by using a wrench to tighten the plastic nut.

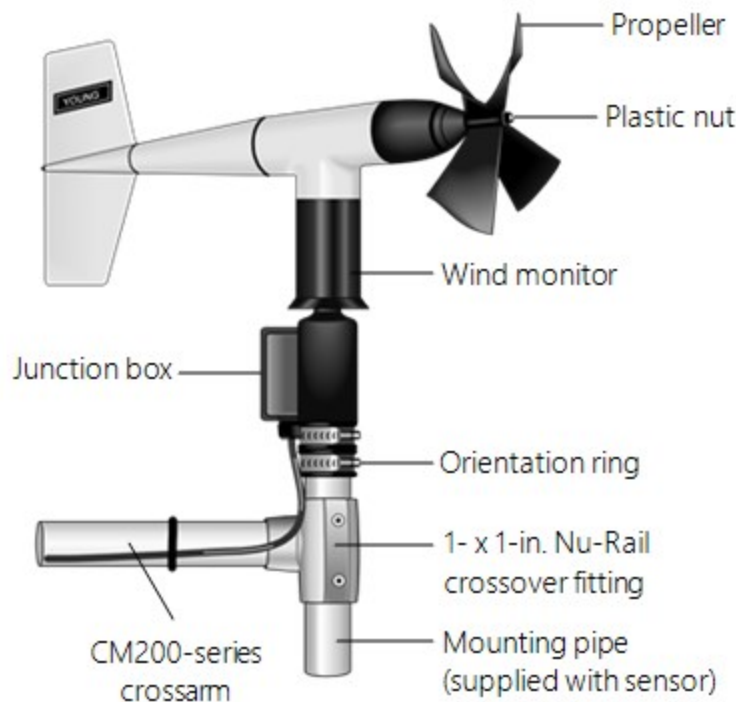


Figure 7-1. Wind monitor mounted to a crossarm by using 1- x 1-in. Nu-Rail crossover fitting

3. Mount a crossarm to a tripod or tower.
4. If a pyranometer is also being mounted on the crossarm, orient the crossarm north-south with the Nu-Rail on the end farthest from the equator. Otherwise, the crossarm may be

oriented north-south, east west, or any other angle desired. [Wind direction sensor orientation](#) (p. 20) contains detailed information on determining true north by using a compass and the magnetic declination for the site.

5. Secure the 12-inch aluminum pipe to the Nu-Rail fitting.
6. Place the orientation ring, followed by the wind monitor on the aluminium pipe.
7. Orient the junction box to the south, and tighten the band clamps on the orientation ring and aluminium pipe. Final sensor orientation is done after the data logger has been programmed to measure wind direction as described in [Wind direction sensor orientation](#) (p. 20).
8. Use the torpedo level to ensure that the wind monitor is level.
9. Insert the cable through the ferrite choke center hole, loop the cable over the top of the ferrite choke, and reinsert the cable through the ferrite choke center hole (see the following figure).

CAUTION:

Must install the ferrite choke on the cable near the sensor to meet EMC compliance.

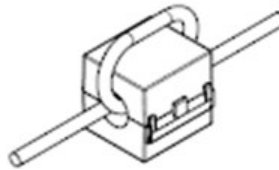


Figure 7-2. Ferrite choke installed on cable

10. Route the sensor cable along the underside of the crossarm to the tripod or tower, and to the instrument enclosure.
11. Secure the cable to the crossarm and tripod or tower by using cable ties.

The wind monitor can also use a CM221 Right-Angle Mounting Kit or CM216 Sensor Mounting Kit; see the following figures. The CM221 uses U-bolts to secure the sensor to a crossarm. The CM216 mounts the wind monitor on top of a CM106B, CM110, CM115, or CM120 tripod. The CM216 extends 10 cm (4 in) above the mast of the tripod.




Figure 7-3. CM221 Right-Angle Mounting Kit



Figure 7-4. The CM216 allows the wind monitor to mount atop a tripod mast

8. Sensor maintenance

Every month do a visual/audio inspection of the anemometer at low wind speeds. Verify that the propeller and wind vane bearing rotate freely. Inspect the sensor for physical damage.

Replace the anemometer bearings when they become noisy, or the wind speed threshold increases above an acceptable level. The condition of the bearings can be checked by using the Propeller Torque Disc as described in the R. M. Young manual (see www.youngusa.com/product-category/wind-sensors-accessories )

The potentiometer has a life expectancy of fifty million revolutions. As it becomes worn, the element can produce noisy signals or become non-linear. Replace the potentiometer when the noise or non-linearity becomes unacceptable. The condition of the vertical shaft (vane) bearings can be checked by using R. M. Young Vane Torque Gauge.

NOTE:

Campbell Scientific recommends factory replacement of the bearings and potentiometer. Refer to the [About this manual](#) page of this document for the procedure of acquiring a Returned Materials Authorization (RMA). Mechanically-adept users may choose to replace the bearings or potentiometer themselves. Instructions for replacing the bearings and potentiometer are given in R. M. Young manuals www.youngusa.com. A video that describes changing the bearings is available at: www.campbellsci.com/videos/wind-monitor-bearing-replacement.

9. Troubleshooting

9.1 Wind direction

Symptom: NAN, -9999, or no change in direction

1. Check that the sensor is wired to the excitation and single-ended terminal specified by the measurement instruction.
2. Verify that the excitation voltage and range code are correct for the data logger type.
3. Disconnect the sensor from the data logger and use an ohmmeter to check the potentiometer. Resistance should be about 10 k Ω between the blue and white wires. The resistance between either the blue/green or white/green wires should vary between about 1 k Ω to 11 k Ω depending on vane position. Resistance when the vane is in the 5 degree dead band should be about 1 M Ω .

Symptom: Incorrect wind direction

1. Verify that the excitation voltage, range code, multiplier and offset parameters are correct for the data logger type.
2. Check orientation of sensor as described in [Assembly and mounting](#) (p. 11).

9.2 Wind speed

Symptom: No wind speed

1. Check that the sensor is wired to the pulse terminal specified by the pulse count instruction.
2. Disconnect the sensor from the data logger and use an ohmmeter to check the coil. The resistance between the red and black wires should be about 2075 Ω . Infinite resistance indicates an open coil; low resistance indicates a shorted coil.
3. Verify that the configuration code, and multiplier and offset parameters for the pulse count instruction are correct for the data logger type.

10. References

IEC 61400 Part 12-1: *Wind turbine generator systems Part 12: Wind Turbine Power Performance Testing*.

Wind vector information:

<http://www.windspeed.co.uk/ws/index.php?option=faq&task=viewfaq&Itemid=5&artid=29> .

Gill, G.C., 1973: *The Helicoid Anemometer Atmosphere*, II, 145–155.

Baynton, H.W., 1976: *Errors in Wind Run Estimates from Rotational Anemometers*, Bul. Am. Met. Soc., vol. 57, No. 9, 1127–1130.

The following references give detailed information on siting wind speed and wind direction sensors.

EPA, 1989: *Quality Assurance Handbook for Air Pollution Measurements System*, Office of Research and Development, Research Triangle Park, NC, 27711.

EPA, 1987: *On-Site Meteorological Program Guidance for Regulatory Modeling Applications*, EPA-450/4-87-013, Office of Air Quality Planning and Standards, Research Triangle Park, NC 27711.

The State Climatologist, 1985: *Publication of the American Association of State Climatologists: Height and Exposure Standards*, for Sensors on Automated Weather Stations, vol. 9, No. 4.

WMO, 1983: *Guide to Meteorological Instruments and Methods of Observation*, World Meteorological Organization, No. 8, 5th edition, Geneva, Switzerland.

Appendix A. Importing *Short Cut* code into *CRBasic Editor*


Short Cut creates a .DEF file that contains wiring information and a program file that can be imported into *CRBasic Editor*. By default, these files reside in the C:\campbellsci\SCWin folder.

Import *Short Cut* program file and wiring information into *CRBasic Editor*:

1. Create the *Short Cut* program, then save it. Click the **Advanced** tab then the **CRBasic Editor** button. Your program file will open in CRBasic with a generic name. Provide a meaningful name and save the CRBasic program. This program can now be edited for additional refinement.

NOTE:

Once the file is edited with *CRBasic Editor*, *Short Cut* can no longer be used to edit the program.

2. To add the *Short Cut* wiring information into the new CRBasic program, open the .DEF file located in the C:\campbellsci\SCWin folder. Copy the wiring information found at the beginning of the .DEF file.
3. Go into the CRBasic program and paste the wiring information at the beginning of the program.
4. In the CRBasic program, highlight the wiring information, right-click, and select **Comment Block**. This adds an apostrophe (') to the beginning of each of the highlighted lines, which instructs the data logger compiler to ignore those lines when compiling. The **Comment Block** feature is demonstrated at about 5:10 in the [CRBasic | Features](#) video .

Appendix B. Example program

The following program measures the 05103 every 5 s, and stores mean wind speed, unit vector mean direction, and standard deviation of the direction every 60 minutes. Wiring for the example is given in [Table B-1](#) (p. 18).

Table B-1: Wiring for example program		
Colour	Wire label	CR1000X
Red	WS Signal	P1
Black	WS Reference	\perp
Green	WD Signal	SE 1
Blue	WD Volt Excit	VX 1
White	WD Reference	\perp
Clear	Shield	\perp

CRBasic Example 1: CR1000X example program

```
'CR1000X
'Declare Variables and Units
Public Batt_Volt
Public WS_ms
Public WindDir
Units Batt_Volt=Volts
Units WS_ms=metres/second
Units WindDir=Degrees

'Define Data Tables
DataTable(Hour,True,-1)
    DataInterval(0,60,Min,10)
    WindVector (1,WS_ms,WindDir,FP2,False,0,0,0)
    FieldNames("WS_ms_S_WVT,WindDir_D1_WVT,WindDir_SD1_WVT")
EndTable

'Main Program
BeginProg
    Scan(5,Sec,1,0)
        'Default Data Logger Battery Voltage measurement Batt_Volt:
        Battery(Batt_Volt)

        '05103 Wind Speed & Direction Sensor measurements WS_ms and WindDir:
        'WS_ms
        PulseCount(WS_ms,1,P1,5,1,0.098,0)
        'WindDir
        BrHalf(WindDir,1,mV5000,1,Vx1,1,2500,True,20000,60,355,0)

        If WindDir>=360 OR WindDir<0 Then WindDir=0

        'Call Data Tables and Store Data
        CallTable(Hour)
    NextScan
EndProg
```


Appendix C. Wind direction sensor orientation

C.1 Determining true north and sensor orientation

Orientation of the wind direction sensor is done after the data logger has been programmed, and the location of true north has been determined. True north is usually found by reading a magnetic compass and applying the correction for magnetic declination; where magnetic declination is the number of degrees between true north and magnetic north. The preferred method to obtain the magnetic declination for a specific site is to use a computer service offered by NOAA at www.ngdc.noaa.gov/geomag. The magnetic declination can also be obtained from a map or local airport. A general map showing magnetic declination for the contiguous United States is shown in [Figure C-1](#) (p. 21).

Declination angles east of true north are considered negative, and are subtracted from 360 degrees to get true north as shown [Figure C-2](#) (p. 21) (0° and 360° are the same point on a compass). For example, the declination for Logan, Utah is 11.78° East (11 August 2015). True north is $360^\circ - 11.78^\circ$, or 348.22° as read on a compass. Declination angles west of true north are considered positive, and are added to 0 degrees to get true north as shown in [Figure C-3](#) (p. 22).

Orientation is most easily done with two people, one to aim and adjust the sensor, while the other observes the wind direction displayed by the data logger.

1. Establish a reference point on the horizon for true north.
2. Sighting down the instrument center line, aim the nose cone, or counterweight at true north. Display the input location or variable for wind direction by using a laptop or keyboard display.
3. Loosen the U-bolt on the CM220 or the set screws on the Nu-Rail that secure the base of the sensor to the crossarm. While holding the vane position, slowly rotate the sensor base until the data logger indicates 0 degrees. Tighten the set screws.

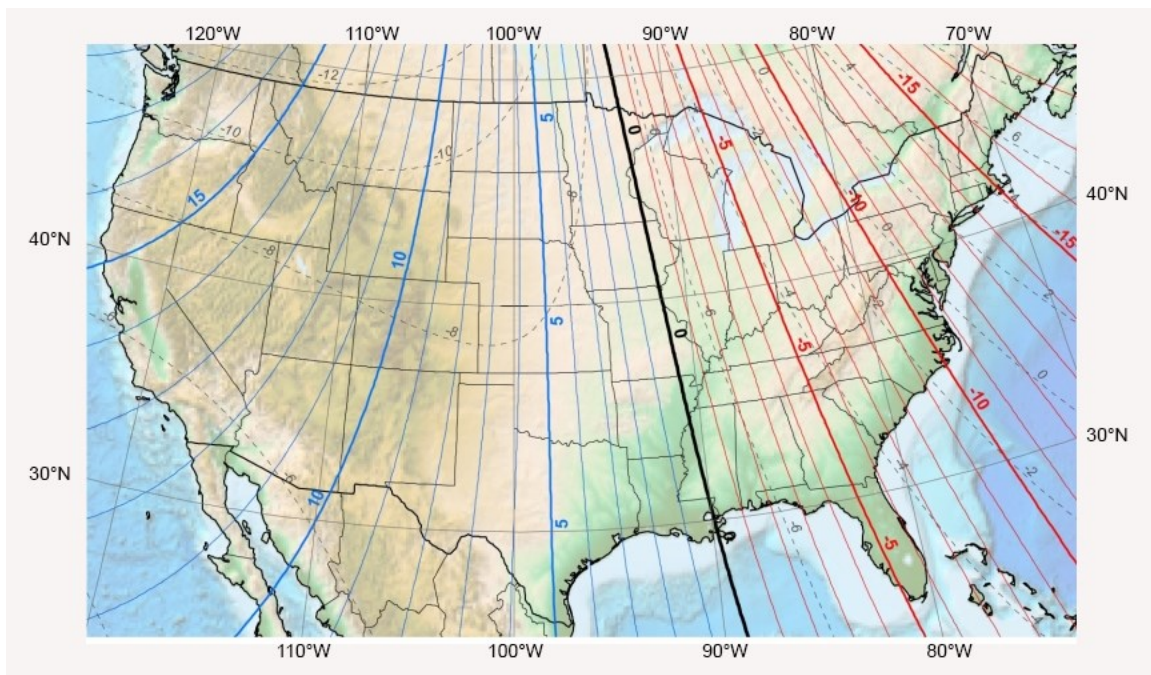


Figure C-1. Magnetic declination for the contiguous United States (2015)

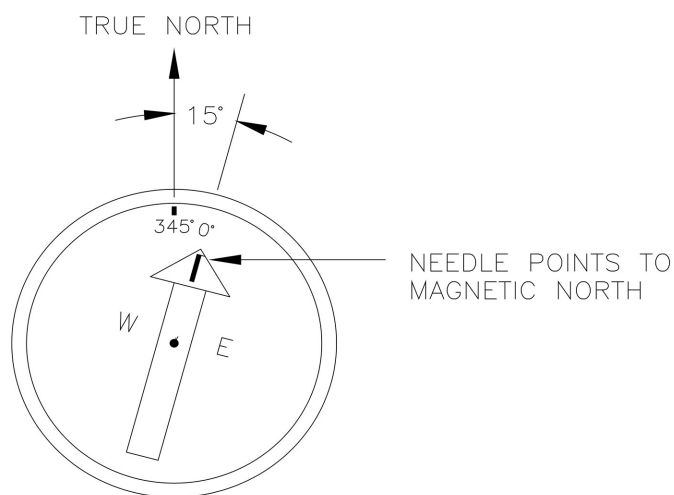


Figure C-2. Declination angles east of true north are subtracted from 0 to get true north

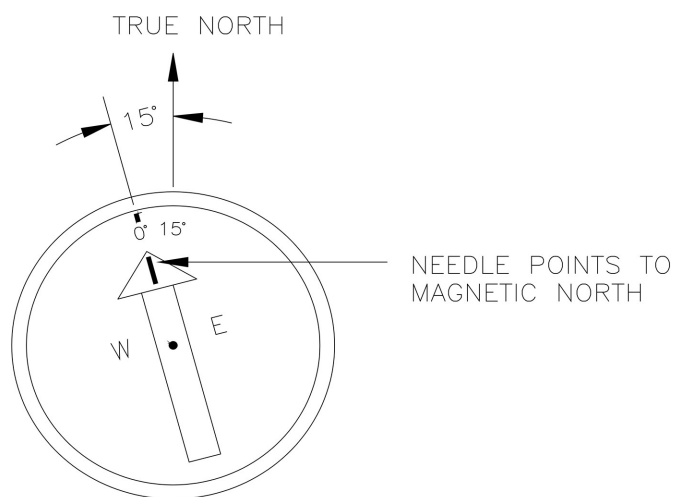


Figure C-3. Declination angles west of true north are added to 0 to get true north

Appendix D. Wind direction measurement theory

It is not necessary to understand the concepts in this section for the general operation of the 05103 with a Campbell Scientific data logger.

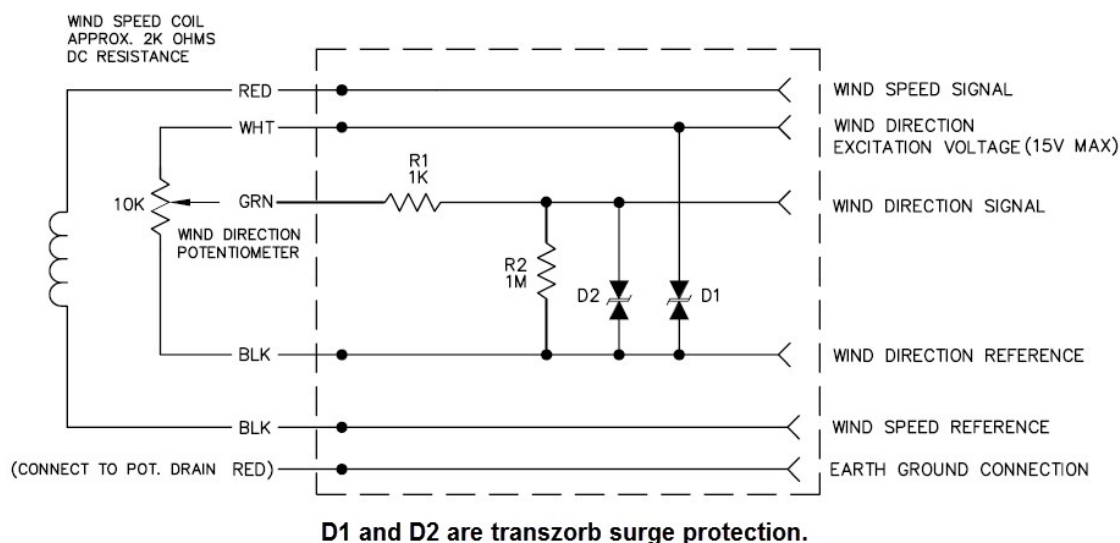


Figure D-1. 05103 potentiometer in a half bridge circuit

The [BRHalf](#) CRBasic instruction outputs a precise excitation voltage (V_x), and measures the voltage between the wiper and ground (V_s). The resistance between the wiper and ground (R_s), and V_s vary with wind direction. The measurement result is the ratio of the measured voltage to the excitation voltage (V_s/V_x). This ratio is related to the resistance as shown in this equation:

$$V_s/V_x = R_s / (R_t + R_s)$$

The maximum value that R_s will reach is R_f , just before it crosses over from the west side of north to the east side of north (at this point $R_t = 0$). V_s/V_x reaches its maximum value of 1.0 mV/mV at 355 degrees. The multiplier to convert V_s/V_x to degrees is 355 degrees / 1.0 V_s/V_x = 355. Refer to the data logger manual for more information on the bridge measurements.

Global Sales and Support Network

A worldwide network to help meet your needs



Campbell Scientific Regional Offices

Australia

Location: Garbutt, QLD Australia
Phone: 61.7.4401.7700
Email: info@campbellsci.com.au
Website: www.campbellsci.com.au

Brazil

Location: São Paulo, SP Brazil
Phone: 11.3732.3399
Email: vendas@campbellsci.com.br
Website: www.campbellsci.com.br

Canada

Location: Edmonton, AB Canada
Phone: 780.454.2505
Email: dataloggers@campbellsci.ca
Website: www.campbellsci.ca

China

Location: Beijing, P. R. China
Phone: 86.10.6561.0080
Email: info@campbellsci.com.cn
Website: www.campbellsci.com.cn

Costa Rica

Location: San Pedro, Costa Rica
Phone: 506.2280.1564
Email: info@campbellsci.cc
Website: www.campbellsci.cc

France

Location: Montrouge, France
Phone: 0033.0.1.56.45.15.20
Email: info@campbellsci.fr
Website: www.campbellsci.fr

Germany

Location: Bremen, Germany
Phone: 49.0.421.460974.0
Email: info@campbellsci.de
Website: www.campbellsci.de

India

Location: New Delhi, DL India
Phone: 91.11.46500481.482
Email: info@campbellsci.in
Website: www.campbellsci.in

South Africa

Location: Stellenbosch, South Africa
Phone: 27.21.8809960
Email: sales@campbellsci.co.za
Website: www.campbellsci.co.za

Spain

Location: Barcelona, Spain
Phone: 34.93.2323938
Email: info@campbellsci.es
Website: www.campbellsci.es

Thailand

Location: Bangkok, Thailand
Phone: 66.2.719.3399
Email: info@campbellsci.asia
Website: www.campbellsci.asia

UK

Location: Shepshed, Loughborough, UK
Phone: 44.0.1509.601141
Email: sales@campbellsci.co.uk
Website: www.campbellsci.co.uk

USA

Location: Logan, UT USA
Phone: 435.227.9120
Email: info@campbellsci.com
Website: www.campbellsci.com