


INSTRUCTION MANUAL

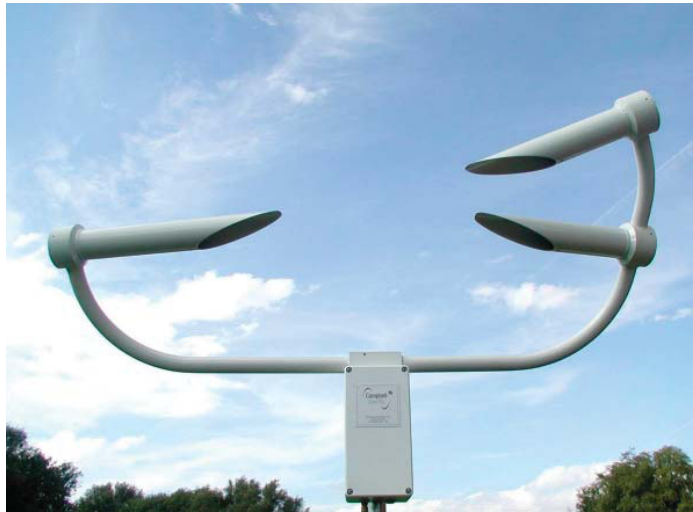

PWS100 **Present Weather Sensor**

Revision: 3/12



Copyright © 2006-2012
Campbell Scientific, Inc.

Warranty

“PRODUCTS MANUFACTURED BY CAMPBELL SCIENTIFIC, INC. are warranted by Campbell Scientific, Inc. (“Campbell”) to be free from defects in materials and workmanship under normal use and service for twelve (12) months from date of shipment unless otherwise specified in the corresponding Campbell pricelist or product manual. Products not manufactured, but that are re-sold by Campbell, are warranted only to the limits extended by the original manufacturer. Batteries, fine-wire thermocouples, desiccant, and other consumables have no warranty. Campbell's obligation under this warranty is limited to repairing or replacing (at Campbell's option) defective products, which shall be the sole and exclusive remedy under this warranty. The customer shall assume all costs of removing, reinstalling, and shipping defective products to Campbell. Campbell will return such products by surface carrier prepaid within the continental United States of America. To all other locations, Campbell will return such products best way CIP (Port of Entry) INCOTERM® 2010, prepaid. This warranty shall not apply to any products which have been subjected to modification, misuse, neglect, improper service, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied. The warranty for installation services performed by Campbell such as programming to customer specifications, electrical connections to products manufactured by Campbell, and product specific training, is part of Campbell's product warranty. CAMPBELL EXPRESSLY DISCLAIMS AND EXCLUDES ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Campbell is not liable for any special, indirect, incidental, and/or consequential damages.”

Assistance

Products may not be returned without prior authorization. The following contact information is for US and international customers residing in countries served by Campbell Scientific, Inc. directly. Affiliate companies handle repairs for customers within their territories. Please visit www.campbellsci.com to determine which Campbell Scientific company serves your country.

To obtain a Returned Materials Authorization (RMA), contact CAMPBELL SCIENTIFIC, INC., phone (435) 227-9000. After an applications engineer determines the nature of the problem, an RMA number will be issued. Please write this number clearly on the outside of the shipping container. Campbell Scientific's shipping address is:

CAMPBELL SCIENTIFIC, INC.

RMA# _____
815 West 1800 North
Logan, Utah 84321-1784

For all returns, the customer must fill out a "Statement of Product Cleanliness and Decontamination" form and comply with the requirements specified in it. The form is available from our web site at www.campbellsci.com/repair. A completed form must be either emailed to repair@campbellsci.com or faxed to (435) 227-9106. Campbell Scientific is unable to process any returns until we receive this form. If the form is not received within three days of product receipt or is incomplete, the product will be returned to the customer at the customer's expense. Campbell Scientific reserves the right to refuse service on products that were exposed to contaminants that may cause health or safety concerns for our employees.

PWS100 Table of Contents

PDF viewers: These page numbers refer to the printed version of this document. Use the PDF reader bookmarks tab for links to specific sections.

1. Introduction	1-1
2. Cautionary Statements	2-1
2.1 Sensor Unit Safety	2-1
2.2 Laser Safety	2-1
3. Initial Inspection	3-1
4. Overview	4-1
5. Specifications	5-1
5.1 Mechanical Specifications	5-1
5.2 Electrical Specifications	5-1
5.3 Optical Specifications	5-2
5.3.1 Laser Head Specifications	5-2
5.3.2 Sensor Head Specifications	5-2
5.4 Environmental Specifications	5-2
5.5 CS215-PWS Specifications	5-2
5.6 Measurement Capabilities and Limitations	5-2
5.6.1 Visibility Measurements	5-2
5.6.2 Precipitation Measurements	5-3
5.6.3 Data Storage and Buffering	5-3
6. Installation	6-1
6.1 Location and Orientation	6-1
6.2 Unloading and Unpacking	6-2
6.2.1 Unpacking Procedure	6-2
6.2.2 Storage Information	6-2
6.3 Installation Procedures	6-3
6.3.1 Assembling the PWS100	6-3
6.3.2 Mounting the PWS100	6-3
6.3.3 Connecting Cables	6-7
6.3.4 Basic Wiring	6-7
6.3.5 Desiccant	6-9
6.3.6 Communication Options	6-9
6.3.6.1 RS-485 Half-duplex mode	6-11
6.3.7 Installing Power Supply	6-13
6.3.8 Start-Up Testing	6-13
6.3.9 Initial Settings	6-13
6.3.10 Load Factory Defaults	6-13
6.3.11 Lubricating the Enclosure Screws	6-13

6.4 Grounding and Lightning Protection 6-14
 6.4.1 Equipment Grounding 6-14
 6.4.2 Internal Grounding 6-14
 6.4.3 Lightning Rod 6-14

7. Operation 7-1

7.1 Introduction 7-1
 7.2 PWS100 Configuration 7-1
 7.2.1 Using the Present Weather Viewer Program 7-1
 7.3 Terminal Mode 7-2
 7.3.1 Using the Help Command 7-3
 7.3.2 Entering / Exiting the Menu System 7-3
 7.3.3 Message Polling 7-4
 7.4 PWS100 Menu System 7-4
 7.4.1 Top Menu Options 0, 1 and 2 (Message n) 7-5
 7.4.1.1 Message 0 (the Default Output) 7-9
 7.4.1.2 Message Field 1 and 2 User Defined Message 7-9
 7.4.1.3 Message Field 10 To 19 Fixed Messages 7-10
 7.4.1.4 Message Field 20 Visibility Range (m) 7-10
 7.4.1.5 Message Field 21 Present Weather Code (WMO) 7-10
 7.4.1.6 Message Field 22 Present Weather Code (METAR) 7-10
 7.4.1.7 Message Field 23 Present Weather Code (NWS) 7-10
 7.4.1.8 Message Field 24 Alarms 7-10
 7.4.1.9 Message Field 25 Fault Status of the PWS100 7-11
 7.4.1.10 Message Field 30 External Sensor Temperature,
 RH% and Wetbulb 7-11
 7.4.1.11 Message Field 31 External Sensor Maximum and
 Minimum Temperature 7-11
 7.4.1.12 Message Field 33 External Sensor Wetness 7-11
 7.4.1.13 Message Field 34 External Sensor Aux 7-11
 7.4.1.14 Message Field 40 Precipitation Intensity 7-11
 7.4.1.15 Message Field 41 Precipitation Accumulation 7-12
 7.4.1.16 Message Field 42 Drop Size Distribution 7-12
 7.4.1.17 Message Field 43 Average Velocity (ms-1) and
 Average Size (mm) 7-12
 7.4.1.18 Message Field 44 Type Distribution 7-12
 7.4.1.19 Message Field 45 Size / Velocity Type Map 1
 (20 x 20) 7-12
 7.4.1.20 Message Field 46 Size / Velocity Type Map 2
 (32 x 32) 7-13
 7.4.1.21 Message Field 47 Campbell Scientific Standard Size /
 Velocity Map (34 x 34) 7-15
 7.4.1.22 Message Field 48 7-17
 7.4.1.23 Message Field 49 Visibility (m), 10 minute average 7-17
 7.4.1.24 Message Field 100 Upper, Lower LED temperature 7-18
 7.4.1.25 Message Field 101 Upper, Lower Detector
 Temperature 7-18
 7.4.1.26 Message Field 102 Laser Hood, Laser Temperature
 and Laser Drive Current 7-18
 7.4.1.27 Message Field 103 Laser, Upper, Lower Detector DC
 Voltage Offsets 7-18
 7.4.1.28 Message Field 104 Laser, Upper and Lower Dirty
 Window Detector 7-18

- 7.4.1.29 Message Field 105 DSP PSU Voltage, Hood and Dew Heater % Duty 7-18
- 7.4.1.30 Message Field 106 Upper, Lower Detector Differential Voltage, Calibrated Visibility mV..... 7-18
- 7.4.1.31 Message Field 150 Serial Number, Operating System and Hardware Version..... 7-18
- 7.4.1.32 Message Field 151 Day Count, Hours, Minutes, Seconds 7-18
- 7.4.1.33 Message Field 152 Product Name 7-18
- 7.4.1.34 Message Field 153 Statistics Period 7-18
- 7.4.1.35 Message Field 154 Watchdog Count, Maximum Particles Per Second, Particles Not Processed, Time Lag..... 7-19
- 7.4.1.36 Message Field 155 Processing Statistics 7-19
- 7.4.1.37 Message Field 156 Year, Month, Day..... 7-19
- 7.4.1.38 Message Field 157 Hours, Minutes, Seconds..... 7-19
- 7.4.1.39 Message Field 158 Averaged Corrected Visibility Voltage and Averaged Upper Head Voltage..... 7-19
- 7.4.1.40 Message Field 159 Output a CCITT CRC-16 (checksum) of the message 7-19
- 7.4.1.41 Message Field Error 7-19
- 7.4.2 Top Menu Option 3 (Set Time and Date) 7-21
- 7.4.3 Top Menu Option 4 (Configuration)..... 7-22
- 7.4.4 Top Menu Option 5 (Password)..... 7-30
- 7.4.5 Top Menu Option 6 (Weather and Alarm Parameters) 7-31
- 7.4.6 Top Menu Option 7 (Terminal) 7-34
- 7.4.7 Top Menu Option 8 (Info) 7-34
- 7.4.8 Top Menu Option 9 (Done) 7-35
- 7.5 Message Related Commands 7-36
 - 7.5.1 Automatic and Polled Message Sending..... 7-36
 - 7.5.2 Retrieving Historical Data 7-38
 - 7.5.3 Viewing Data Output on the Command Line 7-40
 - 7.5.4 Collection of Data in Text File Format 7-40
- 7.6 Weather Related Commands 7-40
 - 7.6.1 Setting and Viewing Weather Parameters..... 7-40
 - 7.6.2 Receiving Data from Remote Sensors 7-41
- 7.7 System Configuration Commands 7-41
 - 7.7.1 Setting System Parameters 7-41
- 7.8 Maintenance Commands..... 7-43
 - 7.8.1 Loading a New OS..... 7-43
 - 7.8.2 Running a Diagnostic Test..... 7-44
 - 7.8.3 Running the Calibration..... 7-45
 - 7.8.4 Rotating the Calibration Disc..... 7-45
- 7.9 Other Commands 7-45
 - 7.9.1 Setting the Time and Date..... 7-45
 - 7.9.2 Resetting the System..... 7-46
- 7.10 Connecting the PWS100 to a Datalogger 7-46
 - 7.10.1 Connections 7-46
 - 7.10.2 Example Logger Programs..... 7-46

8. Functional Description8-1

- 8.1 General..... 8-1
- 8.2 Optical Measurement..... 8-1
 - 8.2.1 Optical Arrangement..... 8-1

8.3	Additional Sensor Connections.....	8-3
8.3.1	Using a CS215-PWS on the PWS100.....	8-4
8.3.2	Using Other Sensors on the PWS100.....	8-4
8.4	PWS100 Control Unit.....	8-5
8.5	Measurement Signal Processing.....	8-5
8.6	Algorithm Description.....	8-6
8.6.1	Detecting and Classifying Precipitation.....	8-6
8.6.2	Precipitation Intensity.....	8-8
8.6.3	Precipitation Accumulation.....	8-10
8.6.4	Present Weather.....	8-10
8.6.4.1	Precipitation Types.....	8-10
8.6.4.2	Visibility Types.....	8-11
8.6.4.3	Weather Classes.....	8-11
8.6.4.4	Weather Code Selection.....	8-11
8.6.5	Visibility.....	8-11
8.7	Applications.....	8-12
8.8	Internal Monitoring.....	8-13
9.	Maintenance.....	9-1
9.1	General.....	9-1
9.2	Cleaning.....	9-1
9.3	Calibration.....	9-2
10.	Troubleshooting.....	10-1
10.1	Introduction.....	10-1
10.2	Possible Problems.....	10-1
10.2.1	No response from PWS100.....	10-1
10.2.2	PWS100 responds but no data output given.....	10-1
10.2.3	Ice has formed in the end of the hoods.....	10-2
10.2.4	The visibility output is clearly in error.....	10-2
10.2.5	The sensor does not detect particles during a precipitation event.....	10-2
10.2.6	The sensor detects particles when there are none present.....	10-2
10.2.7	The OS update did not work.....	10-3
 Appendices		
A.	PWS100 Output Codes.....	A-1
B.	Wiring.....	B-1
C.	Cable Selection.....	C-1
C.1	Power Cable.....	C-1
C.2	Communication Cable.....	C-3
D.	Software Flowchart.....	D-1
E.	Menu System Map.....	E-1

List of Figures

4-1. PWS100.....	4-1
6-1. Effect of structure on air flow	6-1
6-2. Hardware for mounting the top of the DSP plate to a pole	6-4
6-3. Placing the PWS100 onto the bracket	6-5
6-4. PWS100 mounted to a mast or pole	6-6
6-5. Underside of DSP enclosure	6-8
6-6. Mounting the desiccant pack on the DSP cover	6-9
6-7. Removal of DSP cover	6-10
6-8. Exposing the DSP board	6-10
6-9. DSP board dip switch location (circled).....	6-12
6-10. Dip switches (defaults set - 00011100)	6-12
6-11. Labeled DIN-RAIL contacts	6-13
7-1. PWS100 setup menu	7-5
7-2. Message menu	7-5
7-3. Message parameters and fields menu	7-6
7-4. Message interval menu	7-6
7-5. Message mode menu	7-7
7-6. Message field menu	7-20
7-7. Delete message menu	7-21
7-8. Time and date menu	7-21
7-9. Configuration menu.....	7-22
7-10. PWS100 ID menu.....	7-23
7-11. TRH probe menu	7-23
7-12. Wetness probe menu	7-24
7-13. Aux probe menu	7-24
7-14. Hood heater temperature menu	7-25
7-15. Dew heater mode menu	7-25
7-16. Output mode menu	7-26
7-17. Calibration warning screen.....	7-27
7-18. Calibration top menu	7-27
7-19. Calibration disc constants menu.....	7-28
7-20. View / adjust calibration menu.....	7-29
7-21. Terminal mode menu.....	7-29
7-22. PSU shut down voltage menu	7-30
7-23. Password menu.....	7-30
7-24. Weather parameters menu	7-31
7-25. Visibility range alarm menu	7-31
7-26. Snow water content adjustment.....	7-33
7-27. Mixed precipitation threshold adjustment	7-34
7-28. Terminal active screen.....	7-34
7-29. Information menu	7-35
7-30. Done menu	7-36
8-1. Laser unit.....	8-2
8-2. Laser unit showing light sheet production (not to scale).....	8-2
8-3. Sensor unit.....	8-3
8-4. Sensor unit showing light path extents (not to scale)	8-3
8-5. Block diagram of PWS100 control unit	8-5
8-6. Signal to pedestal ratio values for different precipitation types	8-7
9-1. Baffle removal and fitting	9-1
B-1. Underside of DSP enclosure.....	B-1
B-2. DSP PCB to DSP enclosure connections.....	B-2
C-1. PWS100 power cable.....	C-2
C-2. Enclosure wiring details for power cable	C-2

C-3. PWS100 communication cable C-4
C-4. Enclosure wiring details for communication cable C-4

List of Tables

7-1. Command Set 7-2
7-2. Message Field parameters 7-7
7-3. Assumed bulk density of various particle types. 7-32
7-4. Weather parameters. 7-41
7-5. Detectable sensors. 7-43
8-1. Precipitation intensities 8-7
A-1. PWS100 output codes A-1
A-2. Light, moderate and heavy precipitation defined with respect to
type of precipitation and to intensity, *i*, with intensity values
based on a three-minute measurement period A-7
A-3. Intensity bounds for rain and drizzle A-8
A-4. Intensity bounds for rain and snow A-8
A-5. Intensity bounds for drizzle and snow A-8
A-6. Intensity bounds for rain, drizzle and snow A-9
A-7. Intensity bounds for rain, drizzle, ice pellets, hail and snow A-9
A-8. Intensity bounds for ice pellets, hail and snow A-9
B-1. Cable identifier B-1
C-1. Communication cable connections C-3

Section 1. Introduction

The PWS100 is a laser-based sensor that measures precipitation and visibility by accurately determining the size and velocity of water droplets in the air. It can be used in weather stations in road, airport, and marine applications. The PWS100 uses advanced measurement techniques and algorithms to calculate individual precipitation particle type.

Section 2. Cautionary Statements

2.1 Sensor Unit Safety

The PWS100 sensor has been checked for safety before leaving the factory and contains no internally replaceable or modifiable parts.

WARNING Do not modify the PWS100 unit. Such modifications will lead to damage of the unit and could expose users to dangerous laser light levels and voltages.

WARNING In unusual failure modes and environmental conditions the sensor hood could become hot. In normal operation they will be at ambient temperature or slightly above.

CAUTION Ensure that the correct voltage supply is provided to the sensor.

2.2 Laser Safety

The PWS100 sensor incorporates a laser diode which is rated as a class 3B device. This is an embedded laser where the output from the sensor unit, through the optics, is minimized to class 1M. This classification indicates that viewing of the beam with the naked eye is safe but looking directly into the beam with optical instruments, e.g. binoculars can be dangerous.

From the laser head the output has the following characteristics:

Maximum pulse energy: 73 nJ

Pulse duration: 5.2 μ s

Wavelength: 830 nm

EN 60825-1:2001

The sensor is marked with the following warning:

INVISIBLE LASER RADIATION
DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS
CLASS 1M LASER PRODUCT

Opening the laser head unit with the power applied to the PWS100 may expose the user to hazardous laser radiation. To open the unit requires the use of tools and should not be carried out except by authorized personnel using appropriate safety eyewear.

If the laser is operated outside of the housing then the following warning applies:

**INVISIBLE LASER RADIATION
AVOID EXPOSURE TO BEAM
CLASS 3B LASER PRODUCT**

WARNING

Check that the laser warning label on the sensor is still visible and can be clearly read on an annual basis. When installing the sensor avoid pointing the laser housing towards areas where binoculars are in common use.

Section 3. Initial Inspection

Upon receipt of the PWS100, inspect the packaging and contents for damage.
File damage claims with the shipping company.

Section 4. Overview

The PWS100 Present Weather Sensor is a laser based sensor capable of determining precipitation and visibility parameters for automatic weather stations including road, marine and airport stations. Due to its advanced measurement technique and fuzzy logic algorithms, the PWS100 can determine each individual precipitation particle type from accurate size and velocity measurements and the structure of the received signal.

The system can output visibility and precipitation related weather codes such as those detailed in the World Meteorological Organisation (WMO) SYNOP code, those used as part of a METAR weather report and those previously used by the US National Weather Service (NWS).

Further details of precipitation can be given in terms of drop size distributions (DSD) and particle size / velocity maps to give better indications of precipitation intensity. Such distributions can then be used in soil erosion studies.

The PWS100 comprises a Digital Signal Processor (DSP) housing unit connected to a sensor arm, comprising one laser head and two sensor heads. Each of the sensor heads is 20° off axis to the laser unit axis, one in the horizontal plane, the other in the vertical plane. The DSP housing is fixed via a mounting bracket to a mast, though a tripod can be used for temporary sites. Figure 4-1 shows the PWS100 mounted on a pole.

An optional CS215-PWS temperature and humidity sensor is normally supplied and plugs directly into the PWS100. That sensor is used to improve the accuracy of weather coding by the PWS, in particular in respect of discriminating between snow and rain and also fog/mist and dust.



FIGURE 4-1. PWS100

Section 5. Specifications

5.1 Mechanical Specifications

Measuring Area:	40 cm ² (6.2 in ²)
Housing Materials:	Iridite NCP conversion coated aluminium (RoHS compliant) and hard anodized aluminium. Outer parts also coated with marine grade paint.
Weight:	8.2 kg (18 lb) excluding power supply / communications enclosure
Shipping Weight:	20.4 kg (45 lb)
Dimensions:	115 cm × 70 cm × 40 cm (42.3 in × 27.6 in × 15.8 in)
Mountings:	U-bolt mounting to mast or pole with outer diameter from 1.25 in to 2.07 in

5.2 Electrical Specifications

Power Requirements:	DSP power 9 to 24 V, (9 to 16 V limit when using CS215-PWS or other SDI-12 sensors). Current consumption 200 mA no dew heater or SDI-12, 1 A with dew heater and SDI-12. The currents are lower at high supply voltages as the sensor uses SMPS technology. Hood heater 24 Vac or dc, 7 A.
----------------------------	--

NOTE

It is the responsibility of the user to ensure that any local regulations, regarding the use of power supplies, are adhered to.

Communication:	RS-232, RS-422, RS-485. Baud rate of 300 bps to 115.2 kbps supported.
Control Unit:	Custom DSP board
EMC Compliance:	Tested and conforms to BS EN 61326:1998. Class A device. May cause interference in a domestic environment.

5.3 Optical Specifications

5.3.1 Laser Head Specifications

Laser Source:	Near-infrared (IR) diode, eye safe Class 1M unit output
Peak Wavelength:	830 nm
Modulation Frequency:	96 kHz
Laser Head Lens Diameter:	50 mm (1.97 in)

5.3.2 Sensor Head Specifications

Receivers:	Photodiode with band pass filters
Spectral Response:	Maximum spectral sensitivity at 850 nm, 0.62 A/W (0.6 A/W at 830 nm)
Sensor Head Lens Diameter:	50 mm (1.97 in)
Lens Check Light Source:	Near-IR LED

5.4 Environmental Specifications

Standard Operating Temperature Range:	-25° to +50°C
Optional Extended Operating Temperature Range:	-40° to +70°C
Relative Humidity Range:	0 to 100%
IP Rating:	IP 66 (NEMA 4X)

5.5 CS215-PWS Specifications

Please refer to the CS215 manual or product brochure for the specifications.

5.6 Measurement Capabilities and Limitations

5.6.1 Visibility Measurements

Visibility Range:	0 to 20,000 m (0 to 65,620 ft)
Visibility Accuracy:	± 10% (0 to 10,000 m)
Measurement Interval:	User selectable from 10 seconds to 2 hours

5.6.2 Precipitation Measurements

Particle Size*:	0.1 mm to 30 mm (0.004 in to 1.18 in)
Size Accuracy*:	± 5% (for particles >0.3 mm)
Particle Velocity:	0.16 ms ⁻¹ to 30 ms ⁻¹
Velocity Accuracy*:	± 5% (for particles >0.3 mm)
Types of Precipitation Detected:	Drizzle, rain, snow grains, snow flakes, hail, ice pellets, graupel (heavily rimed solid precipitation), freezing rain, freezing drizzle, mixed (combination of types above)
Rain Rate Intensity Range:	0 to 400 mm h ⁻¹ (M-P Distributed)
Rainfall Resolution:	0.0001 mm
Rain Total Accuracy*:	Typically ±10% (accuracy will be degraded for windy conditions, frozen precipitation, and very high rainfall rates).
DSD bin sizes:	0.1 mm (diameter) 0.1 ms ⁻¹ (velocity)
Data Output:	Raw parameter output (particle size, particle velocity, signal peak value, signal pedestal value), WMO SYNOP codes (4680, W _a W _a - precipitation and obscurant type), WMO METAR codes (4678, W _a W _a - precipitation and obscurant type), NWS code, drop size distribution (DSD) statistics, particle type distribution, size / velocity intensity maps, precipitation rate, precipitation accumulation, visibility range and internal checks (temperatures, lens contamination, processing limits).
External Sensors:	CS215-PWS supported for temperature / RH measurement; SDI-12 compatible sensors supported.

*Accuracy values are for laboratory conditions with reference particles and visibility standards.

5.6.3 Data Storage and Buffering

The PWS100 has a large internal memory that is split up to store different types of data. One buffer, the particle buffer, is used to hold raw signal data captured from the detectors. The size of this buffer and the speed at which it can be processed is a limit on the maximum rainfall rates the sensor can measure. For most users, this is not a limitation; if it may be a limitation, please read the description below.

The particle buffer is able to hold raw data for 500 typical particles. The processor is able to process the particles at a rate of 120 particles per second, typically. This means if more than 120 particles per second fall through the sample volume of 40 cm² the particle buffer will start to fill up. If the rain rate exceeds 120 particles per second for a prolonged period, the buffer could run out of space and particles will be lost.

The fact that the processor is running behind real-time and/or particles are being missed can be monitored in the alarm message which can be selected for data output.

The particle processor then places data about each particle in the Large Particle Array (LPA). The LPA is 100000 records long. It uses 5 records every 10 seconds plus a record for every processed particle that passes through the volume. For example if 20 particles per second are processed then 20.5 records are used per second. Since 100000 records can be stored, the system can store $100000 / 20.5 = 4878$ seconds worth of data in the LPA. The user needs to be aware of the size of this buffer as it is used to hold data that is processed when a message is output. The size of the buffer may become a limiting factor if a very long message interval is selected and rainfall rates are high.

The PWS100 has the capability to store measured data in a buffer called the message storage buffer, which is 1 MB (1000000 characters) in size. All ASCII characters including CrLf must be included in any storage calculations. This buffer stores the user defined messages (see Section 7.5, *Message Related Commands* for the types of messages available to the user). A typical message containing 120 characters can be stored $1000000 / 120 = 8333$ times which at minute intervals for the data output would be over 138 hours worth of storage.

Section 6. Installation

6.1 Location and Orientation

The PWS100 measures environmental variables and is designed to be located in harsh weather conditions. However there are a few considerations to take into account if accurate and representative data from a site are to be obtained.

NOTE

The descriptions in this section are not exhaustive. Please refer to meteorological publications for further information on the locating of weather instruments.

The PWS100 should be sited in a position representative of local weather conditions and not of a specific microclimate (unless the analysis of microclimate weather is being sought).

To give non-microclimatic measurements the PWS100 should be sited away from possible physical obstructions that could affect the fall of precipitation. The PWS100 should also be positioned away from sources of heat, electrical interference and in such a position as to not have direct light on the sensor lenses.

Whenever possible, the PWS100 should be located away from windbreaks. Several zones have been identified upwind and downwind of a windbreak in which the airflow is unrepresentative of the general speed and direction. Eddies are generated in the lee of the windbreak and air is displaced upwind of it. The height and depth of these affected zones varies with the height and to some extent the density of the obstacle.

Generally, a structure disturbs the airflow in an upwind direction for a distance of about twice the height of the structure, and in a downwind direction for a distance of about six times the height. The airflow is also affected to a vertical distance of about twice the height of the structure. Ideally, therefore, the PWS100 should be located outside this zone of influence in order to obtain representative values for the region (see Figure 6-1).

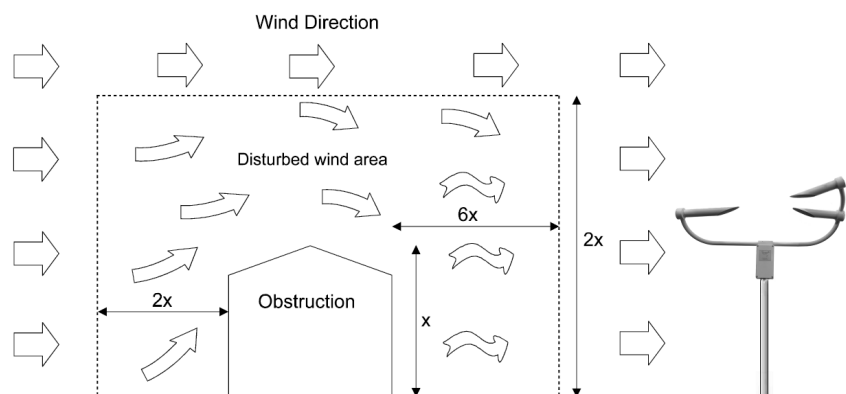


FIGURE 6-1. Effect of structure on air flow

In order to minimize user interaction with the unit, the PWS100 should be placed away from sources of contamination, in the case of roadside monitoring, larger mounting poles can be used. More regular maintenance will be required when the instrument is placed in areas where contamination is unavoidable or where measurements may be safety critical.

The orientation of the unit should be such that the horizontal sensor head points north in the northern hemisphere and south in the southern hemisphere. The angle of inclination of the second sensor head is such that the deviation from north/south orientation causes no increase in system noise.

High frequency light sources can lead to increased system noise and hence erroneous weather classification and so the PWS100 should be positioned in a location where such interference is minimized. Ideally this should be a minimum of 100 m from the nearest high frequency light source, with the sensor heads pointing away from the light source. In any case the sensor heads should be positioned to be away from any high frequency light source.

Avoid locations where the transmitter is pointing at a light scattering or reflective surface.

WARNING

When installing the sensor, avoid pointing the laser housing toward areas where binoculars are commonly used.

To be at any risk from the laser light source, the operator must look directly down the beam of light and must be at the same height and in exact alignment with the sensor. In addition, the beam diverges slightly so the risk decreases with distance from the sensor.

6.2 Unloading and Unpacking

6.2.1 Unpacking Procedure

Depending on the power and mounting options selected for the PWS100 there will be up a number of boxes containing the PWS sensor unit, power supply/ external communications enclosure and grounding equipment.

CAUTION

Handle the boxes carefully, taking care not to drop them as the sensor can be damaged if dropped.

Unpack the boxes carefully and check the contents, ensuring that the contents match those listed on the packing slip. Carefully remove the items and replace all packing materials back into the empty boxes and store in case the unit is required to be repacked for shipping.

6.2.2 Storage Information

The PWS100 should be stored between -40° to $+70^{\circ}\text{C}$ in a dry place, preferably with the enclosures securely fastened with desiccant in place. The optics should be protected from possible accidental damage.

6.3 Installation Procedures

6.3.1 Assembling the PWS100

The PWS100 comes as a single unit, with the DSP enclosure attached to the base of the sensor arms. The PWS100 and power/communication enclosure (if purchased) are typically mounted to a Campbell Scientific tripod. User-supplied mounting structures should be strong enough to withstand high winds, without significant movement.

See the manuals supplied with your tripod for details on how to set up ready for PWS100 mounting. Tripods need to be firmly secured to a base with the central pole vertical to ensure correct measurements with the PWS100. See the relevant tripod or tower manual for further details.

6.3.2 Mounting the PWS100

NOTE

A PWS100 purchased from Campbell Scientific Europe will have a different mounting bracket.

A pole mounting kit is supplied with the PWS100. This kit includes a DSP plate, a bracket, two u-bolts, four flat washers, four split washers, and four nuts. The PWS100 usually comes with the DSP plate attached to it. The PWS100 mounts onto a Campbell Scientific tripod, tower, or a user-supplied pole with a 1.5 inch (3.81 cm) to 2.1 inch (5.25 cm) outer diameter as follows.

1. Fasten the bracket to the pole using one u-bolt, two flat washers, two split washers, and two nuts (see Figure 6-2).
2. Place the DSP plate on the bracket. The tabs of the bracket fit in the notches at the top of the DSP plate (see Figure 6-3).
3. Fasten the bottom of the DSP plate using the remaining u-bolt, washers, and nuts (see Figure 6-4).
4. Mount the power supply enclosure if purchased. This enclosure can be mounted to the same tripod, tower, or user-supplied pole as the PWS100. Alternatively the power supply can be mounted elsewhere (e.g., on a wall at some distance from the sensor). The power supply enclosure should be mounted away from the sensor head to avoid wind flow disturbance or rain drops bouncing back up into the sensor's sensing volume.

CAUTION

Take care not to overtighten the nuts on the u-bolts, as it may be possible to distort and/or damage the bracket or DSP plate by doing so, and/or the nuts may seize up. Only tighten the nuts to a degree necessary to hold the PWS100 firmly in place.

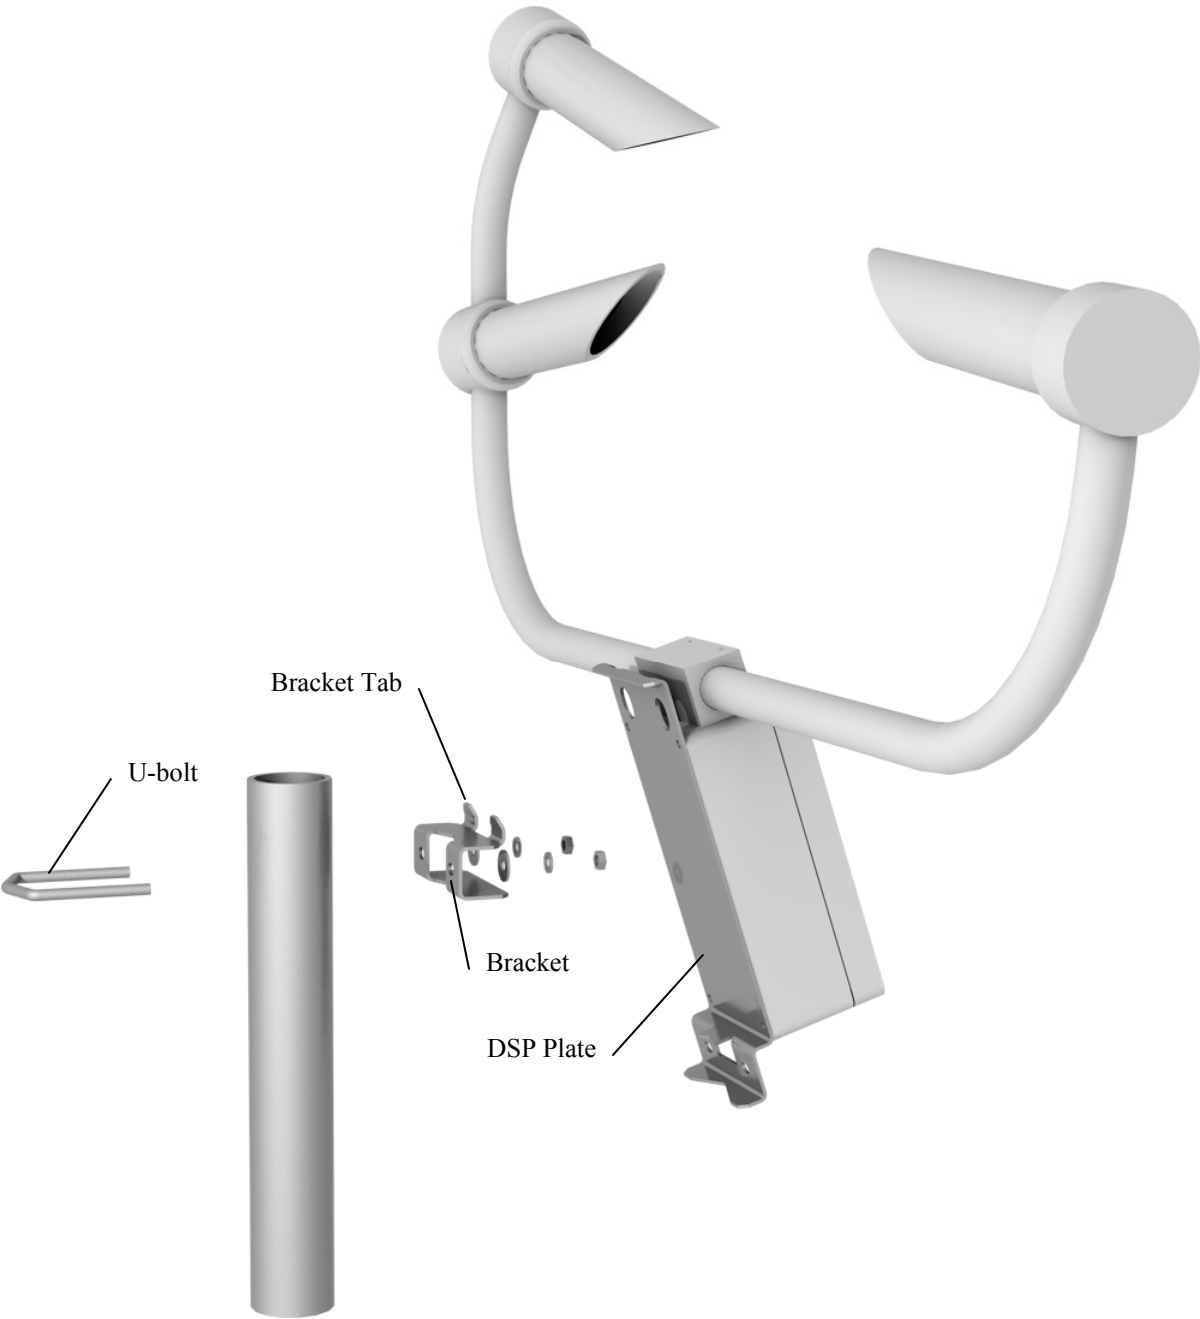


FIGURE 6-2. Hardware for mounting the top of the DSP plate to a pole

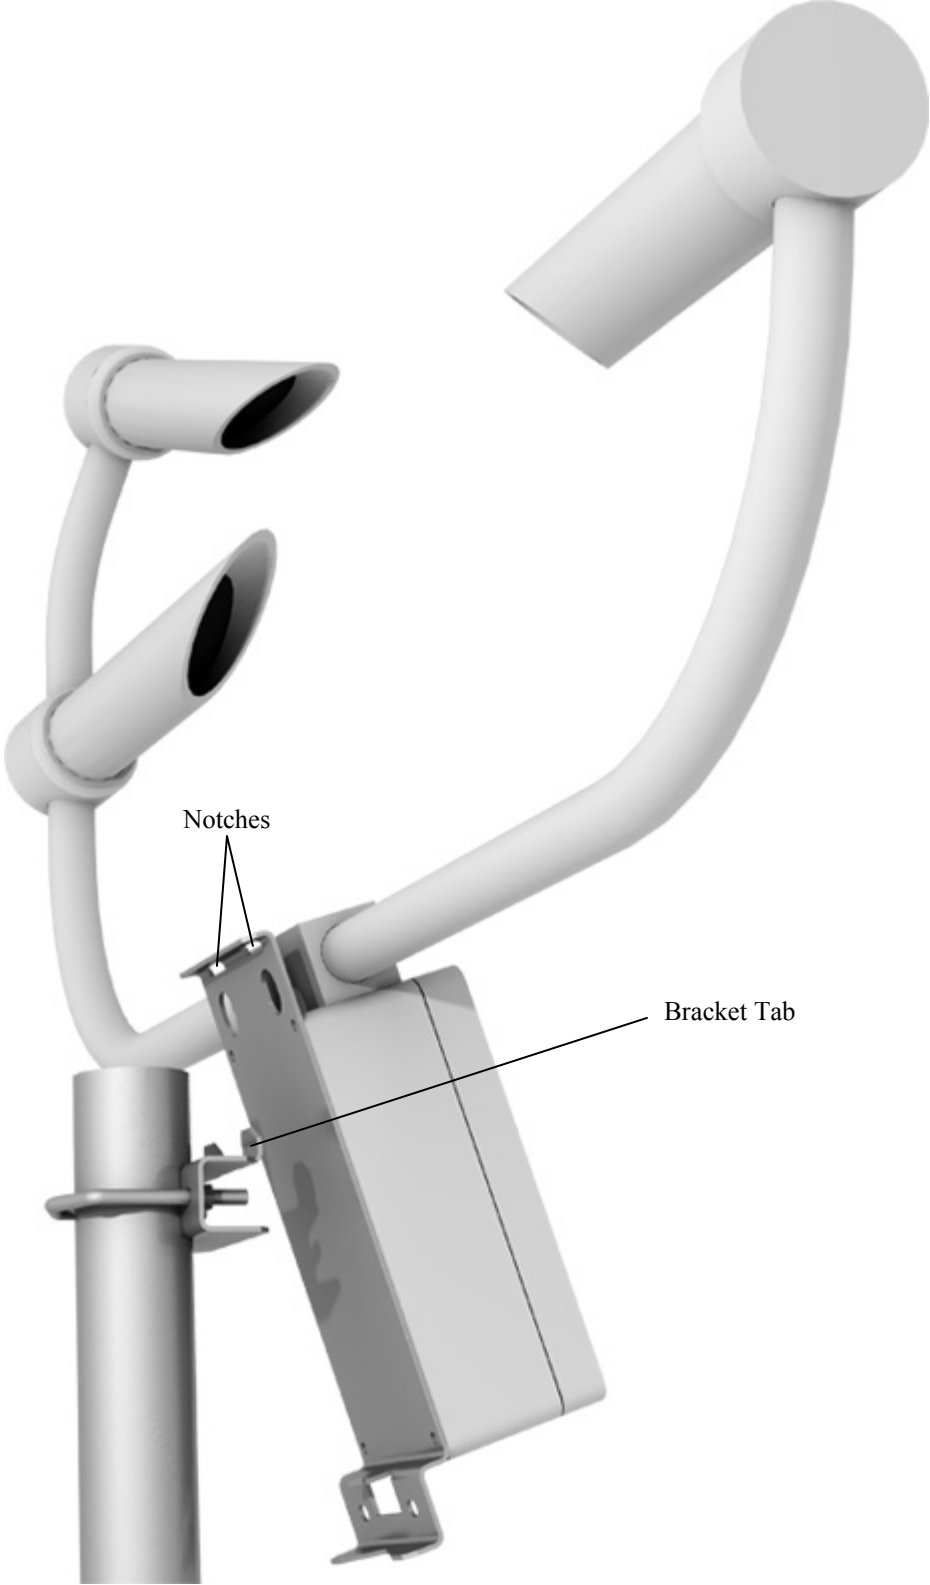


FIGURE 6-3. Placing the PWS100 onto the bracket



FIGURE 6-4. PWS100 mounted to a mast or pole

CAUTION

Ensure that the PWS100 is mounted according to Figures 6-2 through 6-4. Do not reposition, once fixings are tightened, by forcing the arms of the unit as this can damage the unit.

6.3.3 Connecting Cables

The sensor unit comes with the DSP control unit fixed to the sensor arm. All cabling between the sensor heads and the DSP unit is premade. An SDI-12 sensor connection is fixed into the DSP terminal strip. The connection is terminated with a LEMO socket on the lower face of the DSP housing. This is primarily wired for the CS215-PWS but is also used with the PWC100 Calibrator. Power, communications and additional sensor connections are to be routed through the cable glands on the lower face of the DSP housing to the DSP terminal strip. As a factory default, a power cable and a communications cable are pre-wired in the unit. The third cable gland will be sealed off by default but can be used for further external sensor connections or a separate power cable for the hood heaters (rather than sharing the main power cable).

There should be no need to alter any wiring within the DSP housing and the housing cover should only be removed periodically to renew desiccant packs or if any of the hardware switches need to be used. However if cable lengths are to be changed then these will have to be rewired in the DSP housing. If the unit remains sealed during operation, the packs should only need replacing once every 6 months. Replace the desiccant pack in the holder and secure the cover.

6.3.4 Basic Wiring

The PWS100 wiring block is shown on the internal layout diagram in Figure B-2. Connection points for power and communications are shown in the diagram. There are two power inputs (one 24V for hood heater and one 12V for the processor board) one communications connection and two SDI-12 ports for peripheral connection. For RS-485 communications a 120 Ω termination resistor may need to be placed across the RTS-B and RX-A connections at either end of the cable, although this is normally not required for most installations unless electronic noise interference is prevalent or cable runs are very long.

A 1K LEMO socket (IP66 rated) is used for connection of a peripheral (often the CS215-PWS temperature / relative humidity probe). The cable for any peripheral to be connected to the LEMO socket should be terminated with the appropriate 4 pin 1K series LEMO plug. Ensure when fitting the peripheral plug into the socket that the red tabs are aligned.

The power and communications cables are routed through two of the three cable glands on the base of the PWS100 DSP enclosure. If power and communications cables are replaced refer to Appendix C.1 and C.2 for further details.

Figure 6-5 shows the lower face of the DSP enclosure with the cable gland and LEMO connector positions.

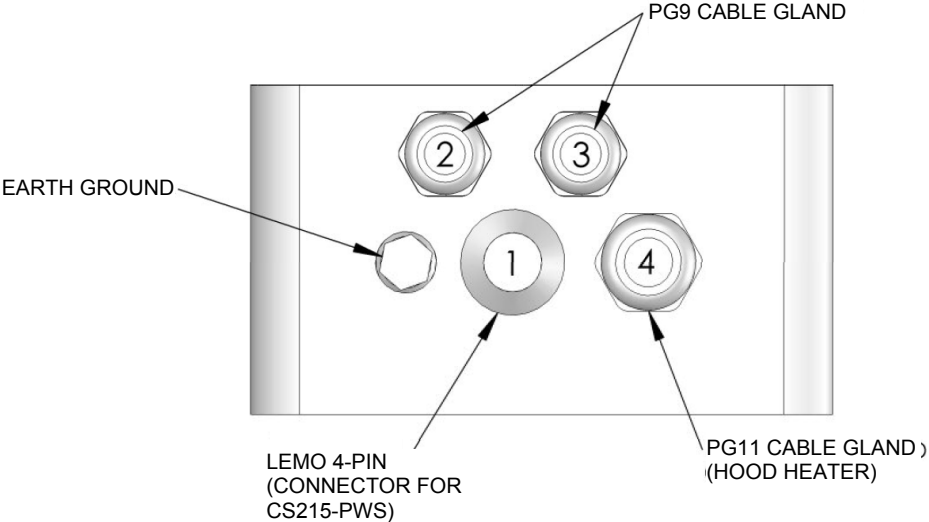


FIGURE 6-5. Underside of DSP enclosure

6.3.5 Desiccant

The desiccant bags should be removed from the plastic bags in which they are shipped before placing them inside the enclosure. Two 100 g bags of desiccant are supplied with the PWS100. Desiccant use depends on your application (see below). The desiccant should be firmly strapped to the DSP cover inside the PWS electronics enclosure using the strap provided and as shown in Figure 6-6.



FIGURE 6-6. Mounting the desiccant pack on the DSP cover

The second bag of desiccant should be re-sealed in the plastic shipping bag as a replacement for the initial bag

6.3.6 Communication Options

The communications options are RS-232, RS-422 and RS-485. Baud rate is selectable between 300 bps and 115.2 kbps. The communications are set on a series of dip switches on the DSP board itself. To get to the board the DSP cover must be removed as shown in Figure 6-7. Unscrew the four retaining screws and carefully lift off to expose the board as shown in Figure 6-8.



FIGURE 6-7. Removal of DSP cover.



FIGURE 6-8. Exposing the DSP board.

The location of the dip switches on the board is shown in Figure 6-9 and the dip switches themselves are shown in detail in Figure 6-10. The following settings are available:

PWS100 dip switch settings:-

0 = off; 1 = on.

switch 1 slew rate

0 slow slew rate (default)
1 fast slew rate

switch 2 communication mode

0 RS232 (default)
1 RS485 (note – load resistor may be required – see Section 6.3.6.1)

switch 3 duplex mode

0 full duplex (default)
1 half duplex (RS485 – see Section 6.3.6.1 below)

switch 4-6 serial communication baud rate

switch	Baud Rate
654	Baud Rate
000	300
001	1200
010	9600
011	19200
100	38400
101	57600
110	76800
111	115200 (default)

switch 7 reserved for future use (default off)

switch 8 load factory defaults at power up

0 normal operation (default)
1 load factory defaults

6.3.6.1 RS-485 Half-duplex mode

In half duplex mode, the transition from transmits (Tx) to receive (Rx) modes and vice versa are subject to the following timing rules which may need to be considered when interfacing other devices:

- The sensor waits for a gap of 1 byte period plus 10 ms without receiving data before switching from Rx to Tx and echoing/responding.
- Sensor has a 1 millisecond Tx to Rx turn around time.

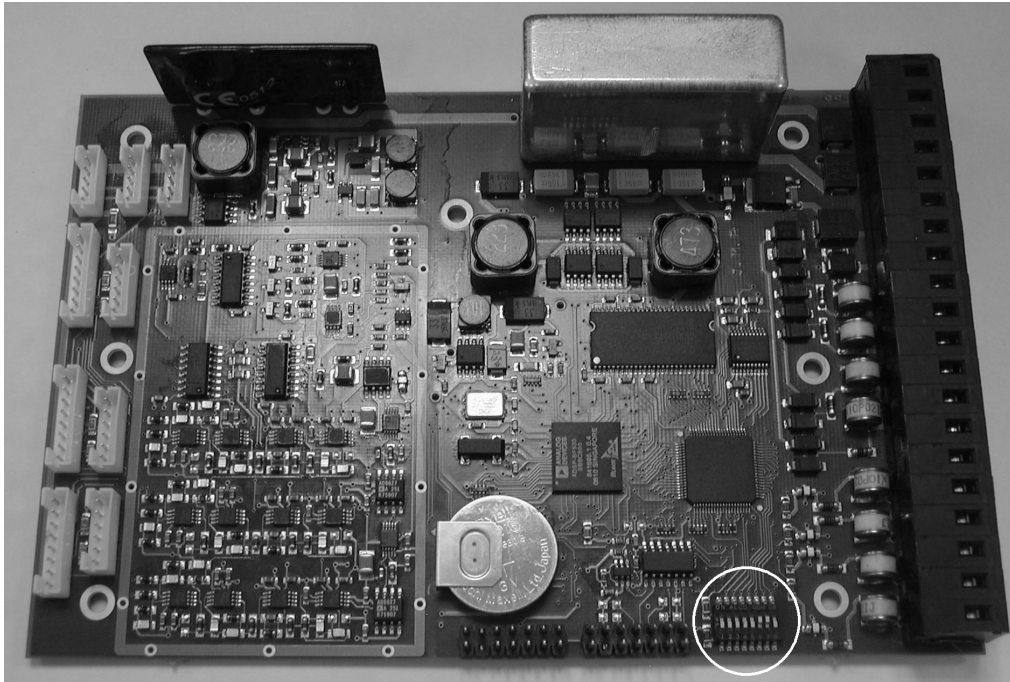


FIGURE 6-9. DSP board dip switch location (circled)

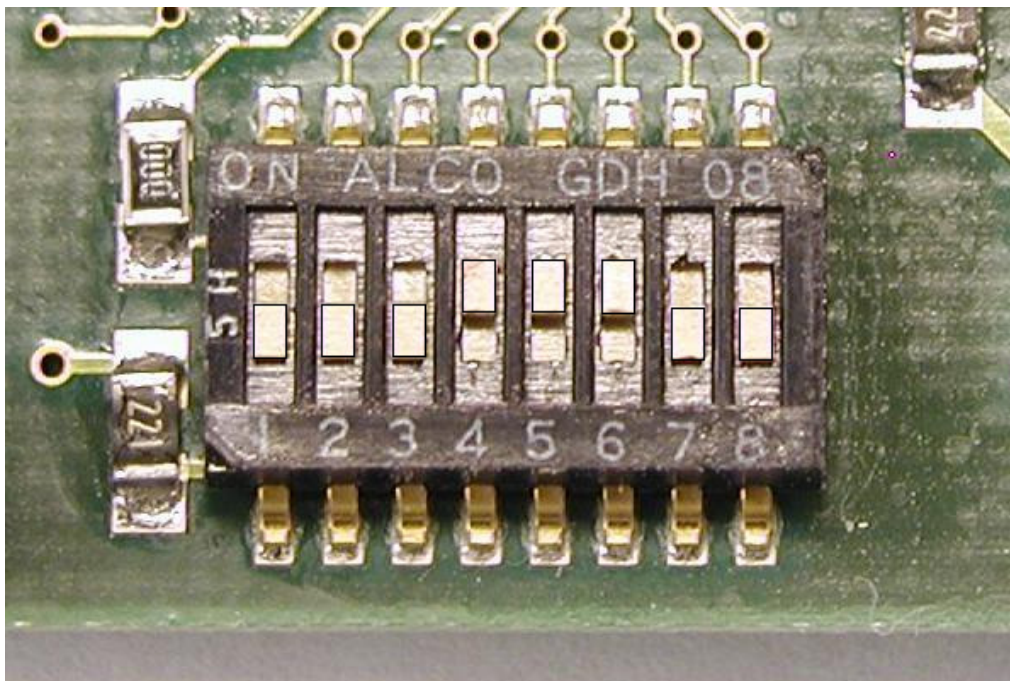


FIGURE 6-10. Dip switches (defaults set - 00011100)

6.3.7 Installing Power Supply

Power supply connections can be made in the PWS100 24 Vdc/12 Vdc power supply cabinet using the power cable supplied with the PWS100.

Din rail contacts are mounted inside the power supply enclosure that allows connection to the two power supplies (see Figure 6-11).

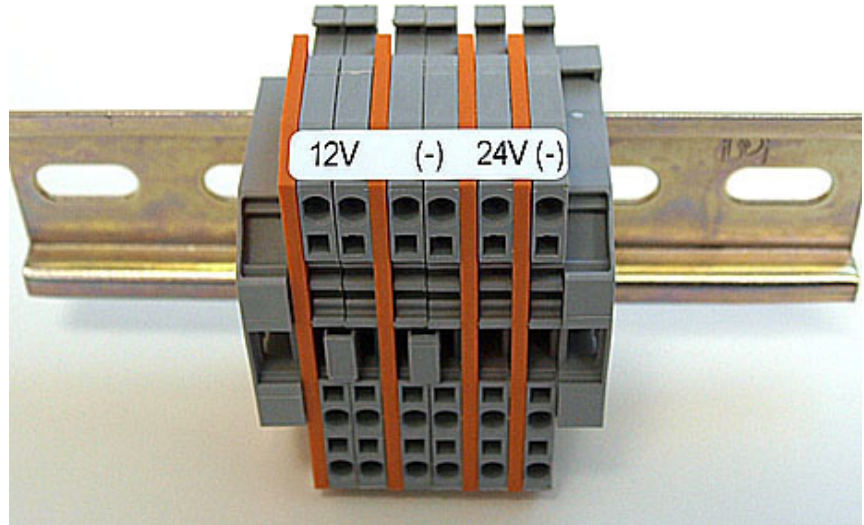


FIGURE 6-11. Labeled DIN-RAIL contacts

6.3.8 Start-Up Testing

On start-up the PWS100 will run internal diagnostic tests and check the status of any connections to the instrument.

6.3.9 Initial Settings

Initially the PWS100 will be set up with a series of default options set. These can be altered by entering the command mode of the sensor.

6.3.10 Load Factory Defaults

To load the factory default settings (retaining only the time, date and calibration values) power down the sensor move dip switch 8 to position 1 and power up the sensor. Once powered switch dip switch 8 back to position 0. This removes the password and all other user entered values.

6.3.11 Lubricating the Enclosure Screws

The PWS100 enclosure screws should be lubricated with a suitable anti-seize grease (often copper loaded) to protect the threads from corrosion. This should be reapplied when resealing the enclosure at regular intervals, normally after

replacing the desiccant. This is of particular importance if using the sensor in corrosive or salt laden atmospheres.

6.4 Grounding and Lightning Protection

6.4.1 Equipment Grounding

The present weather sensor must be properly grounded to protect it from transients and secondary lightning discharges. The PWS100 has a ground lug on the outside of its enclosure. This ground lug is connected to a tripod's grounding system via a 12 AWG copper wire. A 12 AWG copper wire is included with Campbell Scientific's tripods or towers.

To ground the system, first install the tripod's grounding system as described in the tripod or tower manual. The 12 AWG wire should be fastened to the tripod or tower's ground clamp. Route the 12 AWG wire from the clamp to the PWS100 ground lug. Strip one inch of insulation from each end of the wire and insert the end of wire into the ground lug and tighten.

6.4.2 Internal Grounding

The DSP enclosure of the unit and associated electronics are grounded through the power cable assembly. The sensor components are in contact with each other or have internal copper contacts.

6.4.3 Lightning Rod

Campbell Scientific suggests that a lightning rod is only fitted where there is significant risk of lightning strike. During rainfall events water can accumulate and shed from the rod and cause erroneous measurements. The rod itself can also interfere with the passage of precipitation particles and ice accumulation can exacerbate the situation.

If required, the lightning rod included with our tripods, UT10 Tower, or UTGND Ground Kit should be used. The process of mounting the lightning rod is described in our tripod and tower manuals.

Section 7. Operation

7.1 Introduction

The best way of becoming familiar with the sensor is to setup the sensor and connect it to a PC running Windows and the Campbell Scientific Present Weather Viewer program.

This software allows easy setup of the sensor and a graphical display of the measurements being made. It also provides an easy way of upgrading the firmware of the sensor. It is not intended to capture or store data on a permanent basis but is provided as a demonstration, test and setup tool. Brief details of use of the program are described below. The program includes a more detailed multi-lingual help system which can be accessed from the Help menu option once the program is running.

The PWS100 Present Weather Sensor is capable of outputting a range of data, from single particle parameters, to codes representing those from WMO and other standard meteorological tables. The sensor is setup with some factory defined output messages but the user often will need to change these to meet their own requirements. The setup can be done using either the Present Weather Viewer program or using a terminal emulator and interacting with the sensor directly.

7.2 PWS100 Configuration

7.2.1 Using the Present Weather Viewer Program

The latest copy of which can be downloaded from:

www.campbellsci.com/downloads

To use this program install it on your PC. When first run you will be prompted to chose a connection port and speed. Set these to match the serial port on the PC being used and the baud rate. With a new sensor the PWS100 address/ID will be set to zero and there will be no password. With these set you can then connect icon (top right hand corner) to establish a connection with the sensor. After the program has checked the sensor setup it will switch to a mode of displaying data transmitted at regular intervals (one minute by default). The graphs will then be updated, although they will largely look blank if there is no precipitation falling. Clicking on the data values and status tab of the display gives access to basic data which shows the sensor is working OK.

To change settings in the sensor click on the icon near the connection button which brings up the sensor control panel.

The PWS viewer also provides a simple terminal emulator screen which can be used to setup the sensor using it's built in menu system rather than the graphical interface the viewer provides.

To understand the operation of the sensor and the relevance of the settings in the graphical interface it is necessary to understand the messages and

configuration options. These are discussed below within the context of setting up the sensor using a terminal emulator.

7.3 Terminal Mode

In normal operating mode the sensor will respond to a number of “root” commands, shown in Table 7-1. Those commands allow the configuration of the sensor in a non-interactive fashion, the polling of data and also switching the sensor into an interactive user menu mode.

They are accessed via the command TERM PWS_1d Password ↵
 Commands are entered in the format ‘Command Pws_1d Password ↵

TABLE 7-1. Command Set	
Command	Description
PASSWORD	Sets user password
HELP*	Gives a list of available commands
OPEN*	Activate user menu
TERM	Enter command mode
CLOSE	Exit command mode
MSEND*	Poll messages
MSET	Set message parameters
HDATA	Retrieve historical particle data from sensor
SETPARAM	Set weather parameters
FUZZY DIAG*	Extra particular information (see Section 7.5.2)
CONFIG	View system configuration
SETCONFIG	Set system configuration
LOADOS	Load a new operating system
DIAGSET	Set diagnostic test parameters
DIAG	Run diagnostic test
TIME	Display or set time and date
RSENSOR	Receive remote sensor values (T °C and H %)
RESET	Reset hardware
XHMDATA	Historic ‘MSET’ data download using Xmodem
HMDATA	Output historic data to the command line
RUNDISC	Rotate the calibration disc for test / demonstration purposes

*These commands are available outside terminal mode.

The most commonly used commands are MSEND, HELP and OPEN.

In the descriptions which follow ↵ symbolizes the pressing of the ENTER key. Input parameters in italics should be user-defined characters appropriate for the command. Unless otherwise stated, all command parameters should be separated by a space.

To support addressed RS-485 networks, each PWS100 can be assigned an identifier, shown as *Pws_Id* below. By default the PWS_Id is set to 0 (zero).

NOTE

When operating at the root level, commands are not echoed back to the terminal as this mode is intended primarily for polled data collection and echoed commands will complicate the issue of decoding the responses sent back from the sensor. Local echo can be turned on in Hyperterminal if required. Start Hyperterminal, select the pulldown 'File' menu and select 'Properties'. Click the 'ASCII setup' tab and check the 'Echo typed characters locally' checkbox.

7.3.1 Using the Help Command

To list available commands, the HELP command can be used as follows with the correct PWS100 *Pws_Id*:

```
HELP Pws_Id↵
```

e.g., HELP 0↵

The PWS100 will respond with a list of available commands and their basic function.

7.3.2 Entering / Exiting the Menu System

The user can enter the menu system by using the OPEN command with the correct *Pws_Id*. If a password is set, then it should also be entered. The command is then as follows:

```
OPEN Pws_Id Password↵
```

e.g., OPEN 0 campbell↵

The PWS100 will then display the SETUP menu of the menu system

To close the menu system and return the PWS100 to operation, option 9 should be chosen from the SETUP menu (see Figure 7-1). At this point either option 1 should be chosen to save changes and quit the menu system, or option 2 should be chosen to lose changes made and quit the menu system. Option 0 will return the user to the SETUP menu.

NOTE

Changes made to the unit calibration and time and date settings while in the menu system are immediate and as such will remain changed independent of the quit option chosen from the menu.

NOTE The data storage function will not store data while the terminal or menu is active. This means data will be missing during these periods. To reduce data loss reduce the amount of time that the terminal or menu are active.

7.3.3 Message Polling

While the menu system or terminal mode are closed, it is possible to poll data from a suitable set sensor (see Sections 7.4.1 and 7.6.1 for information on how to set up messages for polling). In order to poll a message the MSEND command must be used with the correct *Pws_Id*, *stats_period* and *message_ID*. Statistics are calculated over the *stats_period* in seconds which completely overrides any period defined within the message. The message can be either a fixed or user defined message from 0 to 19. The command for message polling is as follows:

```
MSEND Pws_Id stats_period message_ID ↵
```

e.g., MSEND 0 3600 10 ↵

In the example given above, the PWS100 will respond with fixed *message_ID* 10 statistics calculated or sampled over the *stats_period* of 3600 seconds for the PWS100 with a *Pws_Id* of 0. If the *stats_period* is zero then the statistics are calculated from the last collection interval. So the polling interval controls the interval at which statistics are calculated over, up to a maximum of 2 hours.

Setting *stat_period* to less than 10 seconds will result in repeated data due to the ten seconds measurement cycle (see Section 8.5).

7.4 PWS100 Menu System

From the command line the use of the OPEN command, as detailed in Section 7.3.2, will initiate the menu system which can be used to set up the operation of the PWS100.

NOTE If there is no activity for 10 minutes with the menu system open it will automatically close.

The menu system map is shown in Appendix D. The menu is controlled by means of numeric selections followed by the enter key. Pressing enter by itself will return the user to the previous menu. A selection followed by the enter key will lead to the display of a specific menu or allow a specific parameter value to be input. Entering an incorrect selection or parameter value will return the user to the same menu. Pressing the delete key will delete the current entry. Pressing the escape key will clear the current entry and return to the previous menu.

NOTE Entering the command line (terminal mode) from the menu system will lead to a loss of all changes made during navigation of the menu system.

Section 7.4.6 gives further details of how to set up the PWS100 with the command set in the terminal mode (option 7 from the SETUP menu).

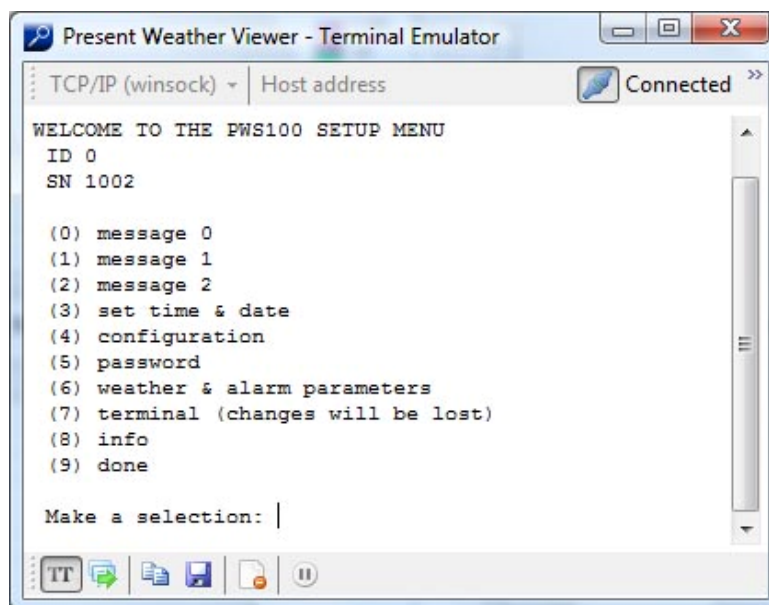


FIGURE 7-1. PWS100 setup menu

7.4.1 Top Menu Options 0, 1 and 2 (Message n)

The options 0, 1 and 2 from the SETUP menu are entitled 'message 0', 'message 1' and 'message 2'. These are used to setup the message outputs for messages with ID 0, 1 and 2. Selecting one of these brings up the MESSAGE menu as shown in Figure 7-2. Each message allows the user to select message intervals, modes and fields (option 1).

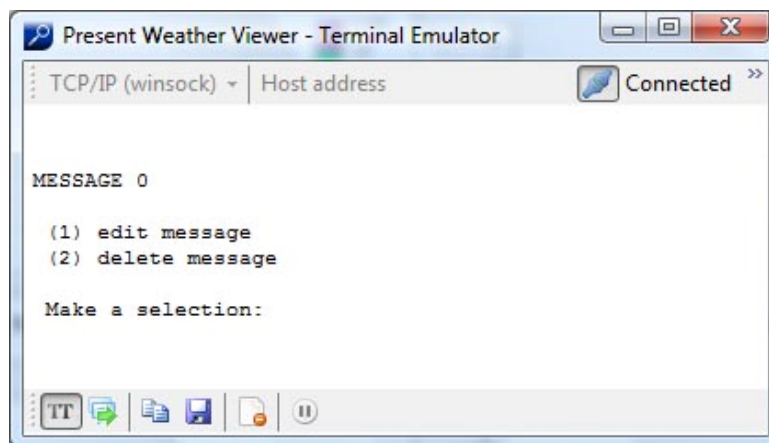


FIGURE 7-2. Message menu

If option 1 is chosen from the MESSAGE menu then the system will display the MESSAGE PARAMETERS and FIELDS menu for that message as shown in Figure 7-3. From here 19 fields can be filled in. Field 0 is the message interval. This is set in seconds and will be the interval between which output messages are given. Field 1 is the message mode and fields 2 to 19 are output parameters which can be user set.

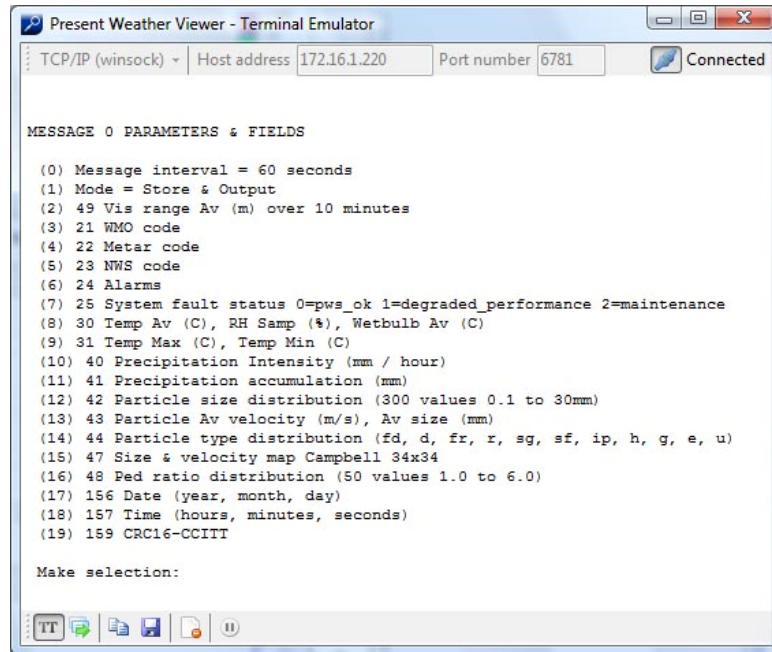


FIGURE 7-3. Message parameters and fields menu

Selecting field 0 brings up the MESSAGE INTERVAL menu shown in Figure 7-4. Here the interval is input. An input of 0 means that the message is polled (i.e., will be given when the user requests it, either manually or in an automated fashion using a datalogger).

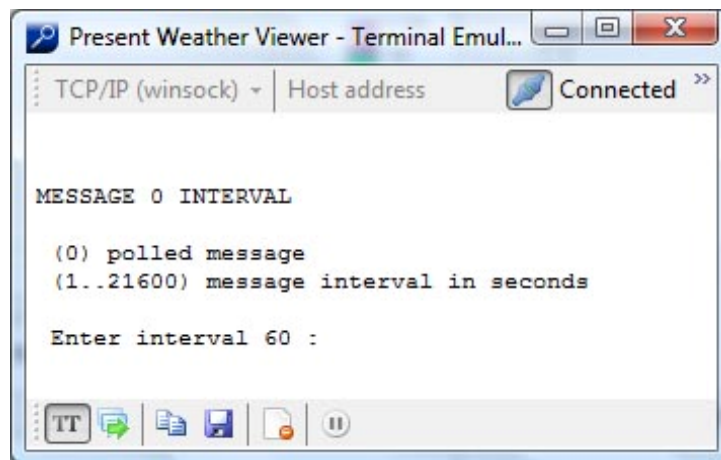


FIGURE 7-4. Message interval menu

From the MESSAGE PARAMETERS and FIELDS menu if field 1 is chosen then the MESSAGE MODE menu (see Figure 7-5) will be displayed. Here the options are to store and output to the serial port (option 1) which is useful for on screen analysis of real-time data, or store only (option 2) more useful when logging data.

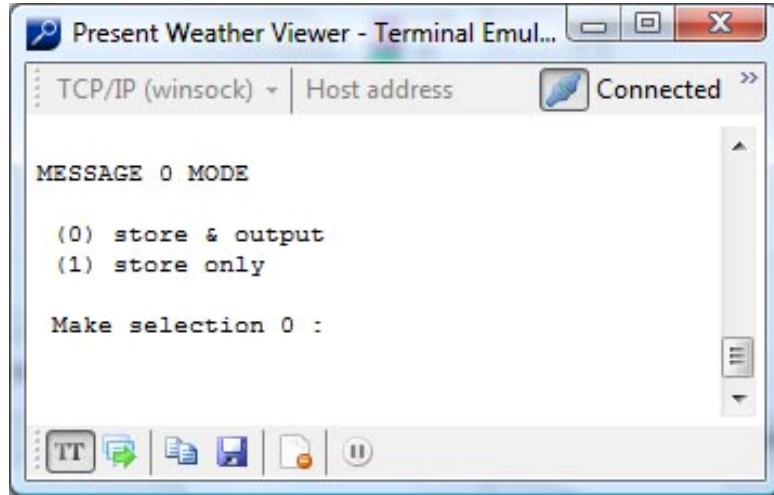


FIGURE 7-5. Message mode menu

From the MESSAGE PARAMETERS and FIELDS menu if fields 2 to 19 are chosen then the MESSAGE FIELD menu will be displayed as shown in Figure 7-6. Here an output parameter for that message field can be chosen from a number of different output parameters as detailed in Table 7-2 and described in Sections 7.4.1.1 to 7.4.1.40.

TABLE 7-2. Message Field parameters	
Message Field	Parameter Output
0 – 2	User set message types
10 – 19	Fixed messages
20	Average visibility (m)
21	Present weather code (WMO)
22	Present weather code (METAR)
23	Present weather code (NWS)
24	Alarms
25	Fault status of PWS100
30	Average temperature, RH%, wet bulb
31	Minimum and maximum temperature
33	External sensor (Wetness)

TABLE 7-2. Message Field parameters	
Message Field	Parameter Output
34	External sensor (Aux)
40	Precipitation intensity (mmh^{-1})
41	Precipitation accumulation
42	Drop size distribution bin values (0.1 mm increment per value)
43	Average velocity (ms^{-1}), average size (mm)
44	Type distribution
45	Size / velocity map type 1 (20×20)
46	Size / velocity map type 2 (32×32)
47	Campbell Scientific standard size / velocity map (34×34)
48	Peak-to-Pedestal ratio distribution histogram
49	Visibility range, in meters, averaged over 10 minutes
100	Internal LED temperatures: upper LED, lower LED
101	Internal detector temperatures: upper, lower
102	Laser hood temperature, laser temperature and laser current
103	DC offsets: upper, lower, laser
104	Dirty window: upper, lower, laser
105	Battery voltage, hood %, dew %
106	Upper and lower detector differential voltage (mV) and calibrated visibility voltage (mV)
150	Device s/n, operating system and hardware versions
151	Date and time: day count (from 01/01/2007) HH MM SS
152	Product name "PWS100"
153	Statistics period (s)
154	Watchdog count, maximum particles per second, particles not processed, time lag
155	Processing statistics
156	Year, month, day
157	Hours, minutes, seconds
158	Averaged corrected visibility voltage (mV) and average upper head voltage (mV)
159	CRC16-CCITT Checksum

Note that user defined messages cannot make field references to other user defined messages but can make reference to fixed messages from field 10 to 19 and all other message fields.

7.4.1.1 Message 0 (the Default Output)

User message 0 can be set by setting the Message Field parameters as required using other message fields from 10 upwards.

By default and after a hardware reset (see Section 6.3.10, *Load Factory Defaults*) or a software reset (see Section 7.9.2, *Resetting the System*) this outputs the message fields below (in the format as seen in the interactive menu). These fields have been used as defaults so they give a full display of the PWS100's capabilities when used with the Present Weather Sensor Viewer program.

The user can delete and completely reconfigure this message as required.

```
(0) Message interval = 60 seconds
(1) Mode = Store and Output
(2) 49 Vis range Av (m) over 10 minutes
(3) 21 WMO code
(4) 22 Metar code
(5) 23 NWS code
(6) 24 Alarms
(7) 25 System fault status 0=pws_ok
1=degraded_performance 2=maintenance
(8) 30 Temp Av (C), RH Samp (%), Wetbulb Av (C)
(9) 31 Temp Max (C), Temp Min (C)
(10) 40 Precipitation Intensity (mm / hour)
(11) 41 Precipitation accumulation (mm)
(12) 42 Particle size distribution (300 values 0.1 to 30mm)
(13) 43 Particle Av velocity (m/s), Av size (mm)
(14) 44 Particle type distribution (fd, d, fr, r, sg,
sf, ip, h, g, e, u)
(15) 47 Size and velocity map Campbell 34x34
(16) 48 Ped ratio distribution (50 values 1.0 to 6.0)
(17) 156 Date (year, month, day)
(18) 157 Time (hours, minutes, seconds)
(19) 159 CRC16-CCITT
```

Note that in the default message, the start and end characters (STX/ETX) are included in the message – see “Output options” described in Section 7.4.3.

7.4.1.2 Message Field 1 and 2 User Defined Message

These user messages are set in the same way as message 0 but are cleared and do not output as default after a master reset.

7.4.1.3 Message Field 10 To 19 Fixed Messages

No fixed messages have been defined yet. The user cannot change the fixed messages.

7.4.1.4 Message Field 20 Visibility Range (m)

This field will output the average visibility range (m) calculated over the *Message_Interval* defined.

7.4.1.5 Message Field 21 Present Weather Code (WMO)

This field will output the Present Weather Code (WMO) calculated over the *Message_Interval* defined.

7.4.1.6 Message Field 22 Present Weather Code (METAR)

This field will output the Present Weather Code (METAR) calculated over the *Message_Interval* defined.

7.4.1.7 Message Field 23 Present Weather Code (NWS)

This field will output the Present Weather Code (NWS) calculated over the *Message_Interval* defined.

7.4.1.8 Message Field 24 Alarms

This field will output the Alarms. The alarms are output as a string of 16 '0's and '1's delimited with spaces, for example 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1.

Each alarm has the following definition starting from the left hand side:

1. Visibility range less than alarm 1 trigger point set by user. The factory default is 5 km.
2. Visibility range less than alarm 2 trigger point set by user. The factory default is 1.5 km.
3. Visibility range less than alarm 3 trigger point set by user. The factory default is 0.5 km.
4. Laser drive current greater than 80 mA. This may indicate the laser is failing or recalibration is required.
5. Power supply voltage for dsp less than 11 V.
6. Laser window needs cleaning. There is sufficient build up on the window that if not cleaned could reduce accuracy.
7. Upper detector window needs cleaning. There is sufficient build up on the window that if not cleaned could reduce accuracy.
8. Lower detector window needs cleaning. There is sufficient build up on the window that if not cleaned could reduce accuracy.
9. DC voltage of laser dirty window detector greater than 1.5 V. This can be caused by sun directly shining into lens or a pws fault.

10. DC voltage of upper detector greater than 1.5 V. This can be caused by sun directly shining into lens or a pws fault.
11. DC voltage of lower detector greater than 1.5 V. This can be caused by sun directly shining into lens or a pws fault.
12. Particle processor is unable to process all particles due to limited time and buffer resources. Particles are missed and data could be inaccurate. This alarm may activate when there are 120 or more particles per second going through the volume, sustained for a period that fills all available space in the buffers.
13. Particle processor lags real time by more than 5% of the user requested statistics interval.
14. Particle stripper is unable to process all particles due to limited time and buffer resources. Particles are missed and data will be inaccurate. This alarm may activate if there are more than ~150 particles per second going through the volume.
15. Reserved for future use. Outputs '0'.
16. Reserved for future use. Outputs '0'.

7.4.1.9 Message Field 25 Fault Status of the PWS100

This field will output the fault status of the PWS100. The value output is from 0 to 4. 0 = no fault, 1 = Possible degraded performance, 2 = Degraded performance, 3 = Maintenance required, 4 = Laser fault.

7.4.1.10 Message Field 30 External Sensor Temperature, RH% and Wetbulb

This field will output the averaged temperature (°C), sampled relative humidity and averaged wetbulb temperature (°C) calculated over the *Message_Interval* defined.

7.4.1.11 Message Field 31 External Sensor Maximum and Minimum Temperature

This field will output the maximum and minimum temperature (°C) calculated over the *Message_Interval* defined.

7.4.1.12 Message Field 33 External Sensor Wetness

This field will output the sampled wetness (0-100%).

7.4.1.13 Message Field 34 External Sensor Aux

This field will output the sampled auxiliary sensor output. Such an auxiliary sensor needs to be defined.

7.4.1.14 Message Field 40 Precipitation Intensity

This field will output the precipitation intensity (mm / hour) calculated over the *Message_Interval* defined.

NOTE The PWS100 only measures particles / visibility 90% of the time so precipitation intensity is scaled appropriately.

7.4.1.15 Message Field 41 Precipitation Accumulation

This field will output the precipitation accumulation (mm) calculated over the *Message_Interval* defined.

NOTE The PWS100 only measures particles / visibility 90% of the time so precipitation totals are scaled appropriately.

7.4.1.16 Message Field 42 Drop Size Distribution

This field will output the drop size distribution table which is output as 300 values, starting with the 0 to 0.1 mm bin, in steps of 0.1 mm up to 30 mm. This is calculated over the *Message_Interval* defined.

7.4.1.17 Message Field 43 Average Velocity (ms^{-1}) and Average Size (mm)

This field will output the average velocity and average size values ignoring any particle type classifications.

7.4.1.18 Message Field 44 Type Distribution

This field will output the type distribution which is a series of 11 values for each particle type which shows the number of each type of particle classified. The order of the output is: drizzle, freezing drizzle, rain, freezing rain, snow grains, snow flakes, ice pellets, hail, graupel, error, unknown.

7.4.1.19 Message Field 45 Size / Velocity Type Map 1 (20 x 20)

This field will output a size and velocity map with the following classes:

Particle diameter class		
Class	Diameter [mm]	Class width [mm]
*1	=>0.00	0.24
2	=>0.24	0.12
3	=>0.36	0.14
4	=>0.50	0.25
5	=>0.75	0.25
6	=>1.00	0.25
7	=>1.25	0.25
8	=>1.50	0.25
9	=>1.75	0.25
10	=>2.00	0.50
11	=>2.50	0.50
12	=>3.00	0.50
13	=>3.50	0.50
14	=>4.00	0.50

15	=>4.50	0.50
16	=>5.00	0.50
17	=>5.50	0.50
18	=>6.00	0.50
19	=>6.50	0.50
20	=>7.00	93.00

Particle speed class		
Class	Speed [m/s]	Class width [m/s]
1	=>0.0	0.2
2	=>0.2	0.2
3	=>0.4	0.2
4	=>0.6	0.2
5	=>0.8	0.2
6	=>1.0	0.4
7	=>1.4	0.4
8	=>1.8	0.4
9	=>2.2	0.4
10	=>2.6	0.4
11	=>3.0	0.4
12	=>3.4	0.8
13	=>4.2	0.8
14	=>5.0	0.8
15	=>5.8	0.8
16	=>6.6	0.8
17	=>7.4	0.8
18	=>8.2	0.8
19	=>9.0	1.0
20	=>10.0	90.0

7.4.1.20 Message Field 46 Size / Velocity Type Map 2 (32 x 32)

This field will output a size and velocity map with the following classes:

Particle diameter class		
Class	Average Diameter [mm]	Class width [mm]
1	0.060	0.12
2	0.180	0.12
3	0.300	0.12
4	0.420	0.12
5	0.540	0.12
6	0.665	0.13

7	0.795	0.13
8	0.925	0.13
9	1.055	0.13
10	1.185	0.13
11	1.375	0.25
12	1.625	0.25
13	1.875	0.25
14	2.125	0.25
15	2.375	0.25
16	2.750	0.50
17	3.250	0.50
18	3.750	0.50
19	4.250	0.50
20	4.750	0.50
21	5.500	1.00
22	6.500	1.00
23	7.500	1.00
24	8.500	1.00
25	9.500	1.00
26	11.000	2.00
27	13.000	2.00
28	15.000	2.00
29	17.000	2.00
30	19.000	2.00
31	21.500	3.00
32	=>23.000	77.00

Particle speed class		
Class	Average Speed [m/s]	Class width [m/s]
1	0.05	0.1
2	0.15	0.1
3	0.25	0.1
4	0.35	0.1
5	0.45	0.1
6	0.55	0.1
7	0.65	0.1
8	0.75	0.1
9	0.85	0.1

10	0.95	0.1
11	1.10	0.2
12	1.30	0.2
13	1.50	0.2
14	1.70	0.2
15	1.90	0.2
16	2.20	0.4
17	2.60	0.4
18	3.00	0.4
19	3.40	0.4
20	3.80	0.4
21	4.40	0.8
22	5.20	0.8
23	6.00	0.8
24	6.80	0.8
25	7.60	0.8
26	8.80	1.6
27	10.40	1.6
28	12.00	1.6
29	13.60	1.6
30	15.20	1.6
31	17.60	3.2
32	=>19.20	80.8

7.4.1.21 Message Field 47 Campbell Scientific Standard Size / Velocity Map (34 x 34)

This field will output the standard Campbell Scientific size and velocity map with the following classes:

Particle diameter class		
Class	Diameter [mm]	Class width [mm]
1	=>0.00	0.1
2	=>0.10	0.1
3	=>0.20	0.1
4	=>0.30	0.1
5	=>0.40	0.1
6	=>0.50	0.1
7	=>0.60	0.1

8	=>0.70	0.1
9	=>0.80	0.1
10	=>0.90	0.1
11	=>1.00	0.2
12	=>1.20	0.2
13	=>1.40	0.2
14	=>1.60	0.2
15	=>1.80	0.2
16	=>2.00	0.4
17	=>2.40	0.4
18	=>2.80	0.4
19	=>3.20	0.4
20	=>3.60	0.4
21	=>4.00	0.8
22	=>4.80	0.8
23	=>5.60	0.8
24	=>6.40	0.8
25	=>7.20	0.8
26	=>8.00	1.6
27	=>9.60	1.6
28	=>11.20	1.6
29	=>12.80	1.6
30	=>14.40	1.6
31	=>16.00	3.2
32	=>19.20	3.2
33	=>22.40	3.2
34	=>25.60	74.4

Particle speed class		
Class	Speed [m/s]	Class width [m/s]
1	=>0.00	0.1
2	=>0.10	0.1
3	=>0.20	0.1
4	=>0.30	0.1
5	=>0.40	0.1
6	=>0.50	0.1
7	=>0.60	0.1
8	=>0.70	0.1
9	=>0.80	0.1
10	=>0.90	0.1

11	=>1.00	0.2
12	=>1.20	0.2
13	=>1.40	0.2
14	=>1.60	0.2
15	=>1.80	0.2
16	=>2.00	0.4
17	=>2.40	0.4
18	=>2.80	0.4
19	=>3.20	0.4
20	=>3.60	0.4
21	=>4.00	0.8
22	=>4.80	0.8
23	=>5.60	0.8
24	=>6.40	0.8
25	=>7.20	0.8
26	=>8.00	1.6
27	=>9.60	1.6
28	=>11.20	1.6
29	=>12.80	1.6
30	=>14.40	1.6
31	=>16.00	3.2
32	=>19.20	3.2
33	=>22.40	3.2
34	=>25.60	74.4

7.4.1.22 Message Field 48

This field outputs a histogram which contains the number of particles counted within the measurement period that have a given peak-to-pedestal ratio (see Section 8.6 – this gives a measure of the number of crystalline particles). This is a histogram of 50 bins for ratios for 1.0 to 6.0 in steps of 0.1.

Note that the ratios for particles less than 0.5 mm in size are not accurate so are not included in this histogram. The total number of particles in this histogram can therefore be less than the total particles detected.

7.4.1.23 Message Field 49 Visibility (m), 10 minute average

This field will output the average visibility range (m) calculated over the previous 10 minutes, independent of the message interval – this is a 10 minute rolling average.

7.4.1.24 Message Field 100 Upper, Lower LED temperature

This field will output the sampled internal upper and lower LED temperatures (°C).

7.4.1.25 Message Field 101 Upper, Lower Detector Temperature

This field will output the sampled internal upper and lower detector temperatures (°C).

7.4.1.26 Message Field 102 Laser Hood, Laser Temperature and Laser Drive Current

This field will output the sampled internal laser hood temperature (°C), laser temperature (°C), and laser drive current (mA).

7.4.1.27 Message Field 103 Laser, Upper, Lower Detector DC Voltage Offsets

This field will output the sampled internal laser dirty window detector, upper and lower detector DC offsets (mV).

7.4.1.28 Message Field 104 Laser, Upper and Lower Dirty Window Detector

This field will output the sampled internal laser, upper and lower dirty window detector voltage levels (mV).

7.4.1.29 Message Field 105 DSP PSU Voltage, Hood and Dew Heater % Duty

This field will output the sampled DSP PSU voltage (V), hood and dew heater duty (0 to 100%)

7.4.1.30 Message Field 106 Upper, Lower Detector Differential Voltage, Calibrated Visibility mV

This field will output the sampled upper, lower detector differential voltage (mV) and the calibrated visibility (mV).

7.4.1.31 Message Field 150 Serial Number, Operating System and Hardware Version

This field will output the system serial number, operating system and hardware version numbers.

7.4.1.32 Message Field 151 Day Count, Hours, Minutes, Seconds

This field will output the day count (from 01/01/2007), hours, minutes and seconds.

7.4.1.33 Message Field 152 Product Name

This field will output the product name *PWS100*.

7.4.1.34 Message Field 153 Statistics Period

This field will output the statistics period in seconds.

7.4.1.35 Message Field 154 Watchdog Count, Maximum Particles Per Second, Particles Not Processed, Time Lag

This field will output a watchdog count which indicates the number of resets of the system due to error, the maximum number of particles stripped per second over the measurement interval, the number of particles stripped in real time but not processed and a time lag in seconds indicating how far behind processing has got at some point during the measurement interval.

7.4.1.36 Message Field 155 Processing Statistics

Shows the statistical distribution of particle processing methods used on each particle and is generally intended for debug purposes only; contact Campbell Scientific for details.

7.4.1.37 Message Field 156 Year, Month, Day

This field will output the year, month, and day.

7.4.1.38 Message Field 157 Hours, Minutes, Seconds

This field will output hours, minutes, and seconds.

7.4.1.39 Message Field 158 Averaged Corrected Visibility Voltage and Averaged Upper Head Voltage

Shows the average voltage (mV) value corresponding to the corrected visibility value (i.e., adjusted for atmospheric conditions) and the average mV value for the upper head.

7.4.1.40 Message Field 159 Output a CCITT CRC-16 (checksum) of the message

This outputs a two byte checksum in hex format (four ASCII characters). This is normally included at the end of a message to allow the validity of the message to be checked. The CRC some not include the checksum itself or STX/ETX characters.

7.4.1.41 Message Field Error

If “Error - message field nnn not valid” is output then this indicates the message you have defined has an invalid field which is not in the list above. You must go and check / re-edit your message definition.

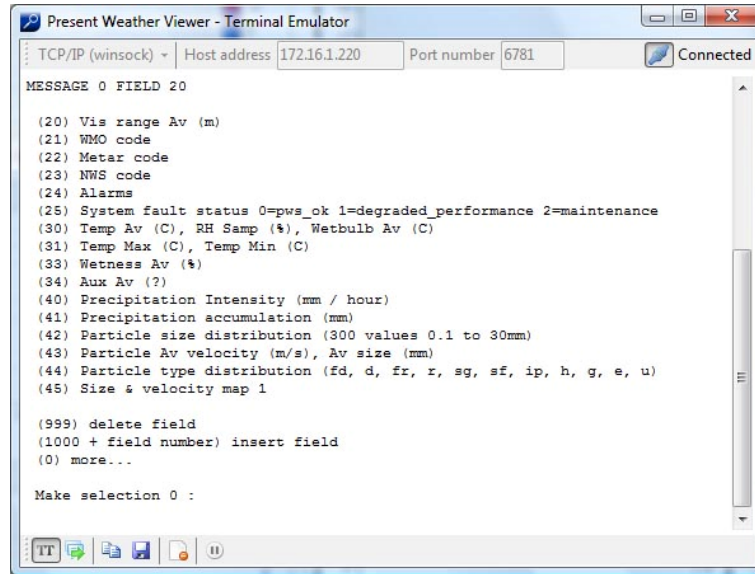


FIGURE 7-6. Message field menu

Choosing option 0 on the MESSAGE FIELD menu will display more output parameter options. Choosing option 999 will delete the field (note that subsequent fields already selected shift up to fill the gap in the fields). Choosing option 1000 + field number will insert the chosen parameter in the field selected and shift subsequent filled fields down one field.

Also available on the MESSAGE menu is the option to delete the message (option 2). If the message is to be deleted the DELETE MESSAGE menu (see Figure 7-7) will be shown. Choosing option 1 will not delete the message and will return the user to the previous menu; option 2 will delete the message. If a message is deleted a new message can be created for that message ID. Messages not deleted will retain their message ID. Therefore if all messages are set and message 1 is deleted then messages 0 and 2 are still active and will still be output. Message 1 can be redefined if required.

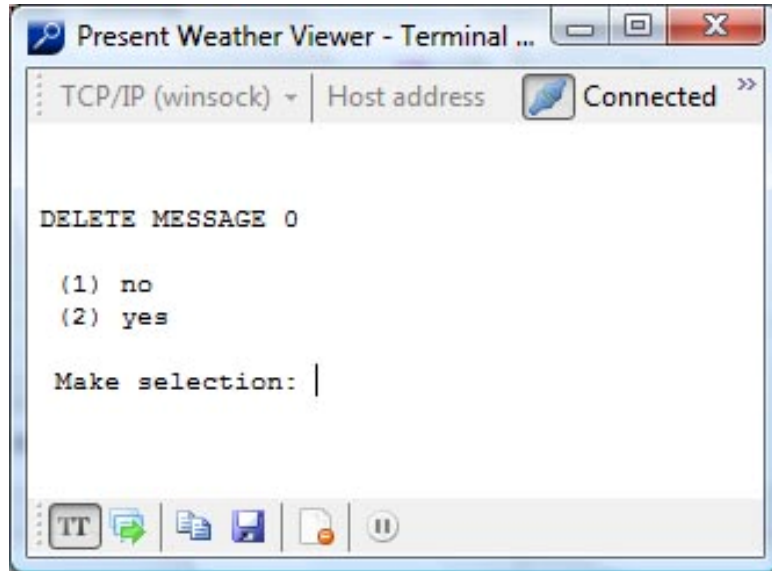


FIGURE 7-7. Delete message menu

7.4.2 Top Menu Option 3 (Set Time and Date)

Choosing option 3 from the SETUP menu brings up the TIME AND DATE menu (see Figure 7-8). On this menu it is possible to set the time and / or date for the PWS100. To change the time alone enter it as hh:mm:ss, for example 16:30:00. To change the date alone enter it as yyyy/mm/dd, for example 2007/02/04. To set the time and date simultaneously enter both of these parameters on the same line, for example 16:30:00 2007/02/04. Leading zeroes are not required on the values but the colons (:) and forward slashes (/) are and a space is required between the time and date values.

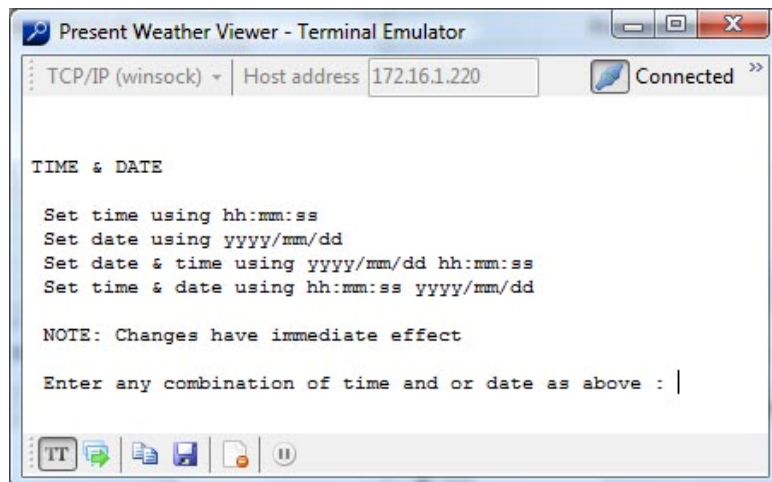


FIGURE 7-8. Time and date menu

7.4.3 Top Menu Option 4 (Configuration)

Choosing option 4 from the SETUP menu brings up the CONFIGURATION menu (see Figure 7-9). From this menu the basic configuration of the sensor is set.

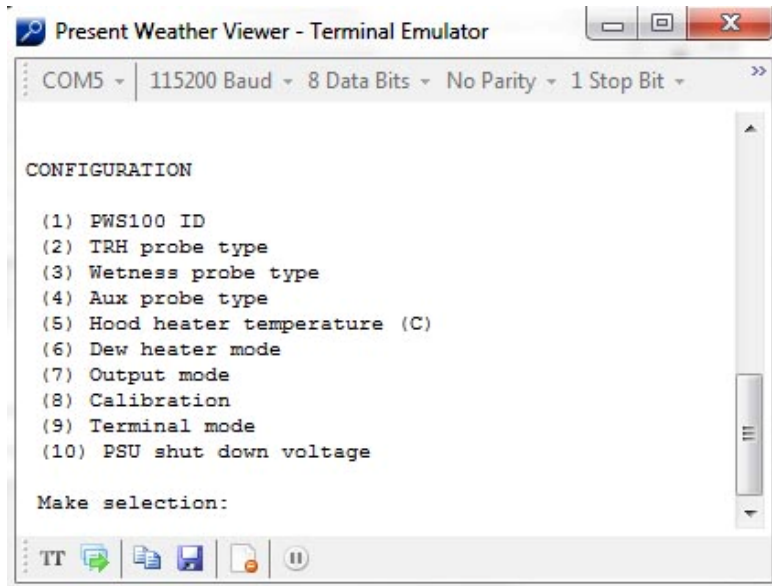


FIGURE 7-9. Configuration menu

Option 1 of the configuration menu gives the PWS100 ID menu (Figure 7-10). Here a PWS100 ID can be set. This is effectively the station address which is required on any communication with the PWS100. If the PWS100 is on a network with more than one PWS100 then each station should have its own PWS100 ID. The default PWS100 ID is zero.

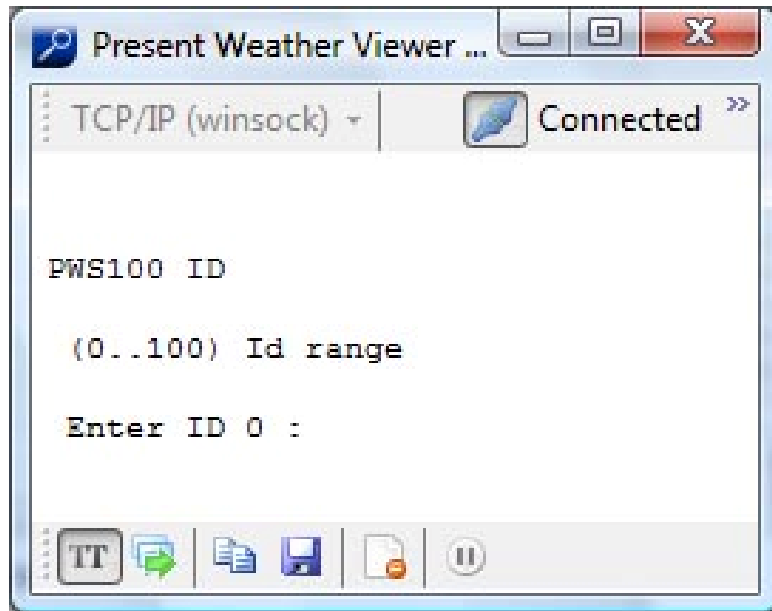


FIGURE 7-10. PWS100 ID menu

Option 2 of the configuration menu gives the TRH PROBE TYPE menu (see Figure 7-11). Choose the correct temperature / relative humidity probe that is connected to the PWS100 from the list given.

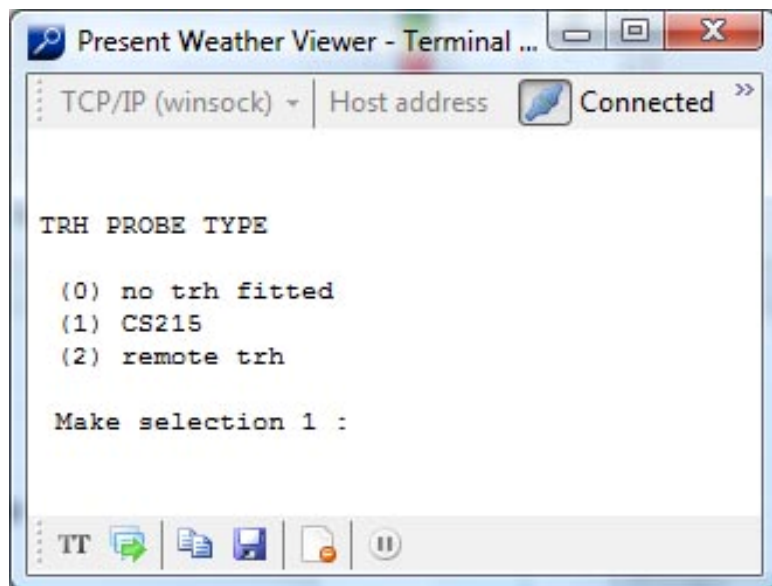


FIGURE 7-11. TRH probe menu

Selecting probe type 2 configures the sensor to expect a temperature and humidity reading to be sent to it from a remote system using the RSENSOR command.

Option 3 of the configuration menu gives the WETNESS PROBE TYPE menu (see Figure 7-12). Choose the correct wetness probe that is connected to the PWS100 from the list given.

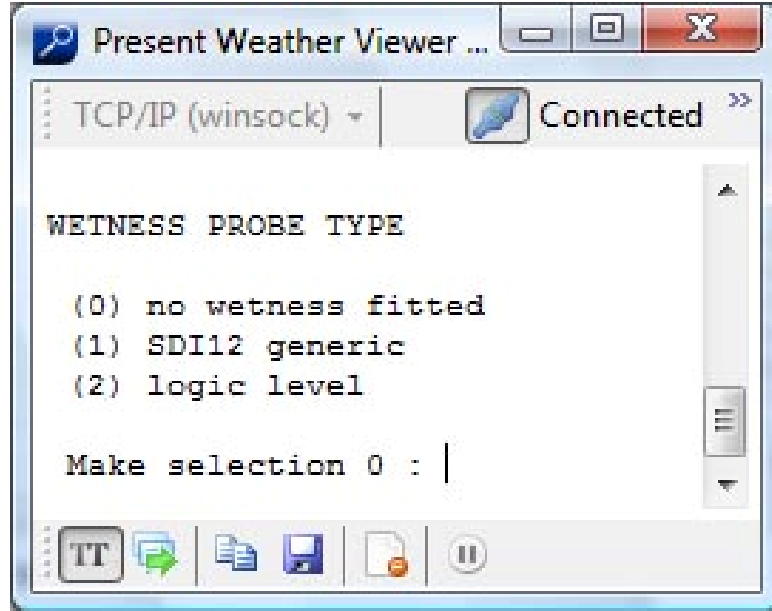


FIGURE 7-12. Wetness probe menu

Option 4 of the configuration menu gives the AUX PROBE TYPE menu (see Figure 7-13). Choose the correct auxiliary probe that is connected to the PWS100 from the list given.

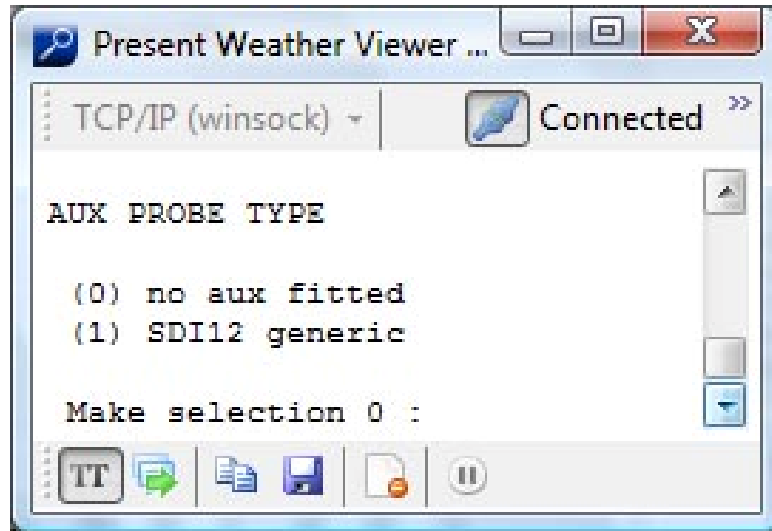


FIGURE 7-13. Aux probe menu

Option 5 of the configuration menu gives the HOOD HEATER TEMPERATURE menu (see Figure 7-14). The value that is to be set needs to be between 0° and 50°C. The hood temperature is maintained by the system at the value set.

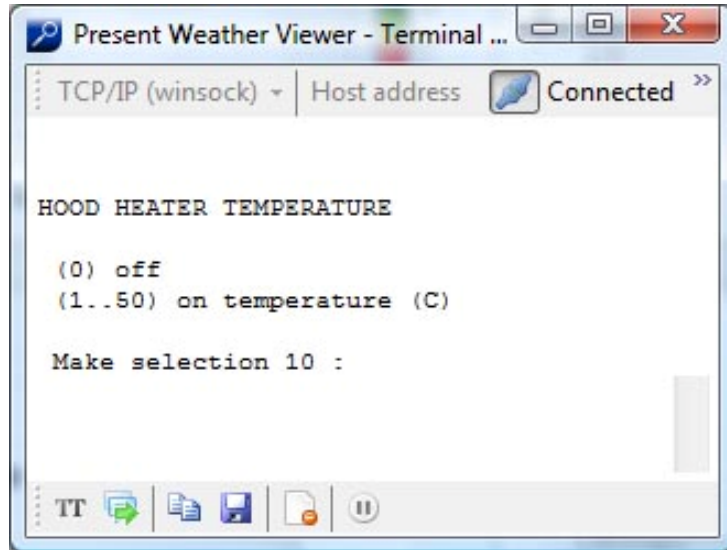


FIGURE 7-14. Hood heater temperature menu

Option 6 of the configuration menu gives the DEW HEATER MODE menu (see Figure 7-15). The dew heaters can be set to on, off or auto. Auto mode turns the heaters on, except when main hood heaters are set to heat.

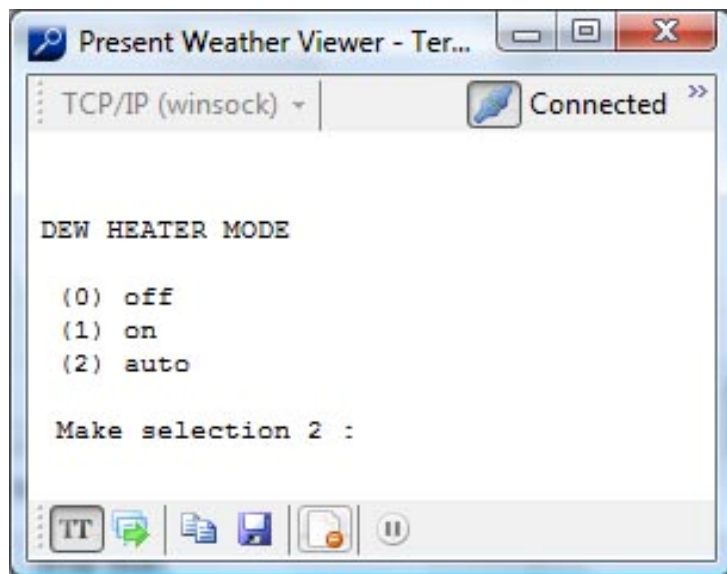


FIGURE 7-15. Dew heater mode menu

Option 7 of the configuration menu gives the OUTPUT MODE menu (Figure 7-16). This refers to the use of packetized output. The message framing is done by STX (ASCII character 02) and ETX (ASCII character 03); these act as start and end delimiters. The default value is 1 (STX / ETX on). These framing characters are useful for programmers writing code to pick up data coming from a sensor outputting data asynchronously to the device collecting it.

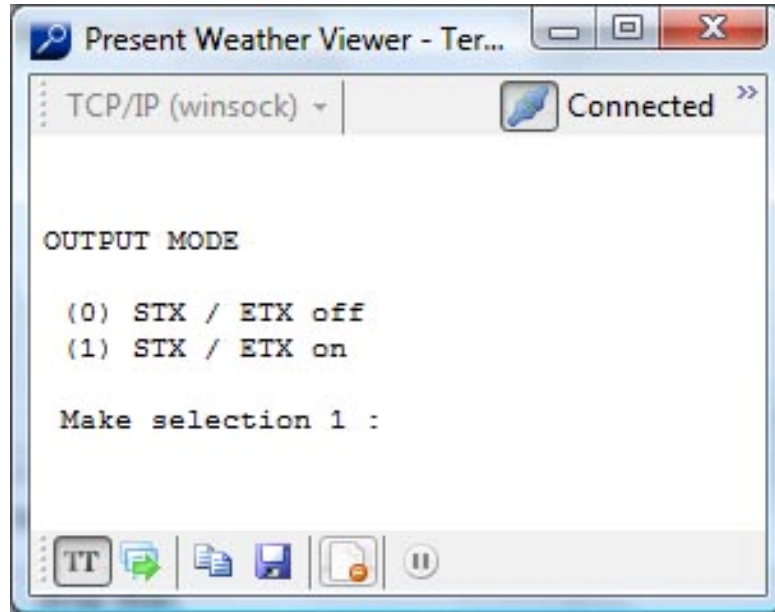


FIGURE 7-16. Output mode menu

Option 8 of the configuration menu gives the initial warning screen for the calibration procedure (Figure 7-17). Unless the correct procedure is followed and calibration entries are correctly input the PWS100's performance can be seriously degraded. In order to perform a calibration, the PWC100 calibration unit is required, which affixes to the PWS and performs several checks of the PWS100. This unit is connected via the LEMO socket of the PWS100 and automatically provides values to the PWS100 system which can be used to alter the calibration.

See the PWC100 calibrator manual for further instructions on how to run the calibration device. The device itself can be run at any time during the operation of the PWS100. It then provides size, velocity and visibility calibration values which can be checked and accepted by the user using the PWS100 menu system described below.

In order to proceed with the calibration routine *confirm* must be typed followed by the return key.

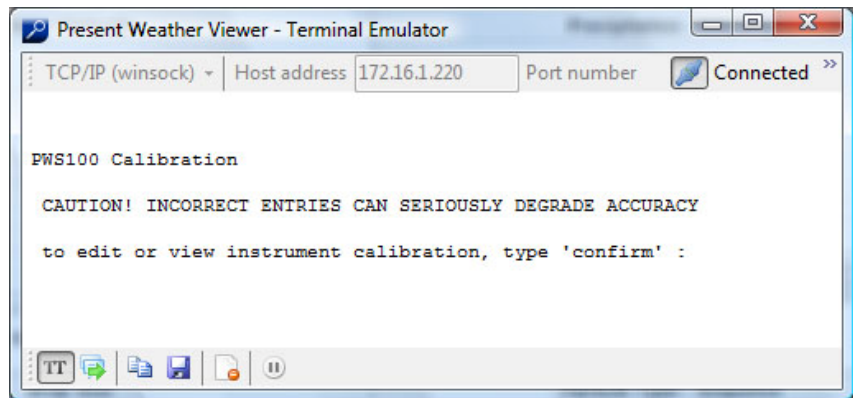


FIGURE 7-17. Calibration warning screen

Once *confirm* is typed followed by the return key, the CALIBRATION top menu (see Figure 7-18) appears. The options available to the user are: 0 to view and enter the calibration disc constants, and 1 to view and adjust the PWS100 calibration.

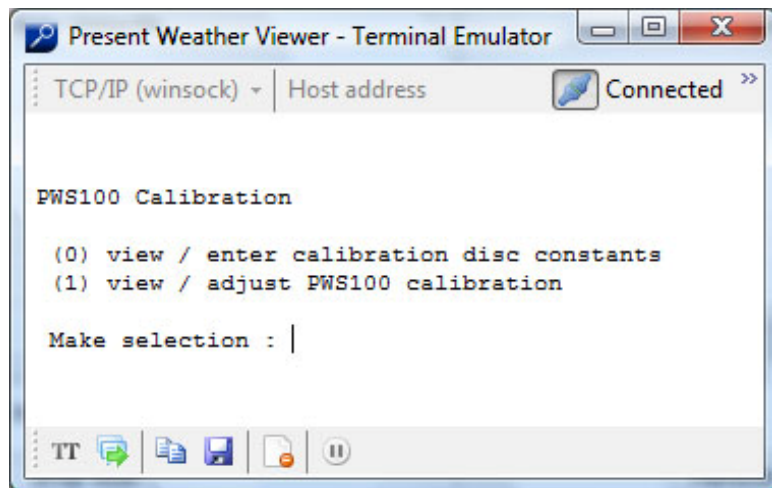


FIGURE 7-18. Calibration top menu

Selecting option 0 on the CALIBRATION top menu will bring up the CALIBRATION DISC CONSTANTS menu (see Figure 7-19). The following can then be entered (each followed by the return key); the calibration disc serial number, which identifies the specific disc for traceability; the size value; the visibility value. The velocity value is fixed by the PWC100 calibrator unit and is not a function of the disc and so this value is fixed and not user enterable.

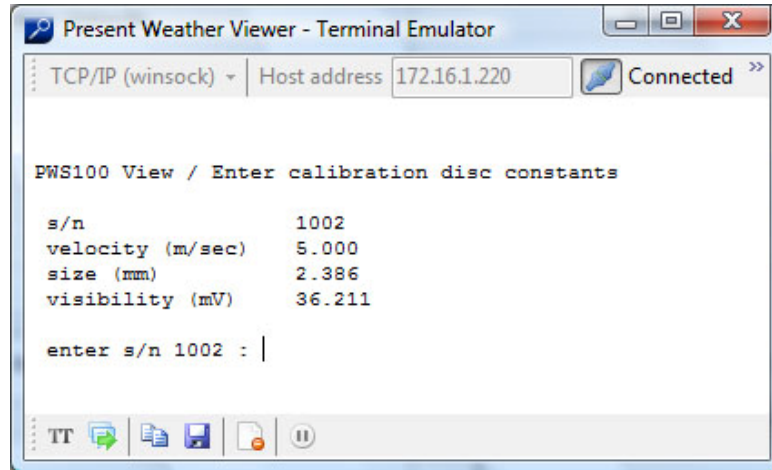


FIGURE 7-19. Calibration disc constants menu

Selecting option 1 on the CALIBRATION top menu will bring up the VIEW / ADJUST CALIBRATION menu (see Figure 7-20). On this menu the latest calibration values will be evident in the left hand column of values headed *latest*. Selecting option 0 on the VIEW / ADJUST CALIBRATION menu will return the user to the previous menu without invoking any calibration changes. Selecting option 1 from the VIEW / ADJUST CALIBRATION menu will allow the user to update the calibration values for velocity, size and visibility. If the values are in the target range then all is correct with the sensor. If values are out then there may be a problem, such as dirty windows on the PWS100, an error with the PWC100 calibrator, or some further problem with the PWS100 that may need investigation. In this instance, ensure that the PWC100 calibrator is working as described in the PWC100 calibrator manual, and ensure that all lenses are clear of dirt or fingerprints. Place the PWS100 in a suitable location and attempt the calibration again. If a problem persists then it may be necessary to contact Campbell Scientific for further diagnostics.

NOTE

The calibration should only be carried out during non-precipitation conditions and during clear atmospheric conditions (>10 km visibility).

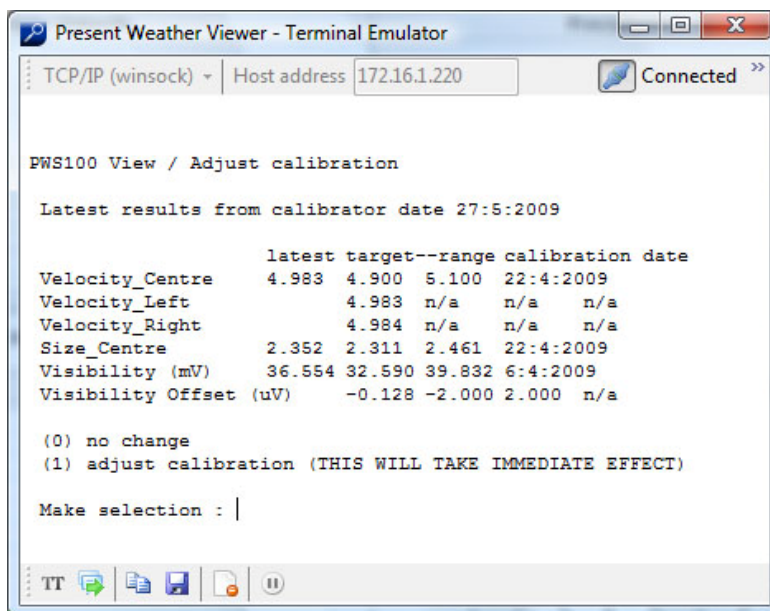


FIGURE 7-20. View / adjust calibration menu

Option 9 of the configuration menu gives the TERMINAL MODE menu (see Figure 7-21). Choose whether CRC16-CCITT checksum verification is required.

NOTE

When terminal mode is set to 1 all terminal commands need a CRC. For example “open 0;d2d5” a semi-colon is used to indicate start of CRC in 4 byte ASCII hex. The CRC is calculated either from the start of new line or after a [STX] up to but not including the semicolon. ETX can follow the CRC if required. The valid CRC can be read back for any command if the CRC after the semi-colon is replaced with four ‘?’’. For example “open 0;????” the response will be [CRLF]CRC>D2D5<CRC[CRLF] so d2d5 is the CRC.

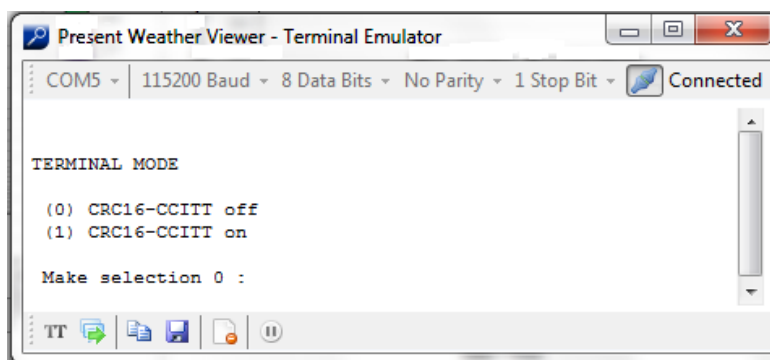


FIGURE 7-21. Terminal mode menu

Option 10 of the configuration menu gives the PSU SHUT DOWN VOLTAGE menu (Figure 7-22). Enter the PSU input voltage level below which the PWS100 will enter low power mode. Enter '0.0' to disable this feature (default).



FIGURE 7-22. PSU shut down voltage menu

NOTE

This feature is usually used to protect batteries from deep discharge. There is a hysteresis of 0.9V applied. For example, if the PWS100 goes into low power mode at 10V it will return to normal operation when the voltage rises to 10.9V. Current will be limited to about 120 mA at 9V. Communications are still possible and a message “PSU voltage too low nn.n”, where nn.n is the supply voltage, will be output every 60 seconds.

7.4.4 Top Menu Option 5 (Password)

Choosing option 5 from the SETUP menu brings up the PASSWORD menu (see Figure 7-23). Pressing enter deletes the password. To set a password, type up to 10 alpha-numeric characters and press enter.

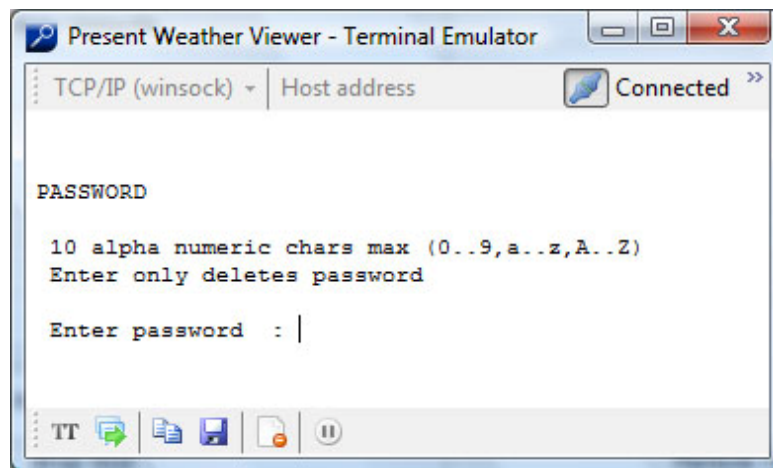


FIGURE 7-23. Password menu

7.4.5 Top Menu Option 6 (Weather and Alarm Parameters)

Choosing option 6 from the SETUP menu brings up the WEATHER AND ALARM PARAMETERS menu (see Figure 7-24). This menu allows for the setup of the visibility range alarms, snow water content factor and the mixed precipitation thresholds.

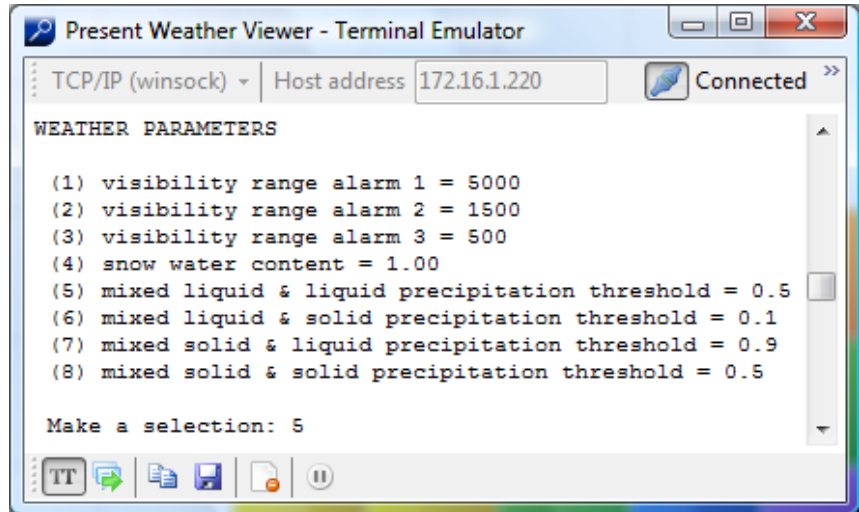


FIGURE 7-24. Weather parameters menu

There are three visibility alarms, each of which is set separately by selecting 1, 2, or 3, followed by enter on the WEATHER PARAMETERS menu. Selection of one of the visibility range alarms brings up the individual alarm menu (Figure 7-25). Select an alarm range from 0 to 50000 m noting that the PWS100 visibility measurement is currently capped at 20000 m and so values set above this cap will set an alarm that is never triggered. These alarms are triggered and stored in the sensor and can be output as part of a message or used as flags as part of a monitoring system.

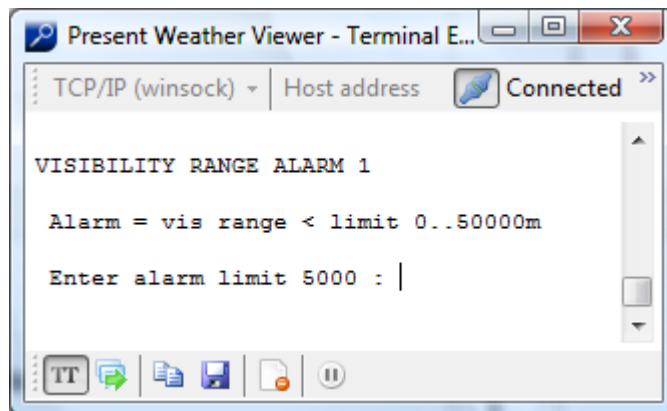


FIGURE 7-25. Visibility range alarm menu

The snow water content scaling factor (SWCF) can be adjusted by choosing option 4 on the WEATHER PARAMETERS menu. This will bring up a line asking for a value.

Depending on atmospheric conditions likely to be encountered, a wide range of snow water content figures can be observed dependant on the bulk density of the particle. Particle bulk density depends on the structure of the particle (e.g., whether it is dendritic, columnar or plate-like as the surrounding air or encapsulated air occupies some of the particle space). The conversion from a measurement of size (which in itself is not precise for irregular snowflakes) and water content can at best be considered approximate.

The PWS100 assumes a relationship between snow flake size and bulk density published in the literature (Brandes, E. A., K. Ikeda, G. Zhang, M. Schönhuber, and R. M. Rasmussen, 2007: A statistical and physical description of hydrometeor distributions in Colorado snow storms using a video disdrometer. *J. Appl. Meteor.*, **46**, 634–650). That equation and the values it assumes for other identified particle types are given in Table 7-3. The equation for snowflakes has the scaling factor for snow water content that can be adjusted to suit local conditions. Entering a value of 1 assume this relationship is correct. For example, if the snow at the site of installation is typically more dense and wet (as is common in temperate climates) a higher scaling factor may be needed.

TABLE 7-3. Assumed bulk density of various particle types.	
Particle Type	Bulk Density assumed
Liquid	1.0 g cm ⁻³
Graupel	0.6 g cm ⁻³
Snow grain	0.4 g cm ⁻³
Ice pellet	0.7 g cm ⁻³
Hail	0.8 g cm ⁻³
Snow Flake	SWCF* 0.178*D ^{-0.922} g cm ⁻³ (D is the flake diameter in mm)

This figure should not be confused with equivalent water to snow depth calculations which require further knowledge of packing structures, wind effects, ground temperature, ground type and a myriad of other parameters related to snow depth. The ratio of water accumulation to snow depth will be lower than the snow water content figure and is typically in the order of 0.1 (i.e., the snow pack is 10 times deeper than the water accumulation of the melted snow pack).

NOTE

Changing the snow water content parameter will also affect the determination of precipitation intensity, which is defined by water equivalent precipitation rates. See 8.6.2 and Appendix A for more details.

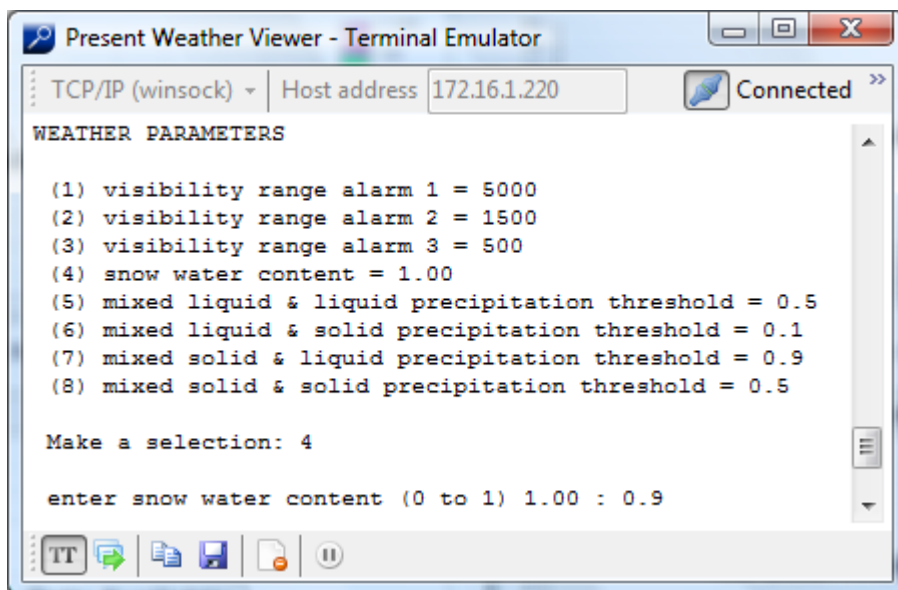


FIGURE 7-26. Snow water content adjustment

The mixed precipitation threshold value can be adjusted by choosing options 5-8 on the WEATHER PARAMETERS menu. This will bring up a line asking for a value between 0 to 1. A value of 0 means there is no threshold for mixed precipitation – a single other type of particle in a specific event will give rise to a mixed event, therefore mixed events are highly likely; and may easily be caused by the occasional erroneous particle classification. A value of 1 means an equal number of two types will have to be observed to trigger a mixed event, therefore mixed events are highly unlikely. A setting of 0.5 means that a second precipitation type needs to be 50% or more of the most common type to be distinguished as a mixed event.

Four thresholds are given to allow maximum flexibility and to allow the sensor to be setup to match local observer practise (which varies).

Option 5 controls the threshold for mixed events between two types of liquid precipitation (e.g., rain and drizzle).

Option 6 controls the threshold for mixed events when a liquid type is the dominant particle type and a solid is the next most prevalent particle type (e.g., when it is raining and snow flakes are detected). Observers are typically more sensitive to reporting this as a mixed event than for rain/drizzle as occasional snow flakes are easy to see.

Option 7 controls the threshold for mixed events when a solid type is the dominant particle type and a liquid is the next most prevalent particle type (e.g., when it is snowing but changing to rain).

Option 8 controls the threshold for mixed events between two types of solid precipitation (e.g., snow and snow pellets).

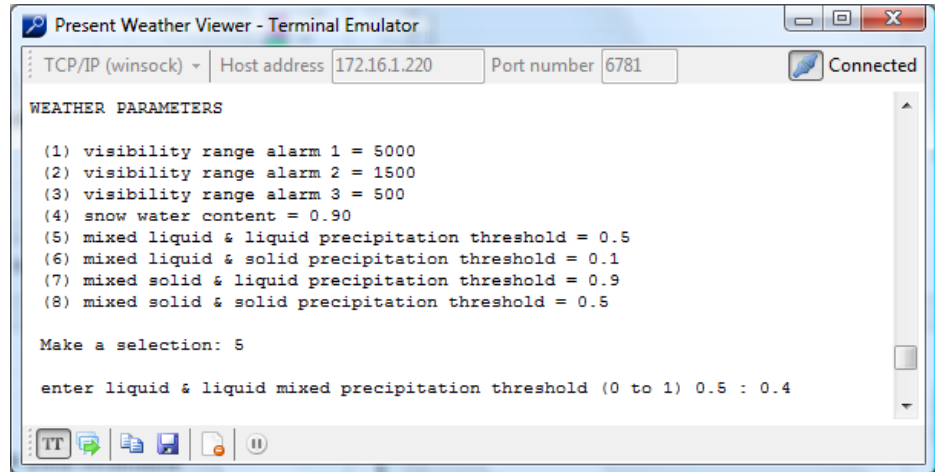


FIGURE 7-27. Mixed precipitation threshold adjustment

7.4.6 Top Menu Option 7 (Terminal)

Choosing option 7 from the SETUP menu brings up the TERMINAL screen (see Figure 7-28). Pressing any key brings up the terminal as described in Section 7.3.

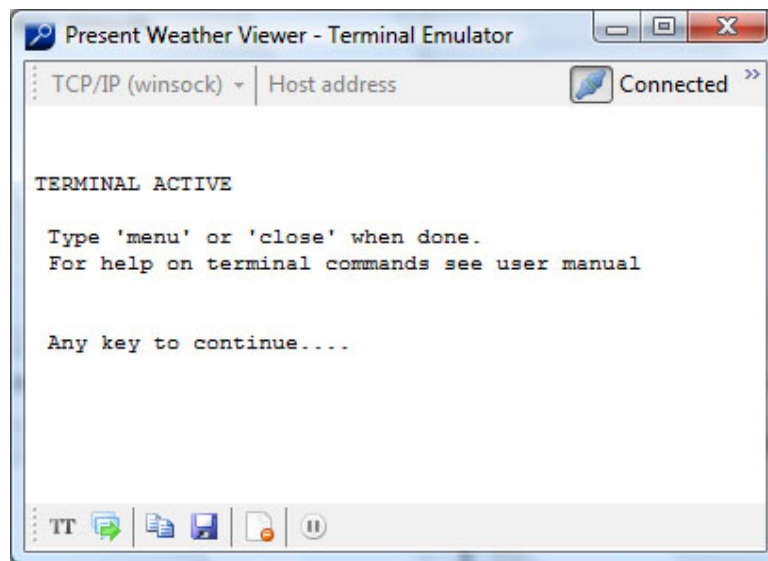


FIGURE 7-28. Terminal active screen

7.4.7 Top Menu Option 8 (Info)

Choosing option 8 from the SETUP menu brings up the INFORMATION menu (see Figure 7-29). This shows various parameters for the PWS100 system. The software version shows the current operating system number which may be required in communications with Campbell Scientific about the PWS100. The watchdog shows errors that have occurred since the installation

of the operating system or a hardware reset. The SDI-12 values of temperature and relative humidity will be -999.00 if no such information is available such as when no probe is connected to the SDI-12 port. The diagnostic mode shows two values. The first value is the flag for the fuzzy diagnostic mode (0 or 1); see Section 7.5.2, *Retrieving Historical Data* for more information. The second value indicates the connection status of the calibration unit, 0 shows that the unit is not connected and 1 shows that it is connected.

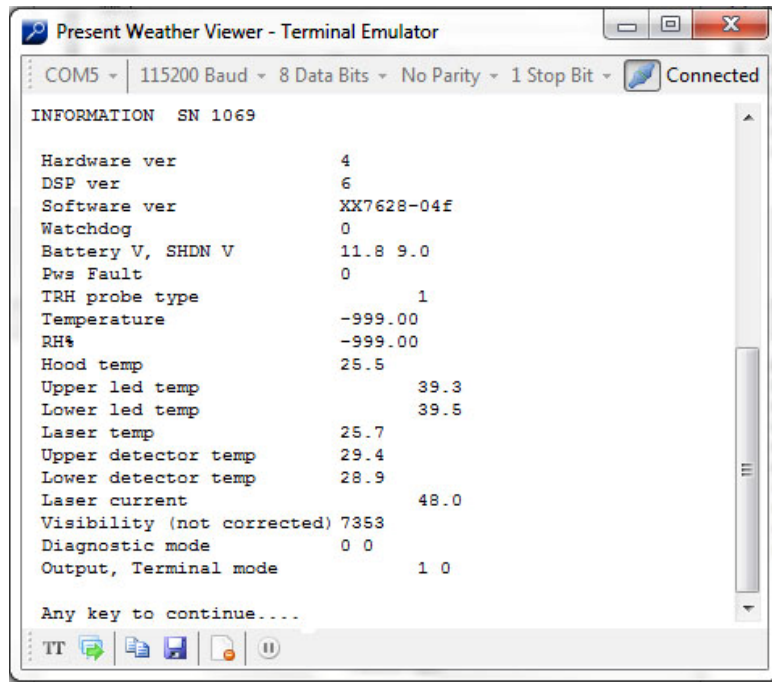


FIGURE 7-29. Information menu

7.4.8 Top Menu Option 9 (Done)

Choosing option 9 from the SETUP menu brings up the DONE menu (see Figure 7-30). Here changes made can be saved before quitting (option 1) or lost before quitting (option 2). Alternatively option 0 returns to the main menu.

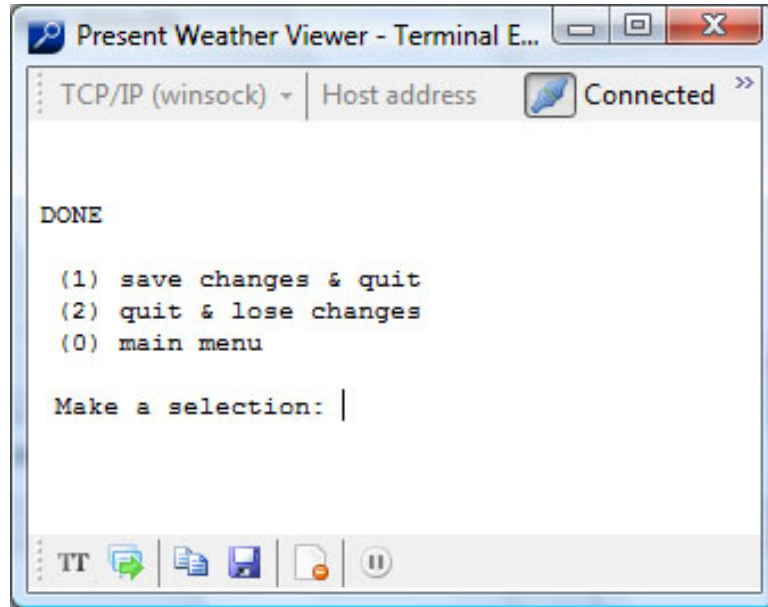


FIGURE 7-30. Done menu

7.5 Message Related Commands

Messages can be set for a variety of output types, including fixed standard types and user defined types. The system can be set up to send automated messages at user defined intervals, or can be used as a user polled system.

7.5.1 Automatic and Polled Message Sending

While the command mode is closed, the PWS100 will operate by sending data output as set by the user in either automatic or polled modes (see Section 7.3.3, *Message Polling* for a description of the manual data polling command).

To define the output parameters and fields, use the MSET command with the *Message_ID*, *Message_Interval*, *Message_Mode* and *Message_Fields* parameters as follows:

```
MSET Message_ID Message_Interval Message_Mode
      Message_Fields ↵
```

e.g., MSET 0 3600 0 105 106↵

In order to ensure that output is as required, the *Message_ID*, *Message_Interval*, *Message_Mode* and *Message_Fields* parameters must be defined.

Three *Message_IDs* 0, 1 and 2 can be defined to provide the scope for different output types to be given at different time intervals (e.g., *Message_ID* 0 can be defined with a 15 second interval, whereas *Message_ID* 1 can have a 60 second interval). Then every 15 seconds the message defined by *Message_ID* 0 will be output, additionally every 60 seconds the message defined by *Message_ID* 1 will be output. Each *Message_ID* should be defined as a separate command.

The *Message_Interval* parameter must also be defined from 0 second to 32767 seconds which is the rate at which the system will display the output message and the period which statistics are calculated over (the factory and reset default for ID 0 is 60 seconds). If the *Message_Interval* is 0 then it will set the message polling mode (see Section 7.3.3, *Message Polling* for a description of the manual data polling command). Setting the *Message_Interval* to less than 10 seconds will result in repeated data due to the 10 second measurement cycle in the sensor (see Section 8.5).

The *Message_Mode* defines special functions and can be set to either 0 or 1. Setting *Message_Mode* to 0 allows output to the serial port and stores the 'MSET' data history. Setting the *Message_Mode* to 1 prevents the output to the serial port but stores the 'MSET' data. For message polling, mode the *Message_Mode* should be set to 0.

By default (factory set and after reset of the system) the *Message_Field* parameter for *message_ID* 0 is set up as described in Section 7.4.1.1, which is a combination of message types. If no message field parameters are set, then no output will be given, thus a particular ID can be cleared by using the above method.

There are many fixed message types which are detailed elsewhere in Sections 7.4.1.1 to 7.4.1.40. Table 7-2 defines the possible message field parameters.

To view all current user messages set then leave all parameters blank as below:

```
MSET↵
```

The system will then output the current message in the form:

```
Message_ID Message_Interval Message_Mode Message_Fields
....
....
```

To view only the *Message_ID* of interest then leave all parameters blank apart from *Message_ID* as follows:

```
MSET Message_ID↵
```

The system will then output the current message for that *Message_ID* in the form:

```
Message_ID Message_Interval Message_Mode Message_Fields
```

e.g., for ID 0 set with a 10 second interval, serial port output and parameters 105 and 106 the output will be:

```
0 10 0 105 106
```

Note that the MSET command will output the parameters for all of the *message_IDs* set. e.g if additional to ID 0 set above, ID 1 is set with a time interval of 30 seconds, serial port output and with parameter 104 set the output will be:

```
0 10 0 105 106
1 30 0 104
```

To set manual polling mode the MSET command should be of the form:

```
MSET Message_ID 0 0 Message_Fields ↵
```

e.g., MSET 0 0 0 105 106.↵

NOTE

A minimum message interval of 10 seconds can be set for all types of message field output. If a time is set less than 10 seconds some output parameters may not function correctly.

7.5.2 Retrieving Historical Data

Historical data can be output by using the HDATA *period* command. Parameter *period* is the number of seconds to output going back in history. The most recent message will be output first going back *period* seconds into history. The command is:

```
HDATA period↵
```

If *period* is larger than the number of seconds stored, then only the messages stored will be output. If no value is provided for *period* then all of the stored historical data will be output. Note that this command outputs particle by particle data (size, velocity, volume).

This function is provided for initial setup and diagnosis. It is not intended for long term use as it has several limitations, which include the amount of data that can be stored is limited by the system memory (see specifications) and no data is stored while the system is in the terminal or system menu.

The HDATA command outputs this format:

Timestamp (seconds), datatype, value a, value b, value c

The datatype can range from 0 to 1015 currently. Low value numbers, ranging from 0 to 99, indicate it is particle data with the coding:

0	Drizzle
1	Freezing drizzle
2	Rain
3	Freezing rain
4	Snow grain
5	Snowflake
6	Ice pellets
7	Hail
8	Graupel
90	Error
99	Unknown particle type

For the above value a, value b, and value c relate to size (diameter in mm), velocity (ms^{-1}) and volume (mm^3).

Higher codes indicate other type of data (stored every 10 seconds) where values a, b, and c have different meanings as indicated below:

1000	Time stamp (in seconds from 1/1/2007)
1001	Temperature, RH and wetbulb temperature
1002	Visibility data (upper, lower and calibrated mV sample)
1010	Wetness grid value
1011	Error codes (temperature / RH error code, wetness error code)
1012	Aux sensor value

Extra information about each particle can be given from the sensor if the sensor is set up to store such extra information. The command to enable the storage of this extra information is:

FUZZYDIAG 1↵

Once this command is given then the following information will also be stored for each particle observed:

1013 Minimum signal peak, pedestal height and signal to pedestal ratio for detector 1

1014 Minimum signal peak, pedestal height and signal to pedestal ratio for detector 2

1015 Polycrystalline flag (1 for polycrystalline, 0 for not polycrystalline)

To disable the storage of the above extra information (which if not required frees up more memory to store more history of particles) use the command:

FUZZYDIAG 0↵

This data is part of the logical processing of each particle as the signal to pedestal ratio value is used in one of the fuzzy logic tables to help determine particle type. It has been shown from studies of the PWS100 signal output that snow grains and snowflakes exhibit much smaller ratios than for drizzle and rain. This is only possible due to the structured nature of the detection volume and the fact that polycrystalline particles such as snow exhibit refraction and reflection of light from multiple scattering sites as opposed to mainly refraction from what is effectively one scattering site for liquid particles.

In terms of data storage with FUZZYDIAG enabled 5 records are used every 10 seconds (1001, 1002, 1010, 1011 and 1012) plus 4 records for every processed particle that passes through the volume (0-99, 1013, 1014 and 1015). For example if 20 particles per second are processed then 80.5 records are used per second. Since 1000000 records can be stored in the LPA only 1242 seconds worth of data can be stored as opposed to 4878 seconds with FUZZYDIAG disabled. FUZZYDIAG will be disabled by default.

NOTE

Three values are always given in the HDATA output; however, if the particular coded output has less than three parameters the remaining values will be zero, 1010 and 1012 are examples of this.

7.5.3 Viewing Data Output on the Command Line

A number of records (defined by the number *n*) of uncollected historic *m* data (message data) can be output to the command line in ASCII text format in exactly the same format as defined in the messages. To do this type:

```
HMDATA n ↵
```

If the parameter *n* is omitted then all uncollected data is output. Any output message of either interval or polled are stored in a large final output buffer and any uncollected data can be collected using this command. See Section 7.5.4 for the preferred method of collecting this data.

7.5.4 Collection of Data in Text File Format

A number of records (defined by the number *n*) of uncollected historic *m* data (message data) can be collected using Xmodem 1 k protocol. To do this type the following on the command line:

```
XHMDATA n ↵
```

If the parameter *n* is omitted then all uncollected data is collected. Any output message of either interval or polled are stored in a large final output buffer and any uncollected data can be collected using this command. This command would normally be used for scheduled collection using a computer. The file downloaded is a text file with messages in exactly the same format as defined in the messages.

7.6 Weather Related Commands

7.6.1 Setting and Viewing Weather Parameters

Visibility alarm limit parameters, a snow water content parameter and a mixed precipitation threshold parameter can be viewed using the SETPARAM command. To view these parameters, type:

```
SETPARAM ↵
```

The PWS100 will then display three visibility alarm limit parameters, the snow water content parameter and the mixed precipitation threshold parameter (four total) on screen in the following format:

```
vislim1 vislim2 vislim3 snowwater mixthreshold
```

```
vislim1 = visibility limit alarm 1 limit (Default 5 km).
```

```
vislim2 = visibility limit alarm 2 limit (Default 1.5 km).
```

```
vislim3 = visibility limit alarm 3 limit (Default 0.5 km).
```

```
snowwater = snow water content (Default 0.5)
```

```
mixthreshold = mixed precipitation threshold (Default 0.5)
```

To set the adjustable visibility limit parameters, type:

```
SETPARAM vislim1 vislim2 vislim3 snowwater mixthreshold ↵
```

The system will respond by displaying the new settings as described above with SETPARAM ↵ command. Please see Section 7.4.5 for a description of the thresholds.

TABLE 7-4. Weather parameters.

Parameter	Function
VISLIM1	Set a visibility alarm below which a particular alarm will be given.
VISLIM2	Set a visibility alarm below which a particular alarm will be given.
VISLIM3	Set a visibility alarm below which a particular alarm will be given.
SNOWWATER	Set a snow water content parameter from which water equivalent accumulations will be derived.
MIXTHRESHOLD	Set a threshold for the reporting of mixed precipitation as a proportion of the most populated precipitation type.

7.6.2 Receiving Data from Remote Sensors

Instead of using data from sensors directly connected to the PWS100, it can be sent data from remote sources (e.g., a different temperature and humidity sensor connected to the controlling system/datalogger). To do this, the TRH sensor type needs to be changed to the remote sensor option and the data sent to the PWS100 by the controlling system at regular intervals (e.g., every minute). The RSENSOR command is used as follows:

```
RSENSOR Pws_Id Temperature Humidity ↵
```

Temperature should be in degrees Celsius and humidity as a percent (0-100). The PWS100 will use the last values sent to it for its particle discrimination decisions.

7.7 System Configuration Commands

7.7.1 Setting System Parameters

The system configuration parameters can be viewed using the CONFIG command and those capable of being set by the user are set using the SETCONFIG command. To view the system configuration parameters, type:

```
CONFIG ↵
```

The PWS100 will then display the configuration parameters on screen in the following format:

```
Date and Time
PWS100 product identification
Serial Number
Hardware Version
Software Version
PWS100 ID
Serial Baud Rate
Interface type [RS232 / RS485] and duplex [FULL / HALF]
Auxiliary Sensor ID 1, 2...
Hood and Dew heater settings
Overrun error count
Output mode
Diagnostic mode
Watchdog error count
```

Some of these parameters are set using other commands, such as the time and date being set using the TIME command and the various message output parameters set using the MSET command. Other configuration parameters will only be updated with an OS change.

An example of the output given from the CONFIG command is given below:

```
23/2/2007 16:30:01
PWS100
SN-9999
HW4
OS 007628-02c
PWS_ID 0
Baud 117504
RS232 Full Duplex
TRH 1 Wetness 0 Aux 0
Hood 10 Dew 2
OR_ERR 0
Output_Mode 1
Diag 0 0
WD 0
```

Using the SETCONFIG command will adjust system configuration parameters. SETCONFIG allows you to change the PWS100 ID and the sensor types.

To view the current SETCONFIG parameters without changing them use SETCONFIG↵.

To change the parameters use the following command:

```
SETCONFIG pws100_ID TRH_Sensor Wetness_Sensor Aux_Sensor
Hood_Set Dew_Set Output_Mode↵
```

The *pws100_ID* is a number from 0 to 99. This is the effectively the station address and is required on any communication with the PWS100. On a network with more than one PWS100 the ID must be set different for each station. The default factory *pws100_ID* is zero (0).

Currently three other sensors can be connected to the PWS100. The sensor configured is changed by parameters *TRH_Sensor* (Temperature and RH%), *Wetness_Sensor* and *Aux_Sensor*. Section 8 gives further details of how to connect optional sensors. Table 7-5 gives the IDs of various sensors. To add these to the system put the appropriate sensor ID to the appropriate sensor parameter.

ID	Sensor Type
0	No Sensor
1	CS-215 Temperature RH%
2	CS-xxx Wetness Grid
3-99	Reserved for future use

The *Hood_Set* value sets the temperature at which the hood heaters are set to function at and can be set to 0 (off) or a temperature between 10 and 50°C. The *Dew_Set* value sets the temperature at which the internal dew heaters are set to function at and can be 0 (off), 1 (on) or 2 (auto).

The *Output_Mode* value relates to the use of packetized output. The message framing is done by STX and ETX (start and end) delimiters. The *Output_Mode* values available are 0 = No STX / ETX or 1 = STX / ETX. The default is 1 = Send STX / ETX. The use of STX and ETX is mainly used in multidrop systems with many sensors on one RS-485 bus or to aid software development.

7.8 Maintenance Commands

7.8.1 Loading a New OS

A new OS can be loaded into the PWS100. A new OS may be developed and provided by Campbell Scientific to improve the functionality of the system. The system will check that the OS loaded is valid, however the user should ensure that the OS is the latest OS provided by Campbell Scientific.

Save the relevant new OS file provided by Campbell Scientific in a known directory on the PC used for communications to the PWS100.

A new operating system can be loaded with the Present Weather Viewer program using the option in the tools menu (see the help system) or it can be loaded using Hyperterminal as described below.

With the PWS100 then connected to this PC and Terminal running as described in Section 7.3 use the following command to load a new OS:

```
LOADOS ↵
```

The system will now respond by attempting to upload the new OS using Xmodem. Select 'Transfer' on the pull down menu and then select 'Send File'.

Select the Xmodem 1k protocol and select the OS file using the 'Browse' button. Once selected press the 'Send' button. The Xmodem file send dialog box then opens displaying download progress and will close automatically once the download has completed. The OS can be seen to be being installed by a series of memory block erasures, followed by writing of the OS and verification of the OS. The user is then prompted to wait for 5 seconds for the OS to restart. The new OS is now installed.

WARNING Do not remove power to the unit while the OS is being installed as this will cause the unit to malfunction.

NOTE Hyperterm PWS100 OS upload and data collection will not work when an NL100 is used in the communications link.

7.8.2 Running a Diagnostic Test

To run a DIAG test first the fields need to be set by using the DIAGSET command as below:

DIAGSET *Stats_Period Diagnostic_Fields*↵

The *Stats_Period* parameter is the period in seconds that statistics are calculated over ranging from 0 to 32767.

The *Diagnostic_Fields* parameter is a list of fields required as listed in Table 7-2. There is no restriction on the type or combination of fields that can be output.

If DIAGSET is executed with *Stats_Period* and *Diagnostic_Fields* blank then the diagnostic field parameters will be output without changes.

NOTE The diagnostic message type is 9000 and this is can be seen with both the outputs of DIAGSET and DIAG commands.

To run diagnostic tests use the DIAG command as below:

DIAG *Output_Rate*↵

Output_Rate is the rate in seconds ranging from 0 to 32767. If *Output_Rate* is not entered then the *Output_Rate* will be set the same as the *Stats_Period*.

e.g., DIAG 10↵

In the example above the PWS100 will output the diagnostic information with statistics calculated over a period defined by the DIAGSET command at an output rate of 10 seconds. This information will continue to be displayed until the key combination 'Ctrl + C' is pressed, or after 10 minutes has passed.

7.8.3 Running the Calibration

The detection volume is calibrated using the PWC100 calibrator. The calibration fixture plate which holds the calibration unit is mounted in place on the top of the sensor boss.

The PWC100 calibrator runs automatically when the start button is pressed and will provide values for the PWS calibration as shown in Section 7.4.3 and Figure 7-20. Normally, the PWC100 calibrator is only used as a check device in the field. It can be used to adjust the calibration of the system, if desired, as detailed in Section 7.4.3.

Please refer to the PWC100 calibrator manual for further details of operation of the PWC100 calibrator and the procedure for calibration of the PWS100.

7.8.4 Rotating the Calibration Disc

The command RUNDISC *n* will start the disc of the PWS Calibrator (if connected) rotating at a speed $n = \text{ms}^{-1}$. To start the disc spinning type the following:

```
RUNDISC n ↵
```

where *n* is a number between 0.0 and 7.0. The user can then use this command to test or demonstrate the PWS functions. Using the command RUNDISC without any parameter (i.e., $n = 0.0$) will stop the disc.

7.9 Other Commands

7.9.1 Setting the Time and Date

The time and date of the system can be observed by using the TIME command as follows:

```
TIME ↵
yyyy/mm/dd hh:mm:ss
```

To change the system time and date then the command requires the time and date in the correct format as follows:

```
TIME yyyy/mm/dd hh:mm:ss ↵
```

Where, in the order shown in the command above, *yyyy* is the year, *mm* is the month of the year, *dd* is the day of the month, *hh* are the hours (24 hour clock), *mm* are the minutes, *ss* are the seconds. Leading zeros on the values are not necessary however the colons (:) and forward slashes (/) are required and a space is required between the day and the hour.

It is possible to set just the date or the time independently of the other. To set just the date without altering the time the following should be used:

```
TIME yyyy/mm/dd ↵
```

To set the time without the date being altered the following should be used:

```
TIME hh:mm:ss↵
```

7.9.2 Resetting the System

The system is reset by using the RESET command as follows:

```
RESET↵
```

This will terminate all current measurements and reset the system. The time, date and calibration values will be maintained, but all other user enterable data are lost and will need to be input again as required.

If a problem is found with the sensor first try power cycling the sensor. A soft reset is the next level of debugging and should be tried before using a hardware reset (see switch settings).

7.10 Connecting the PWS100 to a Datalogger

7.10.1 Connections

The PWS100 can be connected to a datalogger using the supplied RS-232 cable with a null modem between the PWS100 and the datalogger. The connections should adhere to the EIA232F standard for RS-232 communications. If the supplied 9 pin D-connector is removed to connect to a device without a suitable socket for the D-connector then connect using the information supplied in Table B-1.

Please make sure that the RTS/CTS lines are connected correctly when making up this cable as no data will be transmitted otherwise. Normally these lines should be connected together in the PWS enclosure or joined at the end of the cable, as it is not necessary to use handshaking with a Campbell Scientific datalogger.

7.10.2 Example Logger Programs

Prior to writing a data logging program whether is be for a Campbell logger or another system it is important to consider the issue of whether the sensor is to be set to automatically transmit the data at a given interval and the logger capture it OR the logging system poll the sensor based upon the loggers timebase.

The automatic transmission system appears to be easier and may be the only way to work where several systems need to listen in and pick up data from one sensor. However, there will always be issues with synchronising the data transmitted by the sensor and that stored alongside it in the logging system. The main cause of these problems is the relative time drift between the sensor and logging system. The simplest issue this causes is the timestamp from the sensor will drift away from the logger, unless regularly corrected and also the data output from the sensor will relate to different times in the logger (e.g., the sensor may output anywhere within the loggers's minute interval if set to one minute output interval). More noticeable issues are that, depending on the

relative gains or losses of the two clocks that the logger will over time either receive an extra transmission from the sensor or not get a transmission from the sensor in a given period. Apart from accepting this as being inevitable the only solution to this is to get the sensor to output more frequently than you need the logger to receive data and have the logging system work with the latest transmission, but this is not always ideal or possible.

Polling the sensor for data gives full control of the timing of measurements to the logging system, as with the PWS100 it can be asked to output a message for a given time up until the instant the poll command is issued. The PWS100 processes the data in its buffer for that period and generates the message “on the fly”. Apart from needing both transmit and receive connections to the logger the only disadvantage of this technique is there may be a slight delay (typically less than one second) whilst the PWS100 prepares the message in response to the poll command.

Two simple example programs for a CR1000 Campbell Scientific datalogger. A more powerful, documented program that includes advanced setup, CRC checks can be downloaded from:

www.campbellsci.co.uk/downloads

The following is an example program for the Campbell Scientific CR1000 datalogger using automated output settings (see section 7.5.1). Note that the aliases are set for the output as defined in the program, these should be altered to suit the individual outputs selected.

```
'CR1000 Series Datalogger
'Campbell Scientific Ltd. PWS100 Present Weather Sensor
'Example of data capture in a single message output
'automatically by a sensor connected to COM1 on the logger

'Declare General Variables
Public Temp, PWS_Bytes

'Incoming PWS100 Data buffer
Public InString As String * 500

'Final PWS100 Data - define the array large enough to match the
'number of fields in the message
Public PWS100data(11)
'Define aliases so the results are easier to identify
'Need to match the fields selected in the message
Alias PWS100data(1) = MessageID
Alias PWS100data(2) = PWSID
Alias PWS100data(3) = Visibility
Alias PWS100data(4) = PWS
Alias PWS100data(5) = NWS
Alias PWS100data(6) = Intensity
Alias PWS100data(7) = Accumulation
Alias PWS100data(8) = DayCount
Alias PWS100data(9) = Hour
Alias PWS100data(10) = Minute
Alias PWS100data(11) = Second

'Declare Constants
Const STX = &H02
Const ETX = &H03

DataTable (PWS100,True,-1)
  Sample (11,PWS100data()),IEEE4
EndTable
```

```
'Main Program
BeginProg

  'Open Serial Port to the PWS100
  SerialOpen (Com1,115200,3,0,10000)

  'Commands can be included here to setup the
  'sensor if it has not been preconfigured

  Scan (60,Sec,0,0)

  'Read the data using the STX and ETX characters as delimiters
  'If a whole message is not in the serial buffer this will
  'store "NAN" in the string
  SerialInRecord(COM1,InString,STX,0,ETX,PWS_Bytes,01)
  'If a full string has been read then parse the data and store it
  If PWS_Bytes>0 Then
    SplitStr (PWS100data(),InString," ",11,0)
    CallTable PWS100
  EndIf
NextScan

EndProg
```

The following is an example program for the Campbell Scientific CR1000 datalogger using polled output settings (see Section 7.5.1).

```
'CR1000 Series Datalogger
'Campbell Scientific Ltd. PWS100 Present Weather Sensor
'Example of data capture in a single message that is polled
'for by the logger. The sensor is connected to COM1

'Declare variables
'Incoming PWS100 Data buffer
Public InString As String * 500

'Final PWS100 Data - define the array large enough to match the
'number of fields in the message
Public PWS100data(11)
'Define aliases so the results are easier to identify
'Need to match the fields selected in the message
Alias PWS100data(1) = MessageID
Alias PWS100data(2) = PWSID
Alias PWS100data(3) = Visibility
Alias PWS100data(4) = PWS
Alias PWS100data(5) = NWS
Alias PWS100data(6) = Intensity
Alias PWS100data(7) = Accumulation
Alias PWS100data(8)= DayCount
Alias PWS100data(9) = Hour
Alias PWS100data(10) = Minute
Alias PWS100data(11) = Second

'Declare Constants
Const CR = CHR(13)
Const LF = CHR(10)

DataTable (PWS100,True,-1)
  Sample (11,PWS100data(),IEEE4)
EndTable

'Main Program
BeginProg
```

```
'Open Serial Port to the PWS100
SerialOpen (Com1,115200,3,0,10000)

'Commands can be included here to setup the sensor
'if it has not been preconfigured

Scan (60,Sec,0,0)
'Poll for message 0 from the PWS100 using msend
'In this case getting a message for the last 60 s of data
'First flush the buffer
SerialFlush (Com1)
SerialOut (Com1,"msend 0 60 0" & CR,"",0,0)

'Read in the data waiting for up to two seconds
'for the response
SerialIn (InString,Com1,200,LF,2000)
'If we received something parse the data and store
If Len(InString) >0 Then
    SplitStr (PWS100data(),InString," ",11,0)
    CallTable PWS100
EndIf
NextScan
EndProg
```


Section 8. Functional Description

8.1 General

The PWS100 Present Weather Sensor is an optical sensor using the best of scatter meter and disdrometer techniques to give accurate analysis of weather conditions including precipitation classification, precipitation intensity, drop size distributions and visibility range.

Visibility is measured using the forward scatter technique, which gives an estimation of the meteorological optical range (MOR). The amount of scatter detected at the sensor heads is proportional to the visibility for small fog particles. For larger particles, which are detected as various forms of precipitation, the PWS100 is able to give estimates of visibility using its particle discrimination as a calibration factor.

Precipitation is detected using an optical technique, originally developed as a method for the measurement of the size and velocity of fine particles in sprays, which has been modified to make it applicable to the analysis of precipitation. Individual precipitation particles are analyzed using the optical arrangement described Section 8.2, *Optical Measurement*. As well as the size and velocity measurements, the instrument also looks at the structure of the signal to provide further parameters for particle classification. From the measurements, the volume of particles (or water equivalent volume in the case of snow) is calculated which gives a measurement of precipitation intensity. Drop size distributions can be determined from data collected over set periods.

8.2 Optical Measurement

8.2.1 Optical Arrangement

The optical design is such that the system outputs a number of evenly spaced horizontal light sheets that are parallel to each other in order to define a structured volume that is consistent. The two sensors are at angles of 20° to the optic axis of the light sheet generator (laser unit), one deviated through 20° in the horizontal plane, the other 20° in the vertical plane. This defines a good-sized volume in which to detect particles of all sizes and provide accurate statistical analysis of events. With the PWS100 optical arrangement good signal strength from all types of particle (e.g., drizzle, rain, snow, sleet, hail) is observed.

The laser unit, as shown in Figure 8-1, comprises a laser diode and a number of optical elements to produce the light sheet pattern as shown in Figure 8-2, which extends some distance while maintaining a parallel sheet distribution. Over the volume length there is negligible distortion to the light sheets.

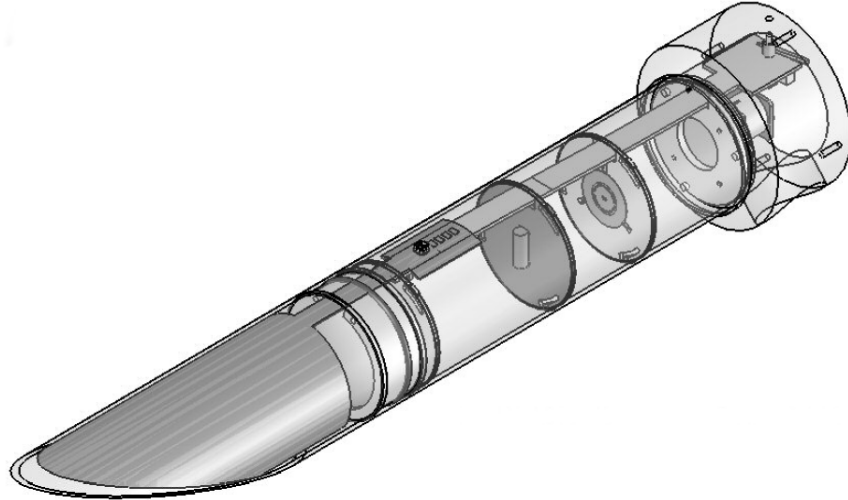


FIGURE 8-1. Laser unit

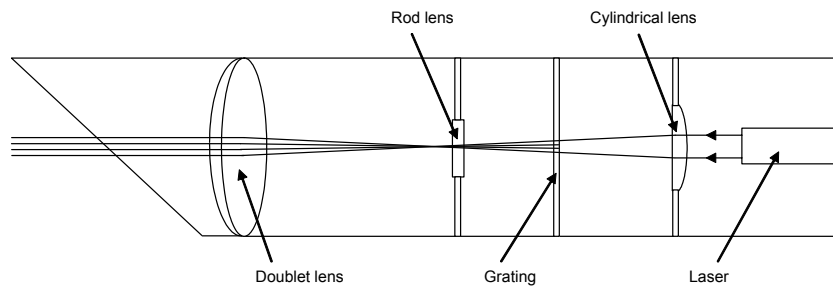


FIGURE 8-2. Laser unit showing light sheet production (not to scale)

The sensor units as shown in Figure 8-3, comprise a lens, a filter tuned to the wavelength of the laser output and a photodiode placed at the back focal length of the lens with suitable amplification electronics. This photodiode then accepts light from the detection volume over a finite range of angles as shown in Figure 8-4.

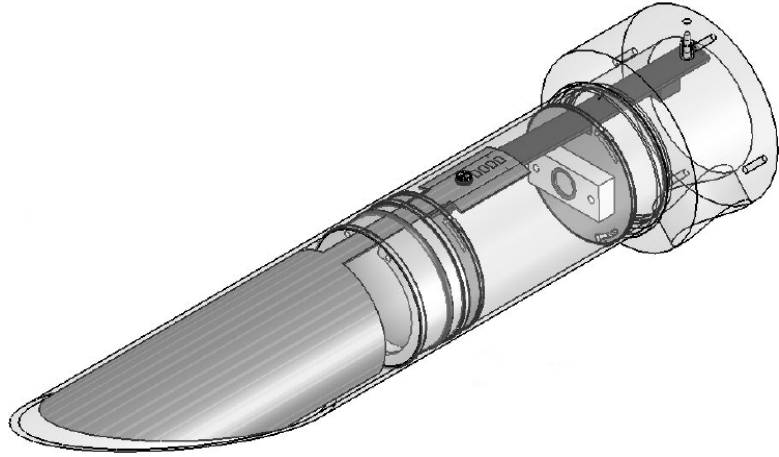


FIGURE 8-3. Sensor unit

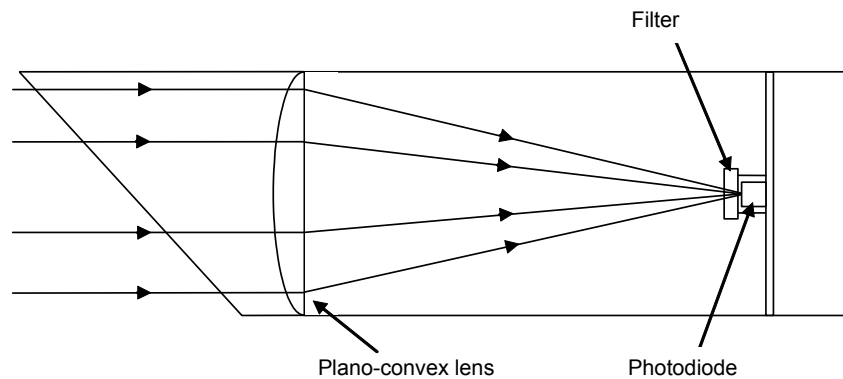


FIGURE 8-4. Sensor unit showing light path extents (not to scale)

8.3 Additional Sensor Connections

Although it is possible to use the PWS100 as a stand alone present weather sensor, its ability to distinguish particle types is improved when certain other sensors are connected to the unit. In particular a temperature and RH probe provides the system with more discriminating parameters, ensuring that solid and liquid precipitation are more clearly identified. Though general statistics would be enough on most occasions to determine particle types over minute or hour long averaging periods, individual particle analysis will benefit from these extra temperature, humidity and corresponding wet bulb temperature parameters being incorporated into the classification algorithms. The CS215-PWS temperature and relative humidity probe is available as an accessory. The CS215-PWS's cable is fitted with a LEMO connector that attaches to the PWS100.

8.3.1 Using a CS215-PWS on the PWS100

The CS215-PWS temperature and RH probe should be connected directly to one of the free SDI-12 connectors at the base of the DSP enclosure as shown in Figure 6-5. The CS215 is mounted inside a radiation shield and needs to be mounted away from the actual detection volume of the PWS100 in order to avoid any turbulence effects in the volume that could give rise to inaccuracies in the measurement of speed and size of particles. The bracket for the CS215-PWS should therefore point in the opposite direction to the mounted PWS100. Adding a CS215 improves the precipitation type algorithm by adding three further parameters, temperature, relative humidity and wet bulb temperature. Though wetbulb temperature is derived from other parameters, there is plenty of evidence showing its relationship with the precipitation type and thus it becomes a useful parameter within itself. If no CS215-PWS is connected then an internal, less accurate temperature measurement is used, and the sensor assumes the relative humidity is 100%. The removal of the CS215-PWS does not prevent the unit from working, but can lead to less accurate particle classifications.

NOTE

The CS215 should be “recalibrated” at the recommended interval, normally every year, to ensure accurate measurements from it and the PWS100. In the case of the CS215 this is most easily achieved by replacing the sensor element in situ with a new one.

8.3.2 Using Other Sensors on the PWS100

Starting from operating system version 4, the PWS100 can accept temperature and humidity values sent from the controlling system, which might have access to data from another air temperature and relative humidity sensor. This is enabled by selected the remote TRH sensor type in the configuration menu and the remote system sending the data (space separated) using the RSENSOR terminal command.

8.4 PWS100 Control Unit

The PWS100 control unit, shown in Figure 8-5 as a block diagram, is a custom designed DSP board comprising a DSP, memory, timing circuits and analogue to digital converter.

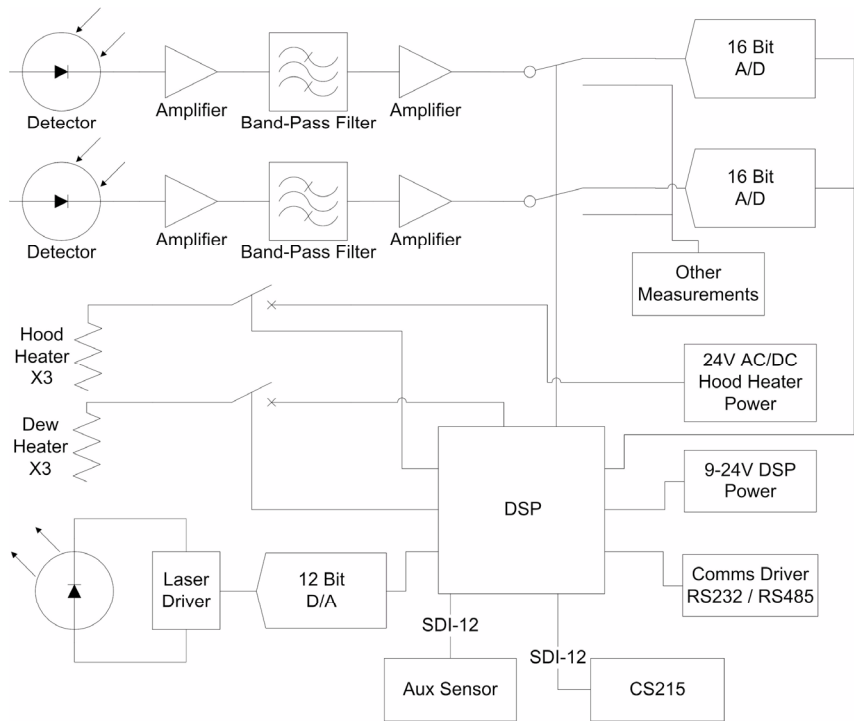


FIGURE 8-5. Block diagram of PWS100 control unit

The DSP board controls all of the functions of the system, including switching of heaters when the temperature sensors in each head pass certain thresholds, laser modulation, signal analysis and communications. The on board memory holds the program code, data tables and data for statistical manipulation.

8.5 Measurement Signal Processing

The PWS100 has two phases of operation based around a ten second cycle. The main phase is run for nine seconds out of every ten during which it continuously captures data from the optical detectors and processes the data to analyze for particles. The second phase, which runs in the remaining second is used for making measurements from other sensors both within the sensor itself and from the external sensors. Precipitation amounts and rates are corrected for the 90% particle duty cycle, whilst counts of particles are not. As a result of this ten second cycle statistical data are only updated every ten seconds.

The algorithm descriptions in this user guide give details as to how particles are detected and used to give certain output relevant to present weather monitoring.

8.6 Algorithm Description

8.6.1 Detecting and Classifying Precipitation

The PWS100 has a structured detection volume consisting of four sheets of light each 0.4 mm in depth with 0.4 mm spacing. The area of detection is approximately 40 cm² as defined by the overlap of the two detectors each of which is 20° off of the light sheet propagation axis.

Detection of precipitation is carried out in real-time. Time and frequency domain analysis of the signals from the two sensor heads is carried out to ensure all particles are detected. Time domain analysis allows quick stripping of larger particles while the frequency domain analysis picks out smaller particles using a slightly more computationally intensive routine.

Using a series of thresholds and checks precipitation signals from particles as small as 0.1 mm diameter passing through the area of detection are identified while any sources of noise or particles not passing through the defined area are discounted. A routine then strips the signal from the incoming data for each real particle passing through the defined area in order to minimize the data that is to be further processed.

When a particle passes through the four light sheets it provides a signal characteristic of the particle type and provides information on the velocity of the particle, by means of auto correlation, and size, by means of cross correlation of the two channels of data. Particles for which cross correlation could be poor (e.g., snow) may have their size measured by the analysis of particle transit time or signal amplitude (in the same way that present weather sensors without structured detection volumes measure particle size). Due to the Gaussian nature of the light sheet intensity there is more error involved in these transit time or signal amplitude measurements than those using the cross correlation which is independent of the signal intensity.

The structure of the particle is to some degree given by the analysis of the signal peak to signal pedestal ratio. The signal pedestal is found through stripping higher frequencies from the particle signal (i.e., those produced by the four light sheets) and is higher for particles with higher crystallinity and therefore more scattering sites. Particles of water have almost no pedestal compared to the peak signal value whereas snow can have large pedestals compared to the peak signal value.

Analysis of separate snow and rain/drizzle events has shown that there is very little overlap in the signal peak to pedestal peak ratio for the solid and liquid particles, though drizzle values extend further towards the snow values and snow grains extend further towards the liquid precipitation values, while the larger rain and snowflakes remain almost entirely separate. This is shown graphically in Figure 8-6 which represents two separate events one comprising snowflakes and snow grains (particle count on the left vertical axis) and one representing a mixed drizzle and rain event (particle count on the right vertical axis). This particular differentiator, only obtainable because the PWS100 has a structured detection volume, is extremely useful in the fuzzy logic processing as described below and further in Section 8.6.4.1.

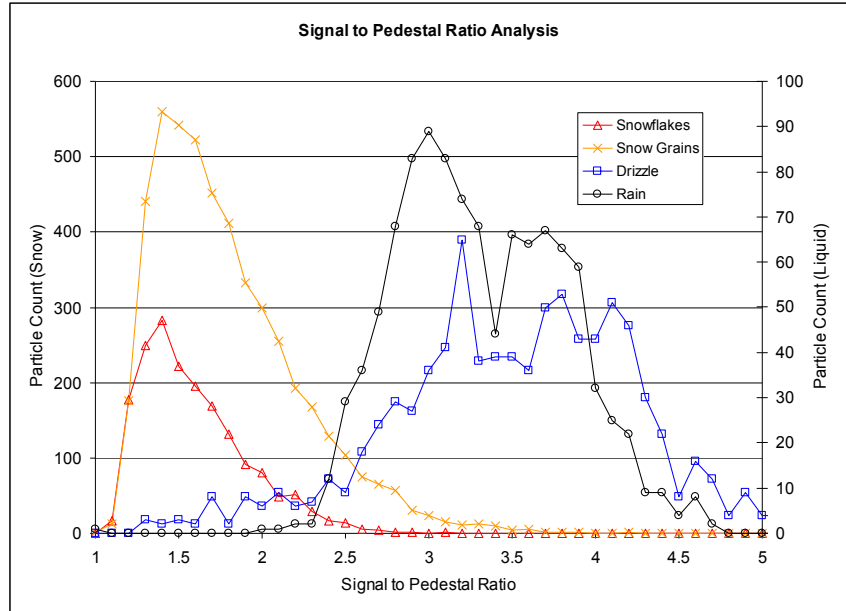


FIGURE 8-6. Signal to pedestal ratio values for different precipitation types.

The above data was collected during the sensor development. Results from production instruments will differ. In particular the optics do not allow accurate measurement of the pedestal ratio for true drizzle (particles <0.5 mm diameter).

Auxiliary data including values of temperature, relative humidity and derived wet bulb temperature are used in the analysis of particles if a CS215-PWS is connected to the PWS100. There is a complex relationship between these parameters and the types of particles that are formed; however since the PWS100 only measures point values, and the evolution of particle formation is not known, the true nature of the particle type can only be estimated from such parameters.

Processing of these data values is done by a series of fuzzy logic tables, some of which provide certain pure logical differentiators such as the size bounds for drizzle and rain, snow grains and snowflakes and ice pellets and hail. Through the use of the parameters determined from the PWS100 and CS215-PWS the fuzzy logic tables provide a means of determining particle type. The general parameters thus analyzed in this fuzzy logic processing are size versus velocity, signal peak to signal pedestal ratio, temperature, relative humidity and wet bulb temperature.

Each particle type from drizzle, freezing drizzle, rain, freezing rain, snow grains, snowflakes, ice pellets, hail and graupel have a set of fuzzy logic tables covering the above parameters. The size versus velocity tables are based on values derived from previous studies either by Campbell Scientific Ltd. or other research institutes and organizations (see Ellis R A et al, 2006, New Laser Technology to Determine Present Weather Parameters, Meas. Sci. Technol., 17 1715-1722). The fuzzy part of these tables gives a reduced fuzzy logic score off of the defined size versus velocity curve. These values then overlap on the various tables such that a particle could be assigned a

size/velocity value of 0 for drizzle, 0.4 for rain, 0.3 for snow flakes, 0.4 for graupel, 0.1 for ice pellet etc. The fuzzy value assigned is always between 0 and 1. Since certain particle types are mutually exclusive then some types will be assigned 0 based on pure logic (e.g., a particle > 0.5 mm diameter will have a rain value that can be >0 whereas the drizzle value for this type will always be 0).

Once each possible particle type has been assigned a fuzzy logic value for all of the parameters the values are multiplied for each particle to give 9 particle type scores between 0 and 1. The highest value is more likely to be the correct particle and so this type is assigned to the individual particle. If two values are the same then the particle is of unknown type and is assigned a type as such.

Over the measurement period there are likely to be a number of particles falling through the detection volume. To define a precipitation type the individual particles are binned into 11 classes. 9 specific types, 1 unknown and 1 error.

The unknown classification is used for particles which appeared to have been measured correctly but either have fuzzy logic classifications that are not unique OR fall outside the realms of possibility for natural particles (e.g., they are measuring as travelling too fast for their size, or perhaps a particle appears to be classified as a snow flake at very high temperatures). Measurements where two particles have overlapped in the optical path are also classified as unknown. Unknown particles' size and speeds measurements are excluded from statistical calculations, but as at least one particle has definitely been detected the rainfall intensity and total measurements are corrected by adding one extra particle with the characteristics of the average of the good particles falling at that time.

The error classification is used for particles where various quality checks determine the measurement to be suspect (e.g., a particle is moving upwards, the signal to noise ratio is too large, the particle has fallen through the edge of the measurement zone or the measurements are off scale in some way). In general particles with the erroneous classification are not likely to be real or should not be counted (upwards moving for instance) so these are not included in any statistics nor is any correction made to rainfall rates or totals.

During normal measurements a small fraction of unknown or error particles will be counted. There will always be a small fraction of error particles for instance which fall through the edge of the optical path. The proportions of these particles can increase with the type of precipitation and weather conditions (e.g., under heavy rainfall conditions both more unknown and error particles will be counted). This is due to a larger proportion of particles clipping the edge of the optical path (as they are larger) and an increased risk that two particles will pass through the optical path at the same time. Similarly where there are very windy conditions more particles will not fall through all four light sheets so cannot be properly measured.

8.6.2 Precipitation Intensity

Precipitation intensity calculations are possible because of the instruments accurate analysis of particle size. Over the defined period of time, the volume of all particles is summed and precipitation rate output is then given as an equivalent mm h^{-1} measurement.

The PWS100 has exceptional sensitivity to the start and end of precipitation events.

NOTE

To avoid falsely reporting precipitation due to insects etc., the sensor will not report the detection of particles at the start of an event until a threshold of ~3 particles per minute is exceeded.

Measurements of both intensity and accumulation are however subject to some assumptions as is common with most optical rain detectors. These are that all rain particles are distorted in a similar way as they fall and also that there is a defined cut-off area for the optical sampling volume. Those assumptions break down in windy conditions, when accuracy can be increasingly degraded. During high winds from critical directions the optical housing or mounting poles may also create shadows causing under-reading.

In terms of an intensity output through the SYNOP and METAR and NWS codes the intensity is calculated from the precipitation rate over the measurement period. As heavy drizzle can give less precipitation accumulation (and thus precipitation rate) than moderate rain for example, it is necessary to observe the precipitation rate and also take into consideration the particle type distribution of those particles. Table 8-1 is a WMO standard table of intensity definitions that define the intensity class of different types of precipitation.

The PWS100 defines various intensity classes for all types and combination of types of precipitation and these are shown fully in Appendix A. Although the WMO guidelines have been followed as far as possible with these intensity ranges some have been added since the WMO guidelines do not cover all possible eventualities.

Variable	Range	Intensity Class
Drizzle	$i < 0.1 \text{ mmh}^{-1}$	Light
	$0.1 \text{ mmh}^{-1} < i < 0.5 \text{ mmh}^{-1}$	Moderate
	$i > 0.5 \text{ mmh}^{-1}$	Heavy
Rain	$i < 2.5 \text{ mmh}^{-1}$	Light
	$2.5 \text{ mmh}^{-1} < i < 10.0 \text{ mmh}^{-1}$	Moderate
	$i > 10.0 \text{ mmh}^{-1}$	Heavy
Snow	$i < 1.0 \text{ mmh}^{-1}$	Light
	$1.0 \text{ mmh}^{-1} < i < 5.0 \text{ mmh}^{-1}$	Moderate
	$i > 5.0 \text{ mmh}^{-1}$	Heavy

8.6.3 Precipitation Accumulation

Precipitation accumulation is calculated in millimeters over a specified time period by summing the volume of all precipitation particles falling through the defined volume. As mentioned above, as with most other similar optical detectors, the PWS100 will be subjected to increased error and bias in windy conditions.

Accumulations of snow are based on the water content of those particles. The snow water content is a user definable parameter in the instrument, see Section 7.4.5. The accumulation given will be the water equivalent depth and not the snow depth which requires further knowledge of packing structures, wind effects, ground temperature, ground type and a myriad of other parameters related to snow depth. The ratio of water accumulation to snow depth will be lower than the snow water content figure and is typically in the order of 0.1 (i.e., the snow pack is 10 times deeper than the water accumulation of the melted snow pack). Local conditions will dictate the values to use and since these will be different for every location it is not possible to give accurate snow depth figures with the PWS100. Thus only accurate snow water content values for the particles falling through the detection volume are given.

8.6.4 Present Weather

Present weather covers precipitation type analysis and visibility in the PWS100 algorithms. The PWS has separate routines for these two functions along with various housekeeping tasks to ensure that the output is as accurate as possible.

8.6.4.1 Precipitation Types

The precipitation types identified are drizzle, freezing drizzle, rain, freezing rain, snow grains, snow flakes, ice pellets, hail and graupel. A mixture of these types and intensity of these types gives an array of outputs that have been assigned codes by the WMO. These are defined as the WMO SYNOP codes (4680, W_aW_a). See Appendix A for the code table. Each particle is assigned a type from analysis of particle size, velocity, signal structure and inclusion of any other weather parameters from auxiliary instruments connected to the PWS100. The CS215-PWS provides three additional parameters, temperature, relative humidity and wetbulb temperature. Fuzzy logic is used to define particle type from these values as this provides the best estimate of a particle type, allowing for grey boundaries in terms of size and velocity measurements for example, which may help to determine particle types during windy conditions. Standard logic can be flawed when incorporating a number of different parameters from the signal and auxiliary instruments as the boundaries have to be effectively black and white allowing for no margin of error, this is highlighted by the use of temperature matrices on certain instruments which have fixed boundaries between snow and rain. With such non-fuzzy logic instruments all particles above a set temperature are classified as rain, drizzle or unknown and below that temperature have to be snow or unknown (the unknown classification sometimes being used if other sensor values are contradictory to the temperature measurement – for example a wetness grid on the instrument remains dry). The PWS100 clearly does not have such limitations and can cope with a wider variation in meteorological parameters within its classification routines.

8.6.4.2 Visibility Types

Also by using the WMO SYNOP code table (4680) a visibility type can be defined. These types cover mist, fog, haze and smoke. See Appendix A for details.

8.6.4.3 Weather Classes

Continuous and showers or intermittent classes can be defined when analyzing the time series of code output given by the PWS100 over a given time period. These are again given specific codes in the WMO 4680 table. Since the PWS100 stores historical data it can give codes relating to the conditions during the previous hour if no event is currently taking place. Again these events have specific WMO 4680 codes.

8.6.4.4 Weather Code Selection

Weather code selection is based on a history of particle types determined for each particle falling through the detection volume and classified by the instrument. A table of particle types can be called from the history over a user specified period of time (or after a specific amount of time if the instrument runs in an automated mode). This table will consist of 11 numbers, one for each particle type as defined above, one for unknown type and one for errors observed from the signal (e.g., a size out of the range specified for the instrument). Logical processing is then used to determine the most prevalent particle type or to classify mixed types if present. No precipitation and unknown precipitation outputs are also possible. Unknown precipitation is classified if a certain number of the detected particles are individually classified as unknown types.

Precipitation intensity is also given for the period specified. Output can then be given as ASCII (e.g., heavy snow) or as any of the set output standard codes, such as WMO SYNOP (WW73), METAR (+SN) and NWS (S+). Note that for some output types, certain particle types are not given an individual code. In these cases the most appropriate classification is given. METAR can support 3 types in one output, NWS output can be given with multiple codes if necessary and the WMO code has mixed types incorporated into its 80 specific codes (00 to 99 available but 20 codes reserved for future allocation).

Although the PWS100 detects and classifies graupel (heavily rimed precipitation particles), for the purposes of WMO, 4680 coding graupel is classed as snow as there is no classification codes for this type of particle. The type classification output will still reflect the number of particles identified as snow grains, snowflakes and graupel. The PWS100 will output snow grains and snow flakes (snow) as separate outputs as per the WMO, 4680 code tables if these are dominant.

8.6.5 Visibility

Visibility as defined in the British Standard *'BS 185-15:1972 Glossary of Aeronautical and Astronautical Terms – Section 15 : Meteorology'* is “the greatest distance at which an object of specified characteristics can be seen and identified. At night, lights are observed and an equivalent day-light visibility is deduced”. Because of the human perception of the environment, visibility is a subjective measurement dependant on the contrast response of the individual human eye. Therefore no instrument can truly measure visibility. It is only

possible to measure the immediate surroundings, selecting appropriate parameters, which can be related to the environmental air quality and human visual perception.

The PWS100 has the ability to define an obscurant type and determine a visibility value based on the amount of particle scatter calibrated against the type of particles in the detection volume. The size distribution can also be used to calibrate the visibility value if such a distribution exists in the present weather event (i.e., available when the obscurant is drizzle, snow or some other large particle but not when fog or mist as particle sizes are too small to enable the distribution to be determined). When the obscurant consists of fog, mist or some other sub-drizzle sized particles then no visibility range correction is required.

The $\pm 10\%$ accuracy range of the visibility output from the PWS100 is from 0 to 10,000 m with a 20,000 m cap on the total range. These accuracy figures are quoted for fog/rain conditions. Accuracy will be lower in conditions of freezing precipitation and other conditions such as dust.

As with any instrument sampling obscurants over a small portion of the range given (including transmissometers, forward scatter meters and backscatter meters) the output is only accurate if the scattering medium is uniformly dense over that given range. Some time averaging may lead to better agreement with a human observer during inconsistent events and may avoid highly variable output not consistent with overall events. In order to reduce noise levels the visibility measurements (raw voltage readings) are taken for 9 out of 10 seconds of time measurement interval and then averaged. Visibility range (in meters) is then processed in the statistical output over the required period.

Any accuracy figures quoted by any manufacturer of automated visibility sensors will consider only uniform events over the range given, even then differences in obscurant particle observed (including but not limited to particle density, surface roughness and optical scatter mechanism) can lead to $\pm 20\%$ errors (UK Met. Office studies). Only by determining particle type accurately and having the added information of particle size distribution can these errors during uniform events be minimised. The PWS100 is capable of determining this extra information and therefore giving the most accurate visibility estimates in uniform events.

Currently the PWS100 implements two separate calibrations for fog and rain events and interpolates between them depending on the rainfall intensity. In the future other calibrations will be added to give increase accuracy in other types of events.

8.7 Applications

Because of the amount of information available from the sensor it is capable of giving detailed analysis of weather conditions suitable for meteorological, aeronautical, agricultural and transportation applications. Measurements of visibility are applicable for aviation or roadside weather monitoring. Drop size and velocity distributions can be used in the analysis of soil erosion, flood prediction or as a calibration for radar instruments in meteorological studies.

8.8 Internal Monitoring

The PWS100 has a number of internal checks including temperature analysis inside each head unit of the sensor, temperature check at the laser, dirty window contamination checks and voltage monitoring (particularly for the laser source). These can be selected for output with the weather data; see Section 7.4 for details.

Section 9. Maintenance

9.1 General

The PWS100 Present Weather Sensor is a robust instrument that will provide years of uninterrupted weather monitoring. Calibration of the instrument is carried out at the factory and can be redone easily on site with the optional calibration kit or carried out by Campbell Scientific if required. Only general cleaning of the lenses is required to keep the sensor working efficiently.

9.2 Cleaning

Cleaning of the PWS100 will be required from time to time to ensure that the lenses are free from contaminants. The frequency of required cleaning depends on the exposure of the instrument to such contaminants. This will vary depending on the site location. The PWS100 is capable of self diagnosing dirty lenses and will indicate in its output when the lenses are contaminated to such a degree that its particle measurements may be affected.

Campbell Scientific suggests 6 monthly intervals for locations not prone to contaminants and monthly intervals for those prone to contamination (roadside or airport use). In some cases more frequent cleaning may be required where there are high levels of contaminants and high dependency on the instrument output.

CAUTION

If the lenses require cleaning, it is very important that only a proper lens cloth or lens tissue be used. The use of inappropriate materials to clean the lenses can permanently damage or reduce the effectiveness of the lenses leading to errors in measurement of precipitation and visibility.

The baffle in the front of the laser head and lower head housing are easily removed by unscrewing the retaining screw and carefully removing it, ensuring that the nylon washer remains with the screw, as shown in Figure 9-1.

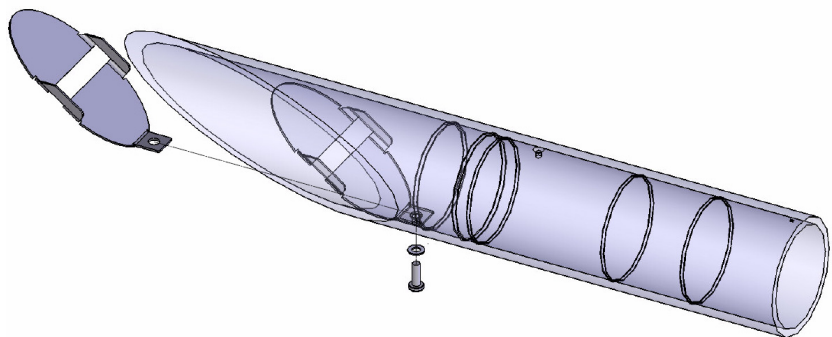


FIGURE 9-1. Baffle removal and fitting

It is advisable to use airduster to blow any loose dust and dirt from the lenses as a first step. Using a lint free lens cloth or lens tissue impregnated with a small amount of isopropyl alcohol solvent, clean the lens surface by dragging the cloth across the lens surface being careful not to apply excessive pressure. Excessive pressure may lead to some types of contaminant scratching the lens surface. Over time such scratches can lead to reduced sensor accuracy.

Once clean, replace the baffle by carefully slotting it into position, being careful not to scratch the paint coating or damage any heater element. Lock the baffle into place using the retaining screw, ensuring that the nylon washer is in place.

9.3 Calibration

The PWS100 is fully calibrated before leaving the factory. This calibration covers the mechanical arrangement of the system (including detection volume) as well as setting laser power and other electronic settings. The system is self regulating; however, it is recommended that the PWS100 is calibrated every two years. If the calibration process is unable to bring it into specification, a warning LED will flash on the PWC100 calibrator. The PWS100 should then be sent to the factory.

The detection volume is calibrated using the PWC100 calibrator. The particle analysis is done using the unit with a rotating disc which has an embedded high precision ball lens. The refractive index of this ball lens is taken into consideration when calibrating the unit. The disc is rotated at a known speed which provides a known velocity component to the calibration and the refraction from the known diameter ball lens to the two detectors provides a size calibration. Visibility calibration is carried out using the second fixture which comprises a material with known scatter parameters. Light impenetrable sensor blocks are used to determine sensor offset and will need to be placed in the sensor heads when required. The unit will then determine the calibration factors and indicate if there is any problem with the optical or mechanical arrangement of the present weather sensor. Laser power can be monitored using a commercial laser power meter.

Please refer to the PWC100 calibrator manual for further details of operation of the PWC100 calibrator and the procedure for calibration of the PWS100.

Section 10. Troubleshooting

10.1 Introduction

If your PWS100 seems to be operating incorrectly, there are a number of checks you can make to isolate the problem. These checks may enable you to solve the problem or at least provide vital basic information for one of our engineers should you need to contact Campbell Scientific.

10.2 Possible Problems

The following problems can be encountered. Following the steps laid out should enable you to resolve these problems quickly and easily.

10.2.1 No response from PWS100

The following steps should be carried out to try to diagnose the problem:

Check the physical power connection. Attempt to connect again.

Check the communication cable. If the cables are secure but there is still no response, remove and refit the cables. Attempt to connect again.

Check the baud rate settings on the DSP board. If the baud rate setting is incorrect or mismatched from the terminal used to connect to the PWS adjust settings accordingly. Attempt to connect again.

Ensure that the correct *Pws_Id* value is being used. Also ensure that if a password is set then the correct password is being entered for the OPEN command; e.g.,

```
OPEN Pws_Id Password↵
```

Attempt to connect again.

If the previous steps have failed then a hardware reset can be carried out (see Section 6.3.10, *Load Factory Defaults*). Attempt to connect again.

If the sensor still does not respond contact Campbell Scientific.

10.2.2 PWS100 responds but no data output given

Check the PWS100 settings by entering the command mode and using the MSET function. Ensure that at least one message is set and that the interval is appropriate.

If viewing the data using Hyperterminal or similar, ensure that the message mode is set to 'Store & Output'.

10.2.3 Ice has formed in the end of the hoods

The heaters may not be working. Enter the command mode of the sensor, run DIAGSET with the following command:

```
DIAGSET 10 102
```

Ensure that the laser hood temperature (first value following the 9000 and 0 output) is above zero. If it is not then it is possible that the heaters may not be active or may need servicing.

To check the settings of the hood heaters use the SETCONFIG command. Ensure that the fifth value is between 10 and 50 (temperature setting). If this is set to 0 then the hood heaters are off and should be set between 10 and 50. If the hood heaters are on but ice is still present set the hood heaters to a higher temperature. If this does not clear the ice then the hood heaters may have failed. Contact Campbell Scientific in this instance.

If the heater settings are correct and only some of the hoods are clear and others not then it is possible that a single heater may have failed. Contact Campbell Scientific if the problem persists.

10.2.4 The visibility output is clearly in error

Ensure that the sensor is placed in a location free from obstructions which may cause erroneous scatter into the sensors. Following the installation instructions in this manual is sufficient.

If the sensor still gives erroneous output then it is possible that the lenses have become contaminated. Refer to Section 9.2 for cleaning the lenses.

10.2.5 The sensor does not detect particles during a precipitation event

It is possible that the lenses have become overly contaminated. Refer to Section 9.2 for cleaning the lenses. If there is no contamination, the laser may have failed, check with a commercial power meter if available. If there is no contamination and the laser output is within accepted limits, then hardware reset the sensor (see Section 6.3.10, *Load Factory Defaults*).

NOTE

The PWS100 samples only a small area and in events where precipitation is falling but with high spatial separation then there may be periods where no particles fall through the volume but an observer looking at a larger area observes some particles.

10.2.6 The sensor detects particles when there are none present

Although the sensor uses sophisticated processing routines to determine particle types and eliminate false alarms, under certain conditions the sensor may report the incidence of particles in the detection volume when an observer does not. There are possibly several reasons for this. Firstly it should be

checked that there are no spider's webs on the instrument, especially in and around the detection volume and hoods of the unit. If spider's webs are present they should be removed as they can collect condensed water vapor to form droplets on the strands which may give rise to spurious signals. Secondly flying insects may cause spurious signals; however these are likely to be disregarded by the instrument and are unlikely to lead to classification of precipitation. If insects become a problem then it may be necessary to use insect deterrents or re-site the instrument away from any areas where insects gather.

If insects are a persistent problem two other techniques can be used to dissuade them for living on or near the sensor. One is to spray the baffle plates and end of the sensor with a waterproof insecticide, taking great care not to spray the lenses. The insecticide may need to be reapplied on a regular basis. The other technique is to turn on the hood heaters and adjust the temperature to a high level which can deter some species. If doing this in summer months it is advisable to turn off the dew heaters to prevent excess heat building up inside the sensor housings.

10.2.7 The OS update did not work

Ensure that the upload is not being carried out with an NL100 network link interface in the communications pathway as this will prevent the OS update from working due to the NL100 being incompatible with the Xmodem protocol for the OS download. In such an instance it will be necessary to connect directly to the PWS100 with, for example, a laptop computer.

If the OS update fails and there is no physical barrier for the upload, then check the speed of the communications link. With slow links the system may drop the connection causing the upload to fail. In this instance try the upload again, possibly at a time when the communications link may run faster.

If the OS update still fails after checking the above then the OS file may be corrupt and a new file may be required. Contact Campbell Scientific if this is the case.

Appendix A. PWS100 Output Codes

The codes that are used in the PWS100 are taken from WMO Manual on Codes 1995 edition, Suppl. No. 5 (VIII.2005), Rec. 5 (CBS-XIII). Table A-1 shows the weather types available as output from the PWS100. Codes in italics are not implemented. Codes in bold are extensions of the WMO 4680 table to allow single Metar code output for different output combinations.

The table contains new intensity limits for mixed events which are explained subsequent to Table A-1 and shown in Tables A-3 to A-8.

WMO codes 20 to 25 are used to report precipitation, fog or thunderstorms observed during the preceding hour but not at the time of observation (the time of observation in the case of the automated PWS100 is the latest set message period and so could be 1 minute, 1 hour or any user defined interval, the preceding hour being the hour before this period. Hence if 1 hour message intervals are set the preceding hour is from 2 hours ago to 1 hour ago. If 1 minute message intervals are set then the preceding hour is from 1 hour 1 minute ago to 1 minute ago. All other codes are for precipitation, fog or thunderstorms observed during the latest observation period.

NWS codes shown are used with an intensity indicator '+' for heavy, '-' for light and no indicator for moderate. For example 'R+' means heavy rain and 'S' means moderate snow.

WMO METAR codes (Code Table 4678) include a code for the weather at or near the station of significance to the aeronautical operations. The PWS100 being a sample based instrument cannot detect precipitation not at the site and so such codes cannot be given by the instrument. Some other codes such as those for dust devils and volcanic ash are not covered by the PWS100 METAR output. The METAR codes shown are used with an intensity indicator '+' for heavy, '-' for light and no indicator for moderate. For example '+RA' means heavy rain and 'RASN' means moderate mixed rain and snow. Where there are mixed events, the order of the codes output indicates the prevalence of the components (most prevalent is listed first). When no precipitation is detected, NSW is output for the METAR code.

The table below indicates some of the more common METAR codes the sensor can output, however in accordance with the standards, the sensor will output codes with up to three different precipitation types in one message if those types are detected and are above the mixed event thresholds (see Section 7.4.5).

TABLE A-1. PWS100 output codes.						
Weather Type	WMO 4680 Code	METAR 4678 Code	NWS Single Code	NWS Multiple Code	Intensity Limits mmh ⁻¹	Particle Size (mm) or Range (km) Limit
No significant weather observed	00	NP	C	C	0	-

Appendix A. PWS100 Output Codes

<i>Clouds generally dissolving or becoming less developed during the past hour</i>	01	-	-	-	-	-
<i>State of sky on the whole unchanged during the past hour</i>	02	-	-	-	-	-
<i>Clouds generally forming or developing during past hour</i>	03	-	-	-	-	-
Haze or smoke, or dust in suspension in the air, visibility equal to, or greater than, 1 km	04	HZ / FU / VA / DU	-	-	-	≥1 km
Haze or smoke, or dust in suspension in the air, visibility less than 1 km	05	HZ / FU / VA / DU	-	-	-	<1 km
<i>Reserved</i>	<i>06-09</i>	-	-	-	-	-
Mist	10	BR	-	-	-	1 km<r≤10 km
<i>Diamond dust</i>	<i>11</i>	<i>IC</i>	<i>IC</i>	<i>IC</i>	-	<i><0.1 mm</i>
<i>Distant lightning</i>	<i>12</i>	-	-	-	-	-
<i>Reserved</i>	<i>13-17</i>	-	-	-	-	-
<i>Squalls</i>	<i>18</i>	<i>SQ</i>	-	-	-	-
<i>Reserved</i>	<i>19</i>	-	-	-	-	-
Fog	20	-	-	-	-	≤1 km
PRECIPITATION	21	-	-	-	No Limit	-
Drizzle (not freezing) or snow grains	22	-	-	-	No Limit	≤0.5 mm
Rain (not freezing)	23	-	-	-	No Limit	>0.5 mm
Snow	24	-	-	-	No Limit	>0.5 mm
Freezing rain or freezing drizzle	25	-	-	-	No Limit	-
<i>Thunderstorm (with or without precipitation)</i>	<i>26</i>	-	-	-	-	-
<i>BLOWING OR DRIFTING SNOW OR SAND</i>	<i>27</i>	<i>DRSA / BLSA / DRSN / BLSN</i>	-	-	-	-
<i>Blowing or drifting snow or sand, visibility equal to, or greater than, 1 km</i>	<i>28</i>	<i>DRSA / BLSA / DRSN / BLSN</i>	-	-	-	-

<i>Blowing or drifting snow or sand, visibility less than 1 km</i>	29	<i>DRSA / BLSA / DRSN / BLSN</i>	-	-	-	-
FOG	30	FG	-	-	-	≤1 km
Fog or ice fog, in patches	31	BCFG	-	-	-	≤1 km
Fog or ice fog, has become thinner during the past hour	32	FG	-	-	-	≤1 km
Fog or ice fog, no appreciable change during the past hour	33	FG	-	-	-	≤1 km
Fog or ice fog, has begun or become thicker during the past hour	34	FG	-	-	-	≤1 km
<i>Fog, depositing rime</i>	35	<i>FZFG</i>	-	-	-	≤1 km
<i>Reserved</i>	36-39	-	-	-	-	-
PRECIPITATION	40	UP	P	P	No Limit	-
Precipitation, slight or moderate ²	41	-UP / UP	P- / P	P- / P	$i < 6.1^4$	-
Precipitation, slight	41	-UP	P-	P-	$i < 1^4$	-
Precipitation, moderate	41	UP	P	P	$1 \leq i < 6.1^4$	-
Precipitation, heavy	42	+UP	P+	P+	$i \geq 6.1^4$	-
Liquid precipitation, slight or moderate ²	43	-UP / UP	P- / P	P- / P	$i < 5.3^4$	-
Liquid precipitation, slight	43	-UP	P-	P-	$i < 1.3^4$	-
Liquid precipitation, moderate	43	UP	P	P	$1.3 \leq i < 5.3^4$	-
Liquid precipitation, heavy	44	+UP	P+	P+	$i \geq 5.3^4$	-
Solid precipitation, slight or moderate ²	45	-UP / UP	P- / P	P- / P	$i < 6.7^4$	-
Solid precipitation, slight	45	-UP	P-	P-	$i < 1.5^4$	-
Solid precipitation, moderate	45	UP	P	P	$1.5 \leq i < 6.7^4$	-
Solid precipitation, heavy	46	+UP	P+	P+	$i \geq 6.7^4$	-

Appendix A. PWS100 Output Codes

Freezing precipitation, slight or moderate ²	47	-UP / UP	P- / P	P- / P	$i < 5.3^4$	-
Freezing precipitation, slight	47	-UP	P-	P-	$i < 1.3^4$	-
Freezing precipitation, moderate	47	UP	P	P	$1.3 \leq i < 5.3^4$	-
Freezing precipitation, heavy	48	+UP	P+	P+	$i \geq 5.3^4$	-
<i>Reserved</i>	<i>49</i>	-	-	-	-	-
DRIZZLE	50	DZ	L	L	No Limit	≤ 0.5 mm
Drizzle, not freezing, slight	51	-DZ	L-	L-	$i < 0.1$	≤ 0.5 mm
Drizzle, not freezing, moderate	52	DZ	L	L	$0.1 \leq i < 0.5$	≤ 0.5 mm
Drizzle, not freezing, heavy	53	+DZ	L+	L+	$i \geq 0.5$	≤ 0.5 mm
Drizzle, freezing, slight	54	-FZDZ	ZL-	ZL-	$i < 0.1$	≤ 0.5 mm
Drizzle, freezing, moderate	55	FZDZ	ZL	ZL	$0.1 \leq i < 0.5$	≤ 0.5 mm
Drizzle, freezing, heavy	56	+FZDZ	ZL+	ZL+	$i \geq 0.5$	≤ 0.5 mm
Drizzle and rain, light	57	-RADZ	P-	RL-	$i < 1.3^4$	-
Drizzle and rain, moderate or heavy ²	58	RADZ / +RADZ	P / P+	RL / RL+	$i \geq 1.3^4$	-
Drizzle and rain, moderate	58	RADZ	P	RL	$1.3 \leq i < 5.3^4$	-
Drizzle and rain, heavy	58	+RADZ	P+	RL+	$i \geq 5.3^4$	-
<i>Reserved</i>	<i>59</i>	-	-	-	-	-
RAIN	60	RA	R	R	No Limit	> 0.5 mm
Rain, light	61	-RA	R-	R-	$i < 2.5$	> 0.5 mm
Rain, moderate	62	RA	R	R	$2.5 \leq i < 10.0$	> 0.5 mm
Rain, heavy	63	+RA	R+	R+	$i \geq 10.0$	> 0.5 mm
Rain, freezing, light	64	-FZRA	ZR-	ZR-	$i < 2.5$	> 0.5 mm
Rain, freezing, moderate	65	FZRA	ZR	ZR	$2.5 \leq i < 10.0$	> 0.5 mm
Rain, freezing, heavy	66	+FZRA	ZR+	ZR+	$i \geq 10.0$	> 0.5 mm
Rain (or drizzle) and snow, light ²	67	-SNRA / -SNDZ	P-	SR- / SL-	-	-

Rain and snow, light	67	-SNRA	P-	SR-	$i < 1.8^4$	-
Drizzle and snow, light	67	-SNDZ	P-	SL-	$i < 0.6^4$	-
Rain, drizzle and snow, light	67	-SNRADZ	P-	SRL-	$i < 1.2^4$	-
Rain (or drizzle) and snow, moderate or heavy ²	68	SNRA / +SNRA / SNDZ / +SNDZ	P / P+	SR / SR+ / SL / SL+	-	-
Rain and snow, moderate	68	SNRA	P	SR	$1.8 \leq i < 7.5^4$	-
Rain and snow, heavy	68	+SNRA	P+	SR+	$i \geq 7.5^4$	-
Drizzle and snow, moderate	68	SNDZ	P	SL	$0.6 \leq i < 2.8^4$	-
Drizzle and snow, heavy	68	+SNDZ	P+	SL+	$i \geq 2.8^4$	-
Rain, drizzle and snow, moderate	68	SNRADZ	P	SRL	$1.2 \leq i < 5.2^4$	-
Rain, drizzle and snow, heavy	68	+SNRADZ	P+	SRL+	$i \geq 5.2^4$	-
<i>Reserved</i>	<i>69</i>	-	-	-	-	-
SNOW	70	SN	S	S	No Limit	>0.5 mm
Snow, light	71	-SN	S-	S-	$i < 1.0$	>0.5 mm
Snow, moderate	72	SN	S	S	$1.0 \leq i < 5.0$	>0.5 mm
Snow, heavy	73	+SN	S+	S+	$i \geq 5.0$	>0.5 mm
Ice pellets, light	74	-PL	IP-	IP-	$i < 1.0$	≤ 0.5 mm
Ice pellets, moderate	75	PL	IP	IP	$1.0 \leq i < 5.0$	≤ 0.5 mm
Ice pellets, heavy	76	+PL	IP+	IP+	$i \geq 5.0$	≤ 0.5 mm
Snow grains	77	SG	SG	SG	No Limit	≤ 0.5 mm ³
<i>Ice crystals</i>	<i>78</i>	<i>IC</i>	<i>IC</i>	<i>IC</i>	<i>No Limit</i>	<i>< 0.1</i> mm ³
<i>Reserved</i>	<i>79</i>	-	-	-	-	-
SHOWERS OR INTERMITTENT PRECIPITATION ¹	80	SHUP	P	P	No Limit	-
Rain showers, light ¹	81	-SHRA	R-	R-	$i < 2.5$	>0.5 mm
Rain showers, moderate ¹	82	SHRA	R	R	$2.5 \leq i < 10.0$	>0.5 mm
Rain showers, heavy ¹	83	+SHRA	R+	R+	$10.0 \leq i < 50.0$	>0.5 mm
Rain showers, violent ¹	84	+SHRA	R+	R+	$i \geq 50.0$	>0.5 mm
Snow showers, light ¹	85	-SHSN	S-	S-	$i < 1.0$	>0.5 mm

Appendix A. PWS100 Output Codes

Snow showers, moderate ¹	86	SHSN	S	S	1.0≤i<5.0	>0.5 mm
Snow showers, heavy ¹	87	+SHSN	S+	S+	i≥5.0	>0.5 mm
<i>Reserved</i>	88	-	-	-	-	-
Showers of hail, with or without rain or rain and snow mixed, not associated with thunder ^{1,5}	89	SHGR	A	A	No Limit	>0.5 mm
<i>THUNDERSTORM</i>	90	<i>TS</i>	-	-	-	-
<i>Thunderstorm, slight or moderate, with no precipitation</i>	91	<i>-TS / TS</i>	-	-	-	-
<i>Thunderstorm, slight or moderate, with rain showers and/or snow showers</i>	92	<i>-TS SHRA / TS SHRA / -TS SHSN / TS SHSN / -TS SHSNRA / TS SHSNRA</i>	-	-	-	-
<i>Thunderstorm, slight or moderate, with hail</i>	93	<i>-TSGR / TSGR</i>	-	-	-	>0.5 mm
<i>Thunderstorm, heavy, with no precipitation</i>	94	<i>+TS</i>	-	-	-	-
<i>Thunderstorm, heavy, with rain showers and/or snow showers</i>	95	<i>+TS SHRA / +TS SHSN / +TS SHSNRA</i>	-	-	-	-
<i>Thunderstorm, heavy, with hail</i>	96	<i>+TSGR</i>	-	-	-	>0.5 mm
<i>Reserved</i>	97-98	-	-	-	-	-
<i>Tornado</i>	99	<i>FC</i>	-	-	-	-

¹ Reporting showers: The PWS100 does not presently report showers though this is due to be added to a future operating system once a standard for reporting showers using automated instrumentation has been properly defined by the WMO.

² The PWS100 uses the separated definitions for these outputs (see the bold entries directly below the entry identified). The same WMO code will be output but a variation for the METAR and NWS codes may be observed.

³ These values are not from WMO documents.

⁴ Values for these events, where there are a mixture of particle types, are ill defined in WMO documents. The details from the WMO documents and the implementation in the PWS100 is described further below.

⁵ WMO code 89 is used to indicate a hail event as there is no other WMO code of automatic stations that indicates hail. Like other present weather sensors, this code is output when hail is detected, but there is no determination of whether this is a true shower event or not.

The WMO Guide to Meteorological Instruments and Methods of Observation (WMO No. 8, 7th Edition) gives the following information in the Annex to Chapter 14 – ‘Present and Past Weather; State of the Ground’ regarding the criteria for light, moderate and heavy precipitation intensity which was recommended by the WMO Expert Meeting on Automation of Visual and

Subjective Observations (Trappes, Paris, France, 14-16 May 1997) and the Working Group on Surface Measurements (Geneva, Switzerland, 27-31 August 2001).

TABLE A-2. Light, moderate and heavy precipitation defined with respect to type of precipitation and to intensity, i, with intensity values based on a three-minute measurement period.		
<i>Variable</i>	<i>Range</i>	<i>Intensity class</i>
Drizzle	$i < 0.1 \text{ mm h}^{-1}$ $0.1 \leq i < 0.5 \text{ mm h}^{-1}$ $i \geq 0.5 \text{ mm h}^{-1}$	Light Moderate Heavy
Rain (also showers)	$i < 2.5 \text{ mm h}^{-1}$ $2.5 \leq i < 10.0 \text{ mm h}^{-1}$ $10.0 \leq i < 50.0 \text{ mm h}^{-1}$ $\geq 50.0 \text{ mm h}^{-1}$	Light Moderate Heavy Violent
Snow (also showers)	$i < 1.0 \text{ mm h}^{-1}$ (water equivalent) $1.0 \leq i < 5.0 \text{ mm h}^{-1}$ (water equivalent) $i \geq 5.0 \text{ mm h}^{-1}$ (water equivalent)	Light Moderate Heavy

Additionally the following points are given in the WMO No. 8 document:

Mixed precipitation of rain and snow: The same as for snow (since the ratio rain/snow is not subject to any measurement, a simple choice should be made). Note that this is altered in the PWS100 processing and additional mixed output intensity modifiers have been developed – see further discussion below.

Hail: The same as for rain. This is implemented in the PWS100.

Ice-pellets: The same as for snow. This is implemented in the PWS100.

Freezing phenomena: The same as for the non-freezing phenomena. This is implemented in the PWS100.

Further details are given in the WMO No. 8 guide relating to showers or intermittent precipitation as follows:

The implementation here for the PWS100 uses a proportional mix of the intensity values for the mixed types, i.e. if an event is of mixed rain and snow then the rain and snow modifiers for light, moderate and heavy events are added and divided by two, thus giving some mean value for the intensity modifiers. There are some meteorological services which suggest using the intensity value of the highest type (i.e. using the largest values of intensity so for a mixed rain and drizzle event the intensity values for rain would be used). Though this is scientifically inaccurate, it does follow the above WMO guideline for mixed rain and snow. The implementation in the PWS100 as outlined here serves as a reasonable compromise between altering intensity ranges on particle distributions and choosing the largest intensity ranges.

However it is also noted that non-mixed reports such as rain or snow may also contain a proportion of other types of particle such as drizzle which is not included in any intensity range modification for non-mixed reports. Without modifying on the proportion of identified particle types this is an inaccuracy that will be inherent in some data though statistically should not be extremely significant and certainly less so than choosing the largest range of the mixed types observed. The values given in Table A-1 are from mixed events with fixed range values (as calculated in Tables A-3 to A-8) rounded to 1 d.p.

Table A-3 gives mixed intensity ranges for rain and drizzle (liquid precipitation WMO 43, 44 and freezing precipitation WMO 47, 48), Table A-4 gives mixed intensity ranges for rain and snow (WMO 68), Table A-5 gives mixed intensity ranges for drizzle and snow (WMO 68), Table A-6 gives mixed intensity ranges for rain, drizzle and snow (WMO 68), Table A-7 gives mixed intensity ranges for rain, drizzle, ice pellets, hail and snow (precipitation WMO 41, 42), Table A-8 gives mixed intensity ranges for ice pellets, hail and snow (solid precipitation WMO 45, 46).

TABLE A-3. Intensity bounds for rain and drizzle.

	Rain	Drizzle	Rain and Drizzle (same for freezing)
Light	$i < 2.5$	$i < 0.1$	$i < 1/2 \times 2.5 + 1/2 \times 0.1$ $i < 1.3 \text{ mmh}^{-1}$
Moderate	$2.5 \leq i < 10.0$	$0.1 \leq i < 0.5$	$1/2 \times 2.5 + 1/2 \times 0.1 \leq i < 1/2 \times 10 + 1/2 \times 0.5$ $1.3 \text{ mmh}^{-1} \leq i < 5.25 \text{ mmh}^{-1}$
Heavy	$i \geq 10.0$	$i \geq 0.5$	$i \geq 1/2 \times 10 + 1/2 \times 0.5$ $i \geq 5.25 \text{ mmh}^{-1}$

TABLE A-4. Intensity bounds for rain and snow.

	Rain	Snow	Rain and Snow
Light	$i < 2.5$	$i < 1.0$	$i < 1/2 \times 2.5 + 1/2 \times 1.0$ $i < 1.75 \text{ mmh}^{-1}$
Moderate	$2.5 \leq i < 10.0$	$1.0 \leq i < 5.0$	$1/2 \times 2.5 + 1/2 \times 1.0 \leq i < 1/2 \times 10 + 1/2 \times 5.0$ $1.75 \text{ mmh}^{-1} \leq i < 7.5 \text{ mmh}^{-1}$
Heavy	$i \geq 10.0$	$i \geq 5.0$	$i \geq 1/2 \times 10 + 1/2 \times 5.0$ $i \geq 7.5 \text{ mmh}^{-1}$

TABLE A-5. Intensity bounds for drizzle and snow.

	Drizzle	Snow	Drizzle and Snow
Light	$i < 0.1$	$i < 1.0$	$i < 1/2 \times 0.1 + 1/2 \times 1.0$ $i < 0.55 \text{ mmh}^{-1}$
Moderate	$0.1 \leq i < 0.5$	$1.0 \leq i < 5.0$	$1/2 \times 0.1 + 1/2 \times 1.0 \leq i < 1/2 \times 0.5 + 1/2 \times 5.0$ $0.55 \text{ mmh}^{-1} \leq i < 2.75 \text{ mmh}^{-1}$
Heavy	$i \geq 0.5$	$i \geq 5.0$	$i \geq 1/2 \times 0.5 + 1/2 \times 5.0$ $i \geq 2.75 \text{ mmh}^{-1}$

TABLE A-6. Intensity bounds for rain, drizzle and snow.				
	Rain	Drizzle	Snow	Rain, Drizzle and Snow
Light	$i < 2.5$	$i < 0.1$	$i < 1.0$	$i < 1/3 \times 2.5 + 1/3 \times 0.1 + 1/3 \times 1.0$ $i < 1.2 \text{ mmh}^{-1}$
Moderate	$2.5 \leq i < 10.0$	$0.1 \leq i < 0.5$	$1.0 \leq i < 5.0$	$1/3 \times 2.5 + 1/3 \times 0.1 + 1/3 \times 1.0 \leq i < 1/3 \times 10 + 1/3 \times 0.5 + 1/3 \times 5.0$ $1.2 \text{ mmh}^{-1} \leq i < 5.17 \text{ mmh}^{-1}$
Heavy	$i \geq 10.0$	$i \geq 0.5$	$i \geq 5.0$	$i \geq 1/3 \times 10 + 1/3 \times 0.5 + 1/3 \times 5.0$ $i \geq 5.17 \text{ mmh}^{-1}$

TABLE A-7. Intensity bounds for rain, drizzle, ice pellets, hail and snow.						
	Rain	Drizzle	Ice Pellets	Hail	Snow	Rain, Drizzle, Ice Pellets, Hail and Snow
Light	$i < 2.5$	$i < 0.1$	$i < 1.0$	$i < 2.5$	$i < 1.0$	$i < 1/5 \times 2.5 + 1/5 \times 0.1 + 1/5 \times 1.0 + 1/5 \times 2.5 + 1/5 \times 1.0$ $i < 0.97 \text{ mmh}^{-1}$
Moderate	$2.5 \leq i < 10.0$	$0.1 \leq i < 0.5$	$1.0 \leq i < 5.0$	$2.5 \leq i < 10.0$	$1.0 \leq i < 5.0$	$1/5 \times 2.5 + 1/5 \times 0.1 + 1/5 \times 1.0 + 1/5 \times 2.5 + 1/5 \times 1.0 \leq i < 1/5 \times 10.0 + 1/5 \times 0.5 + 1/5 \times 5.0 + 1/5 \times 10.0 + 1/5 \times 5.0$ $0.97 \text{ mmh}^{-1} \leq i < 6.1 \text{ mmh}^{-1}$
Heavy	$i \geq 10.0$	$i \geq 0.5$	$i \geq 5.0$	$i \geq 10.0$	$i \geq 5.0$	$i \geq 1/5 \times 10.0 + 1/5 \times 0.5 + 1/5 \times 5.0 + 1/5 \times 10.0 + 1/5 \times 5.0$ $i \geq 6.1 \text{ mmh}^{-1}$

TABLE A-8. Intensity bounds for ice pellets, hail and snow.				
	Ice Pellets	Hail	Snow	Ice Pellets, Hail and Snow
Light	$i < 1.0$	$i < 2.5$	$i < 1.0$	$i < 1/3 \times 1.0 + 1/3 \times 2.5 + 1/3 \times 1.0$ $i < 1.5 \text{ mmh}^{-1}$
Moderate	$1.0 \leq i < 5.0$	$2.5 \leq i < 10.0$	$1.0 \leq i < 5.0$	$1/3 \times 1.0 + 1/3 \times 2.5 + 1/3 \times 1.0 \leq i < 1/3 \times 5.0 + 1/3 \times 10 + 1/3 \times 5.0$ $1.5 \text{ mmh}^{-1} \leq i < 6.67 \text{ mmh}^{-1}$
Heavy	$i \geq 5.0$	$i \geq 10.0$	$i \geq 5.0$	$i \geq 1/3 \times 5.0 + 1/3 \times 10 + 1/3 \times 5.0$ $i \geq 6.67 \text{ mmh}^{-1}$

Appendix B. Wiring

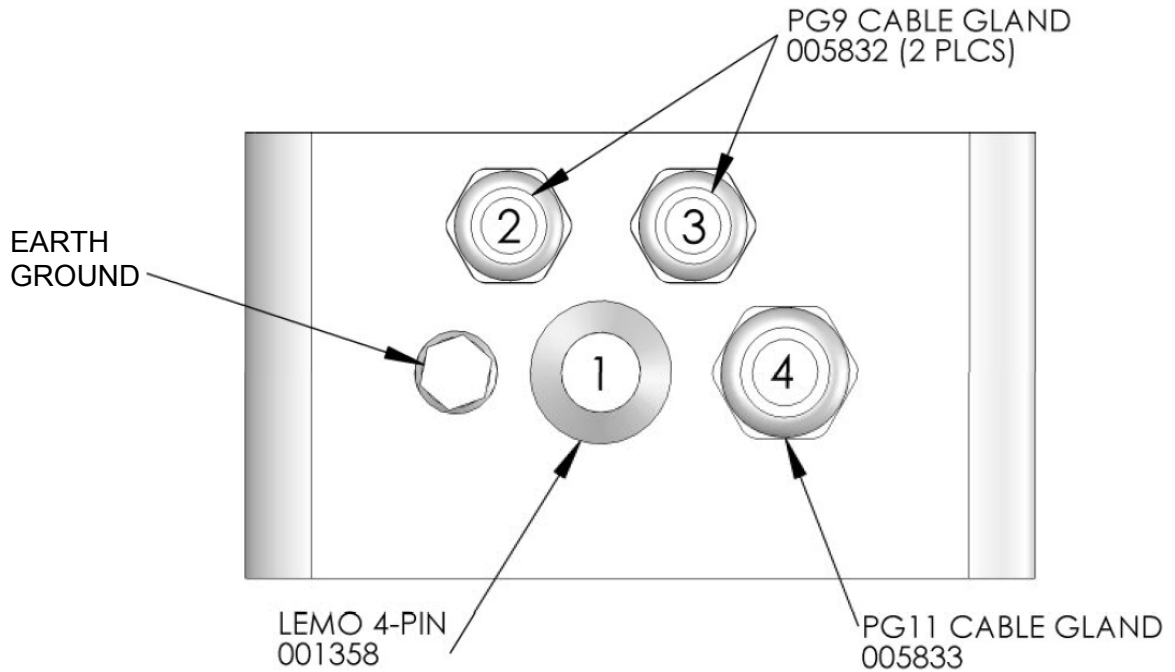


FIGURE B-1. Underside of DSP enclosure

TABLE B-1. Cable identifier			
Connector Number	Connector Description	Connector	Cable
1	SDI-12	4 pin LEMO	006915
2	SDI-12 / IO	Cable Gland	006915
3	COMMS	Cable Gland	006905
4	DSP / HOOD PSU	Cable Gland	006915

Appendix C. Cable Selection

C.1 Power Cable

The PWS100 is provided pre-wired with a default 10 m power cable as shown in Figure C-1. This cable should be grounded using the cable screen at both ends. One end is to be connected to the power sources for the DSP (12V) and hood heaters (24V) the other is fed through the cable gland on the base of the PWS100 DSP enclosure and fixed in the DSP terminal strip as shown in Figure C-2.


If another cable is to replace the pre-wired cable then it is normally recommended that the same cable is used and the wiring color scheme shown in Figures C-1 and C-2 is followed to avoid confusion

However, alternative cable can be used and may be required for longer cable runs to reduce voltage drops in the cable. Wire with larger diameter conductors may be needed especially for the 24 V heater supply, as any reduction below 24V will limit the heaters effectiveness.

To remove the existing cable, unscrew the cable gland until the cable is loose then locate the individual termination points of the wires. Using a small flat blade screwdriver, press down the tab on the top of the terminal strip at the point of the wire connection and pull the wire from the front slot. Carry this out for all of the wires in the cable and then pull the cable from the cable gland until free. Insert the new (stripped) cable and insert the wires into the corresponding positions one by one by again depressing the tab on top of the terminal strip and then securely pushing the stripped end of the wire fully into the front slot.

WARNING

If the power cable is incorrectly wired to the DSP unit then irrevocable damage can be done to the PWS100 unit.

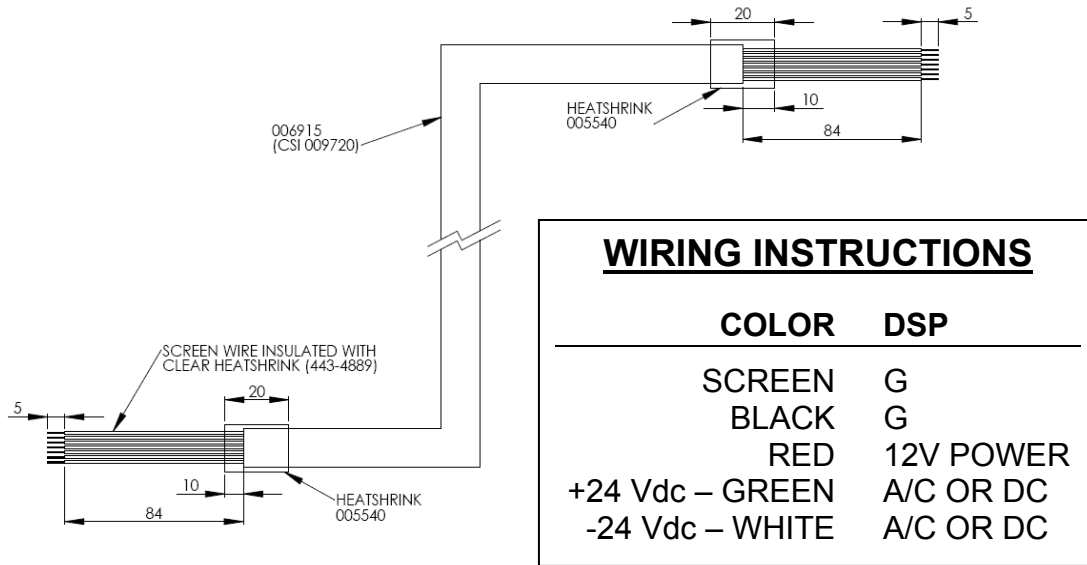

NOTES:
ALL DIMENSIONS IN MM
TOLERANCES UNLESS OTHERWISE STATED ARE ± 0.25MM

FIGURE C-1. PWS100 power cable

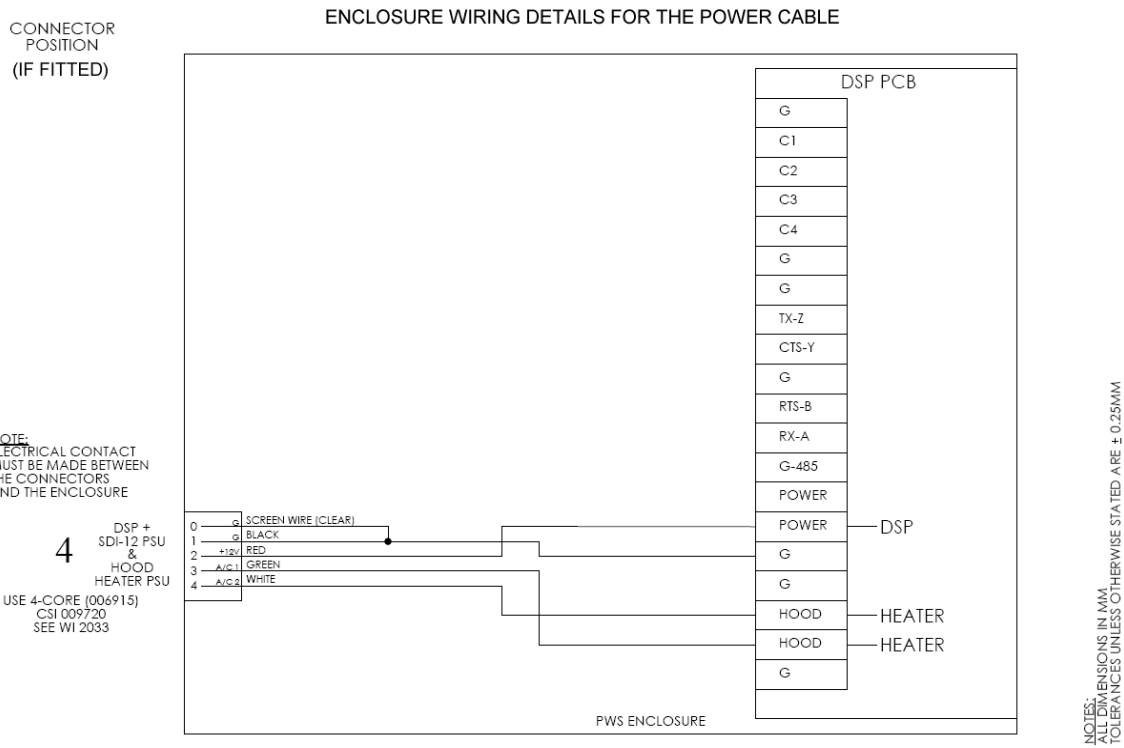


FIGURE C-2. Enclosure wiring details for power cable

C.2 Communication Cable

The PWS100 has RS-232, RS-422 and RS-485 communications capability. Use a screened $2 \times 0.22 \text{ mm}^2$ twisted pair cable. Maximum length is 15 m for RS-232, 300 m for RS-422 and 300 m for RS-485.

The PWS100 is provided pre-wired with a default 10 m communications cable as shown in Figure C-3 (other lengths available on request) which is terminated at one end with a 9 pin D-connector (DB9). The D-connector can be connected directly to a PC or datalogger such as the Campbell Scientific CR1000. If another type of connection is required then the D-connector should be removed. The other end is fed through the cable gland on the base of the PWS100 DSP enclosure and fixed in the DSP terminal strip as shown in Figure C-4. The cable connections for RS-232 and RS-485 are shown in Table C-1.

If another cable is to replace the pre-wired cable then ensure that the correct cable is used and the wiring color scheme shown in Figures C-3 and C-4 is followed exactly.

To remove the existing cable, unscrew the cable gland until the cable is loose then locate the individual termination points of the wires. Using a small flat blade screwdriver, press down the tab on the top of the terminal strip at the point of the wire connection and pull the wire from the front slot. Carry this out for all of the wires in the cable and then pull the cable from the cable gland until free. Insert the new (stripped) cable and insert the wires into the corresponding positions one by one by again depressing the tab on top of the terminal strip and then securely pushing the stripped end of the wire fully into the front slot.

Color	RS-232	RS-485
Blue	TX	Z
Green	RX	A
Black	G	G
White	RTS	B
Yellow	CTS	Y
Red	Not Connected	RS485G
Screen	G	G

NOTE

In RS-232 mode the PWS100 supports hardware handshaking to prevent data loss when sending data through slower devices, e.g. modems. If the connected device does not support hardware handshaking, to allow the PWS100 to transmit data do not connect the RTS and CTS lines from the PWS100 but connect them together to form a loop-back to the PWS100.

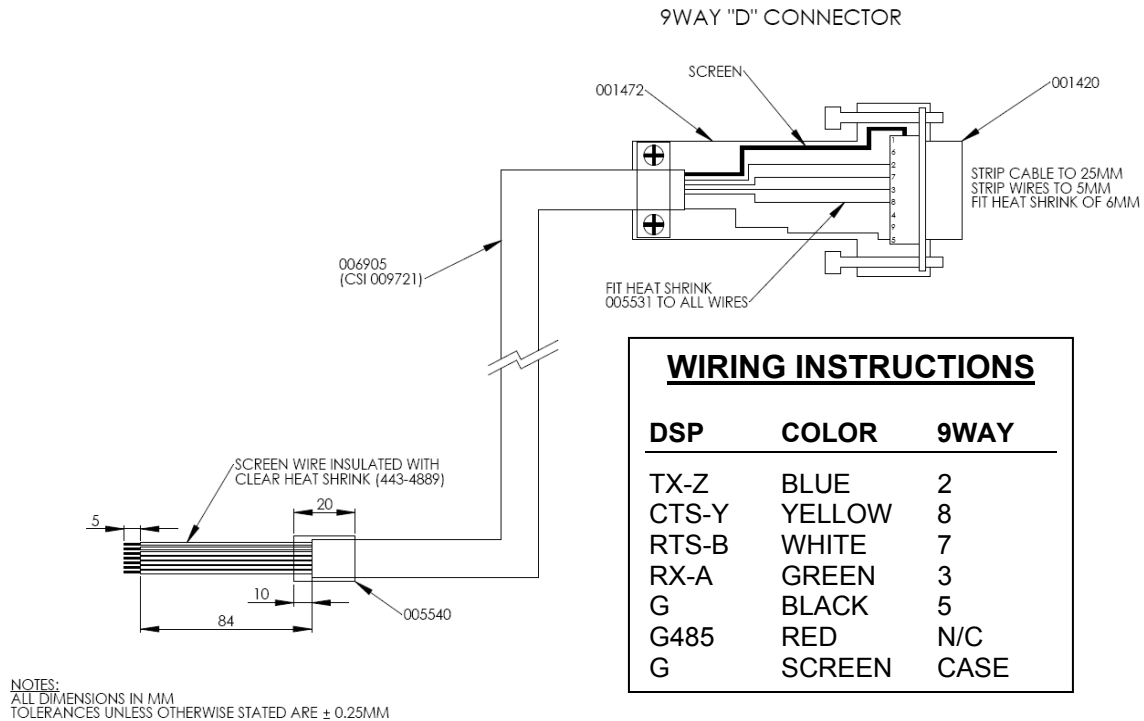


FIGURE C-3. PWS100 communication cable




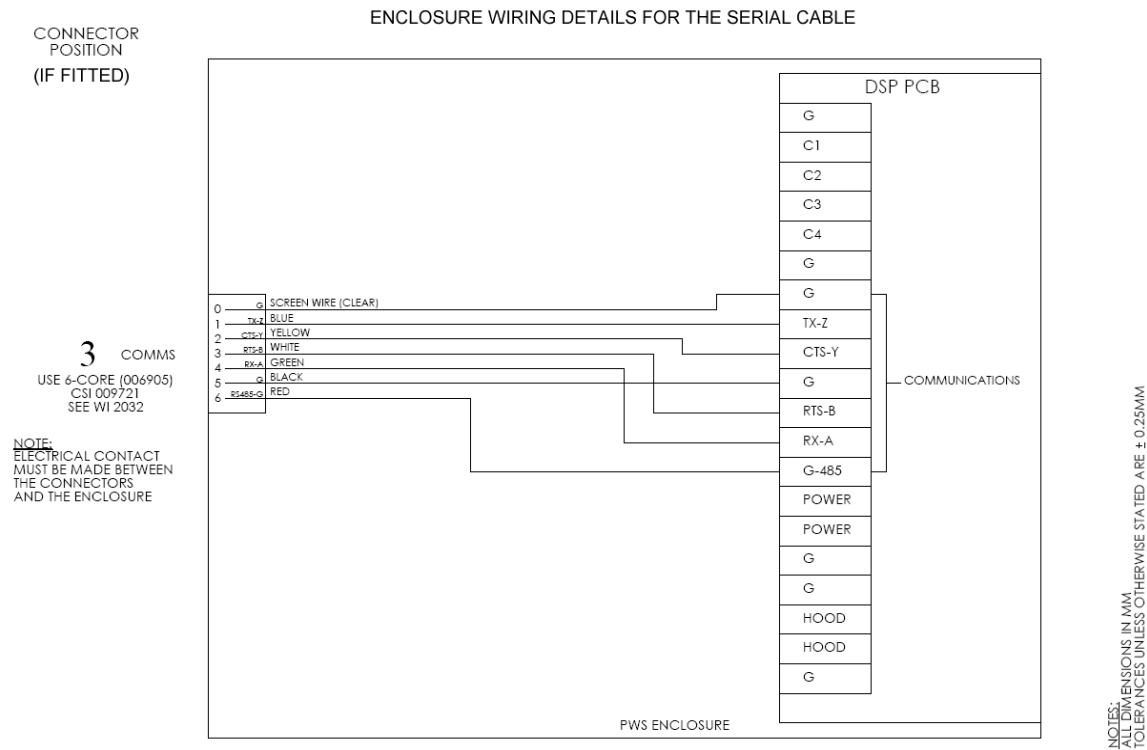


FIGURE C-4. Enclosure wiring details for communication cable


Appendix D. Software Flowchart

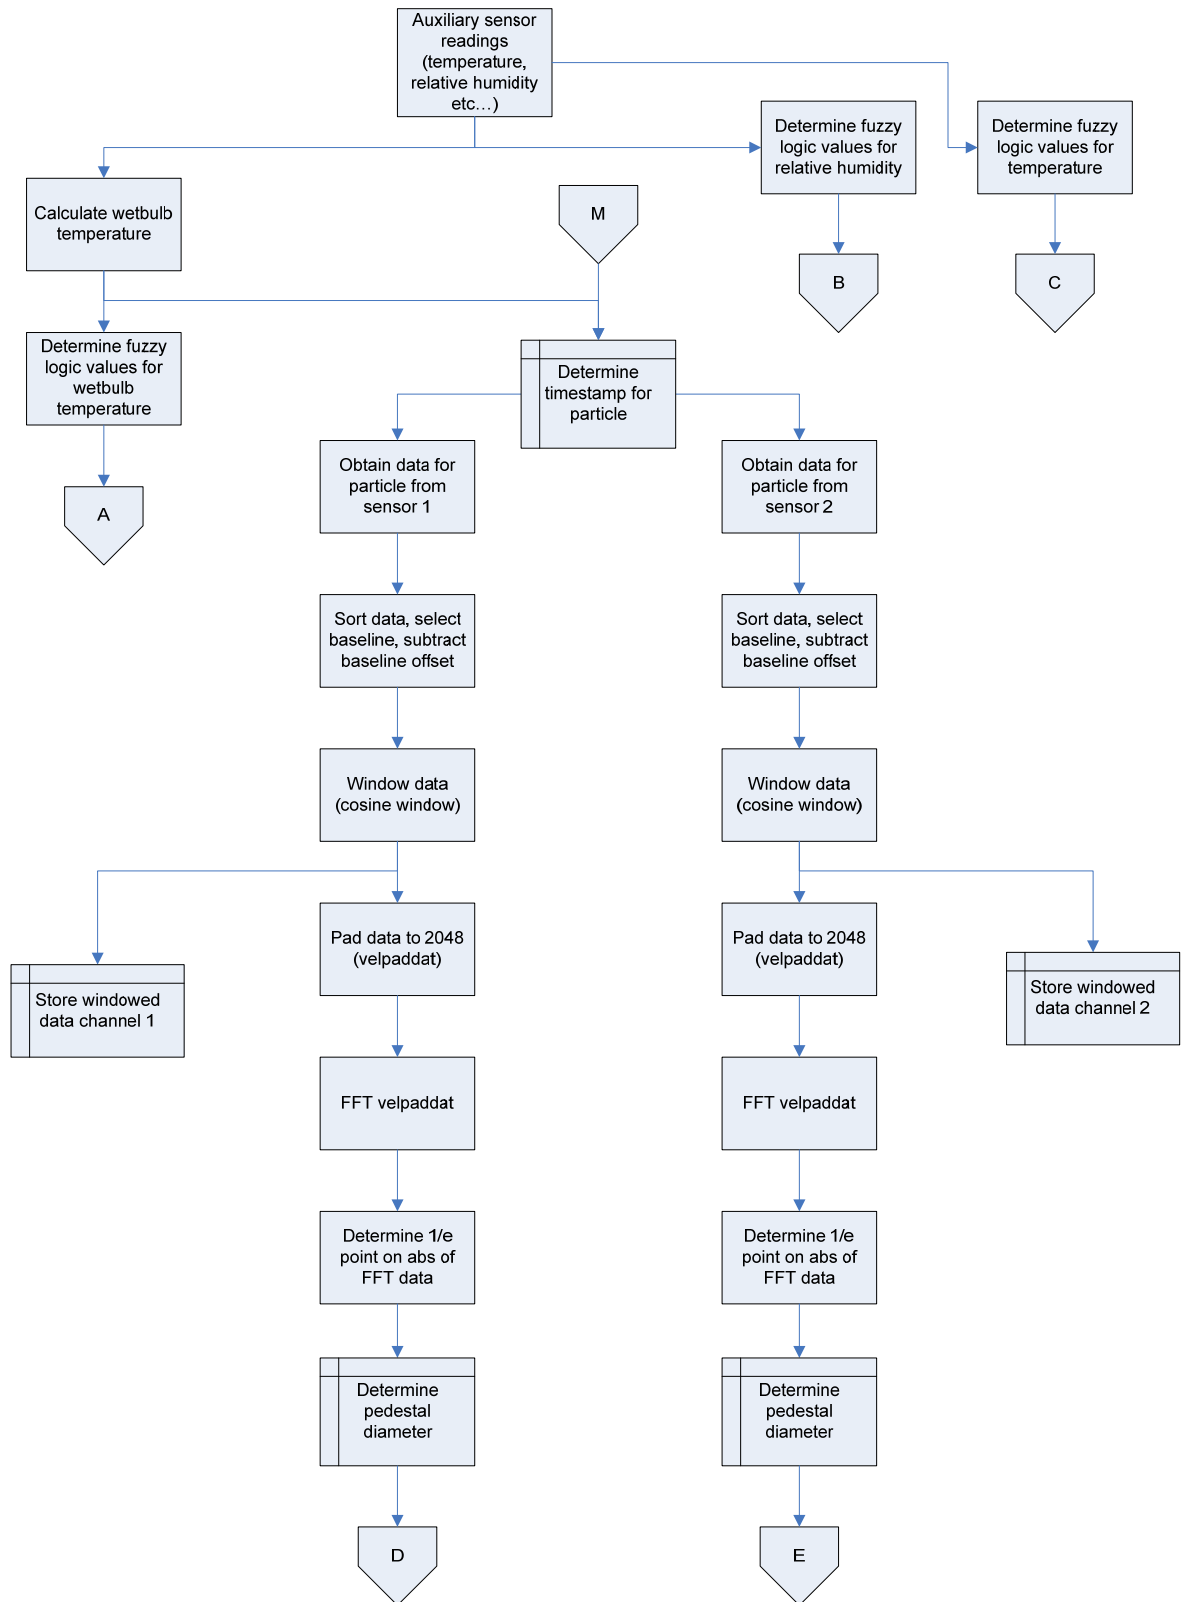


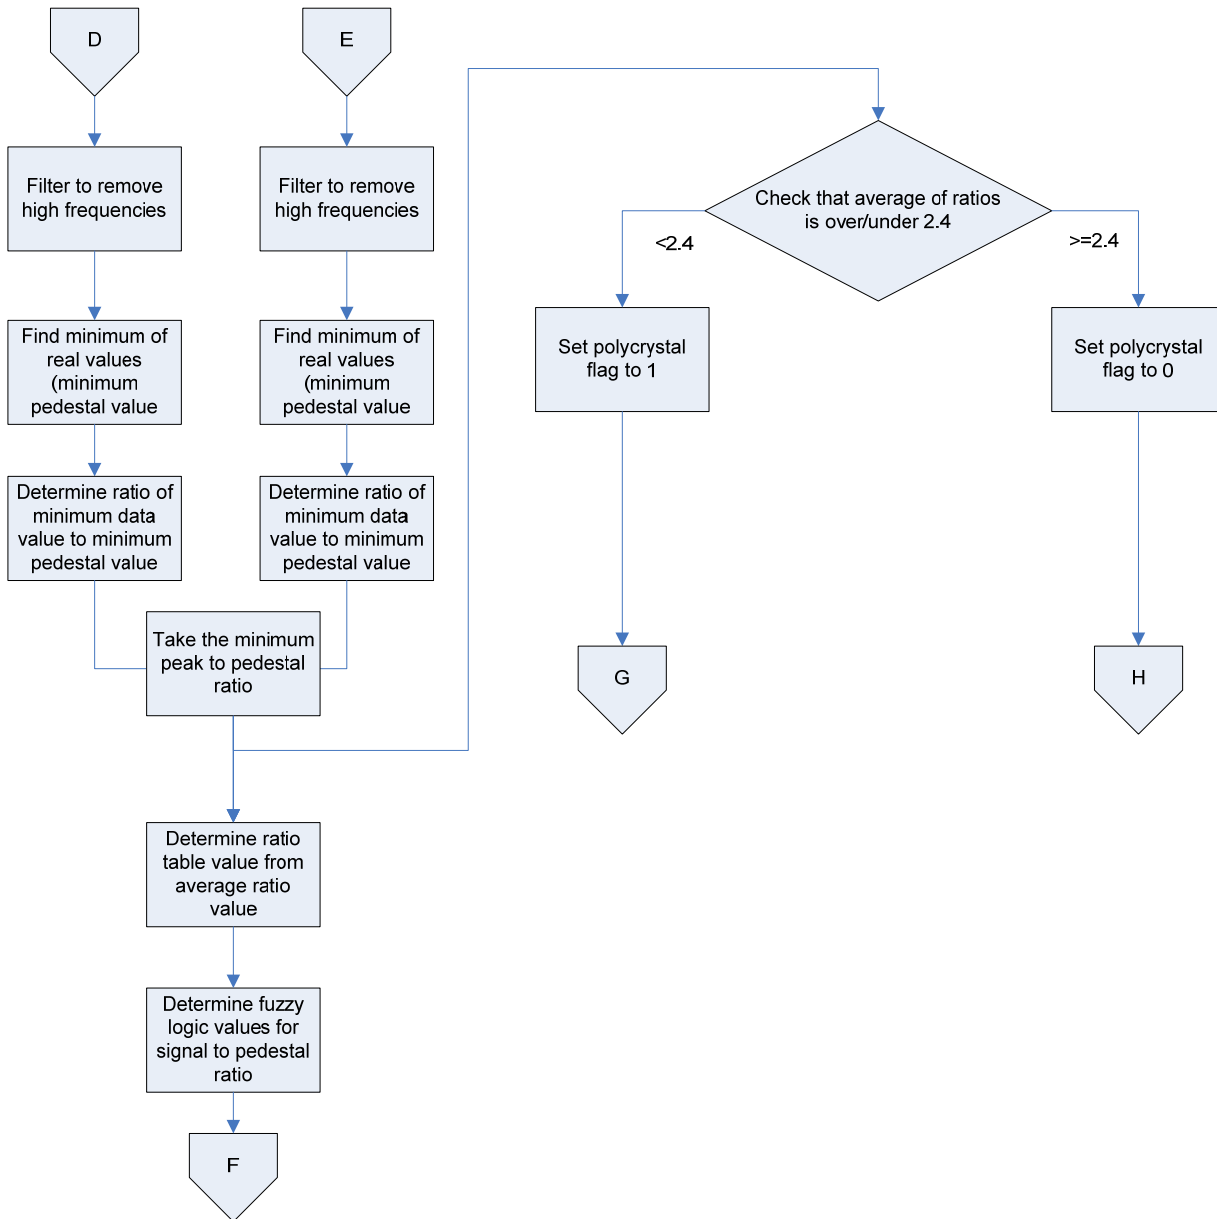


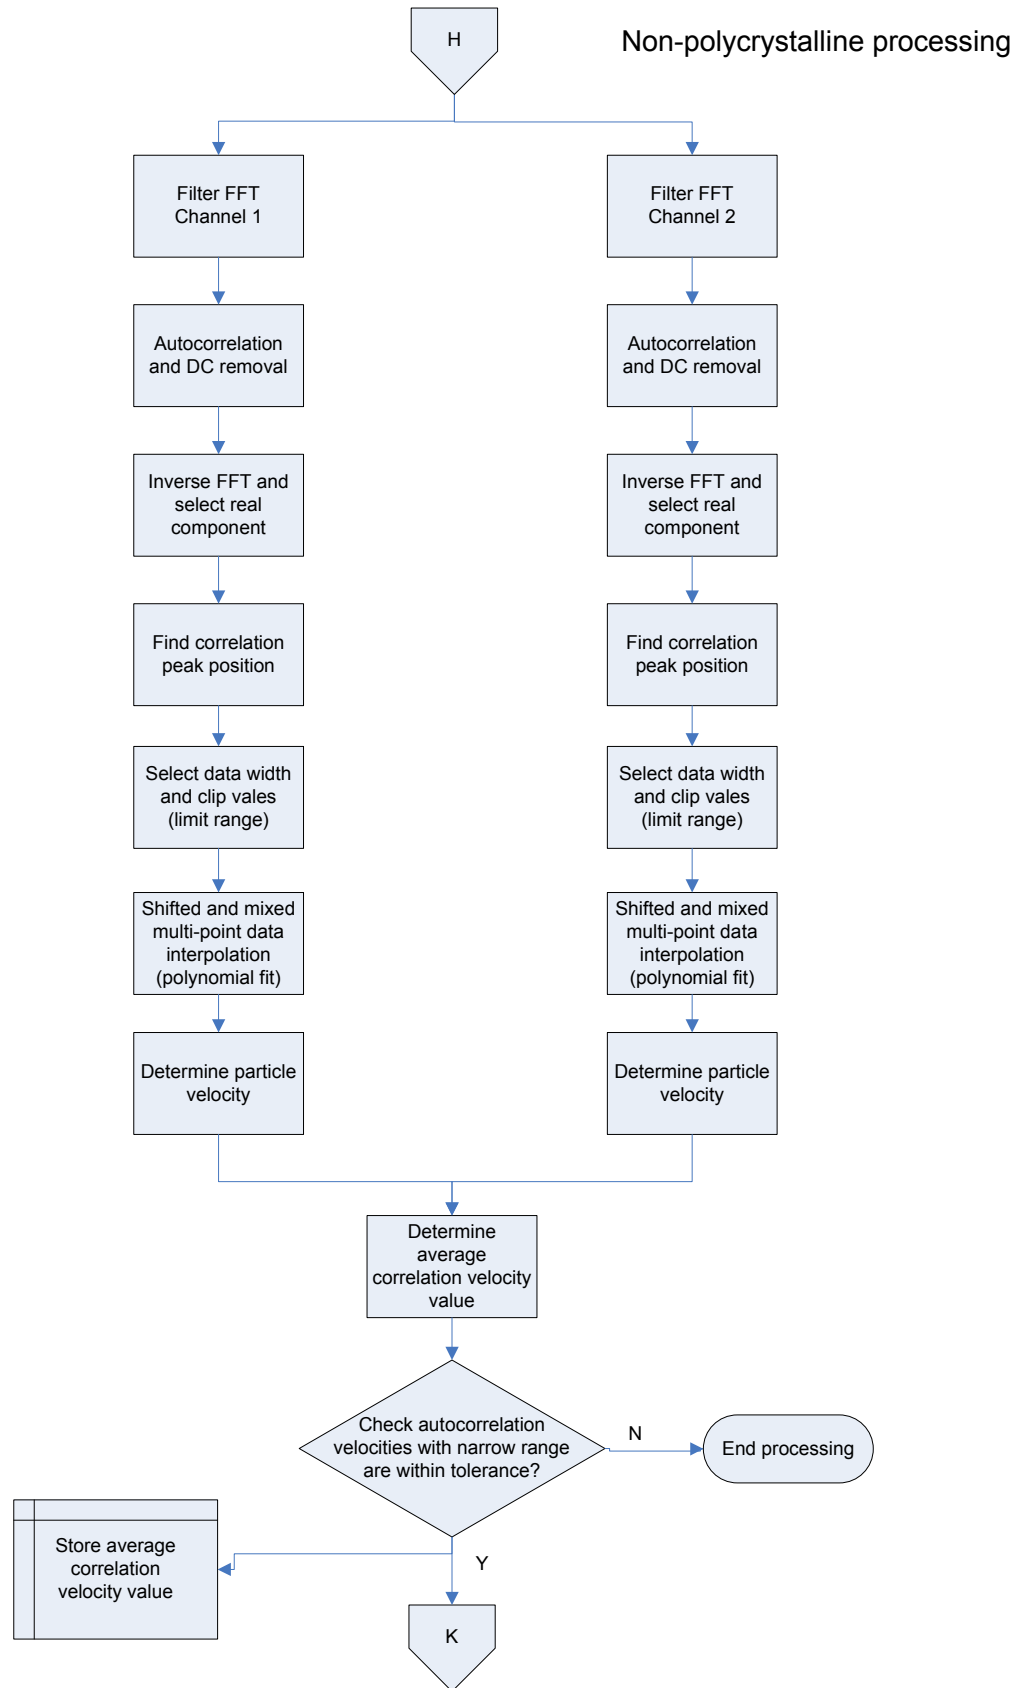

Polycrystalline processing

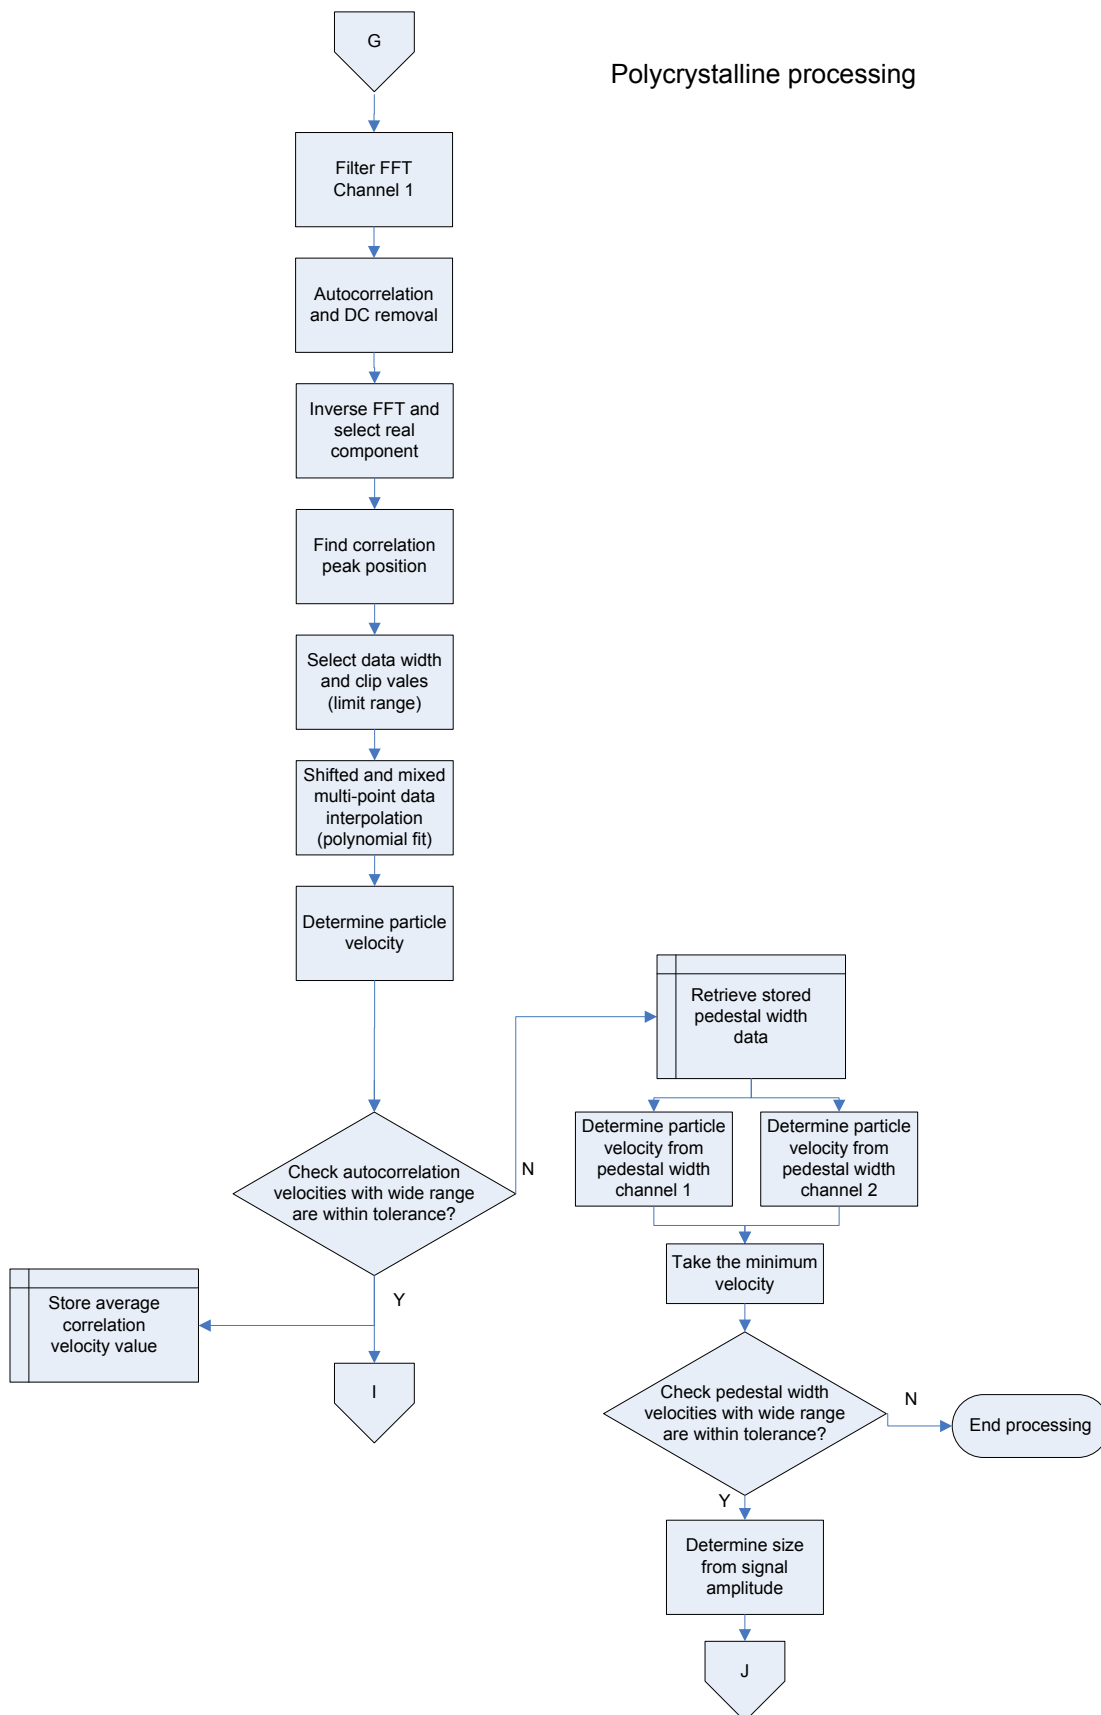


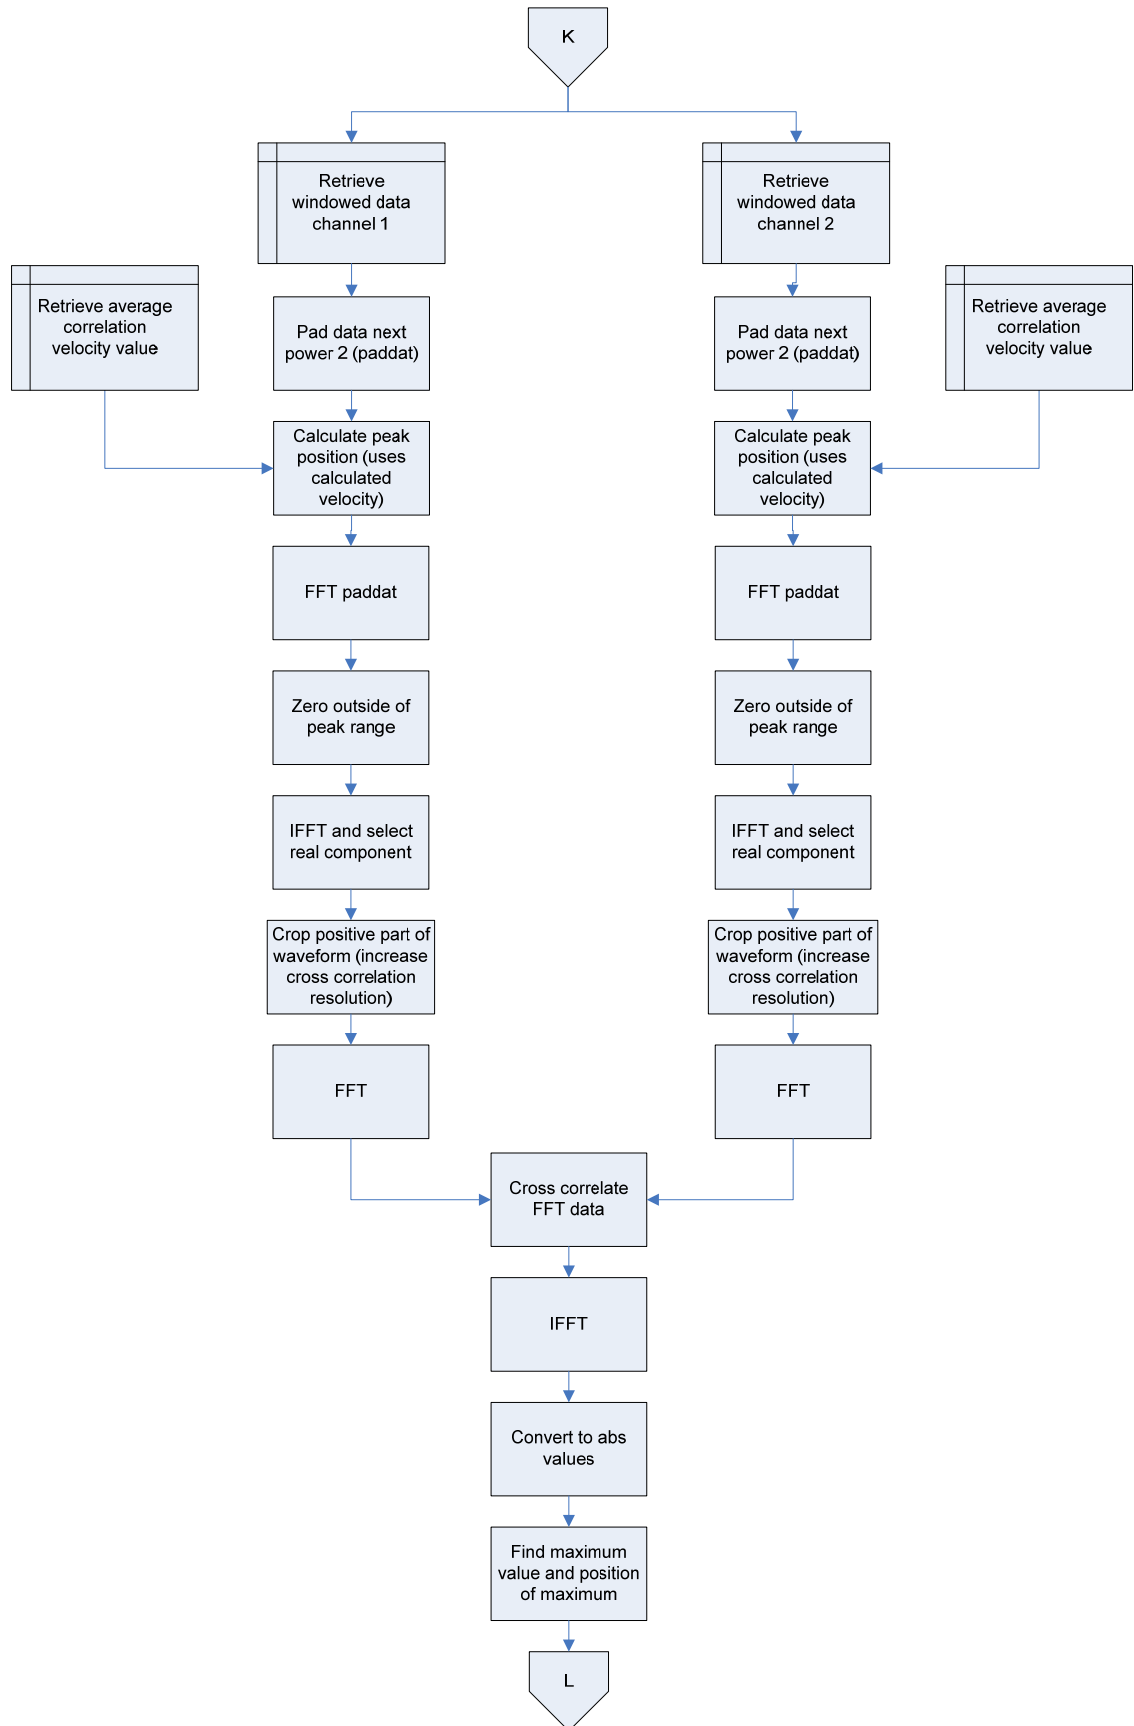

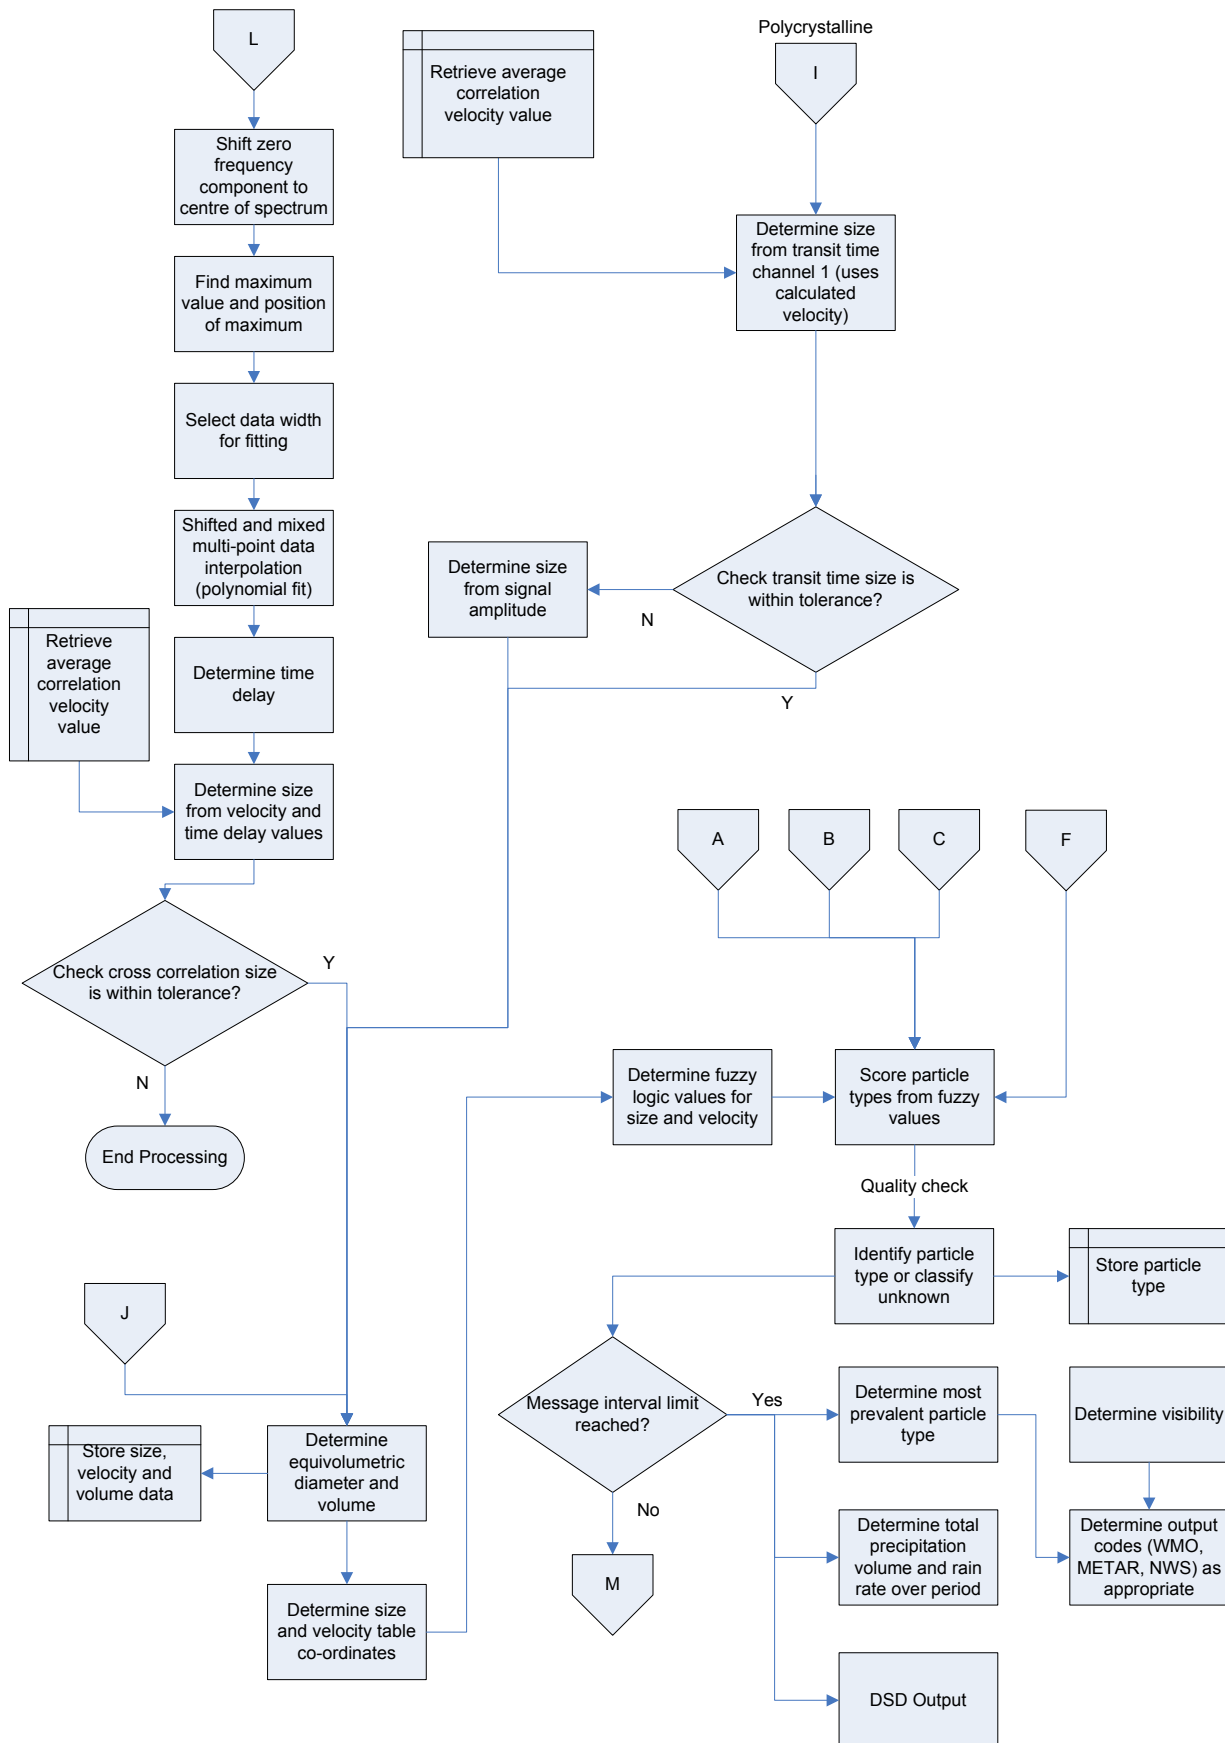

Menu operation

- 1..Menu will activate when terminal is open
- 2..Return only will go to previous menu
- 3..Incorrect entry will return to same menu
- 4..Delete will clear current entry
- 5..Esc will clear current entry and go back to previous menu

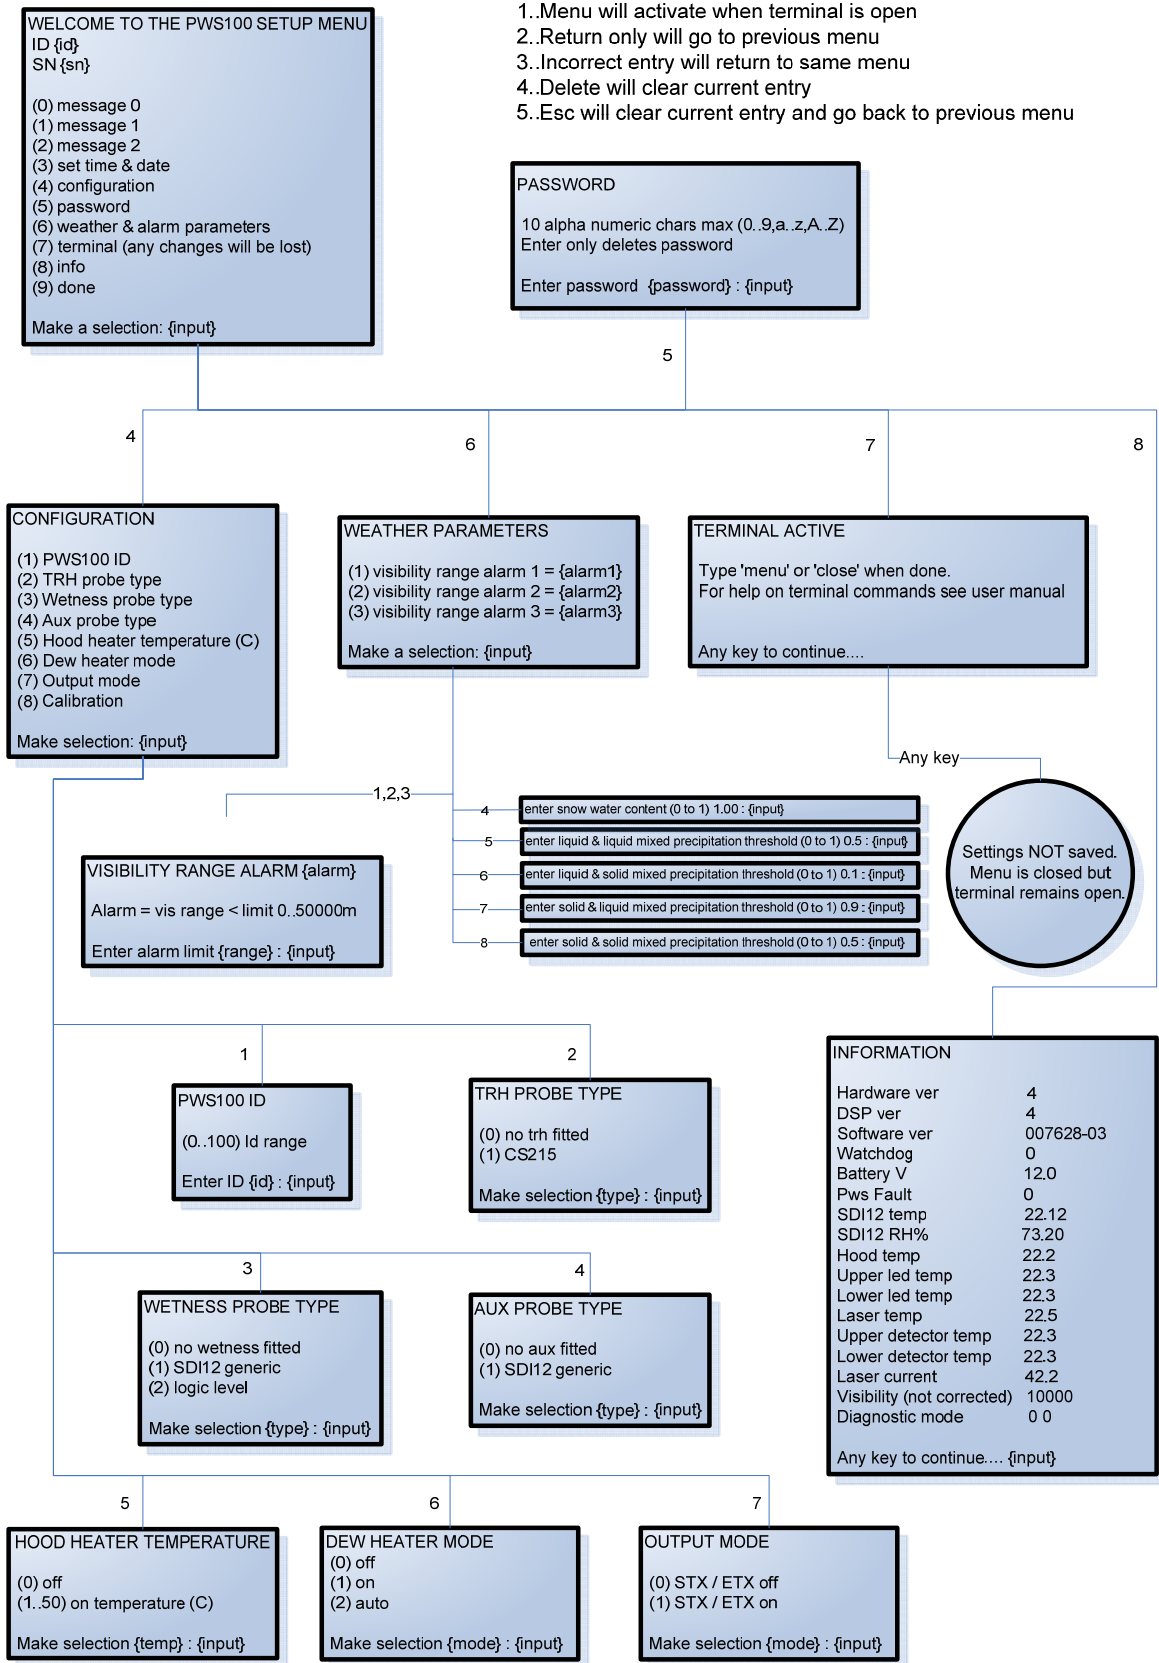

Menu operation

- 1..Menu will activate when terminal is open
- 2..Return only will go to previous menu
- 3..Incorrect entry will return to same menu
- 4..Delete will clear current entry
- 5..Esc will clear current entry and go back to previous menu

```

WELCOME TO THE PWS100 SETUP MENU
ID {id}
SN {sn}

(0) message 0
(1) message 1
(2) message 2
(3) set time & date
(4) configuration
(5) password
(6) weather & alarm parameters
(7) terminal (any changes will be lost)
(8) info
(9) done

Make a selection: {input}
    
```

4

```

CONFIGURATION

(1) PWS100 ID
(2) TRH probe type
(3) Wetness probe type
(4) Aux probe type
(5) Hood heater temperature (C)
(6) Dew heater mode
(7) Output mode
(8) Calibration

Make selection: {input}
    
```

8

```

PWS100 Calibration

CAUTION! INCORRECT ENTRIES CAN SERIOUSLY DEGRADE ACCURACY

to edit or view instrument calibration, type 'confirm' : {input}
    
```

0

1

```

PWS100 View / Enter calibration disc constants

s/n          1234
velocity (m/sec) 5.000
size (mm)    2.386
visibility (mV) 0.318

enter s/n 1234 : {input}
enter size constant (mm) 2.386 : {input}
enter visibility constant (mV) 0.318 : {input}
    
```

```

PWS100 View / Adjust calibration

Latest results from calibrator date 21:05:08

Velocity_Centre  latest target-range calibration date
Velocity_Left   5.000 n/a n/a n/a
Velocity_Right  5.000 n/a n/a n/a
Size_Centre     2.350 2.311 2.461 21:05:08
Visibility (mV) 0.300 0.286 0.350 21:05:08
Visibility Offset (uV) 0.000 -2.000 2.000 n/a

(0) no change
(1) adjust calibration (THIS WILL TAKE IMMEDIATE EFFECT)

Make selection : {input}

Update velocity calibration y/n : {input} saved
Update size calibration y/n : {input} saved
Update visibility calibration y/n : {input} saved
    
```


Campbell Scientific Companies

Campbell Scientific, Inc. (CSI)

815 West 1800 North
Logan, Utah 84321
UNITED STATES
www.campbellsci.com • info@campbellsci.com

Campbell Scientific Africa Pty. Ltd. (CSAf)

PO Box 2450
Somerset West 7129
SOUTH AFRICA
www.csafrica.co.za • cleroux@csafrica.co.za

Campbell Scientific Australia Pty. Ltd. (CSA)

PO Box 8108
Garbutt Post Shop QLD 4814
AUSTRALIA
www.campbellsci.com.au • info@campbellsci.com.au

Campbell Scientific do Brazil Ltda. (CSB)

Rua Luisa Crapsi Orsi, 15 Butantã
CEP: 005543-000 São Paulo SP BRAZIL
www.campbellsci.com.br • suporte@campbellsci.com.br

Campbell Scientific Canada Corp. (CSC)

11564 - 149th Street NW
Edmonton, Alberta T5M 1W7
CANADA
www.campbellsci.ca • dataloggers@campbellsci.ca

Campbell Scientific Centro Caribe S.A. (CSCC)

300 N Cementerio, Edificio Breller
Santo Domingo, Heredia 40305
COSTA RICA
www.campbellsci.cc • info@campbellsci.cc

Campbell Scientific Ltd. (CSL)

Campbell Park
80 Hathern Road
Shepshed, Loughborough LE12 9GX
UNITED KINGDOM
www.campbellsci.co.uk • sales@campbellsci.co.uk

Campbell Scientific Ltd. (France)

3 Avenue de la Division Leclerc
92160 ANTONY
FRANCE
www.campbellsci.fr • info@campbellsci.fr

Campbell Scientific Spain, S. L.

Avda. Pompeu Fabra 7-9, local 1
08024 Barcelona
SPAIN
www.campbellsci.es • info@campbellsci.es

Please visit www.campbellsci.com to obtain contact information for your local US or International representative.