



# INSTRUCTION MANUAL

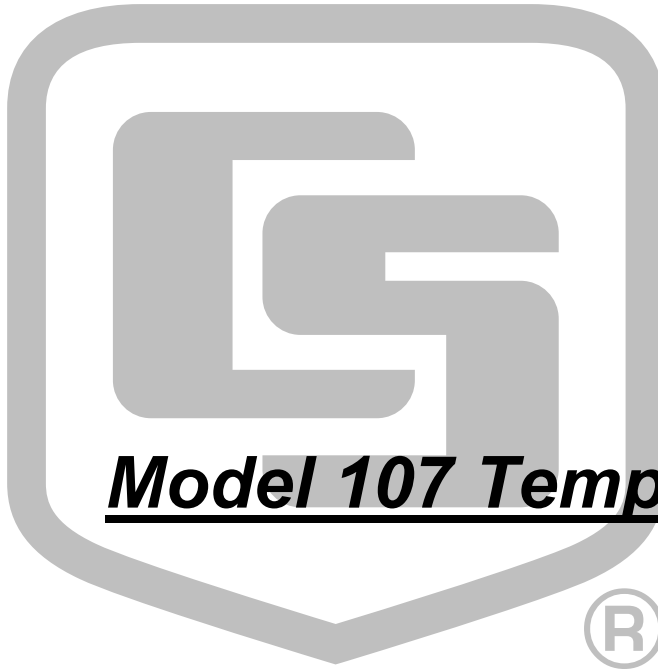

## Model 107 Temperature Probe

Revision: 11/11

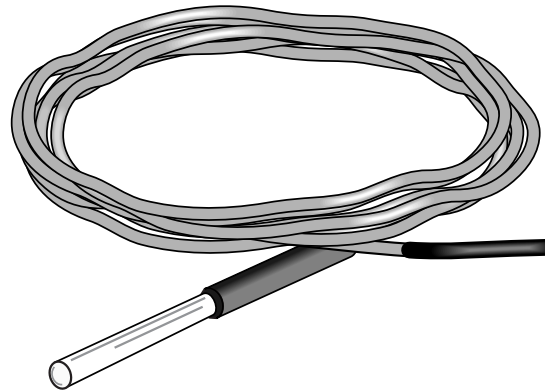

Copyright © 1983-2011  
Campbell Scientific, Inc.



# Warranty

---

“PRODUCTS MANUFACTURED BY CAMPBELL SCIENTIFIC, INC. are warranted by Campbell Scientific, Inc. (“Campbell”) to be free from defects in materials and workmanship under normal use and service for twelve (12) months from date of shipment unless otherwise specified in the corresponding Campbell product manual. Batteries, fine-wire thermocouples, desiccant, and other consumables have no warranty. Campbell's obligation under this warranty is limited to repairing or replacing (at Campbell's option) defective products, which shall be the sole and exclusive remedy under this warranty. The customer shall assume all costs of removing, reinstalling, and shipping defective products to Campbell. Campbell will return such products by surface carrier prepaid within the continental United States of America. To all other locations, Campbell will return such products best way CIP (Port of Entry) INCOTERM® 2010, prepaid. This warranty shall not apply to any Campbell products which have been subjected to modification, misuse, neglect, improper service, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied. The warranty for installation services performed by Campbell such as programming to customer specifications, electrical connections to products manufactured by Campbell, and product specific training, is part of Campbell's product warranty. CAMPBELL EXPRESSLY DISCLAIMS AND EXCLUDES ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Campbell is not liable for any special, indirect, incidental, and/or consequential damages.”

# Assistance

---

Products may not be returned without prior authorization. The following contact information is for US and international customers residing in countries served by Campbell Scientific, Inc. directly. Affiliate companies handle repairs for customers within their territories. Please visit [www.campbellsci.com](http://www.campbellsci.com) to determine which Campbell Scientific company serves your country.

To obtain a Returned Materials Authorization (RMA), contact CAMPBELL SCIENTIFIC, INC., phone (435) 227-2342. After an applications engineer determines the nature of the problem, an RMA number will be issued. Please write this number clearly on the outside of the shipping container. Campbell Scientific's shipping address is:

**CAMPBELL SCIENTIFIC, INC.**

RMA# \_\_\_\_\_  
815 West 1800 North  
Logan, Utah 84321-1784

For all returns, the customer must fill out a "Statement of Product Cleanliness and Decontamination" form and comply with the requirements specified in it. The form is available from our web site at [www.campbellsci.com/repair](http://www.campbellsci.com/repair). A completed form must be either emailed to [repair@campbellsci.com](mailto:repair@campbellsci.com) or faxed to (435) 227-9579. Campbell Scientific is unable to process any returns until we receive this form. If the form is not received within three days of product receipt or is incomplete, the product will be returned to the customer at the customer's expense. Campbell Scientific reserves the right to refuse service on products that were exposed to contaminants that may cause health or safety concerns for our employees.

# 107 Table of Contents

---

*PDF viewers: These page numbers refer to the printed version of this document. Use the PDF reader bookmarks tab for links to specific sections.*

<b>1. General</b> .....	<b>1</b>
1.1 Specifications.....	1
<b>2. Accuracy</b> .....	<b>2</b>
<b>3. Installation</b> .....	<b>4</b>
3.1 Air Temperature.....	4
3.1.1 Siting.....	4
3.1.2 Assembly and Mounting.....	4
3.2 Soil Temperature .....	6
3.3 Water Temperature .....	6
<b>4. Wiring</b> .....	<b>6</b>
<b>5. Programming</b> .....	<b>7</b>
5.1 CRBasic .....	7
5.2 Edlog.....	7
5.3 Example Programs.....	7
5.3.1 Example Program for CR1000 Datalogger .....	8
5.3.2 Example Program for CR10X Datalogger .....	8
5.4 Electrically Noisy Environments .....	9
5.5 Long Lead Lengths.....	9
<b>6. Measurement Details</b> .....	<b>10</b>
6.1 Therm107 Instruction .....	10
6.2 Temp(107) Instruction (P11).....	11
<b>7. Maintenance and Calibration</b> .....	<b>13</b>
<b>8. Troubleshooting</b> .....	<b>13</b>

## **Figures**

2-1. Error Produced by Polynomial fit to Published Values.....	3
2-2. Probe Interchangeability Limits .....	3
3-1. 107 and 41303-5A Radiation Shield on a Tripod Mast.....	5
3-2. 107 and 41303-5A Radiation Shield on a CM200 Series Crossarm .....	5
6-1. 107 Thermistor Probe Schematic .....	11

## **Tables**

1-1. Recommended Lead Lengths .....	1
2-1. Thermistor Interchangeability Specification.....	2
2-2. Polynomial Error for Edlog Dataloggers .....	2
4-1. Connections to Campbell Scientific Dataloggers .....	6
5-1. Wiring for Example Programs.....	7
6-1. Polynomial Coefficients .....	11
6-2. Temperature, Resistance, and Datalogger Output .....	12

# Model 107 Temperature Probe

## 1. General

The 107 Temperature Probe uses a thermistor to measure temperature. The probe is designed for measuring air/soil/water temperatures. For air temperature, a 41303-5A radiation shield is used to mount the 107 Probe and limit solar radiation loading. The probe is designed to be buried or submerged in water to 50' (21 psi).

For the -L option, the probe's cable terminates in pigtailed that connect to a Campbell Scientific datalogger or a connector that attaches to a prewired enclosure. For the -LC option, the probe's cable is fitted with a connector that attaches to an ET107, ET106, or MetData1 Weather Station. Throughout this manual, 107 will refer to both the 107-L and 107-LC unless specified otherwise.

Lead length for the 107-L and 107-LC is specified when the sensor is ordered. Table 1-1 gives the recommended lead length for mounting the sensor on a tripod or tower.

2 m Height		Atop a tripod or tower via a 2 ft crossarm such as the CM202							
Mast/Leg	CM202	CM6	CM10	CM110	CM115	CM120	UT10	UT20	UT30
9'	11'	11'	14'	14'	19'	24'	14'	24'	37'

*Note: Add two feet to the cable length if you are mounting the enclosure on the leg base of a light-weight tripod.*

The 107 ships with:

- (1) Resource CD

### 1.1 Specifications

Sensor: BetaTherm 100K6A Thermistor

Temperature  
Measurement Range: -35° to +50°C

Thermistor Inter-  
changeability Error: Typically  $\leq \pm 0.2^\circ\text{C}$  over  $0^\circ\text{C}$  to  $50^\circ\text{C}$ ;  $\pm 0.4$  @  $-35^\circ\text{C}$

Thermistor  
Survival Range:  $-50^\circ\text{C}$  to  $+100^\circ\text{C}$

Steinhart-Hart  
Equation Error:  $\leq \pm 0.01^\circ\text{C}$  over  $-35^\circ$  to  $+50^\circ\text{C}$  (CRBasic dataloggers only)

Polynomial  
 Linearization Error:  $<\pm 0.5^{\circ}\text{C}$  over  $-35^{\circ}\text{C}$  to  $+50^{\circ}\text{C}$  (Edlog dataloggers only)

Time Constant  
 In Air: Between 30 and 60 seconds in a wind speed of  $5\text{ m s}^{-1}$

Maximum Lead  
 Length: 1000 ft.

---

**NOTE** The black outer jacket of the cable is Santoprene<sup>®</sup> rubber. This compound was chosen for its resistance to temperature extremes, moisture, and UV degradation. However, this jacket will support combustion in air. It is rated as slow burning when tested according to U.L. 94 H.B. and will pass FMVSS302. Local fire codes may preclude its use inside buildings.

---

## 2. Accuracy

The overall probe accuracy is a combination of the thermistor's interchangeability specification, the precision of the bridge resistors, and the Steinhart-Hart equation error (CRBasic dataloggers) or polynomial error (Edlog dataloggers). In a "worst case" all errors add to an accuracy of  $\pm 0.4^{\circ}\text{C}$  over the range of  $-24^{\circ}$  to  $48^{\circ}\text{C}$  and  $\pm 0.9^{\circ}\text{C}$  over the range of  $-35^{\circ}\text{C}$  to  $50^{\circ}\text{C}$ . The major error component is the interchangeability specification of the thermistor, tabulated in Table 2-1. For the range of  $0^{\circ}$  to  $50^{\circ}\text{C}$ , the interchangeability error is predominantly offset and can be determined with a single point calibration. Compensation can then be done with an offset entered in the measurement instruction. The bridge resistors are 0.1% tolerance with a 10 ppm temperature coefficient. Polynomial errors are tabulated in Table 2-2 and plotted in Figure 2-1.

<b>TABLE 2-1. Thermistor Interchangeability Specification</b>	
<b>Temperature (<math>^{\circ}\text{C}</math>)</b>	<b>Temperature Tolerance (<math>\pm^{\circ}\text{C}</math>)</b>
-40	0.50
-30	0.40
-20	0.30
-10	0.20
0 to +50	0.10

<b>TABLE 2-2. Polynomial Error for Edlog Dataloggers</b>	
-35 to +50	$<\pm 0.5^{\circ}\text{C}$
-24 to +48	$<\pm 0.1^{\circ}\text{C}$

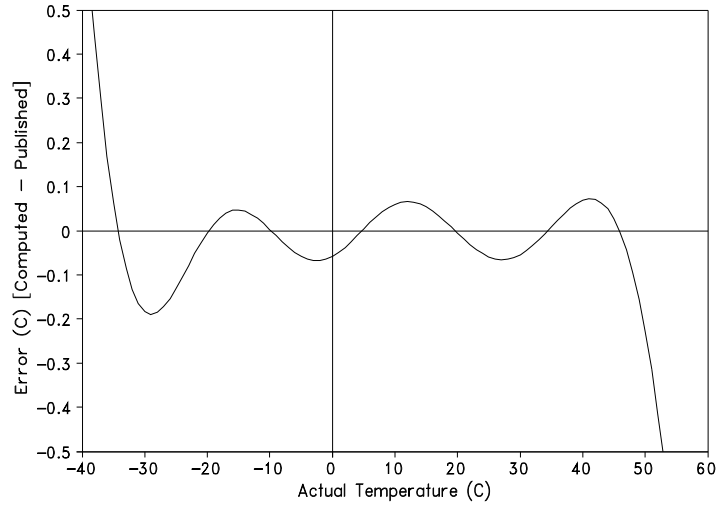


FIGURE 2-1. Error Produced by Polynomial Fit to Published Values (Edlog dataloggers only)

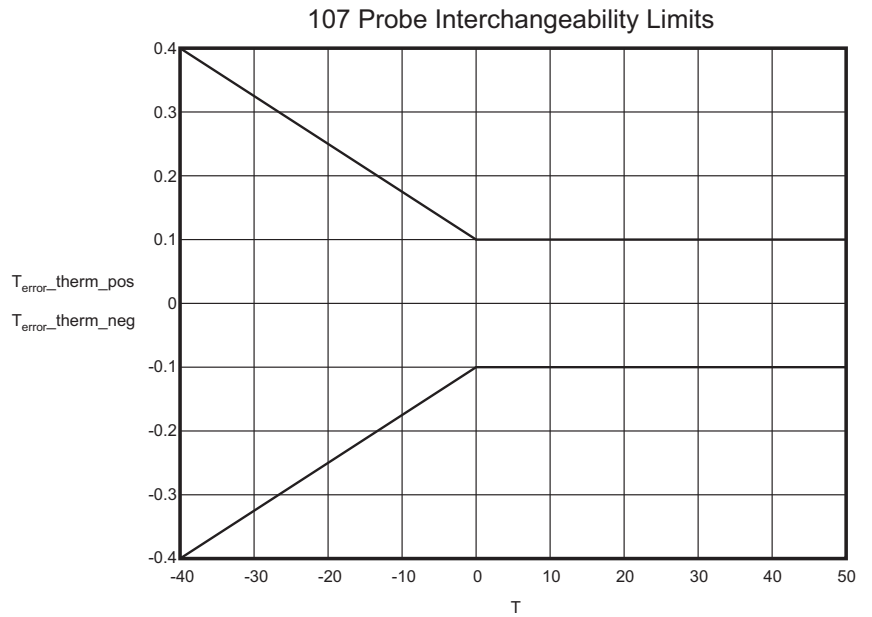


FIGURE 2-2. Probe Interchangeability Limits

## 3. Installation

### 3.1 Air Temperature

#### 3.1.1 Siting

For air temperature measurements, sensors should be located over an open level area at least 9 m (EPA) in diameter. The surface should be covered by short grass, or where grass does not grow, the natural earth surface. Sensors should be located at a distance of at least four times the height of any nearby obstruction, and at least 30 m (EPA) from large paved areas. Sensors should be protected from thermal radiation, and adequately ventilated.

Standard air temperature measurement heights:

- 1.5 m +/- 1.0 m (AASC)
- 1.25 – 2.0 m (WMO)
- 2.0 m (EPA)
- 2.0 m and 10.0 m temperature difference (EPA)

The probe is designed to be buried or submerged in water to 50' (21 psi).

#### 3.1.2 Assembly and Mounting

Tools required for installing on a tripod or tower:

- 1/2" open end wrench
- small screw driver provided with datalogger
- small Phillips screw driver
- UV resistant cable ties
- small pair of diagonal-cutting pliers

The 107 must be housed inside a radiation shield when the sensor will be exposed to solar radiation (i.e., air temperature measurements made in the field). The 41303-5A Radiation shield has a U-bolt for attaching the shield to tripod mast / tower leg (Figure 3-1), or CM200 series crossarm (Figure 3-2). The radiation shield ships with the U-bolt configured for attaching the shield to a vertical pipe. Move the U-bolt to the other set of holes to attach the shield to a crossarm.

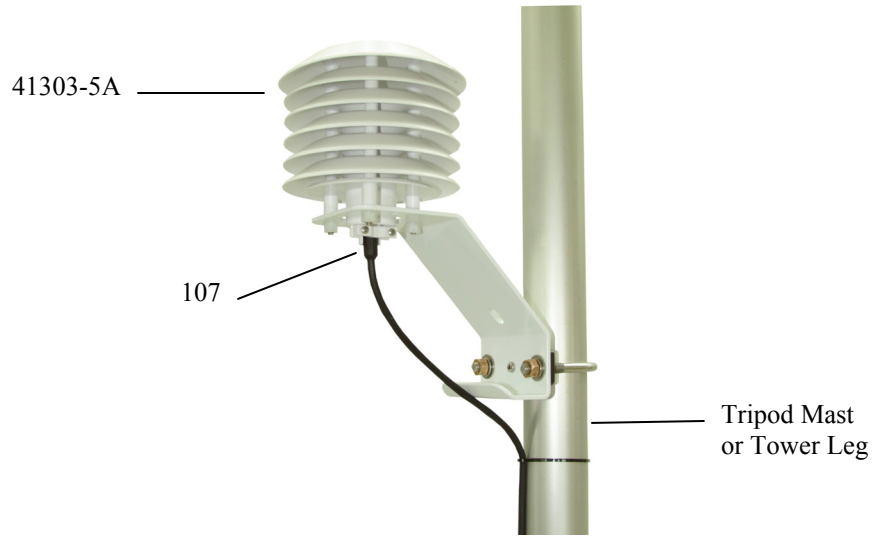


FIGURE 3-1. 107 and 41303-5A Radiation Shield on a Tripod Mast

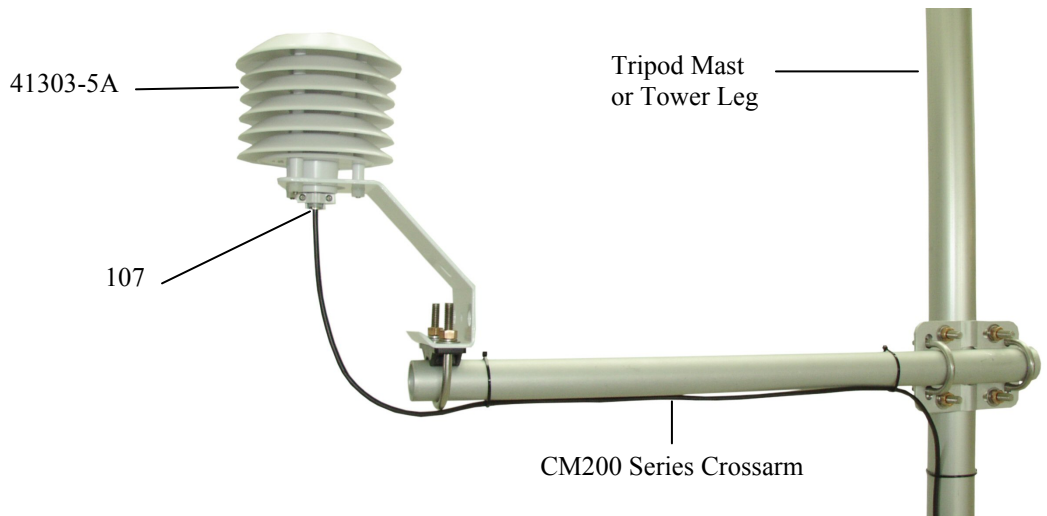


FIGURE 3-2. 107 and 41303-5A Radiation Shield on a CM200 Series Crossarm

The 107 is held within the 41303-5A by a mounting clamp on the bottom plate of the 41303-5A (Figure 3-2). Loosen the two mounting clamp screws, and insert the sensor through the clamp and into the shield. Tighten the screws to secure the sensor in the shield, and route the sensor cable to the instrument enclosure. Secure the cable to the tripod/tower using cable ties.

### 3.2 Soil Temperature

The 107 is suitable for shallow burial only. It should be placed horizontally at the desired depth to avoid thermal conduction from the surface to the thermistor. Placement of the cable inside a rugged conduit may be advisable for long cable runs, especially in locations subject to digging, mowing, traffic, use of power tools, or lightning strikes.

### 3.3 Water Temperature

The 107 can be submerged to 50 feet. Please note that the 107 is not weighted. Therefore, the installer should either add a weighting system or secure the probe to a fixed or submerged object such as piling.

## 4. Wiring

The connection of a 107-L to a Campbell Scientific datalogger is given in Table 4-1. Refer to the ET107, ET106, or MetData1 manual for connecting a 107-LC to the weather station. Temperature is measured with one Single-Ended input channel and a Voltage Excitation channel. Multiple 107-L probes can be connected to the same excitation channel (the number of probes per excitation channel is physically limited by the number of lead wires that can be inserted into a single excitation terminal, approximately six).

<b>Color</b>	<b>Description</b>	<b>CR800 CR850 CR5000 CR3000 CR1000</b>	<b>CR510 CR500 CR10(X)</b>	<b>21X CR7 CR23X</b>
Black	Voltage Excitation	Switched Voltage Excitation	Switched Excitation	Switched Excitation
Red	Temperature Signal	Single-Ended Input	Single-Ended Input	Single-Ended Input
Purple	Signal Ground	⏏	AG	⏏
Clear	Shield	⏏	G	⏏

## 5. Programming

**NOTE**

This section is for users who write their own datalogger programs. A datalogger program to measure this sensor can be generated using Campbell Scientific’s Short Cut Program Builder software. You do not need to read this section to use Short Cut.

The datalogger is programmed using either CRBasic or Edlog. Dataloggers that use CRBasic include our CR800, CR850, CR1000, CR3000, CR5000, and CR9000(X). Dataloggers that use Edlog include our CR510, CR10(X), CR23X, and CR7. CRBasic and Edlog are included with LoggerNet, PC400, and RTDAQ software.

If applicable, please read “Section 5.4—Electrically Noisy Environments” and “Section 5.5—Long Lead Lengths” prior to programming the datalogger. Measurement details are provided in Section 6.

### 5.1 CRBasic

The Therm107 measurement instruction is used with dataloggers that are programmed with CRBasic to measure the 107 probe. Therm107 makes a half bridge voltage measurement, and converts the measurement result to temperature using the Steinhart-Hart equation. With a multiplier of 1 and an offset of 0, the output is temperature in degrees C. With a multiplier of 1.8 and an offset of 32, the output is temperature in degrees F.

### 5.2 Edlog

The Temp(107) measurement instruction (P11) is used with dataloggers that are programmed with Edlog to measure the 107 probe. P11 makes half bridge voltage measurement, and converts the measurement result to temperature using a fifth order polynomial. With a multiplier of 1 and an offset of 0, the output is temperature in degrees C. With a multiplier of 1.8 and an offset of 32, the output is temperature in degrees F.

### 5.3 Example Programs

Color	Description	CR1000	CR10X
Black	Excitation	EX1 or VX1	E1
Red	Signal	SE1	SE1
Purple	Signal Ground	$\underline{\underline{\text{⏏}}}$	AG
Clear	Shield	$\underline{\underline{\text{⏏}}}$	G

Both example programs measure a 107 temperature probe every second and store a 60 minute average temperature.

### 5.3.1 Example Program for CR1000 Datalogger

```
'CR1000
This example program measures a single 107 Thermistor probe
once a second and stores the average temperature every 60 minutes.

Declare the variables for the temperature measurement
Public T107_C

Define a data table for 60 minute averages:
DataTable(Table1,True,-1)
    DataInterval(0,60,Min,0)
    Average(1,T107_C,IEEEE4,0)
EndTable

BeginProg
    Scan(1,Sec,1,0)
    Measure the temperature
    Therm107(T107_C,1,1,Vx1,0,_60Hz,1.0,0.0)
    Call Data Table
    CallTable(Table1)
    NextScan
EndProg
```

### 5.3.2 Example Program for CR10X Datalogger

```
;{CR10X}
*Table 1 Program
01: 1.0000 Execution Interval (seconds)

1: Temp (107) (P11)
1: 1 Reps
2: 1 SE Channel
3: 21 Excite all reps w/E1, 60Hz, 10ms delay
4: 1 Loc [ T107_C ]
5: 1.0 Multiplier
6: 0.0 Offset

3: If time is (P92)
1: 0 Minutes (Seconds --) into a
2: 60 Interval (same units as above)
3: 10 Set Output Flag High (Flag 0)

4: Set Active Storage Area (P80)
1: 1 Final Storage Area 1
2: 101 Array ID

5: Real Time (P77)
1: 1220 Year,Day,Hour/Minute (midnight = 2400)

6: Average (P71)
1: 1 Reps
2: 1 Loc [ T107_C ]
```

## 5.4 Electrically Noisy Environments

AC power lines can be the source of electrical noise. If the datalogger is in an electronically noisy environment, the 107 temperature measurement should be measured with 60 Hz rejection. For CRBasic loggers, the Therm107 Integration parameter has options for 50 and 60 Hz rejection. Sixty and 50 Hz rejection is available as an option in the Excitation Channel parameter of Instruction 11 for the CR10X, CR510, and CR23X dataloggers. For the CR10, CR21X and CR7, the 107 should be measured with the AC half bridge (Instruction 5).

### Example 5.4-1. CR1000 measurement instruction with 60 Hz rejection:

```
Therm107(T107_C,1,1,1,0,_60Hz,1.0,0.0)
```

### Example 5.4-2. Sample CR10(X) Instructions Using AC Half Bridge

1: AC Half Bridge (P5)		
1:	1	Reps
2:	22	7.5 mV 60 Hz Rejection Range
3:	9	SE Channel
4:	3	Excite all reps w/Exchan 3
5:	2000	mV Excitation ;Use 4000 mV on 21X and CR7
6:	1	Loc [ Air_Temp ]
7:	800	Mult
8:	0	Offset
2: Polynomial (P55)		
1:	1	Reps
2:	1	X Loc [ Air_Temp ]
3:	1	F(X) Loc [ Air_Temp ]
4:	-53.46	C0
5:	90.807	C1
6:	-83.257	C2
7:	52.283	C3
8:	-16.723	C4
9:	2.211	C5

## 5.5 Long Lead Lengths

For CRBasic loggers, the 60 and 50 Hz integration options include a 3 ms settling time; longer settling times can be entered into the Settling Time parameter. The 60 and 50 Hz rejection options for the CR10X, CR510, and CR23X include a delay to accommodate long lead lengths. For the CR10, 21X, and CR7, if the 107 has lead lengths of more than 300 feet, use the DC Half Bridge instruction (Instruction 4) with a 20 millisecond delay to measure temperature.

The delay provides a longer settling time before the measurement is made. Do not use the 107 with long lead lengths in an electrically noisy environment.

**Example 5.5-1. CR1000 measurement instruction with 20 mSec (20000 µSec) delay:**

Therm107(T107\_C,1,1,1,20000,\_60Hz,1.0,0.0)

**Example 5.5-2. CR10X Measurement Instructions Using DC Half Bridge with Delay**

1: Excite-Delay (SE) (P4)		
1:	1	Reps
2:	2	7.5 mV Slow Range
3:	9	SE Channel
4:	3	Excite all reps w/Exchan 3
5:	2	Delay (units 0.01 sec)
6:	2000	mV Excitation ;Use 4000 mV on 21X and CR7
7:	1	Loc [ Air_Temp ]
8:	.4	Mult ;Use 0.2 on 21X and CR7
9:	0	Offset
2: Polynomial (P55)		
1:	1	Reps
2:	1	X Loc [ Air_Temp ]
3:	1	F(X) Loc [ Air_Temp ]
4:	-53.46	C0
5:	90.807	C1
6:	-83.257	C2
7:	52.283	C3
8:	-16.723	C4
9:	2.211	C5

## 6. Measurement Details

Understanding the details in this section are not necessary for general operation of the 107 Probe with CSI's dataloggers.

### 6.1 Therm107 Instruction

Therm107 instruction applies a precise 2500 mV excitation voltage and measures the voltage drop across the 1K ohm resistor (Figure 6-1). The ratio of measured voltage (Vs) to the excitation voltage (Vx) is related to thermistor resistance (Rs), and the 1000 and 249K ohm fixed resistors as shown below:

$$V_s/V_x = 1000/(R_s+249000+1000)$$

Therm107 calculates Rs from the voltage ratio, and converts Rs to temperature using the Steinhart-Hart equation:

$$T = 1/(A+B(\ln R_s)+C(\ln R_s)^3) - 273.15$$

Where T is the temperature returned in degrees Celsius, and A, B, and C are coefficients provided by the thermistor manufacturer:

$$A = 8.271111E-4$$

$$B = 2.088020E-4$$

$$C = 8.059200E-8$$

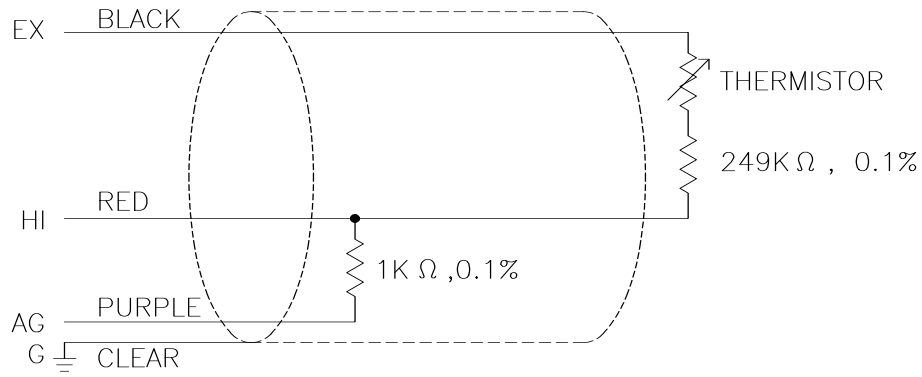


FIGURE 6-1. 107 Thermistor Probe Schematic

## 6.2 Temp(107) Instruction (P11)

The Temp(107) instruction (P11) applies a precise 2VAC (4VAC with the 21X and CR7) excitation voltage and measures the voltage drop across the 1K ohm resistor (Figure 6-2). The ratio of measured voltage ( $V_s$ ) to the excitation voltage ( $V_x$ ) is related to thermistor resistance ( $R_s$ ), and the 1000 and 249K ohm fixed resistors as shown below:

$$V_s/V_x = 1000/(R_s+249000+1000)$$

Instruction P11 converts the ratio  $V_s/V_x * 800$  to temperature using a 5<sup>th</sup> order polynomial. The polynomial coefficients are shown in Table 6-1. Thermistor resistance, and computed temperature over a -40 to +60 degree Celsius range is shown in Table 6-2.

Parameter 3 specifies the excitation channel to be used for the measurement, with options to increment the excitation channel for each repetition, integration options for 60 or 50Hz noise rejection, and 10 ms delay for use with long lead lengths (Sections 5.4 and 5.5):

### Excitation/Integration Codes

Code	Result
0x	excite all rep with channel x
1x	increment chan x with each rep
2x	excite all reps with channel x, 60 Hz rejection, 10 ms delay
3x	excite all reps with channel x, 50 Hz rejection, 10 ms delay
4x	increment chan x with each rep, 60 Hz rejection, 10 ms delay
5x	increment chan x with each rep, 50 Hz rejection, 10 ms delay

Coefficient	Value
C0	-53.4601
C1	90.807
C2	-83.257
C3	52.283
C4	-16.723
C5	2.211

**TABLE 6-2. Temperature, Resistance,  
and Datalogger Output**

<b>Temperature °C</b>	<b>Resistance OHMS</b>	<b>Output °C</b>
-40.00	4067212	-39.18
-38.00	3543286	-37.55
-36.00	3092416	-35.83
-34.00	2703671	-34.02
-32.00	2367900	-32.13
-30.00	2077394	-30.18
-28.00	1825568	-28.19
-26.00	1606911	-26.15
-24.00	1416745	-24.11
-22.00	1251079	-22.05
-20.00	1106485	-20.00
-18.00	980100	-17.97
-16.00	869458	-15.95
-14.00	772463	-13.96
-12.00	687276	-11.97
-10.00	612366	-10.00
-8.00	546376	-8.02
-6.00	488178	-6.05
-4.00	436773	-4.06
-2.00	391294	-2.07
0.00	351017	-0.06
2.00	315288	1.96
4.00	283558	3.99
6.00	255337	6.02
8.00	230210	8.04
10.00	207807	10.06
12.00	187803	12.07
14.00	169924	14.06
16.00	153923	16.05
18.00	139588	18.02
20.00	126729	19.99
22.00	115179	21.97
24.00	104796	23.95
26.00	95449	25.94
28.00	87026	27.93
30.00	79428	29.95
32.00	72567	31.97
34.00	66365	33.99
36.00	60752	36.02
38.00	55668	38.05
40.00	51058	40.07
42.00	46873	42.07
44.00	43071	44.05
46.00	39613	46.00
48.00	36465	47.91
50.00	33598	49.77
52.00	30983	51.59
54.00	28595	53.35
56.00	26413	55.05
58.00	24419	56.70
60.00	22593	58.28

## 7. Maintenance and Calibration

The 107 Probe requires minimal maintenance. For air temperature measurements, check monthly to make sure the radiation shield is clean and free from debris. Periodically check cabling for signs of damage and possible moisture intrusion.

For most applications it is unnecessary to calibrate the 107 to eliminate the thermistor offset. However, for those users that are interested, the following briefly describes calibrating the 107 probes.

A single point calibration can be performed to determine the 107 temperature offset (thermistor interchangeability). For Edlog dataloggers, the value of the offset must be chosen so that the probe outputs the temperature calculated by the polynomial, not the actual calibration temperature. For example, a 107 is placed in a calibration chamber that is at 0°C and the probe outputs 0.1°C. An offset of -0.16 is required for Edlog dataloggers, because at 0°C the polynomial calculates a temperature of -0.06°C (Table 6-2).

---

### NOTE

For all factory repairs and recalibrations, customers must get a returned material authorization (RMA). Customers must also fill out a “Declaration of Hazardous Material and Decontamination” form and comply with the requirement specified in it. Refer to the “Warranty and Assistance” page for more information.

---

## 8. Troubleshooting

Symptom: Temperature is NAN, -INF, -9999

Verify the red wire is connected to the correct Single-Ended analog input channel as specified by the measurement instruction, and the purple wire is connected to datalogger ground.

Symptom: Temperature is -86, -53

Verify the black wire is connected to the switched excitation channel as specified by the measurement instruction.

Symptom: Incorrect Temperature

Verify the multiplier and offset parameters are correct for the desired units (Section 5). Check the cable for signs of damage and possible moisture intrusion.

Symptom: Unstable Temperature

Try using the 60 or 50 Hz integration options, and/or increasing the settling time as described in Sections 5.4 and 5.5. Make sure the clear shield wire is connected to datalogger ground, and the datalogger is properly grounded.





## **Campbell Scientific Companies**

---

### **Campbell Scientific, Inc. (CSI)**

815 West 1800 North  
Logan, Utah 84321  
UNITED STATES  
www.campbellsci.com • info@campbellsci.com

### **Campbell Scientific Africa Pty. Ltd. (CSAf)**

PO Box 2450  
Somerset West 7129  
SOUTH AFRICA  
www.csafrica.co.za • cleroux@csafrica.co.za

### **Campbell Scientific Australia Pty. Ltd. (CSA)**

PO Box 444  
Thuringowa Central  
QLD 4812 AUSTRALIA  
www.campbellsci.com.au • info@campbellsci.com.au

### **Campbell Scientific do Brazil Ltda. (CSB)**

Rua Luisa Crapsi Orsi, 15 Butantã  
CEP: 005543-000 São Paulo SP BRAZIL  
www.campbellsci.com.br • suporte@campbellsci.com.br

### **Campbell Scientific Canada Corp. (CSC)**

11564 - 149th Street NW  
Edmonton, Alberta T5M 1W7  
CANADA  
www.campbellsci.ca • dataloggers@campbellsci.ca

### **Campbell Scientific Centro Caribe S.A. (CSCC)**

300 N Cementerio, Edificio Breller  
Santo Domingo, Heredia 40305  
COSTA RICA  
www.campbellsci.cc • info@campbellsci.cc

### **Campbell Scientific Ltd. (CSL)**

Campbell Park  
80 Hathern Road  
Shepshed, Loughborough LE12 9GX  
UNITED KINGDOM  
www.campbellsci.co.uk • sales@campbellsci.co.uk

### **Campbell Scientific Ltd. (France)**

3 Avenue de la Division Leclerc  
92160 ANTONY  
FRANCE  
www.campbellsci.fr • info@campbellsci.fr

### **Campbell Scientific Spain, S. L.**

Avda. Pompeu Fabra 7-9, local 1  
08024 Barcelona  
SPAIN  
www.campbellsci.es • info@campbellsci.es

*Please visit [www.campbellsci.com](http://www.campbellsci.com) to obtain contact information for your local US or International representative.*