


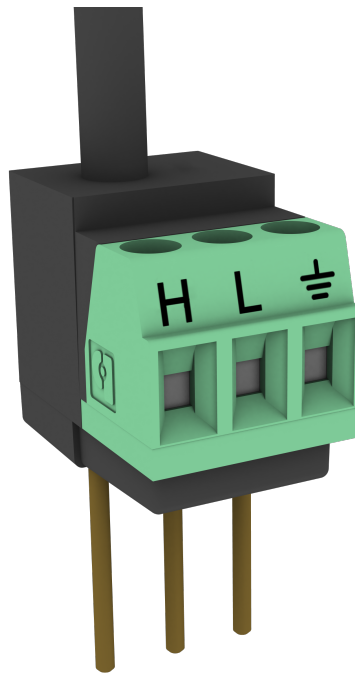

# 3WHB10K

## 3-Wire Half Bridge Terminal Input Module



# Table of contents

---

<b>1. Function</b>	<b>1</b>
<b>2. Specifications</b>	<b>2</b>
<b>3. Wiring</b>	<b>2</b>
<b>4. Programming examples</b>	<b>4</b>
4.1 GRANITE 9/10 program example	5
4.2 GRANITE 6/CR6 program example	6
4.3 CR1000X program example	6
4.4 CR1000 program example	7
4.5 CR9000X program example	7
<b>5. 100 Ohm PRT in 3-wire half bridge</b>	<b>8</b>
5.1 Excitation voltage	8
5.2 Calibrating a PRT	9
5.3 Compensation for wire resistance	9


# 1. Function

---

A terminal input module (TIM) connects directly to a data logger or GRANITE analog input module. It provides completion resistors for resistive bridge measurements, voltage dividers, and precision current shunts. The 3WHB10k is used in 3-wire half bridge measurements and includes a 10 k $\Omega$  completion resistor.

**NOTE:**

The GRANITE 6 and CR6 include the fixed resistor and current excitation required to complete the half-bridge circuit without a terminal input module. However, the GRANITE 6 and CR6 are still compatible with a terminal input module and may be used with one, should the application require it.

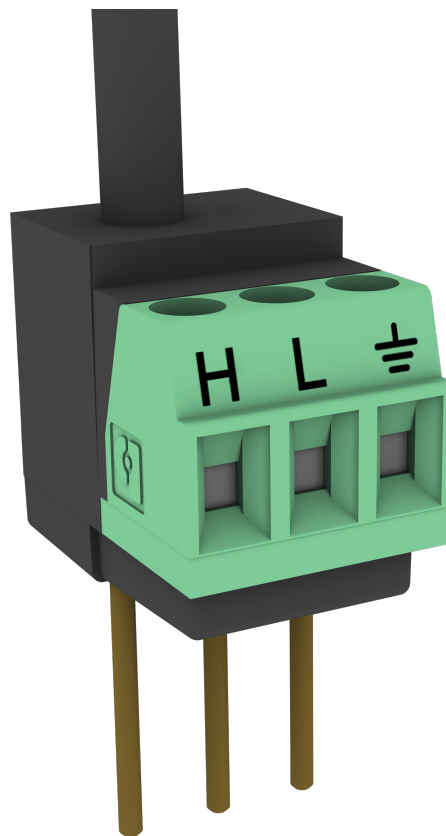

*FIGURE 1-1. Terminal input module*

## 2. Specifications

---

10 k $\Omega$  completion resistor

Tolerance @ 25 °C:  $\pm 0.01\%$

Maximum temperature coefficient  $\pm 0.8$  ppm/°C

Power rating @ 70 °C: 0.25 W

EU certificate of conformity: [https://s.campbellsci.com/documents/us/compliance/eudoc\\_terminal-input-modules.pdf](https://s.campbellsci.com/documents/us/compliance/eudoc_terminal-input-modules.pdf)

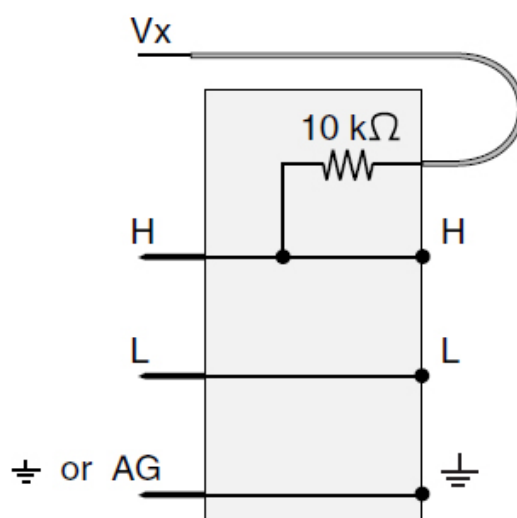


FIGURE 2-1. Schematic


## 3. Wiring

---

The terminal input module is connected to adjacent **H** and **L** terminals. When making 3-wire half bridge measurements, the 3WHB10K performs two single-ended measurements. The sense wires from the platinum resistance thermometer (PRT) attach to the 3WHB10K. The black excitation wire is connected to an excitation terminal. In the following example, the 3WHB10K is connected to the **1H** and **1L** terminals, using them for two single-ended measurements. The excitation wire is connected to excitation terminal **VX1** (FIGURE 3-1 (p. 3)).

Often, sensors only have two wires. Use the 3WHB10K as a fixed, known resistor to measure them. Wire a jumper between the **H** and **L** terminals on the 3WHB10K to allow the sensor to receive excitation voltage. Without the jumper, the sensor will not function. See [FIGURE 3-1](#) (p. 3).

When using a 2-wire sensor with the 3WHB10K, use the `BrHalf()` (or `CDM_BrHalf()`) instruction in place of the `BrHalf3W()` (or `CDM_BrHalf3W()`) instruction. The parameters of the `BrHalf3W()` and `BrHalf()` instructions are identical; so, only the instruction name needs to be changed in the [Programming examples](#) (p. 4) example programs.

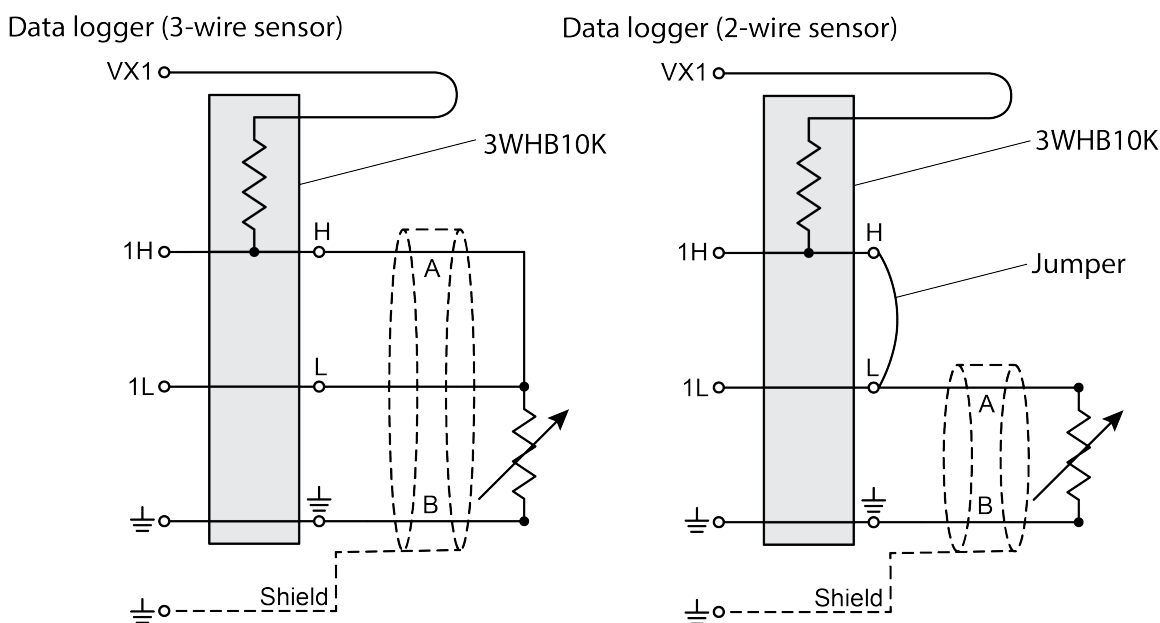

*FIGURE 3-1. 3-wire half bridge used to measure PRT*

The terminal spacing of the GRANITE 6 and GRANITE analog input module is different than other data loggers. The terminal input modules are still compatible, but the pins must be gently bent inward a small amount to allow the terminal input module to be mounted.

It is still possible to use terminal input modules in adjacent terminal blocks if the modules are staggered. This is done by gently bending one module forward and the next terminal backward enough to clear the first module. Continue to alternate the modules as needed.

Table 3-1: 3WHB10K connections to Campbell Scientific data loggers

Function	Label/Wire	GRANITE analog input module	GRANITE 6, CR6	CR3000, CR1000X, CR800, CR850, CR1000	CR9000X
Excitation	Black wire	X1	U5	VX1	Excitation 1
V1 high reference	H	1H	U1	1H	1H
V1 low sense	L	1L	U2	1L	1L
Ground	G	⏏	⏏	⏏	⏏

<sup>1</sup> The GRANITE 9 and GRANITE 10 do not directly make analog measurements. Instead, they use analog input modules such as the VOLT 108 or VOLT 116. When making a half-bridge measurement, the terminal input module is connected to the analog input module, which is then connected to the GRANITE 9 or GRANITE 10.

## 4. Programming examples

The following examples show the two instructions necessary to 1) make the measurement and 2) calculate the temperature. The result of the half bridge measurement as shown is  $R_s/R_0$ , the input required for the PRT algorithm to calculate temperature.

If using a calibrated sensor, the exact measurement of  $R_0$  will be known. Use this value to increase the accuracy of the `PRTCalc()` instruction by inserting the following equation between the `BrHalf4W()` and `PRTCalc()` instructions in the example programs.

$$Rs\_R0 = Rs\_R0*100/R0$$

where  $R0$  is the sensor resistance at 0 °C

The following examples are based on a maximum sensor resistance of 100  $\Omega$  at 0 °C. The excitation voltages used were chosen with the assumption that the temperature would not exceed 50 °C. Calculation of optimum excitation voltage is discussed in [Excitation voltage](#) (p. 8).

## 4.1 GRANITE 9/10 program example

The GRANITE 9 and GRANITE 10 require the use of an analog input module, such as the VOLT 108, when making a half-bridge measurement.

### CRBasic Example 1: GRANITE 9/10 3-wire half bridge example

```
'3-wire half bridge example
'GRANITE 9 and GRANITE 10 data loggers (with a VOLT 108)

'Declare Variables and Units
Public Temp_C_3wire
Public Rs_R0

'Define Data Tables
DataTable(Hourly,True,-1)
    DataInterval(0,60,Min,10)
    Average(1,Temp_C_3wire,IEEE4,False)
EndTable

'Main Program
BeginProg
    'Configure the VOLT 108 Module and assign it CPI address 'CPI_BUSA+1'
    CPIAddModule(VOLT108,10," ",CPI_BUSA+1)
    'Main Scan
    Scan(5,Sec,1,0)
        'Half Bridge, 3-wire measurements on the VOLT 108
        CDM_BrHalf3W(VOLT108,CPI_BUSA+1,Rs_R0,1,mV1000,1,1,1,3200,True,500,60,1,0)
        'PRT temperature calculation
        PRTCalc (Temp_C_3wire,1,Rs_R0,0,1.0,0)
        'Call Data Tables and Store Data
        CallTable Hourly
    NextScan
EndProg
```

## 4.2 GRANITE 6/CR6 program example

The GRANITE 6 and CR6 include the fixed resistor and current excitation required to complete the half-bridge circuit without a terminal input module. However, the GRANITE 6 and CR6 are still compatible with a terminal input module and may be used with one, should the application require it.

### CRBasic Example 2: GRANITE 6/CR6 3-wire half bridge example

```
'GRANITE 6/CR6 data logger 3-wire half bridge using a terminal input module
```

```
Public Rs_R0, Temp_C
```

```
DataTable (Hourly,True,-1)
```

```
  DataInterval (0,60,Min,0)
```

```
  Average (1,Temp_C,IEEE4,0)
```

```
EndTable
```

```
BeginProg
```

```
  Scan (1,Sec,0,0)
```

```
    BrHalf3W (Rs_R0,1,mV1000,U1,U4,1,2500,True ,0,250,100,0)
```

```
    PRTCalc (Temp_C,1,Rs_R0,0,1,0)
```

```
    CallTable Hourly
```

```
  NextScan
```

```
EndProg
```

## 4.3 CR1000X program example

### CRBasic Example 3: CR1000X 3-wire half bridge example

```
'CR1000X-series data logger 3-wire half bridge
```

```
Public Rs_R0, Temp_C
```

```
DataTable (Hourly,True,-1)
```

```
  DataInterval (0,60,Min,0)
```

```
  Average (1,Temp_C,IEEE4,0)
```

```
EndTable
```

```
BeginProg
```

```
  Scan (1,Sec,0,0)
```

```
    BrHalf3W (Rs_R0,1,mV1000,1,Vx1,1,3200,True ,0,250,100,0)
```

```
    PRTCalc (Temp_C,1,Rs_R0,0,1,0)
```

```
    CallTable Hourly
```

```
  NextScan
```

```
EndProg
```



## 4.4 CR1000 program example

### CRBasic Example 4: CR1000 3-wire half bridge example

```
'CR1000-series data logger 3-wire half bridge

Public Rs_R0, Temp_C

DataTable (Hourly,True,-1)
  DataInterval (0,60,Min,0)
  Average (1,Temp_C,IEEE4,0)
EndTable

BeginProg
  Scan (1,Sec,0,0)
    BrHalf3W (Rs_R0,1,mV2500,1,Vx1,1,2500,True,0,250,100,0)
    PRTCalc (Temp_C,1,Rs_R0,0,1,0)
    CallTable Hourly
  NextScan
EndProg
```

## 4.5 CR9000X program example

### CRBasic Example 5: CR9000X 3-wire half bridge example

```
'CR9000X data logger 3-wire half bridge

Public Rs_Ro, Temp_F

DataTable (Temp_F,1,-1)
  DataInterval (0,60,Min,0)
  Sample (1,Temp_F,FP2)
EndTable

BeginProg
  Scan (1,mSec,0,0)
    BrHalf3W (RS_Ro,1,mV1000,5,1,6,1,1,3200,True,30,40,100,0)
    PRTCalc (Temp_F,1,Rs_Ro,0,1.8,32)
    CallTable Temp_F
  NextScan
EndProg
```

# 5. 100 Ohm PRT in 3-wire half bridge

---

The advantages of the 3-wire half bridge over other measurements that correct for wire resistance such as a 4-wire half bridge, are that it only requires 3 wires going to the sensor and takes 2 single-ended terminals, whereas the 4-wire half bridge requires 4 wires and 2 differential channels.

The result of the 3-wire half bridge instruction is equivalent to the ratio of the PRT resistance,  $R_s$  to the resistance of the 10 k fixed resistor,  $R_f$ .

$$\frac{R_s}{R_f}$$

The `PRTCalc()` instruction computes the temperature (°C) for a DIN 43760 standard PRT from the ratio of the PRT resistance at the temperature being measured ( $R_s$ ) to its resistance at 0 °C ( $R_0$ ). Thus, a multiplier of  $R_f/R_0$  is used with the 3-wire half bridge instruction to obtain the desired intermediate,  $R_s/R_0 = (R_s/R_f \times R_f/R_0)$ . If  $R_f$  and  $R_0$  are equal, the multiplier is 1.

The fixed resistor must be thermally stable. The 0.8 ppm/°C temperature coefficient would result in a maximum error of 0.035 °C at 125 °C. This measurement is ratiometric ( $R_s/R_f$ ) and does not rely on the absolute values of either  $R_s$  or  $R_f$ .

The properties of the 10 kΩ resistor do not affect the result. The purpose of this resistor in the circuit is to limit current.

## 5.1 Excitation voltage

When determining the excitation voltage, it is important to consider the maximum excitation current the sensor can experience without self-heating. This is typically less than 0.35 mA. Refer to the manufacturer's data sheet for the sensor for the specific value.

Once the maximum excitation current is known, the excitation voltage is then calculated.

$$V_x = I_x (R_f + R_{Smax})$$

Where:

$R_f$  = PRT completion resistor value

$R_{S_{\max}}$  = Maximum sensor resistance based on the maximum expected temperature to be measured

Using the typical 0.35 mA maximum excitation current, the maximum excitation voltage for the sensor when  $R_{S_{\max}}$  is 100  $\Omega$  is:

$$V_x = 0.35 \text{ mA} (10 \text{ k}\Omega + 100 \text{ }\Omega) = 3.54 \text{ V}$$

When  $R_{S_{\max}}$  is 1.25 k $\Omega$ , this changes to:

$$V_x = 0.35 \text{ mA} (10 \text{ k}\Omega + 1.25 \text{ k}\Omega) = 3.94 \text{ V}$$

## 5.2 Calibrating a PRT

The greatest source of error in a PRT is likely to be that the resistance at 0 °C deviates from the nominal value. Calibrating the PRT in an ice bath can correct this offset and any offset in the fixed resistor in the terminal input module.

The result of the 3-wire half bridge is:

$$\frac{V_2}{V_1} = \frac{I \bullet R_s}{I \bullet R_f} = \frac{R_s}{R_f}$$

With the PRT at 0 °C,  $R_s = R_0$ . Thus, the above result becomes  $R_0/R_f$ , the reciprocal of the multiplier required to calculate temperature,  $R_f/R_0$ . By making a measurement with the PRT in an ice bath, errors in both  $R_s$  and  $R_0$  can be accounted for.

To perform the calibration, connect the PRT to the data logger and program the data logger to measure the PRT with the 3-wire half bridge as shown in the example section (multiplier = 1). Place the PRT in an ice bath (@ 0 °C;  $R_s = R_0$ ). Read the result of the bridge measurement. The reading is  $R_s/R_f$ , which is equal to  $R_0/R_f$  since  $R_s = R_0$ . The correct value of the multiplier,  $R_f/R_0$ , is the multiplier used divided by this reading. For example, if, with a 100  $\Omega$  PRT, the initial reading is 0.9890, the correct multiplier is:  $R_f/R_0 = 100/0.9890 = 101.11$ .

## 5.3 Compensation for wire resistance

The 3-wire half bridge compensates for wire resistance by assuming that the resistance of wire A is the same as the resistance of wire B (FIGURE 3-1 (p. 3)). The maximum difference expected in wire resistance is 2%, but is more likely to be on the order of 1%. The resistance of  $R_s$  calculated with `BrHalf3W()`, is actually  $R_s$  plus the difference in resistance of wires A and B.

For example, assume that a 100  $\Omega$  PRT is separated from the data logger by 500 feet of 22 AWG wires. The average resistance of 22 AWG wire is 16.5  $\Omega$  per 1000 feet, which would give each 500-foot wire a nominal resistance of 8.3  $\Omega$ . Two percent of 8.3  $\Omega$  is 0.17  $\Omega$ . Assuming that the greater resistance is in wire B, the resistance measured for the PRT ( $R_0 = 100 \text{ }\Omega$ ) in the ice bath would be

100.17  $\Omega$ , and the resistance at 40 °C would be 115.71. The measured ratio  $R_s/R_0$  is 1.1551; the actual ratio is  $115.54/100 = 1.1554$ . The temperature computed by [PRTCalc\(\)](#) from the measured ratio would be about 0.1 °C lower than the actual temperature of the PRT. This source of error does not exist in a 4-wire half bridge where a differential measurement is used to directly measure the voltage across the PRT.

# Limited warranty

---

Products manufactured by Campbell Scientific are warranted by Campbell Scientific to be free from defects in materials and workmanship under normal use and service for twelve months from the date of shipment unless otherwise specified on the corresponding product webpage. See Product Details on the Ordering Information pages at [www.campbellsci.com](http://www.campbellsci.com). Other manufacturer's products, that are resold by Campbell Scientific, are warranted only to the limits extended by the original manufacturer.

Refer to [www.campbellsci.com/terms#warranty](http://www.campbellsci.com/terms#warranty) for more information.

**CAMPBELL SCIENTIFIC EXPRESSLY DISCLAIMS AND EXCLUDES ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.** Campbell Scientific hereby disclaims, to the fullest extent allowed by applicable law, any and all warranties and conditions with respect to the Products, whether express, implied or statutory, other than those expressly provided herein.

# Assistance

---

Products may not be returned without prior authorization.

Products shipped to Campbell Scientific require a Returned Materials Authorization (RMA) or Repair Reference number and must be clean and uncontaminated by harmful substances, such as hazardous materials, chemicals, insects, and pests. Please complete the required forms prior to shipping equipment.

Campbell Scientific regional offices handle repairs for customers within their territories. Please see the back page for the Global Sales and Support Network or visit [www.campbellsci.com/contact](http://www.campbellsci.com/contact) to determine which Campbell Scientific office serves your country.

To obtain a Returned Materials Authorization or Repair Reference number, contact your CAMPBELL SCIENTIFIC regional office. Please write the issued number clearly on the outside of the shipping container and ship as directed.

For all returns, the customer must provide a "Statement of Product Cleanliness and Decontamination" or "Declaration of Hazardous Material and Decontamination" form and comply with the requirements specified in it. The form is available from your CAMPBELL SCIENTIFIC regional office. Campbell Scientific is unable to process any returns until we receive this statement. If the statement is not received within three days of product receipt or is incomplete, the product will be returned to the customer at the customer's expense. Campbell Scientific reserves the right to refuse service on products that were exposed to contaminants that may cause health or safety concerns for our employees.

# Safety

---

**DANGER — MANY HAZARDS ARE ASSOCIATED WITH INSTALLING, USING, MAINTAINING, AND WORKING ON OR AROUND TRIPODS, TOWERS, AND ANY ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC.** FAILURE TO PROPERLY AND COMPLETELY ASSEMBLE, INSTALL, OPERATE, USE, AND MAINTAIN TRIPODS, TOWERS, AND ATTACHMENTS, AND FAILURE TO HEED WARNINGS, INCREASES THE RISK OF DEATH, ACCIDENT, SERIOUS INJURY, PROPERTY DAMAGE, AND PRODUCT FAILURE. TAKE ALL REASONABLE PRECAUTIONS TO AVOID THESE HAZARDS. CHECK WITH YOUR ORGANIZATION'S SAFETY COORDINATOR (OR POLICY) FOR PROCEDURES AND REQUIRED PROTECTIVE EQUIPMENT PRIOR TO PERFORMING ANY WORK.

Use tripods, towers, and attachments to tripods and towers only for purposes for which they are designed. Do not exceed design limits. Be familiar and comply with all instructions provided in product manuals. Manuals are available at [www.campbellsci.com](http://www.campbellsci.com). You are responsible for conformance with governing codes and regulations, including safety regulations, and the integrity and location of structures or land to which towers, tripods, and any attachments are attached. Installation sites should be evaluated and approved by a qualified engineer. If questions or concerns arise regarding installation, use, or maintenance of tripods, towers, attachments, or electrical connections, consult with a licensed and qualified engineer or electrician.

## General

- Protect from over-voltage.
- Protect electrical equipment from water.
- Protect from electrostatic discharge (ESD).
- Protect from lightning.
- Prior to performing site or installation work, obtain required approvals and permits. Comply with all governing structure-height regulations.
- Use only qualified personnel for installation, use, and maintenance of tripods and towers, and any attachments to tripods and towers. The use of licensed and qualified contractors is highly recommended.
- Read all applicable instructions carefully and understand procedures thoroughly before beginning work.
- Wear a **hardhat** and **eye protection**, and take **other appropriate safety precautions** while working on or around tripods and towers.
- **Do not climb** tripods or towers at any time, and prohibit climbing by other persons. Take reasonable precautions to secure tripod and tower sites from trespassers.
- Use only manufacturer recommended parts, materials, and tools.

## Utility and Electrical

- **You can be killed** or sustain serious bodily injury if the tripod, tower, or attachments you are installing, constructing, using, or maintaining, or a tool, stake, or anchor, come in **contact with overhead or underground utility lines**.
- Maintain a distance of at least one-and-one-half times structure height, 6 meters (20 feet), or the distance required by applicable law, **whichever is greater**, between overhead utility lines and the structure (tripod, tower, attachments, or tools).
- Prior to performing site or installation work, inform all utility companies and have all underground utilities marked.
- Comply with all electrical codes. Electrical equipment and related grounding devices should be installed by a licensed and qualified electrician.
- Only use power sources approved for use in the country of installation to power Campbell Scientific devices.

## Elevated Work and Weather

- Exercise extreme caution when performing elevated work.
- Use appropriate equipment and safety practices.
- During installation and maintenance, keep tower and tripod sites clear of un-trained or non-essential personnel. Take precautions to prevent elevated tools and objects from dropping.
- Do not perform any work in inclement weather, including wind, rain, snow, lightning, etc.

## Maintenance

- Periodically (at least yearly) check for wear and damage, including corrosion, stress cracks, frayed cables, loose cable clamps, cable tightness, etc. and take necessary corrective actions.
- Periodically (at least yearly) check electrical ground connections.

## Internal Battery

- Be aware of fire, explosion, and severe-burn hazards.
- Misuse or improper installation of the internal lithium battery can cause severe injury.
- Do not recharge, disassemble, heat above 100 °C (212 °F), solder directly to the cell, incinerate, or expose contents to water. Dispose of spent batteries properly.

WHILE EVERY ATTEMPT IS MADE TO EMBODY THE HIGHEST DEGREE OF SAFETY IN ALL CAMPBELL SCIENTIFIC PRODUCTS, THE CUSTOMER ASSUMES ALL RISK FROM ANY INJURY RESULTING FROM IMPROPER INSTALLATION, USE, OR MAINTENANCE OF TRIPODS, TOWERS, OR ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC.



## Global Sales & Support Network

*A worldwide network to help meet your needs*



### Campbell Scientific regional offices

#### Australia

**Location:** Garbutt, QLD Australia  
**Phone:** 61.7.4401.7700  
**Email:** [info@campbellsci.com.au](mailto:info@campbellsci.com.au)  
**Website:** [www.campbellsci.com.au](http://www.campbellsci.com.au)

#### Brazil

**Location:** São Paulo, SP Brazil  
**Phone:** 11.3732.3399  
**Email:** [vendas@campbellsci.com.br](mailto:vendas@campbellsci.com.br)  
**Website:** [www.campbellsci.com.br](http://www.campbellsci.com.br)

#### Canada

**Location:** Edmonton, AB Canada  
**Phone:** 780.454.2505  
**Email:** [dataloggers@campbellsci.ca](mailto:dataloggers@campbellsci.ca)  
**Website:** [www.campbellsci.ca](http://www.campbellsci.ca)

#### China

**Location:** Beijing, P. R. China  
**Phone:** 86.10.6561.0080  
**Email:** [info@campbellsci.com.cn](mailto:info@campbellsci.com.cn)  
**Website:** [www.campbellsci.com.cn](http://www.campbellsci.com.cn)

#### Costa Rica

**Location:** San Pedro, Costa Rica  
**Phone:** 506.2280.1564  
**Email:** [info@campbellsci.cc](mailto:info@campbellsci.cc)  
**Website:** [www.campbellsci.cc](http://www.campbellsci.cc)

#### France

**Location:** Vincennes, France  
**Phone:** 0033.0.1.56.45.15.20  
**Email:** [info@campbellsci.fr](mailto:info@campbellsci.fr)  
**Website:** [www.campbellsci.fr](http://www.campbellsci.fr)

#### Germany

**Location:** Bremen, Germany  
**Phone:** 49.0.421.460974.0  
**Email:** [info@campbellsci.de](mailto:info@campbellsci.de)  
**Website:** [www.campbellsci.de](http://www.campbellsci.de)

#### India

**Location:** New Delhi, DL India  
**Phone:** 91.11.46500481.482  
**Email:** [info@campbellsci.in](mailto:info@campbellsci.in)  
**Website:** [www.campbellsci.in](http://www.campbellsci.in)

#### South Africa

**Location:** Stellenbosch, South Africa  
**Phone:** 27.21.8809960  
**Email:** [sales@campbellsci.co.za](mailto:sales@campbellsci.co.za)  
**Website:** [www.campbellsci.co.za](http://www.campbellsci.co.za)

#### Spain

**Location:** Barcelona, Spain  
**Phone:** 34.93.2323938  
**Email:** [info@campbellsci.es](mailto:info@campbellsci.es)  
**Website:** [www.campbellsci.es](http://www.campbellsci.es)

#### Thailand

**Location:** Bangkok, Thailand  
**Phone:** 66.2.719.3399  
**Email:** [info@campbellsci.asia](mailto:info@campbellsci.asia)  
**Website:** [www.campbellsci.asia](http://www.campbellsci.asia)

#### UK

**Location:** Shepshed, Loughborough, UK  
**Phone:** 44.0.1509.601141  
**Email:** [sales@campbellsci.co.uk](mailto:sales@campbellsci.co.uk)  
**Website:** [www.campbellsci.co.uk](http://www.campbellsci.co.uk)

#### USA

**Location:** Logan, UT USA  
**Phone:** 435.227.9120  
**Email:** [info@campbellsci.com](mailto:info@campbellsci.com)  
**Website:** [www.campbellsci.com](http://www.campbellsci.com)