

CS240 and CS240DM

PT-1000 Class A,
Back-of-Module
Temperature Sensors



Guarantee

This equipment is guaranteed against defects in materials and workmanship. We will repair or replace products which prove to be defective during the guarantee period as detailed on your invoice, provided they are returned to us prepaid. The guarantee will not apply to:

- Equipment which has been modified or altered in any way without the written permission of Campbell Scientific
- Batteries
- Any product which has been subjected to misuse, neglect, acts of God or damage in transit.

Campbell Scientific will return guaranteed equipment by surface carrier prepaid. Campbell Scientific will not reimburse the claimant for costs incurred in removing and/or reinstalling equipment. This guarantee and the Company's obligation thereunder is in lieu of all other guarantees, expressed or implied, including those of suitability and fitness for a particular purpose. Campbell Scientific is not liable for consequential damage.

Please inform us before returning equipment and obtain a Repair Reference Number whether the repair is under guarantee or not. Please state the faults as clearly as possible, and if the product is out of the guarantee period it should be accompanied by a purchase order. Quotations for repairs can be given on request. It is the policy of Campbell Scientific to protect the health of its employees and provide a safe working environment, in support of this policy a "Declaration of Hazardous Material and Decontamination" form will be issued for completion.

When returning equipment, the Repair Reference Number must be clearly marked on the outside of the package. Complete the "Declaration of Hazardous Material and Decontamination" form and ensure a completed copy is returned with your goods. Please note your Repair may not be processed if you do not include a copy of this form and Campbell Scientific Ltd reserves the right to return goods at the customers' expense.

Note that goods sent air freight are subject to Customs clearance fees which Campbell Scientific will charge to customers. In many cases, these charges are greater than the cost of the repair.



Campbell Scientific Ltd,
80 Hathern Road,
Shepshed, Loughborough, LE12 9GX, UK
Tel: +44 (0) 1509 601141
Fax: +44 (0) 1509 270924
Email: support@campbellsci.co.uk
www.campbellsci.co.uk

PLEASE READ FIRST

About this manual

Please note that this manual was originally produced by Campbell Scientific Inc. primarily for the North American market. Some spellings, weights and measures may reflect this origin.

Some useful conversion factors:

Area: 1 in² (square inch) = 645 mm²

Length: 1 in. (inch) = 25.4 mm
1 ft (foot) = 304.8 mm
1 yard = 0.914 m
1 mile = 1.609 km

Mass: 1 oz. (ounce) = 28.35 g
1 lb (pound weight) = 0.454 kg

Pressure: 1 psi (lb/in²) = 68.95 mb

Volume: 1 UK pint = 568.3 ml
1 UK gallon = 4.546 litres
1 US gallon = 3.785 litres

In addition, while most of the information in the manual is correct for all countries, certain information is specific to the North American market and so may not be applicable to European users.

Differences include the U.S standard external power supply details where some information (for example the AC transformer input voltage) will not be applicable for British/European use. *Please note, however, that when a power supply adapter is ordered it will be suitable for use in your country.*

Reference to some radio transmitters, digital cell phones and aerials may also not be applicable according to your locality.

Some brackets, shields and enclosure options, including wiring, are not sold as standard items in the European market; in some cases alternatives are offered. Details of the alternatives will be covered in separate manuals.

Part numbers prefixed with a “#” symbol are special order parts for use with non-EU variants or for special installations. Please quote the full part number with the # when ordering.

Recycling information



At the end of this product's life it should not be put in commercial or domestic refuse but sent for recycling. Any batteries contained within the product or used during the products life should be removed from the product and also be sent to an appropriate recycling facility.

Campbell Scientific Ltd can advise on the recycling of the equipment and in some cases arrange collection and the correct disposal of it, although charges may apply for some items or territories.

For further advice or support, please contact Campbell Scientific Ltd, or your local agent.



Campbell Scientific Ltd, 80 Hathern Road, Shepshed, Loughborough, LE12 9GX,
UK Tel: +44 (0) 1509 601141 Fax: +44 (0) 1509 270924
Email: support@campbellsci.co.uk
www.campbellsci.co.uk

Safety

DANGER — MANY HAZARDS ARE ASSOCIATED WITH INSTALLING, USING, MAINTAINING, AND WORKING ON OR AROUND TRIPODS, TOWERS, AND ANY ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC. FAILURE TO PROPERLY AND COMPLETELY ASSEMBLE, INSTALL, OPERATE, USE, AND MAINTAIN TRIPODS, TOWERS, AND ATTACHMENTS, AND FAILURE TO HEED WARNINGS, INCREASES THE RISK OF DEATH, ACCIDENT, SERIOUS INJURY, PROPERTY DAMAGE, AND PRODUCT FAILURE. TAKE ALL REASONABLE PRECAUTIONS TO AVOID THESE HAZARDS. CHECK WITH YOUR ORGANIZATION'S SAFETY COORDINATOR (OR POLICY) FOR PROCEDURES AND REQUIRED PROTECTIVE EQUIPMENT PRIOR TO PERFORMING ANY WORK.

Use tripods, towers, and attachments to tripods and towers only for purposes for which they are designed. Do not exceed design limits. Be familiar and comply with all instructions provided in product manuals. Manuals are available at www.campbellsci.eu or by telephoning +44(0) 1509 828 888 (UK). You are responsible for conformance with governing codes and regulations, including safety regulations, and the integrity and location of structures or land to which towers, tripods, and any attachments are attached. Installation sites should be evaluated and approved by a qualified engineer. If questions or concerns arise regarding installation, use, or maintenance of tripods, towers, attachments, or electrical connections, consult with a licensed and qualified engineer or electrician.

General

- Prior to performing site or installation work, obtain required approvals and permits. Comply with all governing structure-height regulations, such as those of the FAA in the USA.
- Use only qualified personnel for installation, use, and maintenance of tripods and towers, and any attachments to tripods and towers. The use of licensed and qualified contractors is highly recommended.
- Read all applicable instructions carefully and understand procedures thoroughly before beginning work.
- Wear a **hardhat** and **eye protection**, and take **other appropriate safety precautions** while working on or around tripods and towers.
- **Do not climb** tripods or towers at any time, and prohibit climbing by other persons. Take reasonable precautions to secure tripod and tower sites from trespassers.
- Use only manufacturer recommended parts, materials, and tools.

Utility and Electrical

- **You can be killed** or sustain serious bodily injury if the tripod, tower, or attachments you are installing, constructing, using, or maintaining, or a tool, stake, or anchor, come in **contact with overhead or underground utility lines**.
- Maintain a distance of at least one-and-one-half times structure height, or 20 feet, or the distance required by applicable law, **whichever is greater**, between overhead utility lines and the structure (tripod, tower, attachments, or tools).
- Prior to performing site or installation work, inform all utility companies and have all underground utilities marked.
- Comply with all electrical codes. Electrical equipment and related grounding devices should be installed by a licensed and qualified electrician.

Elevated Work and Weather

- Exercise extreme caution when performing elevated work.
- Use appropriate equipment and safety practices.
- During installation and maintenance, keep tower and tripod sites clear of un-trained or non-essential personnel. Take precautions to prevent elevated tools and objects from dropping.
- Do not perform any work in inclement weather, including wind, rain, snow, lightning, etc.

Maintenance

- Periodically (at least yearly) check for wear and damage, including corrosion, stress cracks, frayed cables, loose cable clamps, cable tightness, etc. and take necessary corrective actions.
- Periodically (at least yearly) check electrical ground connections.

WHILE EVERY ATTEMPT IS MADE TO EMBODY THE HIGHEST DEGREE OF SAFETY IN ALL CAMPBELL SCIENTIFIC PRODUCTS, THE CUSTOMER ASSUMES ALL RISK FROM ANY INJURY RESULTING FROM IMPROPER INSTALLATION, USE, OR MAINTENANCE OF TRIPODS, TOWERS, OR ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC.

Table of contents

1. Introduction	1
2. Precautions	1
3. Initial inspection	2
4. QuickStart	2
5. Overview	5
6. Specifications	6
7. Installation	8
7.1 Placement on a photovoltaic (PV) module	8
7.2 Mounting/cable strain relief	8
7.2.1 Adhesive mounting strip	8
7.2.2 Kapton tape	9
7.2.3 Strain relief of CS240DM analogue-to-digital module	11
7.3 Wiring	11
7.3.1 CS240-to-data-logger wiring	12
7.3.2 CS240DM wiring	13
7.4 Data logger programming	14
7.4.1 CS240 programming	14
7.4.1.1 Resistance measurement	14
7.4.1.2 Converting resistance measurement to temperature	15
7.4.2 CS240DM programming	15
8. Operation	16
8.1 Electrical noisy environments	17
8.2 Long cable lengths	17
8.2.1 CS240 cable resistance/long cable lengths	17
8.2.2 CS240DM long cable lengths	17
8.3 CS240DM and Device Configuration Utility	18
9. Maintenance and troubleshooting	19
9.1 Maintenance	19
9.2 Troubleshooting	20

Appendix A. Importing Short Cut code into CRBasic Editor	21
Appendix B. Example programs	22
B.1 CS240 two-wire configuration programs	23
B.2 CS240 four-wire configuration programs	27
B.3 CS240DM program	30
Appendix C. Sensor material properties	32
C.1 3M 9485PC adhesive	32

1. Introduction

The CS240 and CS240DM temperature sensors use a precision 1000 ohm class A platinum resistance temperature detector to measure temperature from –40 to 105 °C. They are designed for measuring the back-of-photovoltaic (PV) module temperature but also can be used to measure the surface temperature of other devices. The CS240 can be measured with a 2-wire or 4-wire configuration and is compatible with most Campbell Scientific data loggers. The CS240DM has a digital RS-485 output that can be directly read by a MeteoPV, CR6, CR1000X, or Modbus RTU RS-485 network. Other Campbell Scientific data loggers can use an MD485 multidrop interface to read the CS240DM output.

NOTE:

This manual provides information only for CRBasic data loggers. The CS240 is also compatible with most of our retired Edlog data loggers. For Edlog data logger support, contact Campbell Scientific.

2. Precautions

- READ AND UNDERSTAND the [Safety](#) (p. iii) section at the front of this manual.
- Do not use epoxy to secure the sensor head to a PV module.
- Before mounting, the installers need to wash their hands and then clean the back of the PV module or other device with ethyl alcohol.
- Do not place tape over the sensor moulding; only place tape on the metal disk portion of the sensor.
- Prying the sensor head off will likely damage both the sensor and PV module.
- Proper strain relief of the cable is required after mounting the sensor to the measurement surface ([Mounting/cable strain relief](#) (p. 8)).
- Placement of the cable inside a rugged conduit is advisable for long cable runs, especially in locations subject to digging, mowing, traffic, use of power tools, animals, or lightning strikes.

3. Initial inspection

- Upon receipt of the sensor, inspect the packaging and contents for damage. File damage claims with the shipping company.
- The model number, cable length, wiring diagrams, and cable resistance (CS240 only) are printed on a label at the connection end of the cable. Check this information against the shipping documents to ensure the expected product and cable length were received.

4. QuickStart


The information provided in this section is for the CS240.

A video that describes data logger programming using Short Cut is available at:


www.campbellsci.eu/videos/cr1000x-data-logger-getting-started-program-part-3. Short Cut is an easy way to program your data logger to measure the sensor and assign data logger wiring terminals. Short Cut is available as a download on www.campbellsci.eu. It is included in installations of LoggerNet, PC200W, PC400, or RTDAQ.

The following procedure also shows using Short Cut to program the CS240.

1. Open Short Cut and click **Create New Program**.
2. Double-click the data logger model.
3. In the **Available Sensors and Devices** box, type CS240. You can also locate the sensor in the **Sensors > Temperature** folder. Double click the sensor model. The surface temperature defaults to degree C. This can be changed by clicking the **Temperature** box and selecting one of the other options. If using the 2-wire configuration for the CS240, type the **Cable Resistance**. This value is unique for each CS240, and is printed on the heat shrink label attached to the sensor cable. If using the CS240DM, type the correct **RS-485 address**. The default **RS-485 address** is the last two digits of the sensor serial number, except for serial numbers ending in 00 and 01, which default to addresses of 110 and 111, respectively.

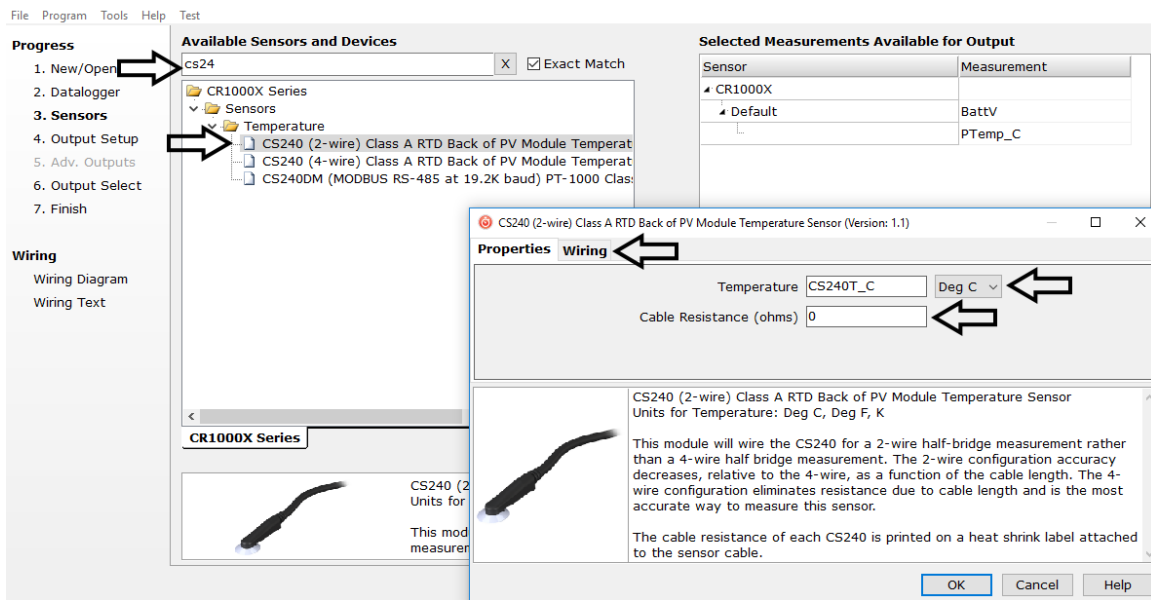

- Click on the **Wiring** tab to see how the sensor is to be wired to the data logger. Click **OK** after wiring the sensor.

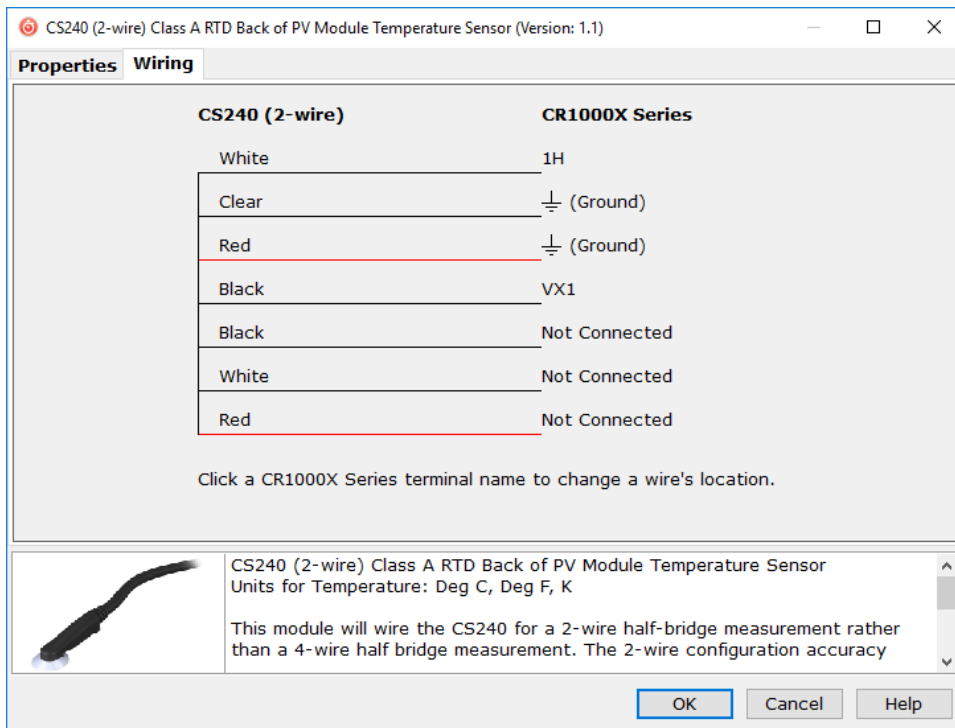

- Repeat steps three and four for other sensors you want to measure. Click **Next**.

6. In **Output Setup**, type the scan rate, a meaningful table name, and the **Data Output Storage Interval**.

Short Cut (CR1000X Series) C:\Campbellsci\SCWin\untitled.scw

File Program Tools Help

Progress

1. New/Open
2. Datalogger
3. Sensors
- 4. Output Setup**
5. Adv. Outputs
6. Output Select
7. Finish

Wiring

Wiring Diagram

Wiring Text

How often should the CR1000X Series measure its sensor(s)? 5 Seconds

Data is processed by the datalogger and then stored in an output table. Two tables are defined by default; up to 10 tables can be added.

Add New Table

1 Hourly 2 Table2

Table Name: Hourly

Delete Table

Data Output Storage Interval: 60 Minutes

Makes 720 measurements per output interval based upon the chosen measurement interval of 5 Seconds.

Copy to External Storage

☐ SC115 Flash Memory Drive

☐ Memory Card

☐ Advanced Outputs (all tables)

Specify how often measurements are to be made and how often outputs are to be stored. Note that multiple output intervals can be specified, one for each output table. By default, an output table is set up to send data to memory based on time. Select the Advanced Output option to send data to memory based on one or more of the following conditions: time, the state of a flag, or the value of a measurement.

Previous Next Finish Help

7. Select the measurement and its associated output option.

Short Cut (CR1000X Series) C:\Campbellsci\SCWin\untitled.scw

File Program Tools Help

Progress

1. New/Open
2. Datalogger
3. Sensors
4. Output Setup
5. Adv. Outputs
- 6. Output Select**
7. Finish

Wiring

Wiring Diagram

Wiring Text

Selected Measurements Available for Output

Sensor	Measurement
CR1000X	
Default	BattV
	PTemp_C
CS240 (2-wire)	CS240T_C

Selected Measurements for Output

1 Table1		2 Table2	
Sensor	Measurement	Processing	Output Label
CS240 (2-wire)	CS240T_C	Sample	CS240T_C

Units: Deg C

Buttons: Edit, Remove

Select which measurements to store in which tables and how each measurement should be processed. For each value to be stored in the table, choose a measurement from "Selected Measurements Available for Output." Next, select one of the processing functions, such as Average, Sample, etc. Note that the output tables must be set up in order for data to be stored in the datalogger memory.

Previous Next Finish Help

8. Click **Finish** and save the program. Send the program just created to the data logger if the data logger is connected to the computer.
9. If the sensor is connected to the data logger, check the output of the sensor in the data logger support software data display in LoggerNet, PC400, RTDAQ, or PC200W to make sure it is making reasonable measurements.

5. Overview

The CS240 and CS240DM are surface mountable platinum resistive thermometers (PRT) that measure back-of-module temperature for solar energy applications. They use a precision PT-1000 class A PRT to provide the highest level of accuracy. To withstand the harsh treatment commonly seen in meteorological station installation, the sensing element is safely housed inside a specially designed self-adhesive aluminium disk (FIGURE 5-1 (p. 5)).

The disk protects the PRT, particularly during installation, and promotes heat transfer from the surface. An adhesive tab on the disk fastens the sensor to the measurement surface. If the temperature may exceed 70 °C, Kapton tape is also required to secure the sensor.

The CS240DM includes a Campbell Scientific precision analogue-to-digital, smart-sensor module for making the measurements. The module design is optimized for the class A PRT that minimizes self-heating and lead-wire resistance. Measurement electronics are surge protected with 1200 V isolation and environmentally protected with a rugged overmoulding with an IP65 rating.

The CS240 and CS240DM provide PV stakeholders with highly accurate back of module temperature, even at long cable lengths, for use in power performance modeling and simulation of solar energy applications. Back of module temperature is critical for any evaluation of effective irradiance and power conversion.



FIGURE 5-1. CS240/CS240DM temperature sensor

6. Specifications

Features:

- Precision PT1000 class A sensing element
- Any cable length available—user-selectable and standard lengths offered
- Rugged design holds up in harsh conditions and conduit installations
- Self-adhesive backing for easy mounting lasts decades
- CS240 has 2-wire or 4-wire configurations to satisfy accuracy even at long cable lengths
- CS240 compatible with Campbell Scientific CRBasic data loggers: CR300 series, CR6 series, CR800 series, CR1000, CR1000X series, CR3000, and CR5000
- CS240DM compatible with Campbell Scientific CRBasic data loggers: CR6 series, CR1000X series, CR300 series (with MD485), CR800 series (with MD485), CR1000 (with MD485), CR3000 (with MD485)
- CS240DM easily interfaces with the MeteoPV Platform without coding
- CS240DM can connect directly with Modbus RTU RS-485 Networks
- Calibration services with certification available

Sensor:	Precision 1000 ohm class A platinum sensing element
Class A sensor accuracy:	$\pm (0.15 + 0.002t) \text{ }^{\circ}\text{C}$
Temperature range:	–40 to 135 $^{\circ}\text{C}$
Temperature coefficient:	TCR = 3850 ppm/K
Long-term stability:	
CS240 measuring current:	Max Ro drift = 0.04% after 1000 h at 400 $^{\circ}\text{C}$
Disk diameter:	0.1 to 0.3 mA
Overall sensor length:	2.54 cm (1.0 in)
Overmoulded joint dimensions	6.35 cm (2.5 in)

Width:	1.12 cm (0.44 in)
Height:	1.47 cm (0.58 in)
Length:	5.72 cm (2.25 in)
Cable diameter:	0.622 cm (0.245 in)
Disk material:	Anodized aluminium
Weight:	90.7 g (0.2 lb) with 3.2 m (10.5 ft) cable

CS240DM analogue-to-digital module: 24-bit ADC

A/D measurement uncertainty:	±0.015 °C
Supply voltage:	5 to 30 VDC
Power consumption:	15 mA
Surge protection:	1200 V isolation
Environmental protection:	Rugged overmoulding with IP65 rating
Approvals:	UL AWM 2586 1000V 105 °C; CSA AWM 600V 105 °C FT1
	Conforms with Electromagnetic Compatibility Directive (EMC)
	Conforms with the Restriction of Hazardous Substances Directive (RoHS2)
Compliance:	View EU Declaration of Conformity at www.campbellsci.eu/cs240 or www.campbellsci.eu/cs240dm
	Compliant with IEC 60751, DIN EN 60751, Industrial Design (IEC Class 4) (according to IEC 751)

CS240 cable

Jacket material:	Black semi-gloss PVC, UL VW-1 sunlight resistant for outdoor use
Wire size and type:	24 AWG (7/32) tinned copper
Nominal wire diameter:	0.61 mm (0.024 in)
Insulation type:	PVC
UL:	AWM 10012 1000V 105 °C
Filler:	Fibrillated polypropylene as required for uniform round construction.
Drain:	24 AWG (7/32) tinned copper (cabled, touching foil)
Shield:	Aluminium/mylar (100% coverage, 25% minimum overlap, foil facing in)

CS240DM cable

Features:	High flex construction with jacket for pulling through conduit
-----------	--

Jacket material:	Black semi-gloss PVC, UL VW-1 sunlight resistant for outdoor use; weld spatter and oil resistant
Nominal wire diameter:	0.61 mm (0.024 in)
Agency approvals:	UL AWM Style 2463 and NEC/CEC CMX outdoor

7. Installation

If you are programming your data logger with Short Cut, skip [Wiring](#) (p. 11) and [Data logger programming](#) (p. 14). Short Cut does this work for you. See [QuickStart](#) (p. 2) for a Short Cut tutorial.

7.1 Placement on a photovoltaic (PV) module	8
7.2 Mounting/cable strain relief	8
7.3 Wiring	11
7.4 Data logger programming	14

7.1 Placement on a photovoltaic (PV) module

The PV module may or may not have distinctive photocells. If the PV module does not have distinctive photocells, centre the sensor on the back of the PV module. If the module has several distinctive photocells, centre the sensor on the back of the photocell that is the middle of the PV module.

7.2 Mounting/cable strain relief

CAUTION:

Before mounting, the installers need to wash their hands and then clean the back of the PV module or other device with ethyl alcohol.

7.2.1 Adhesive mounting strip

An adhesive mounting strip is adhered to the flat surface of the aluminium disk. To mount the sensor, remove the paper from the mounting strip and adhere it to the back of the PV module or

other device. The mounting strip must be adhered to a clean surface for its adhesive to function properly.

CAUTION:

Do not use epoxy to secure the sensor head to a PV module.

7.2.2 Kapton tape

Use Kapton tape for cable strain relief; a yellow label on the cable indicates where the cable must be secured ([FIGURE 7-1](#) (p. 10)). If the temperature might exceed 70 °C, Kapton tape is required to better secure the sensor to the measurement surface.

To ensure that the sensor disk and cable are adequately fastened to the measurement surface, use three strips of Kapton tape in two places each:

1. For strain relief, place the first strip of tape across the cable just below the yellow heat shrink ([FIGURE 7-1](#) (p. 10)) and rub the tape surface to remove bubbles.
2. Place the other strips of tape on the first strip of tape and rub the tape surface to remove bubbles. These strips of tape should be perpendicular to the first strip of tape—forming an “H” ([FIGURE 7-2](#) (p. 10)).
3. To secure the sensor to the module surface, remove the paper from the bottom of the disk and adhere the disk to the PV module ([Placement on a photovoltaic \(PV\) module](#) (p. 8)).
4. Place a strip of tape across the sensor head, perpendicular to the cable and rub the tape surface to remove bubbles. Rub as close as possible to the sensor disk.

CAUTION:

Do not place tape over the sensor moulding; only place tape on the metal disk portion of the sensor.

5. Place the two other strips of tape on the ends of the sensor disk, perpendicular to the first piece of tape and parallel to the cable then rub the tape surface into the module surface. See [FIGURE 7-2](#) (p. 10).



FIGURE 7-1. Strain relief label on the cable

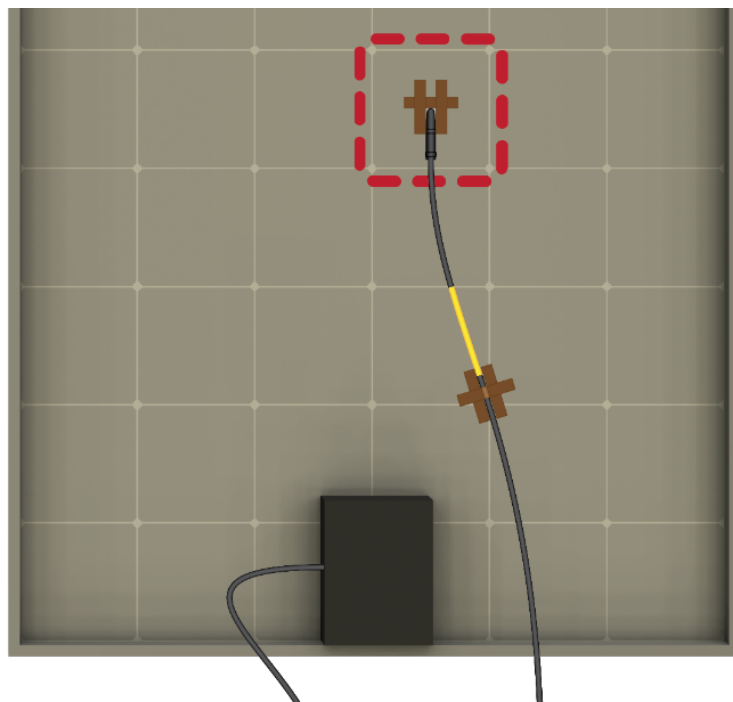


FIGURE 7-2. Proper Kapton tape usage

7.2.3 Strain relief of CS240DM analogue-to-digital module

The CS240DM has an analogue-to-digital, smart-sensor module incorporated that needs to be secured to the side of PV module. Use two cable tie tabs and cable ties to do this.

7.3 Wiring

FIGURE 7-3 (p. 11) provides the circuit diagrams for the CS240 2-wire configuration. FIGURE 7-4 (p. 12) provides the circuit diagram for the CS240DM or the CS240 4 wire configuration.

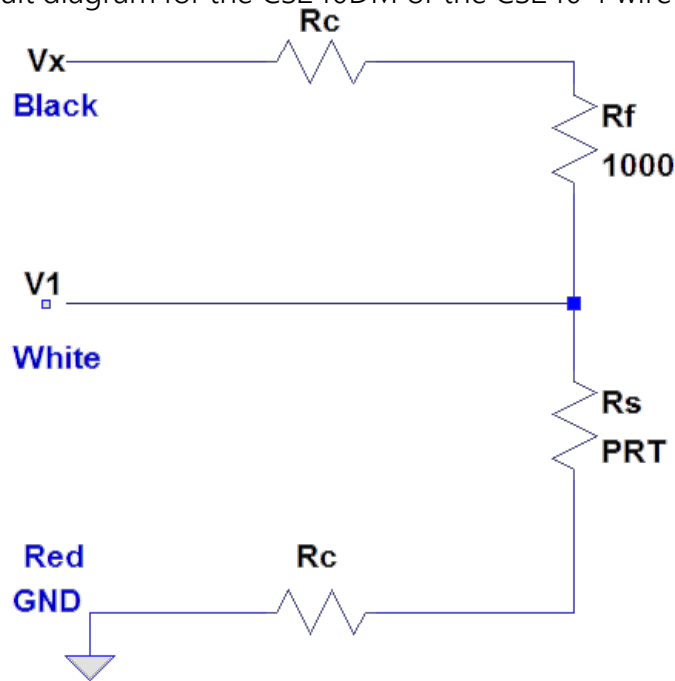


FIGURE 7-3. 2-Wire Circuit Diagram

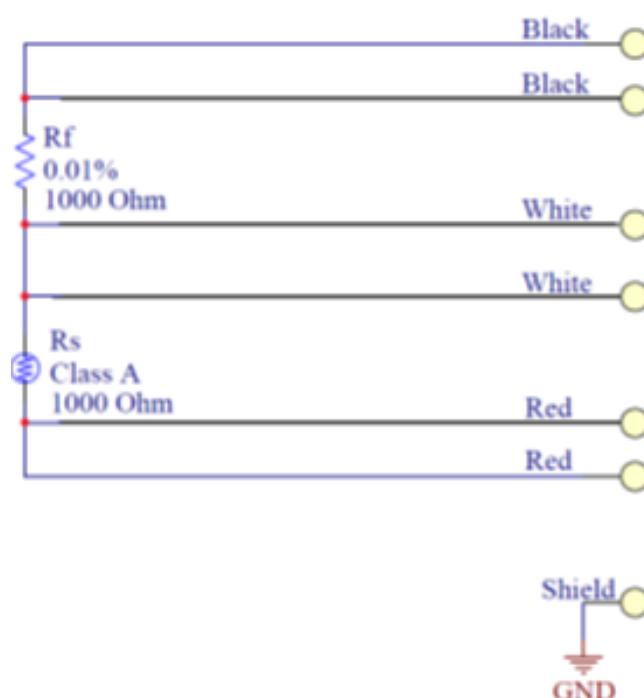


FIGURE 7-4. 4-Wire Circuit Diagram

7.3.1 CS240-to-data-logger wiring

The data loggers can measure the CS240 by using a 2-wire or 4-wire configuration (Table 7-1 (p. 12) and Table 7-2 (p. 13)). The 2-wire configuration accuracy decreases, relative to the 4-wire, as a function of the cable length. The 4-wire configuration eliminates resistance due to cable length and is the most accurate way to measure this sensor. The CS240 is shipped ready for the 2-wire configuration. The wires used only for the 4-wire configuration are taped to the side of the cable.

Table 7-1: Wire colour, function, and data logger connection for the CS240 2-wire configuration

Wire colour	Wire function	Data logger connection terminals
Black	Voltage excitation input	U configured for voltage excitation ¹ , EX, VX (voltage excitation)
White	Analogue voltage output	U configured for single-ended analogue input ¹ , SE (single-ended, analogue input)
Red	Reference	⏏ (analogue ground)

¹ U terminals are automatically configured by the measurement instruction.

Table 7-2: Wire colour and data logger connection for the CS240 4-wire configuration		
Wire colour	Wire function	Data logger connection terminals
White	Analogue voltage output ¹	U configured for differential high analogue input ² , DIFF H (differential high, analogue-voltage input)
Black	Reference ¹	U configured for differential low analogue input ² , DIFF L (differential low, analogue-voltage input)
Red	Voltage excitation input	U configured for voltage excitation ² , EX, VX (voltage excitation)
Red	Analogue voltage output	U configured for differential high analogue input ² , DIFF H (differential high, analogue-voltage input)
White	Reference ³	U configured for differential low analogue input ² , DIFF L (differential low, analogue-voltage input)
Black	Ground	⏏ (analogue ground)
Clear/shield	Shield	⏏ (analogue ground)

¹ First differential terminal in the [BrHa1f4W\(\)](#) instruction.

² U terminals are automatically configured by the measurement instruction.

³ Second differential terminal in the [BrHa1f4W\(\)](#) instruction.

7.3.2 CS240DM wiring

The CS240DM can have a standard cable or a 3-twisted pair cable ([Table 7-3](#) (p. 13)). The wiring for the CS240DM is also available in the Device Configuration Utility and the MeteoPV User Interface.

Table 7-3: Wire Colour, Station Connection, and Function for the CS240DM			
Standard cable wire colour	3-twisted pair cable wire colour	Station (data logger) terminal	Function
Blue	Green	A– (C odd)	RS-485 A/A' [–]
White/blue striped	White	B+ (C even)	RS-485 B/B' [+]
Brown	Red	12V	5 to 30 VDC
White/brown striped	Black	G	Ground (power)

Table 7-3: Wire Colour, Station Connection, and Function for the CS240DM			
Standard cable wire colour	3-twisted pair cable wire colour	Station (data logger) terminal	Function
Green	Yellow	G (⏏)	Modbus common
--	Clear	G (⏏)	Shield

7.4 Data logger programming

Short Cut is the best source for up-to-date data logger programming code. If your data acquisition requirements are simple, you can probably create and maintain a data logger program exclusively with Short Cut. If your data acquisition needs are more complex, the files that Short Cut creates are a great source for programming code to start a new program or add to an existing custom program.

NOTE:

Short Cut cannot edit programs after they are imported and edited in CRBasic Editor.

A Short Cut tutorial is available in [QuickStart](#) (p. 2). If you wish to import Short Cut code into CRBasic Editor to create or add to a customized program, follow the procedure in [Importing Short Cut code into CRBasic Editor](#) (p. 21). Programming basics for CRBasic data loggers are provided in the following section. Complete program examples for select CRBasic data loggers can be found in [Example programs](#) (p. 22).

If applicable, please read [Electrical noisy environments](#) (p. 17) and [Long cable lengths](#) (p. 17) prior to programming your data logger.

7.4.1 CS240 programming

The CS240 program needs to measure the resistance of the CS240 then convert that resistance measurement to temperature.

7.4.1.1 Resistance measurement

CRBasic instructions used to measure resistance are the [BrHa1f4W](#) (4-wire configuration) or [BrHa1f](#) (2-wire configuration). The [BrHa1f4W\(\)](#) instruction reduces cable errors, and the [BrHa1f\(\)](#) instruction uses the fewest input terminals.

A typical [BrHa1f4W\(\)](#) instruction is:

```
BrHa1f4W(CS240X,1,mV200,mV200,U1,U5,1,350,True,True,0,60,1,0)
```

A typical **BrHalf()** instruction is:

```
BrHalf(CS240X,1,mV200,U7,U3,1,350,True,0,60,1,0)
```

A multiplier of 1.0 and offset of 0.0 should be used in the instructions.

7.4.1.2 Converting resistance measurement to temperature

The **PRTCalc()** instruction converts the ratio R_s/R_o to temperature, where R_s is the measured resistance of the RTD, and R_o is the resistance of the RTD at 0 degrees Celsius (1000 Ω).

A typical **PRTCalc()** instruction is:

```
PRTCalc(CS240T_C,1,CS240Rs/1000,1,1,0)
```

If the **BrHalf** instruction (2-wire configuration) was used to measure resistance, the following expression also must precede the **PRTCalc** instruction:

$$CS240Rs = CS240X \cdot (1000 + R_c) / (1 - CS240X) - R_c$$

Where CS240X is the variable containing the **BrHalf** measurement and R_c is the cable resistance provided on the cable label.

7.4.2 CS240DM programming

NOTE:

Programming basics for the CR6 and CR1000X data loggers are provided in this section. Contact Campbell Scientific if using a data logger that requires an MD485 interface.

A CR6 or CR1000X data logger programmed as a Modbus Master can retrieve the values stored in the CS240DM Input Registers (Table 7-4 (p. 15)). To do this, the CRBasic program requires a **SerialOpen()** instruction followed by the **ModbusMaster()** instruction.

Table 7-4: CS240DM stored values	
Value	Description
Serial number	Specifies the sensor serial number assigned by the factory
Temperature	The CS240DM measures temperature by using a 4-wire configuration. The stored value is in degrees Celsius.
Counter	The counter provides an indicator that the sensor is actively taking measurements. This value will increment once per measurement, rolling over at 10,000.

Table 7-4: CS240DM stored values		
Value	Description	
Sensor status	Value	State
	0	Good
	1	Open/short
Temperature range check	Value	State
	0	Good/in range
	1	Out of range

The **SerialOpen** instruction has the following syntax:

SerialOpen (ComPort, Baud, Format, TXDelay, BufferSize, Mode)

The **Format** is typically set to **logic 1 low; even parity, one stop bit, 8 data bits**. The **Mode** parameter should configure the **ComPort** as RS-485 half-duplex, transparent.

The **ModbusMaster()** instruction has the following syntax:

ModbusMaster (Result, ComPort, Baud, Addr, Function, Variable, Start, Length, Tries, Timeout, [ModbusOption])

The **Addr** parameter must match the CS240DM Modbus address. Each Modbus address must be unique on a Modbus network. The default value for the Modbus address is the last two digits of the sensor serial number, with exceptions for serial numbers ending in 00 and 01. These exceptions default to Modbus addresses of 110 and 111, respectively. To collect all of the CS240DM values, the **Start** parameter needs to be **1** and the **Length** parameter needs to be **5**. **ModbusOption** is an optional parameter described in the CRBasic Editor Help.

For more information, refer to [CS240DM program](#) (p. 30).

8. Operation

8.1 Electrical noisy environments	17
8.2 Long cable lengths	17
8.3 CS240DM and Device Configuration Utility	18

8.1 Electrical noisy environments

AC power lines, pumps, power inverters, and motors can be the source of electrical noise. If the CS240 sensor or data logger is located in an electrically noisy environment, the CS240 sensor should be measured with the 60 or 50 Hz rejection option.

8.2 Long cable lengths

Placement of the cable inside a rugged conduit is advisable for cable runs over 15 feet, especially in locations subject to digging, mowing, traffic, power tools, animals, or lightning strikes.

8.2.1 CS240 cable resistance/long cable lengths

Cable resistance can cause significant error. The 4-wire configuration is the best configuration for long cable lengths.

The heat shrink label on the CS240 cable provides the cable resistance (ohms). When using the 2-wire configuration, subtract this cable resistance from the measured resistance value. The value included on the label is calculated with the following equation:

Cable resistance = 0.0274 ohms • cable length (in feet)

Additional settling time may be required for cable lengths longer than 300 feet, where settling time is the delay before the measurement is made. The 60 and 50 Hz integration options include a 3 ms settling time; longer settling times can be typed into the **Settling Time** parameter in the **BrH4lf4W()** or **BrH4lf()** instruction.

8.2.2 CS240DM long cable lengths

Digital data transfer eliminates offset errors due to cable lengths. However, digital communications can break down when cables are too long, resulting in either no response from the sensor or corrupted readings. Maximum cable lengths depend on the number of sensors connected, the type of cable used, and the environment of the application. Follow these guidelines when using long cables:

- Use low capacitance, low resistance, screened cable (as fitted by Campbell Scientific) to reach distances of several hundred metres.
- Ensure that the power ground cable has low resistance and is connected to the same ground reference as the data logger control terminals.
- Be aware that daisy-chaining sensors reduces the maximum cable length roughly in proportion to the number of sensors connected in parallel.

8.3 CS240DM and Device Configuration Utility


Device Configuration Utility (DevConfig) is bundled in Campbell Scientific's data logger support software and can also be acquired, at no cost, from www.campbellsci.eu/downloads. DevConfig can be used to change the CS240DM settings, view stored values, and update the CS240DM operating system (OS). It also provides CS240DM wiring information.

To use DevConfig, the CS240DM must be connected to a computer and 12 VDC power source. A USB-to-RS-485 adaptor is required to connect the CS240DM to the computer. The following is the procedure for connecting to DevConfig:

1. Open DevConfig.
2. Under **Device Type**, click **CS240DM**.
3. Follow steps listed under **Connecting to a CM240DM with a USB to RS 485 adaptor**.



The settings are changed in the **Holding Registers** tab. Except for the **Modbus Address**, the default values are typical for most Modbus systems and therefore rarely need to be changed.

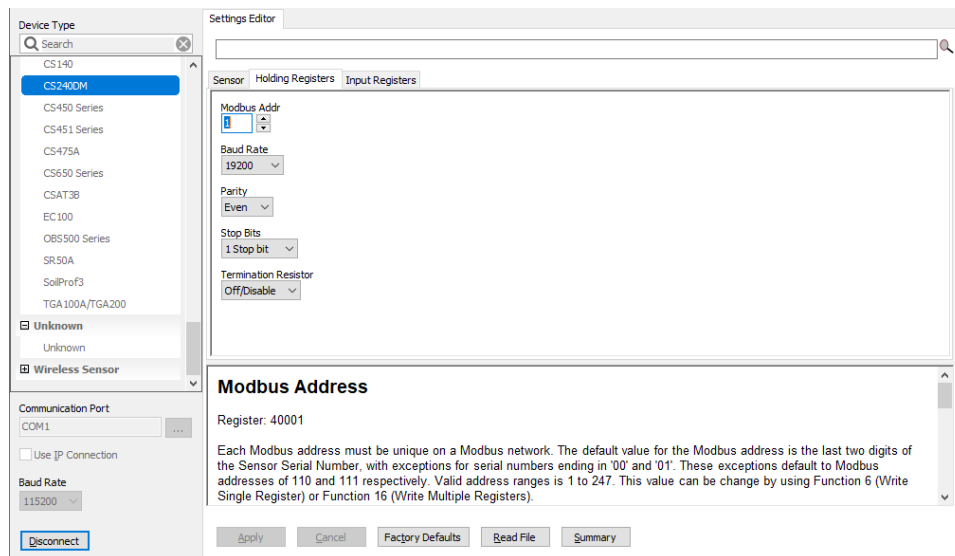

The values stored are shown in the **Input Registers** tab.

9. Maintenance and troubleshooting

NOTE:

For all factory repairs, customers must get an RMA number. Customers must also properly fill out a "Declaration of Hazardous Material and Decontamination" form and comply with the requirements specified in it. Refer to the [Read First](#) (p. ii) page at the front of this manual for more information.

9.1 Maintenance

The CS240 and CS240DM sensors require minimal maintenance. Periodically check cabling for proper connections, signs of damage, and possible moisture intrusion.

9.2 Troubleshooting

Symptom: Temperature is NAN, -INF, -9999, -273

Verify wiring of sensor to the data logger; cross-reference data logger program or the measurement system wiring diagram.

Symptom: Incorrect Temperature

Check the cable for signs of damage and possible moisture intrusion.

Symptom: Unstable Temperature

Make sure the clear shield or white/green striped wire is connected to data logger ground, and the data logger is properly grounded. For the CS240, try using the 60 or 50 Hz integration options and/or increasing the settling time.

Appendix A. Importing Short Cut code into CRBasic Editor


Short Cut creates a .DEF file that contains wiring and memory usage information, and a program file that can be imported into the CRBasic Editor. By default, these files reside in the C:\campbellsci\SCWin folder.

Import Short Cut program file and wiring information into CRBasic Editor:

1. Create the Short Cut program following the procedure in [QuickStart](#) (p. 2). After saving the Short Cut program, click the **Advanced** tab then the **CRBasic Editor** button. A program file with a generic name will open in CRBasic. Provide a meaningful name and save the CRBasic program. This program can now be edited for additional refinement.

NOTE:

Once the file is edited with CRBasic Editor, Short Cut can no longer be used to edit the program it created.

2. To add the Short Cut wiring information into the new CRBasic program, open the .DEF file located in the C:\campbellsci\SCWin folder, and copy the wiring information, which is at the beginning of the .DEF file.
3. Go into the CRBasic program and paste the wiring information into it.
4. In the CRBasic program, highlight the wiring information, right-click, and select **Comment Block**. This adds an apostrophe (') to the beginning of each of the highlighted lines, which instructs the data logger compiler to ignore those lines when compiling. The **Comment Block** feature is demonstrated at about 5:10 in the [CRBasic | Features](#) video .

Appendix B. Example programs

Table B-1 (p. 22) provides wiring for the CS240 two-wire configuration programs (p. 23). Table B-2 (p. 22) provides wiring for the CS240 four-wire configuration programs (p. 27), and Table B-3 (p. 23) provides wiring for the CS240DM program (p. 30).

Table B-1: Wiring for CS240 2-wire configuration example programs				
Wire colour	Wire function	CR300 terminals	CR6 terminals	CR1000X terminals
Black	Voltage excitation input	VX1	U1	VX1
White	Analogue voltage output	SE1	U2	SE1
Red	Reference	⏏ (analogue ground)	⏏ (analogue ground)	⏏ (analogue ground)

Table B-2: Wiring for CS240 4-wire configuration example programs				
Wire colour	Wire function	CR300 terminals	CR6 terminals	CR1000X terminals
White	Analogue voltage output	1H	U3	1H
Black	Reference	1L	U4	1L
Red	Voltage excitation input	VX1	U1	VX1
Red	Analogue voltage output	2H	U5	2H
White	Reference	2L	U6	2L
Black	Ground	⏏ (analogue ground)	⏏ (analogue ground)	⏏ (analogue ground)
Clear/shield	Shield	⏏ (analogue ground)	⏏ (analogue ground)	⏏ (analogue ground)

Table B-3: Wiring for the CS240DM example program			
Standard cable wire colour	3-twisted pair cable wire colour	CR6 terminal	Function
Blue	Green	C1	RS-485 A/A' [-]
White/blue striped	White	C2	RS-485 B/B' [+]
Brown	Red	12V	5 to 30 VDC
White/brown striped	Black	G	Ground (power)
Green	Yellow	\perp	Modbus common
--	Clear	\perp	Shield

B.1 CS240 two-wire configuration programs

CRBasic Example 1: CR300 2-wire configuration for measuring the CS240

```

'CR300 Series

'Declare Variables and Units
Dim CS240X
Dim CS240Rs
Public CS240T_C

Units CS240T_C=Deg C

'Define Data Tables
DataTable(Hourly,True,-1)
    DataInterval(0,60,Min,10)
    Sample(1,CS240T_C,FP2)
EndTable

'Main Program
BeginProg
    'Main Scan
    Scan(5,Sec,1,0)
        'CS240 (2-wire) Class A RTD Back of PV Module Temperature Sensor
        'measurement 'CS240T_C'
        BrHalf(CS240X,1,mV2500,1,Vx1,1,350,True,0,60,1,0)

        'Convert ratio to ohms and remove cable resistance
        CS240Rs=CS240X*(1000+0.274)/(1-CS240X)-0.274

```

CRBasic Example 1: CR300 2-wire configuration for measuring the CS240

```
'Calculate temperature from resistance  
PRTCalc(CS240T_C,1,CS240Rs/1000,1,1,0)  
  
'Call Data Tables and Store Data  
CallTable Hourly  
NextScan  
EndProg
```

CRBasic Example 2: CR6 2-wire configuration for measuring the CS240

```
'CR6 Series

'Declare Variables and Units
Dim CS240X
Dim CS240Rs
Public CS240T_C

Units CS240T_C=Deg C

'Define Data Tables
DataTable(Hourly,True,-1)
    DataInterval(0,60,Min,10)
    Sample(1,CS240T_C,FP2)
EndTable

'Main Program
BeginProg
    'Main Scan
    Scan(5,Sec,1,0)
        'CS240 (2-wire) Class A RTD Back of PV Module Temperature Sensor
        'measurement 'CS240T_C'
        BrHalf(CS240X,1,mV200,U2,U1,1,350,True,0,60,1,0)

        'Convert ratio to ohms and remove cable resistance
        CS240Rs=CS240X*(1000+0.274)/(1-CS240X)-0.274

        'Calculate temperature from resistance
        PRTCalc(CS240T_C,1,CS240Rs/1000,1,1,0)

        'Call Data Tables and Store Data
        CallTable Hourly
    NextScan
EndProg
```


CRBasic Example 3: CR1000X 2-wire configuration for measuring the CS240

```
'CR1000X Series

'Declare Variables and Units
Dim CS240X
Dim CS240Rs
Public CS240T_C

Units CS240T_C=Deg C

'Define Data Tables
DataTable(Hourly,True,-1)
    DataInterval(0,60,Min,10)
    Sample(1,CS240T_C,FP2)
EndTable

'Main Program
BeginProg
    'Main Scan
    Scan(5,Sec,1,0)
        'CS240 (2-wire) Class A RTD Back of PV Module Temperature Sensor
        'measurement 'CS240T_C'
        BrHalf(CS240X,1,mV200,1,Vx1,1,350,True,0,60,1,0)

        'Convert ratio to ohms and remove cable resistance
        CS240Rs=CS240X*(1000+0.274)/(1-CS240X)-0.274

        'Calculate temperature from resistance
        PRTCalc(CS240T_C,1,CS240Rs/1000,1,1,0)

        'Call Data Tables and Store Data
        CallTable Hourly
    NextScan
EndProg
```

B.2 CS240 four-wire configuration programs

CRBasic Example 4: CR300 4-wire configuration for measuring the CS240

```
'CR300 Series

'Declare Variables and Units
Dim CS240X
Dim CS240Rs
Public CS240T_C

Units CS240T_C=Deg C
'Define Data Tables
DataTable(Hourly,True,-1)
    DataInterval(0,60,Min,10)
    Sample(1,CS240T_C,FP2)
EndTable

'Main Program
BeginProg
    'Main Scan
    Scan(5,Sec,1,0)
        'CS240 (4-wire) Class A RTD Back of PV Module Temperature Sensor
        'measurement 'CS240T_C'
        BrHalf4W(CS240X,1,mV2500,mV2500,1,Vx1,1,350,True,True,0,60,1,0)

        'Convert ratio to ohms
        CS240Rs=CS240X*1000

        'Calculate temperature from resistance
        PRTCalc(CS240T_C,1,CS240Rs/1000,1,1,0)

        'Call Data Tables and Store Data
        CallTable Hourly
    NextScan
EndProg
```

CRBasic Example 5: CR6 4-wire configuration for measuring the CS240

```
'CR6 Series

'Declare Variables and Units
Dim CS240X
Dim CS240Rs
Public CS240T_C

Units CS240T_C=Deg C

'Define Data Tables
DataTable(Hourly,True,-1)
    DataInterval(0,60,Min,10)
    Sample(1,CS240T_C,FP2)
EndTable

'Main Program
BeginProg
    'Main Scan
    Scan(5,Sec,1,0)
        'CS240 (4-wire) Class A RTD Back of PV Module Temperature Sensor
        'measurement 'CS240T_C'
        BrHalf4W(CS240X,1,mV200,mV200,U3,U1,1,350,True,True,0,60,1,0)

        'Convert ratio to ohms
        CS240Rs=CS240X*1000

        'Calculate temperature from resistance
        PRTCalc(CS240T_C,1,CS240Rs/1000,1,1,0)

        'Call Data Tables and Store Data
        CallTable Hourly
    NextScan
EndProg
```

CRBasic Example 6: CR1000X 4-wire configuration for measuring the CS240

```
'CR1000X Series

'Declare Variables and Units
Dim CS240X
Dim CS240Rs
Public CS240T_C

Units CS240T_C=Deg C

'Define Data Tables
DataTable(Hourly,True,-1)
    DataInterval(0,60,Min,10)
    Sample(1,CS240T_C,FP2)
EndTable

'Main Program
BeginProg
    'Main Scan
    Scan(5,Sec,1,0)
        'CS240 (4-wire) Class A RTD Back of PV Module Temperature Sensor
        'measurement 'CS240T_C'
        BrHalf4W(CS240X,1,mV200,mV200,1,Vx1,1,350,True,True,0,60,1,0)

        'Convert ratio to ohms
        CS240Rs=CS240X*1000

        'Calculate temperature from resistance
        PRTCalc(CS240T_C,1,CS240Rs/1000,1,1,0)

        'Call Data Tables and Store Data
        CallTable Hourly
    NextScan
EndProg
```

B.3 CS240DM program

CRBasic Example 7: CS240DM RS-485 modbus program

'CR6 Series data logger

```
Public PTemp
Public batt_volt

Public ResultCode(4)
Public CS240DM(20)
Public AveTemp(4)
Public SD_Temp
Public AvgTemp

Alias ResultCode(1) = CS240DM_1_ResultCode
Alias ResultCode(2) = CS240DM_2_ResultCode
Alias ResultCode(3) = CS240DM_3_ResultCode
Alias ResultCode(4) = CS240DM_4_ResultCode

Alias CS240DM(1) = CS240DM_1_SN
Alias CS240DM(2) = CS240DM_1_Temperature
Alias CS240DM(3) = CS240DM_1_Counter
Alias CS240DM(4) = CS240DM_1_SensorStatus
Alias CS240DM(5) = CS240DM_1_RangeCheck
Alias CS240DM(6) = CS240DM_2_SN
Alias CS240DM(7) = CS240DM_2_Temperature
Alias CS240DM(8) = CS240DM_2_Counter
Alias CS240DM(9) = CS240DM_2_SensorStatus
Alias CS240DM(10) = CS240DM_2_RangeCheck
Alias CS240DM(11) = CS240DM_3_SN
Alias CS240DM(12) = CS240DM_3_Temperature
Alias CS240DM(13) = CS240DM_3_Counter
Alias CS240DM(14) = CS240DM_3_SensorStatusk
Alias CS240DM(15) = CS240DM_3_RangeCheck
Alias CS240DM(16) = CS240DM_4_SN
Alias CS240DM(17) = CS240DM_4_Temperature
Alias CS240DM(18) = CS240DM_4_Counter
Alias CS240DM(19) = CS240DM_4_SensorStatus
Alias CS240DM(20) = CS240DM_4_RangeCheck

DataTable (Hourly,1,-1)
DataInterval (0,60,min,10)
  Sample (20,CS240DM(),IEEE4)
  Sample (1,AvgTemp,IEEE4)
  Sample (1,SD_Temp,IEEE4)
EndTable

BeginProg
```

CRBasic Example 7: CS240DM RS-485 modbus program

```
SerialOpen (ComC1,19200,2,0,50,4)

Scan (1,Sec,0,0)
  PanelTemp (PTemp,15000)
  Battery (batt_volt)
  ModbusMaster (ResultCode(1),ComC1,19200,111,4,CS240DM(1),1,5,3,100,2)
  ModbusMaster (ResultCode(2),ComC1,19200,2,4,CS240DM(6),1,5,3,100,2)
  ModbusMaster (ResultCode(3),ComC1,19200,3,4,CS240DM(11),1,5,3,100,2)
  ModbusMaster (ResultCode(4),ComC1,19200,4,4,CS240DM(16),1,5,3,100,2)

  AveTemp(1) = CS240DM(2)
  AveTemp(2) = CS240DM(7)
  AveTemp(3) = CS240DM(12)
  AveTemp(4) = CS240DM(17)

  AvgTemp = (AveTemp(1) + AveTemp(2) + AveTemp(3) + AveTemp(4))/4
  StdDevSpa (SD_Temp,4,AveTemp())

  CallTable Hourly
NextScan
EndProg
```

Appendix C. Sensor material properties

The sensor consists of 6061 aluminium (clear anodized), RTD, 3M9485PC adhesive, and Santoprene® jacketed cable.

C.1 3M 9485PC adhesive

Humidity resistance: High humidity has a minimal effect on adhesive performance. Bond strengths are generally higher after exposure for 7 days at 90 °F (32 °C) and 90% relative humidity.

U.V. resistance: When properly applied, nameplates and decorative trim parts are not adversely affected by outdoor exposure.

Water resistance: Immersion in water has no appreciable effect on the bond strength. After 100 hours in room temperature water, the bond actually shows an increase in strength.

Temperature cycling resistance: Bond strength generally increases after cycling four times through:

- 4 hours at 158 °F (70 °C)
- 4 hours at –20 °F (–29 °C)
- 16 hours at room temperature

Chemical resistance: When properly applied, adhesive will hold securely after exposure to numerous chemicals including gasoline, oil, Freon™ TF, sodium chloride solution, mild acids, and alkalis.

Heat resistance: Adhesive is usable for short periods (minutes, hours) at temperatures up to 350 °F (177 °C) and for intermittent longer periods (days, weeks) up to 250 °F (121 °C).

Low temperature service: –40 °F (–40 °C). Parts should be tested for low temperature shock service.



Global Sales & Support Network

A worldwide network of companies to help meet your needs



● Campbell Scientific group companies

● Sales representatives

Australia

Location: Garbutt, QLD Australia
Phone: 61.7.4401.7700
Email: info@campbellsci.com.au
Website: www.campbellsci.com.au

Brazil

Location: São Paulo, SP Brazil
Phone: 11.3732.3399
Email: vendas@campbellsci.com.br
Website: www.campbellsci.com.br

Canada

Location: Edmonton, AB Canada
Phone: 780.454.2505
Email: dataloggers@campbellsci.ca
Website: www.campbellsci.ca

China

Location: Beijing, P. R. China
Phone: 86.10.6561.0080
Email: info@campbellsci.com.cn
Website: www.campbellsci.com

Costa Rica

Location: San Pedro, Costa Rica
Phone: 506.2280.1564
Email: info@campbellsci.cc
Website: www.campbellsci.cc

France

Location: Vincennes, France
Phone: 0033.0.1.56.45.15.20
Email: info@campbellsci.fr
Website: www.campbellsci.fr

Germany

Location: Bremen, Germany
Phone: 49.0.421.460974.0
Email: info@campbellsci.de
Website: www.campbellsci.de

South Africa

Location: Stellenbosch, South Africa
Phone: 27.21.8809960
Email: sales@campbellsci.co.za
Website: www.campbellsci.co.za

Southeast Asia

Location: Bangkok, Thailand
Phone: 66.2.719.3399
Email: thitipongc@campbellsci.asia
Website: www.campbellsci.asia

Spain

Location: Barcelona, Spain
Phone: 34.93.2323938
Email: info@campbellsci.es
Website: www.campbellsci.es

UK

Location: Shephed, Loughborough, UK
Phone: 44.0.1509.601141
Email: sales@campbellsci.co.uk
Website: www.campbellsci.co.uk

USA

Location: Logan, UT USA
Phone: 435.227.9120
Email: info@campbellsci.com
Website: www.campbellsci.com