

# INSTRUCTION MANUAL



## **BlackGlobe Temperature Sensor for Heat Stress**

Revision: 1/15



Copyright © 2013-2015  
Campbell Scientific, Inc.



# ***Limited Warranty***

---

“Products manufactured by CSI are warranted by CSI to be free from defects in materials and workmanship under normal use and service for twelve months from the date of shipment unless otherwise specified in the corresponding product manual. (Product manuals are available for review online at [www.campbellsci.com](http://www.campbellsci.com).) Products not manufactured by CSI, but that are resold by CSI, are warranted only to the limits extended by the original manufacturer. Batteries, fine-wire thermocouples, desiccant, and other consumables have no warranty. CSI’s obligation under this warranty is limited to repairing or replacing (at CSI’s option) defective Products, which shall be the sole and exclusive remedy under this warranty. The Customer assumes all costs of removing, reinstalling, and shipping defective Products to CSI. CSI will return such Products by surface carrier prepaid within the continental United States of America. To all other locations, CSI will return such Products best way CIP (port of entry) per Incoterms ® 2010. This warranty shall not apply to any Products which have been subjected to modification, misuse, neglect, improper service, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied. The warranty for installation services performed by CSI such as programming to customer specifications, electrical connections to Products manufactured by CSI, and Product specific training, is part of CSI’s product warranty. **CSI EXPRESSLY DISCLAIMS AND EXCLUDES ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.** CSI hereby disclaims, to the fullest extent allowed by applicable law, any and all warranties and conditions with respect to the Products, whether express, implied or statutory, other than those expressly provided herein.”

# Assistance

---

Products may not be returned without prior authorization. The following contact information is for US and international customers residing in countries served by Campbell Scientific, Inc. directly. Affiliate companies handle repairs for customers within their territories. Please visit [www.campbellsci.com](http://www.campbellsci.com) to determine which Campbell Scientific company serves your country.

To obtain a Returned Materials Authorization (RMA), contact CAMPBELL SCIENTIFIC, INC., phone (435) 227-9000. After an application engineer determines the nature of the problem, an RMA number will be issued. Please write this number clearly on the outside of the shipping container. Campbell Scientific's shipping address is:

**CAMPBELL SCIENTIFIC, INC.**

RMA# \_\_\_\_\_  
815 West 1800 North  
Logan, Utah 84321-1784

For all returns, the customer must fill out a "Statement of Product Cleanliness and Decontamination" form and comply with the requirements specified in it. The form is available from our web site at [www.campbellsci.com/repair](http://www.campbellsci.com/repair). A completed form must be either emailed to [repair@campbellsci.com](mailto:repair@campbellsci.com) or faxed to (435) 227-9106. Campbell Scientific is unable to process any returns until we receive this form. If the form is not received within three days of product receipt or is incomplete, the product will be returned to the customer at the customer's expense. Campbell Scientific reserves the right to refuse service on products that were exposed to contaminants that may cause health or safety concerns for our employees.

# Precautions

---

**DANGER — MANY HAZARDS ARE ASSOCIATED WITH INSTALLING, USING, MAINTAINING, AND WORKING ON OR AROUND TRIPODS, TOWERS, AND ANY ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC.** FAILURE TO PROPERLY AND COMPLETELY ASSEMBLE, INSTALL, OPERATE, USE, AND MAINTAIN TRIPODS, TOWERS, AND ATTACHMENTS, AND FAILURE TO HEED WARNINGS, INCREASES THE RISK OF DEATH, ACCIDENT, SERIOUS INJURY, PROPERTY DAMAGE, AND PRODUCT FAILURE. TAKE ALL REASONABLE PRECAUTIONS TO AVOID THESE HAZARDS. CHECK WITH YOUR ORGANIZATION'S SAFETY COORDINATOR (OR POLICY) FOR PROCEDURES AND REQUIRED PROTECTIVE EQUIPMENT PRIOR TO PERFORMING ANY WORK.

Use tripods, towers, and attachments to tripods and towers only for purposes for which they are designed. Do not exceed design limits. Be familiar and comply with all instructions provided in product manuals. Manuals are available at [www.campbellsci.com](http://www.campbellsci.com) or by telephoning (435) 227-9000 (USA). You are responsible for conformance with governing codes and regulations, including safety regulations, and the integrity and location of structures or land to which towers, tripods, and any attachments are attached. Installation sites should be evaluated and approved by a qualified engineer. If questions or concerns arise regarding installation, use, or maintenance of tripods, towers, attachments, or electrical connections, consult with a licensed and qualified engineer or electrician.

## General

- Prior to performing site or installation work, obtain required approvals and permits. Comply with all governing structure-height regulations, such as those of the FAA in the USA.
- Use only qualified personnel for installation, use, and maintenance of tripods and towers, and any attachments to tripods and towers. The use of licensed and qualified contractors is highly recommended.
- Read all applicable instructions carefully and understand procedures thoroughly before beginning work.
- Wear a **hardhat** and **eye protection**, and take **other appropriate safety precautions** while working on or around tripods and towers.
- **Do not climb** tripods or towers at any time, and prohibit climbing by other persons. Take reasonable precautions to secure tripod and tower sites from trespassers.
- Use only manufacturer recommended parts, materials, and tools.

## Utility and Electrical

- **You can be killed** or sustain serious bodily injury if the tripod, tower, or attachments you are installing, constructing, using, or maintaining, or a tool, stake, or anchor, come in **contact with overhead or underground utility lines**.
- Maintain a distance of at least one-and-one-half times structure height, 20 feet, or the distance required by applicable law, **whichever is greater**, between overhead utility lines and the structure (tripod, tower, attachments, or tools).
- Prior to performing site or installation work, inform all utility companies and have all underground utilities marked.
- Comply with all electrical codes. Electrical equipment and related grounding devices should be installed by a licensed and qualified electrician.

## Elevated Work and Weather

- Exercise extreme caution when performing elevated work.
- Use appropriate equipment and safety practices.
- During installation and maintenance, keep tower and tripod sites clear of un-trained or non-essential personnel. Take precautions to prevent elevated tools and objects from dropping.
- Do not perform any work in inclement weather, including wind, rain, snow, lightning, etc.

## Maintenance

- Periodically (at least yearly) check for wear and damage, including corrosion, stress cracks, frayed cables, loose cable clamps, cable tightness, etc. and take necessary corrective actions.
- Periodically (at least yearly) check electrical ground connections.

WHILE EVERY ATTEMPT IS MADE TO EMBODY THE HIGHEST DEGREE OF SAFETY IN ALL CAMPBELL SCIENTIFIC PRODUCTS, THE CUSTOMER ASSUMES ALL RISK FROM ANY INJURY RESULTING FROM IMPROPER INSTALLATION, USE, OR MAINTENANCE OF TRIPODS, TOWERS, OR ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC.



# Table of Contents

---

*PDF viewers: These page numbers refer to the printed version of this document. Use the PDF reader bookmarks tab for links to specific sections.*

<b>1. Introduction .....</b>	<b>1</b>
<b>2. Cautionary Statements.....</b>	<b>1</b>
<b>3. Initial Inspection .....</b>	<b>1</b>
3.1 Ships With List .....	1
<b>4. Overview .....</b>	<b>2</b>
<b>5. Specifications .....</b>	<b>2</b>
5.1 Accuracy .....	2
<b>6. Installation.....</b>	<b>4</b>
6.1 Siting.....	4
6.2 Assembly and Mounting .....	4
6.2.1 Mounting the BlackGlobe on the Mounting Arm .....	4
6.2.2 Mounting the BlackGlobe Assembly on a Horizontal Crossarm...	6
<b>7. Operation.....</b>	<b>7</b>
7.1 Wiring .....	7
7.2 Calculations.....	8
7.2.1 Wet-Bulb Globe Thermometer Index (WBGT).....	8
7.2.2 Dewpoint.....	8
7.2.3 Vapor Pressure.....	9
7.2.4 Saturated Vapor Pressure .....	9
7.2.5 Wet-Bulb.....	9
7.2.6 Mean Site Barometric Pressure Calculation (SP_kPa) .....	10
7.3 Programming.....	10
7.3.1 Example CR1000 Program .....	10
7.4 Long Lead Lengths .....	12
<b>8. Maintenance .....</b>	<b>12</b>
<b>9. References .....</b>	<b>12</b>
<b>Appendices</b>	
<b>A. The Theory of BlackGlobe Temperature and Heat Stress.....</b>	<b>A-1</b>

## **B. Edlog Programming Examples ..... B-1**

B.1	Example CR10X Program.....	B-1
B.2	Edlog Programming for Long Lead Lengths.....	B-8

### ***Figures***

5-1.	Polynomial error curve (Edlog dataloggers only) .....	3
5-2.	Thermistor interchangeability limits .....	4
6-1.	Mounting kit components.....	5
6-2.	Nuts and lock washers on mounting bolt.....	5
6-3.	BlackGlobe fitting and cable alignment.....	6
6-4.	BlackGlobe mounted to a crossarm (front view).....	7
6-5.	BlackGlobe mounted to a crossarm (back view).....	7

### ***Tables***

5-1.	Thermistor Interchangeability Specification .....	3
5-2.	Polynomial Error .....	3
7-1.	Wiring Diagram for Campbell Scientific Dataloggers .....	8
A-1.	Sample use of WBGT Index.....	A-1
B-1.	Polynomial Coefficients.....	B-6
B-2.	Actual Temperature, Sensor Resistance, and Computed Temperature .....	B-6

# ***BlackGlobe Temperature Sensor for Heat Stress***

---

## **1. Introduction**

The BlackGlobe Temperature Sensor for Heat Stress (BlackGlobe) measure radiant temperature. This measurement, along with the measurement of ambient air and wet-bulb temperatures, is used to calculate the wet-bulb globe temperature (WBGT). The WBGT index combines the effects of temperature, humidity, radiant heat, and wind into one single index employed to express environmental heat stress. The measurement of heat stress is important because loss of physical and mental efficiency occurs under definable degrees of heat stress. Severe heat stress can lead to fatigue, exhaustion and possibly even disability or death.

Before installing the BlackGlobe, please study

- Section 2, *Cautionary Statements*
- Section 3, *Initial Inspection*

## **2. Cautionary Statements**

- READ AND UNDERSTAND the *Precautions* section at the front of this manual.
- The BlackGlobe is a precision instrument. Please handle it with care.
- The black outer jacket of the cable is Santoprene® rubber. This compound was chosen for its resistance to temperature extremes, moisture, and UV degradation. However, this jacket will support combustion in air. It is rated as slow burning when tested according to U.L. 94 H.B. and will pass FMVSS302. Local fire codes may preclude its use inside buildings.
- Do not use the BlackGlobe with long lead lengths in an electrically noisy environment.

## **3. Initial Inspection**

- Upon receipt of the BlackGlobe, inspect the packaging and contents for damage. File damage claims with the shipping company. Immediately check package contents against the shipping documentation (see Section 3.1, *Ships With List*). Contact Campbell Scientific about any discrepancies.
- The model number and cable length are printed on a label at the connection end of the cable. Check this information against the shipping documents to ensure the expected product and cable length are received.

### **3.1 Ships With List**

- (4) 7362 8 inch Wire Ties
- (1) 29956 BlackGlobe Mounting Kit
- ResourceDVD

## 4. Overview

The BlackGlobe uses a thermistor inside a 15.24 cm (6 in) hollow copper sphere, painted black to measure radiant temperature. This measurement along with the measurement of ambient air and wet-bulb temperatures may be used to calculate the WBGT index.

Sensor cable length is specified at the time of order. Do not exceed 1000 feet of cable.

To calculate the wet-bulb globe thermometer index (WBGT), the measurement of the BlackGlobe (radiant heat), wet-bulb (evaporative heat), and ambient air (dry-bulb) temperatures are required. The wet-bulb temperature can be calculated using air temperature and relative humidity if a wet-bulb thermometer is not available. See Section 7.2, *Calculations*.

## 5. Specifications

<b>Temperature Measurement Range:</b>	–5 to 95 °C
<b>Temperature Survival Range:</b>	–50 to 100 °C
<b>Thermistor Interchangeability Error:</b>	Typically < ±0.2 °C over 0 to 70 °C and ±0.3 at 95 °C
<b>Polynomial Linearization Error:</b>	< ±0.5 °C over –7 to 90 °C
<b>Near Normal Emittance:</b>	0.957
<b>Maximum Cable Length:</b>	305 m (1000 ft)

**NOTE**

The black outer jacket of the cable is Santoprene<sup>®</sup> rubber. This compound was chosen for its resistance to temperature extremes, moisture, and UV degradation. However, this jacket will support combustion in air. It is rated as slow burning when tested according to V.L. 94 H.B. and will pass FMVSS302. Local fire codes may preclude its use inside buildings.

### 5.1 Accuracy

The overall probe accuracy is a combination of the thermistor's interchangeability specification, the precision of the bridge resistors, and the Steinhart-Hart equation error (CRBasic dataloggers) or the polynomial error (Edlog dataloggers). In a worst case, all errors add to an accuracy of ±0.3 °C over the range of –3 to 90 °C and ±0.7 °C over the range of –5 to 95 °C. The major error component is the interchangeability specification of the thermistor, tabulated in TABLE 5-1 and plotted in FIGURE 5-2. For the range of 0 to 50 °C, the interchangeability error is predominantly offset and can be determined with a single point calibration. Compensation can then be done with an offset entered in the measurement instruction. The bridge resistors are 0.1% tolerance with a 10 ppm temperature coefficient. Polynomial errors are tabulated in TABLE 5-2 and plotted in FIGURE 5-1.

<b>TABLE 5-1. Thermistor Interchangeability Specification</b>	
<b>Temperature (°C)</b>	<b>Temperature Tolerance (<math>\pm^{\circ}\text{C}</math>)</b>
-5	0.14
0 to +70	0.10
+85	0.25
+95	0.35

<b>TABLE 5-2. Polynomial Error</b>	
-5° to +95°	< $\pm 0.5^{\circ}\text{C}$
-3° to +90°	< $\pm 0.1^{\circ}\text{C}$

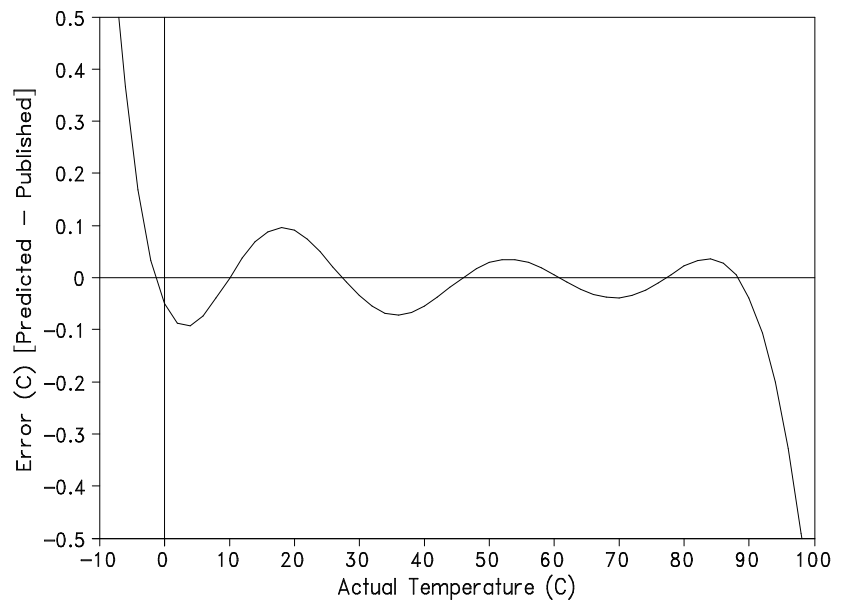


FIGURE 5-1. Polynomial error curve (Edlog dataloggers only)

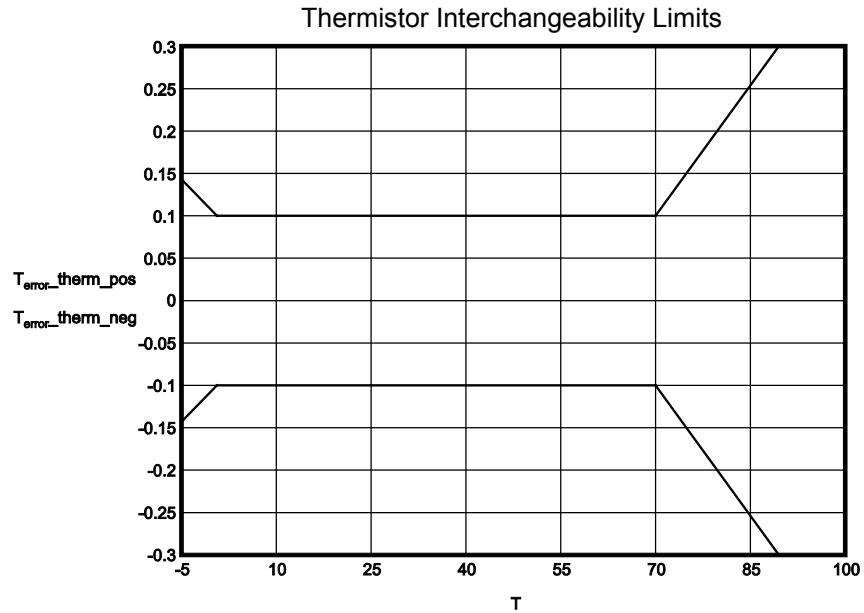


FIGURE 5-2. Thermistor interchangeability limits

## 6. Installation

### 6.1 Siting

The BlackGlobe must be mounted in a location that will not be shadowed and is representative of the environmental conditions to be measured.

### 6.2 Assembly and Mounting

Tools required for installing on a tripod or tower:

- Adjustable end wrench or 7/16 in. and 1/2 in. open end wrench
- Small screwdriver provided with the datalogger
- Small pair of diagonal-cutting pliers
- UV resistant cable ties provided with the BlackGlobe

#### 6.2.1 Mounting the BlackGlobe on the Mounting Arm


The BlackGlobe and mounting kit (pn 29956) requires some assembly before installation. The mounting kit comes with (see Figure 6.1):

- Mounting arm
- Mounting bolt
- Two lock washers
- Two nuts
- Two pipe clamps (not used when mounted to a horizontal pipe cross arm)
- U-bolt with associated nuts and washers



**FIGURE 6-1. Mounting kit components**

1. Place the mounting bolt through the hole in the mounting arm as shown in FIGURE 6-2.
2. Slide one of the lock washers against the mounting arm.
3. Thread both nuts about half way down the bolt and then slide on the last lock washer. The hardware should be arranged as shown in FIGURE 6-2.

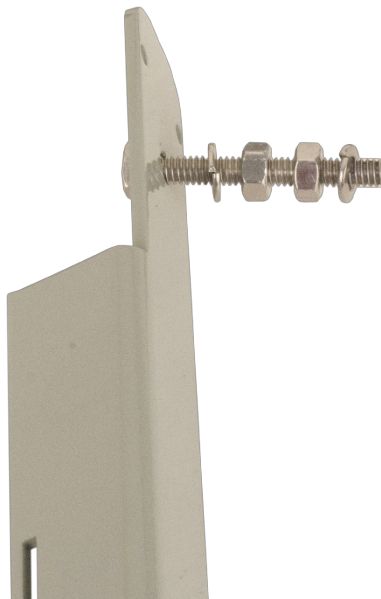

**FIGURE 6-2. Nuts and lock washers on mounting bolt**

4. Tighten down the nut closest to the mounting arm so the bolt is held firmly in place.
5. Thread the BlackGlobe fitting onto the bolt. Thread it as far down as it will go, but you may have to back it off a bit. The cable gland and cable should align with the mounting arm as shown in FIGURE 6-3.
6. Tighten down the nut closest to the BlackGlobe fitting. The BlackGlobe and mounting bolt should not move when the all the hardware is tightened down.



*FIGURE 6-3. BlackGlobe fitting and cable alignment*

### **6.2.2 Mounting the BlackGlobe Assembly on a Horizontal Crossarm**

The BlackGlobe assembly must be mounted on a horizontal crossarm.

1. Position the sensor so that the cable gland is facing down (FIGURE 6-3).
2. Use the mounting hardware supplied to hold the sensor on the horizontal crossarm. FIGURE 6-4 and FIGURE 6-5 show a BlackGlobe mounted on a crossarm by using the U-bolts.
3. Use the wire ties provided with the unit to secure the cabling to the crossarm.
4. Leave a small loop of cable at the cable entry into the sensor to act as a drip line for any condensed moisture or rain (FIGURE 6-4).



FIGURE 6-4. BlackGlobe mounted to a crossarm (front view)



FIGURE 6-5. BlackGlobe mounted to a crossarm (back view)

## 7. Operation

### 7.1 Wiring

The wiring diagram for the BlackGlobe to a Campbell Scientific datalogger is given in TABLE 7-1. Temperature is measured with one single-ended input channel and a voltage excitation channel. Multiple probes can be connected to the same excitation channel (the number of probes per excitation channel is physically limited by the number lead wires that can be inserted into a single voltage excitation terminal, approximately six).

**TABLE 7-1. Wiring Diagram for Campbell Scientific Dataloggers**

<b>Color</b>	<b>Description</b>	<b>CR6 CR800 CR850 CR5000 CR3000 CR1000 CR9000(X)</b>	<b>CR510 CR500 CR10(X)</b>	<b>21X CR7 CR23X</b>
Black	Voltage Excitation	Switched Voltage Excitation	Switched Excitation	Switched Excitation
Red	Temperature Signal	Single-Ended Input	Single-Ended Input	Single-Ended Input
Purple	Signal Ground	$\perp$	AG	$\perp$
Clear	Shield	$\perp$	G	$\perp$

## 7.2 Calculations

### 7.2.1 Wet-Bulb Globe Thermometer Index (WBGT)

To calculate the WBGT index, a measurement of the BlackGlobe (radiant heat), wet-bulb (evaporative heat), and ambient air (dry-bulb) temperatures are required (Equation 1). In the approach discussed here, air temperature and relative humidity measurements are used to calculate the actual vapor pressure, and a dewpoint temperature is used to calculate the wet-bulb temperature.

Air temperature and relative humidity (%) measurements required for this calculation can be made by a variety of sensors. In the examples shown in Section 7.3, *Programming*, the HC2S3 is used.

Ultimately,

$$\text{WBGT} = (0.2 \times \text{BlackGlobe Temp}) + (0.7 \times \text{Wet-Bulb Temp}) + (0.1 \times \text{Dry-Bulb Temp}) \quad (1)$$

Dewpoint and Wet-Bulb temperature units include: °C, °F, °K

### 7.2.2 Dewpoint

Equation 2 is used to calculate dewpoint.

$$T_d = (241.88 * \ln(P/0.61078)) / (17.558 - \ln(P/0.61078)) \quad (2)$$

where

$T_d$  = dewpoint (°C)

P = vapor pressure (kPa)

The equation is an inverse of a version of Tetens's equation (Tetens, 1930), optimized for dewpoints in the range –35 to 50 °C, and is accurate to within plus or minus 0.1 °C within that range.

### 7.2.3 Vapor Pressure

Vapor pressure is calculated by the datalogger using Equation 3.

$$P = RH * P_{sw} / 100 \quad (3)$$

where

RH = relative humidity (%)

$P_{sw}$  = saturation vapor pressure (kPa) over water

### 7.2.4 Saturated Vapor Pressure

Saturation vapor pressure over water is calculated by the datalogger using Equation 4.

$$P_{sw} = (A_0 + A_1 * T + A_2 * T^2 + A_3 * T^3 + A_4 * T^4 + A_5 * T^5 + A_6 * T^6) * 0.1 \quad (4)$$

Where

T = air temperature (dry-bulb or ambient air temperature) (°C)

$$A_0 = 6.107799961$$

$$A_1 = 4.436518521E-1$$

$$A_2 = 1.428945805E-2$$

$$A_3 = 2.650648471E-4$$

$$A_4 = 3.031240396E-6$$

$$A_5 = 2.034080948E-8$$

$$A_6 = 6.136820929E-11$$

### 7.2.5 Wet-Bulb

Wet-bulb is derived using an iterative process. The wet-bulb temperature lies somewhere between the dry-bulb temperature (air temperature) and the dewpoint temperature. The datalogger uses Equation 5 to calculate vapor pressure using the dry-bulb temperature and a wet-bulb temperature estimate:

$$P = P_w - (0.000660 * (1 + 0.00115 * T_w) * (T - T_w) * SP) \quad (5)$$

where

$P_w$  = saturation vapor pressure (kPa) at the wet-bulb temperature (°C)

$T_w$  = wet-bulb temperature (°C)

T = air temperature (dry-bulb temperature) (°C)

SP = standard air pressure (kPa) at the user entered elevation

The resulting vapor pressure is compared to the true vapor pressure (see above) and the difference determines the next wet-bulb temperature estimate. The process repeats until the difference between the current wet-bulb temperature estimate and the previous wet-bulb temperature estimate is only plus or minus 0.01 °C. The datalogger thus derives the wet-bulb temperature.

## 7.2.6 Mean Site Barometric Pressure Calculation (SP\_kPa)

The wet-bulb instruction needs mean barometric pressure which is closely related to elevation of the site. U.S. Standard Atmosphere and dry air were assumed when Equation 6 was derived (Wallace & Hobbes, 1977).

$$SP_{kPa} = 101.325 - 101.325 \left\{ 1 - \left( 1 - \frac{E}{44307.69231} \right)^{5.25328} \right\} \quad (6)$$

The value of SP<sub>kPa</sub> is in kilopascals and the site elevation, E, is in meters.

Use Equation 7 to convert feet to meters.

$$E(m) = \frac{E(ft)}{3.281 ft/m} \quad (7)$$

The value for SP<sub>kPa</sub> must be put into the datalogger program.

## 7.3 Programming

### 7.3.1 Example CR1000 Program

The example includes measurements of the BlackGlobe temperature, and the calculation of wet-bulb temperature and wet-bulb globe temperature. Measurements of air temperature and relative humidity are supplied by an HC2S3 in this example. Calculations for dewpoint, wet-bulb, and wet-bulb globe temperature are also included.

```
'CR1000 Series Datalogger
'Program: BlackGlobe.CR1

'Declare constants
'Mean site barometric pressure at 1357.58 meters.
'CHANGE THIS VALUE TO MATCH YOUR ELEVATION.
Const SP_kPa = 86.04377

'Declare Public Variables
'Datalogger variables.
Public PnlTempC 'Datalogger panel temperature
Units PnlTempC=Deg C
Public Batt_Volt 'Datalogger battery voltage
Units Batt_Volt=VDC

'BlackGlobe variables.
Public BGTemp_C 'BlackGlobe temperature
Units BGTemp_C=Deg C
```

```

'Rotronic HC2S3 variables.
Public AirTempC 'Air temperature
Units AirTempC=Deg C
Public AirRH 'Humidity
Units AirRH=%

'Calculated variables.
Public DewPnt_C 'Dewpoint temperature
Public WetB1b_C 'Wet-bulb temperature
Public WBGT_C 'Wet-bulb globe (WBGT) temperature
Dim SVP_kPa
Dim VP_kPa
Dim UpperTmp
Dim LowerTmp
Dim old_wbT, new_wbT
Dim WB_VP_kPa, Diff_VP_kPa
Dim Diff_wbT

'Define Data Tables
'Hourly data table.
DataTable (Hourly,1,-1)
  DataInterval (0,1,Hr,10)
  Average (1,AirTempC,FP2,False)
  Sample (1,AirRH,FP2)
  Average (1,DewPnt_C,FP2,False)
  Average (1,WetB1b_C,FP2,False)
  Average (1,WBGT_C,FP2,False)
EndTable

'Daily datalogger status table.
DataTable (Daily,True,-1)
  DataInterval (0,1,Day,10)
  Maximum (1,Batt_Volt,FP2,False,False)
  Minimum (1,Batt_Volt,FP2,False,False)
  Maximum (1,Pn1TempC,FP2,False,False)
  Minimum (1,Pn1TempC,FP2,False,False)
EndTable

'Main Program
BeginProg
  Scan (5,Sec,3,0)
    PanelTemp (Pn1TempC,250)
    Battery (Batt_Volt)
    'Rotronic HC2S3 powered up all the time.
    VoltSe (AirTempC,1,mV2500,1,0,0,_60Hz,0.1,-40)
    VoltSe (AirRH,1,mV2500,2,0,0,_60Hz,0.1,0)
    If (AirRH >= 100) AND (AirRH <= 108) Then AirRH = 100
    SatVP (SVP_kPa,AirTempC)
    VP_kPa = SVP_kPa * AirRH/100
    DewPoint (DewPnt_C,AirTempC,AirRH)
    If (DewPnt_C > AirTempC) Or (DewPnt_C = NAN) Then DewPnt_C = AirTempC
    UpperTmp = AirTempC
    LowerTmp = DewPnt_C
    'BlackGlobe wired to SE channel 3 and excitation channel VX1.
    Therm108 (BGTemp_C,1,3,Vx1,0,_60Hz,1.0,0)
    'Loop to find wet-bulb temperature.
    Do
      old_wbT = new_wbT
      new_wbT = ((UpperTmp - LowerTmp)/2) + LowerTmp
      WetDryBulb (WB_VP_kPa,AirTempC,new_wbT,SP_kPa)
      Diff_VP_kPa = WB_VP_kPa - VP_kPa
      Diff_wbT = ABS (old_wbT - new_wbT)
      If Diff_VP_kPa > 0 Then
        UpperTmp = new_wbT
      Else
        LowerTmp = new_wbT
      EndIf
    Loop Until Diff_wbT < 0.01 Then ExitDo

```

```
Loop
'Wet-bulb temperature.
WetB1b_C = new_wbT
'Calculate Wet-Bulb Globe (WBGT) temperature.
WBGT_C = (0.1 * AirTempC) + (0.2 * BGTemp_C) + (0.7 * WetB1b_C)
'Call data storage tables.
CallTable Hourly
CallTable Daily
NextScan
EndProg
```

## 7.4 Long Lead Lengths

If the BlackGlobe has lead lengths greater than 300 feet, a longer settling time before the measurement is made is required. For CRBasic loggers, the 60 and 50 Hz integration options include a 3 ms settling time; longer settling times also can be entered into the Settling Time parameter. In Edlog, use the **DC Half Bridge Instruction (Instruction 4)** with a 2 ms delay to measure the temperature.

---

### CAUTION

Do not use the BlackGlobe with long lead lengths in an electrically noisy environment.

---

## 8. Maintenance

The BlackGlobe requires minimal maintenance. Check monthly to ensure the sphere is free from dirt and debris. Clean with water and soft cloth if necessary. Do not use solvents as they may dissolve the paint.

## 9. References

Lowe, P.R. 1977. J. Appl. Meteor., 16:100-103

Tetens, O. 1930. Z. Geophys., 6:297

Wallace, J.M. and P.V. Hobbes, 1977: Atmospheric Science: *An Introductory Survey*, Academic Press, pp. 59 – 61

# Appendix A. The Theory of BlackGlobe Temperature and Heat Stress

---

The Wet-Bulb Globe Temperature Index (WBGT) combines the effects of temperature, humidity, radiant heat, and wind into one single index employed to express environmental heat stress. Loss of physical and mental efficiency occurs under definable degrees of heat stress. Severe heat stress can lead to fatigue, exhaustion and possibly even disability or death. Personnel can increase their resistance to heat stress by acclimatizing gradually to hot environments and by maintaining a good water and salt balance.

Heat stress can be reduced by decreasing the lengths of exposure and decreasing the workload of individuals under heat stress. Situational factors such as the type of clothing worn, the type of work performed, the psychological effects of stress, and the availability of fluids can also affect the assessment of heat stress. These factors are not easily quantified, and so the individual in a given situation must estimate their significance. Environmental factors such as temperature, humidity, and wind are more easily measured to assess heat stress. TABLE A-1 provides some guidelines for using the WBGT index.

It is important to understand how WBGT differs from Humidex. The two indices are not directly comparable, as they are not based on the same parameters. Humidex, which takes into account temperature and humidity, is used to describe how hot the weather feels to the average person. Humidex values are higher than WBGT values when indicating the same danger level (e.g., Humidex > 45 °C is “dangerous”, while WBGT > 32.2 °C is “dangerous”). Humidex does have shortcomings, in that it does not include the effects of radiant heat and wind. For this reason, WBGT remains the primary index for human safety applications.

TABLE A-1. Sample use of WBGT Index	
Readings	Guidelines
WBGT Index Reading 26 – 27.5	Precautions should be taken. Water intake should be a minimum of 0.5 liters/hr. The work/rest cycle for an acclimatized person should be 50/10 min/hr.
WBGT Index Reading 27.5 – 29	Increased water intake should be emphasized. Water intake should be 0.5 to 1 liters/hr. The work/rest cycle for an acclimatized person should be 50/10 min/hr.
WBGT Index Reading 29 – 31	Increased supervision of personnel performing physical activity is required. Water intake should be 1 to 1.5 liters /hr. The work/rest cycle for an acclimatized person should be 45/15 min/hr.
WBGT Index Reading 31 – 32	Physical activity should be limited to a maximum of 6 hours per day for fully acclimatized personnel. Water intake should be 1.5 to 2 liters/hr. The work/rest cycle for an acclimatized person should be 30/30 min/hr.

TABLE A-1. Sample use of WBGT Index	
Readings	Guidelines
WBGT Index Reading >32	All strenuous activity should be suspended. Water intake should be a minimum of 2 liters/hr. The work/rest cycle for an acclimatized person (non-strenuous activity) should be 20/40 min/hr.

# Appendix B. Edlog Programming Examples

---

## B.1 Example CR10X Program

**Instruction 5 (AC Half Bridge)** is used to measure the thermistor probe inside the sphere. **Instruction 55 (Polynomial)** is used to calculate the temperature in degrees Celsius. The polynomial coefficients are shown in TABLE B-1. Thermistor resistance and computed temperature over a –10 to 84 °C range is shown in TABLE B-2. The example includes instructions for measuring an HC2S3 to supply air temperature and relative humidity values. Calculations for dewpoint, wet-bulb, and wet-bulb globe temperature are also included.

```
{CR10X}
;Program: BLACKGLOBE.CSI
;Date: June 2013

*Table 1 Program
01: 5.0000      Execution Interval (seconds)

1: Batt Voltage (P10)
1: 1           Loc [ BattVolt ]

2: Internal Temperature (P17)
1: 2           Loc [ CR10XTmpC ]

;Rotronic HC2S3 temperature and relative humidity.
;Sensor powered on all the time.

3: Volt (SE) (P1)
1: 1           Reps
2: 5           2500 mV Slow Range
3: 1           SE Channel
4: 4           Loc [ AirTempC ]
5: 0.1         Multiplier
6: -40         Offset

4: Volt (SE) (P1)
1: 1           Reps
2: 5           2500 mV Slow Range
3: 2           SE Channel
4: 5           Loc [ AirRH ]
5: 0.1         Multiplier
6: 0           Offset

5: If (X<=>F) (P89)
1: 5           X Loc [ AirRH ]
2: 3           >=
3: 100         F
4: 30          Then Do

6: If (X<=>F) (P89)
1: 5           X Loc [ AirRH ]
2: 4           <
3: 108         F
4: 30          Then Do

7: Z=F x 10^N (P30)
1: 100         F
2: 0           n, Exponent of 10
3: 5           Z Loc [ AirRH ]
```

```

      8: End (P95)

9: End (P95)

;BlackGlobe temperature - °C

10: AC Half Bridge (P5)
   1: 1      Repts
   2: 23     25 mV 60 Hz Rejection Range
   3: 3      SE Channel
   4: 1      Excite all reps w/Exchan 1
   5: 1000   mV Excitation
   6: 3      Loc [ BGTemp_C ]
   7: 200    Multiplier
   8: 0      Offset

11: Polynomial (P55)
   1: 1      Repts
   2: 3      X Loc [ BGTemp_C ]
   3: 3      F(X) Loc [ BGTemp_C ]
   4: -26.97 C0
   5: 69.635 C1
   6: -40.66 C2
   7: 16.573 C3
   8: -3.455 C4
   9: 0.301  C5

;Calculate saturated vapor pressure.

12: Saturation Vapor Pressure (P56)
   1: 4      Temperature Loc [ AirTempC ]
   2: 9      Loc [ SVP_kPa ]

;Calculate vapor pressure.

13: Z=X*Y (P36)
   1: 9      X Loc [ SVP_kPa ]
   2: 5      Y Loc [ AirRH ]
   3: 10     Z Loc [ VP_kPa ]

14: Z=X*F (P37)
   1: 10     X Loc [ VP_kPa ]
   2: 0.01   F
   3: 10     Z Loc [ VP_kPa ]

;Dewpoint calculation.

15: Z=X*F (P37)
   1: 10     X Loc [ VP_kPa ]
   2: 1.63725 F
   3: 20     Z Loc [ scratch1 ]

16: Z=LN(X) (P40)
   1: 20     X Loc [ scratch1 ]
   2: 20     Z Loc [ scratch1 ]

17: Z=X*F (P37)
   1: 20     X Loc [ scratch1 ]
   2: 241.88 F
   3: 21     Z Loc [ scratch2 ]

18: Z=F x 10^n (P30)
   1: 17.558 F
   2: 0      n, Exponent of 10
   3: 22     Z Loc [ scratch3 ]

```

```

19: Z=X-Y (P35)
   1: 22      X Loc [ scratch3 ]
   2: 20      Y Loc [ scratch1 ]
   3: 22      Z Loc [ scratch3 ]

20: Z=X/Y (P38)
   1: 21      X Loc [ scratch2 ]
   2: 22      Y Loc [ scratch3 ]
   3: 7       Z Loc [ DewPnt_C ]

21: If (X<=>Y) (P88)
   1: 7       X Loc [ DewPnt_C ]
   2: 3       >=
   3: 4       Y Loc [ AirTempC ]
   4: 30      Then Do

       22: Z=X (P31)
          1: 4       X Loc [ AirTempC ]
          2: 7       Z Loc [ DewPnt_C ]

23: End (P95)

;Mean site pressure at elevation of 1357.58 meters.

24: Z=F x 10^n (P30)
   1: 86.0437 F
   2: 00      n, Exponent of 10
   3: 17      Z Loc [ SP_kPa ]

;Wet-bulb calculation

25: Z=X (P31)
   1: 4       X Loc [ AirTempC ]
   2: 14      Z Loc [ UpperTmp ]

26: Z=X (P31)
   1: 7       X Loc [ DewPnt_C ]
   2: 15      Z Loc [ LowerTmp ]

;Iterative loop to figure out wet-bulb temperature.

27: Beginning of Loop (P87)
   1: 0       Delay
   2: 25      Loop Count

       28: Z=X (P31)
          1: 12      X Loc [ new_wbT ]
          2: 11      Z Loc [ old_wbT ]

       29: Z=X-Y (P35)
          1: 14      X Loc [ UpperTmp ]
          2: 15      Y Loc [ LowerTmp ]
          3: 12      Z Loc [ new_wbT ]

       30: Z=X*F (P37)
          1: 12      X Loc [ new_wbT ]
          2: 0.5      F
          3: 12      Z Loc [ new_wbT ]

       31: Z=X+Y (P33)
          1: 12      X Loc [ new_wbT ]
          2: 15      Y Loc [ LowerTmp ]
          3: 12      Z Loc [ new_wbT ]

```

```

32: Wet/Dry-Bulb Temp to VP (P57)
   1: 9      Pressure Loc [ SVP_kPa ]
   2: 4      Dry-bulb Loc [ AirTempC ]
   3: 12     Wet-bulb Loc [ new_wbT ]
   4: 18     Loc [ WB_VP_kPa ]

33: Z=X-Y (P35)
   1: 11     X Loc [ old_wbT ]
   2: 12     Y Loc [ new_wbT ]
   3: 16     Z Loc [ Diff_wbT ]

34: Z=ABS(X) (P43)
   1: 16     X Loc [ Diff_wbT ]
   2: 16     Z Loc [ Diff_wbT ]

35: Z=X-Y (P35)
   1: 18     X Loc [ WB_VP_kPa ]
   2: 10     Y Loc [ VP_kPa ]
   3: 13     Z Loc [ DiffVPkPa ]

36: If (X<=>F) (P89)
   1: 13     X Loc [ DiffVPkPa ]
   2: 3      >=
   3: 0      F
   4: 30     Then Do

37: Z=X (P31)
   1: 12     X Loc [ new_wbT ]
   2: 14     Z Loc [ UpperTmp ]

38: Else (P94)

39: Z=X (P31)
   1: 12     X Loc [ new_wbT ]
   2: 15     Z Loc [ LowerTmp ]

40: End (P95)

41: If (X<=>F) (P89)
   1: 16     X Loc [ Diff_wbT ]
   2: 4      <
   3: 0.01   F
   4: 31     Exit Loop if True

42: End (P95)

;Wet-bulb temperature.

43: Z=X (P31)
   1: 12     X Loc [ new_wbT ]
   2: 8      Z Loc [ WetB1b_C ]

;Calculate Wet-Bulb Globe (WBG) temperature.

44: Z=X*F (P37)
   1: 4      X Loc [ AirTempC ]
   2: 0.1    F
   3: 20     Z Loc [ scratch1 ]

45: Z=X*F (P37)
   1: 3      X Loc [ BGTemp_C ]
   2: 0.2    F
   3: 21     Z Loc [ scratch2 ]

46: Z=X*F (P37)
   1: 7      X Loc [ DewPnt_C ]
   2: 0.7    F
   3: 6      Z Loc [ WBG_T_C ]

```

```

47: Z=X+Y (P33)
   1: 20      X Loc [ scratch1 ]
   2: 6       Y Loc [ WBGT_C   ]
   3: 6       Z Loc [ WBGT_C   ]

48: Z=X+Y (P33)
   1: 21      X Loc [ scratch2 ]
   2: 6       Y Loc [ WBGT_C   ]
   3: 6       Z Loc [ WBGT_C   ]

;Store hourly data.

49: If time is (P92)
   1: 0       Minutes (Seconds --) into a
   2: 60      Interval (same units as above)
   3: 10      Set Output Flag High (Flag 0)

50: Set Active Storage Area (P80)
   1: 1       Final Storage Area 1
   2: 101     Array ID

51: Real Time (P77)
   1: 1220    Year,Day,Hour/Minute (midnight = 2400)

52: Average (P71)
   1: 1       Reps
   2: 4       Loc [ AirTempC   ]

53: Average (P71)
   1: 1       Reps
   2: 7       Loc [ DewPnt_C   ]

54: Average (P71)
   1: 1       Reps
   2: 8       Loc [ WetB1b_C   ]

55: Average (P71)
   1: 1       Reps
   2: 6       Loc [ WBGT_C     ]

56: Sample (P70)
   1: 17      Reps
   2: 3       Loc [ BGTemp_C   ]

;Daily station status data.

57: If time is (P92)
   1: 0       Minutes (Seconds --) into a
   2: 1440    Interval (same units as above)
   3: 10      Set Output Flag High (Flag 0)

58: Set Active Storage Area (P80)
   1: 1       Final Storage Area 1
   2: 102     Array ID

59: Real Time (P77)
   1: 1220    Year,Day,Hour/Minute (midnight = 2400)

60: Maximum (P73)
   1: 1       Reps
   2: 0       Value Only
   3: 1       Loc [ BattVolt   ]

61: Minimum (P74)
   1: 1       Reps
   2: 0       Value Only
   3: 1       Loc [ BattVolt   ]

```

```

62: Maximum (P73)
   1: 1      Reps
   2: 0      Value Only
   3: 2      Loc [ CR10XTmpC ]

63: Minimum (P74)
   1: 1      Reps
   2: 0      Value Only
   3: 2      Loc [ CR10XTmpC ]

*Table 2 Program
  01: 0      Execution Interval (seconds)

*Table 3 Subroutines

End Program

```

**TABLE B-1. Polynomial Coefficients**

Coefficient	Value
C <sub>0</sub>	−26.97
C <sub>1</sub>	69.635
C <sub>2</sub>	−40.66
C <sub>3</sub>	16.573
C <sub>4</sub>	−3.455
C <sub>5</sub>	0.301

**TABLE B-2. Actual Temperature, Sensor Resistance, and Computed Temperature**

Temperature °C	Resistance OHMS	Output °C
−10.00	612366	−9.02
−8.00	546376	−7.36
−6.00	488178	−5.63
−4.00	436773	−3.83
−2.00	391294	−1.97
0.00	351017	−0.05
2.00	315288	1.91
4.00	283558	3.91
6.00	255337	5.93
8.00	230210	7.96

**TABLE B-2. Actual Temperature, Sensor Resistance, and Computed Temperature**

Temperature °C	Resistance OHMS	Output °C
10.00	207807	10.00
12.00	187803	12.04
14.00	169924	14.07
16.00	153923	16.09
18.00	139588	18.10
20.00	126729	20.09
22.00	115179	22.07
24.00	104796	24.05
26.00	95449	26.02
28.00	87026	27.99
30.00	79428	29.97
32.00	72567	31.94
34.00	66365	33.93
36.00	60752	35.93
38.00	55668	37.93
40.00	51058	39.94
42.00	46873	41.96
44.00	43071	43.98
46.00	39613	46.00
48.00	36465	48.02
50.00	33598	50.03
52.00	30983	52.03
54.00	28595	54.03
56.00	26413	56.03
58.00	24419	58.02
60.00	22593	60.01
62.00	20921	61.99
64.00	19388	63.98
66.00	17981	65.97
68.00	16689	67.96
70.00	15502	69.96
72.00	14410	71.97

**TABLE B-2. Actual Temperature, Sensor Resistance, and Computed Temperature**

Temperature °C	Resistance OHMS	Output °C
74.00	13405	73.98
76.00	12479	75.99
78.00	11625	78.01
80.00	10837	80.02
82.00	10110	82.03
84.00	9438.1	84.04
86.00	8816.9	86.03
88.00	8241.9	88.00
90.00	7709.7	89.96
92.00	7216.3	91.89
94.00	6758.9	93.80
96.00	6334.5	95.67
98.00	5940.5	97.51
100.00	5574.3	99.31

## B.2 Edlog Programming for Long Lead Lengths

The following is a portion of an example CR10X program that uses the **Excite-Delay (SE) (P4)** instead of the **AC Half Bridge (P5)**.

```

01: Excite, Delay, Volt(SE) (P4)
1: 1 Rep
2: 3 ±25 mV slow range ;On the 21X and CR7 use the 50 mV input range.
3: 1 IN Chan ;Entry depends on the datalogger SE channel used
4: 1 Excite all reps w/EXchan 3 ;Entry depends on the excitation channel used
5: 2 Delay (units .01sec)
6: 1000 mV Excitatio ;On the 21X and CR7 use the 2000 mV excitation
7: 1 Loc [BGTemp_C ]
8: .2 Mult ;Use a multiplier of 0.1 with a 21X or CR7
9: 0 Offset

02: Polynomial (P55)
1: 1 Reps
2: 1 X Loc [BGTemp_C ] ;
3: 1 F(X) Loc [BGTemp_C ]
4: -26.97 C0
5: 69.635 C1
6: -40.66 C2
7: 16.573 C3
8: -3.455 C4
9: .301 C5

```



## Campbell Scientific Companies

---

**Campbell Scientific, Inc. (CSI)**

815 West 1800 North  
Logan, Utah 84321  
UNITED STATES

[www.campbellsci.com](http://www.campbellsci.com) • [info@campbellsci.com](mailto:info@campbellsci.com)

**Campbell Scientific Centro Caribe S.A. (CSCC)**

300 N Cementerio, Edificio Breller  
Santo Domingo, Heredia 40305  
COSTA RICA

[www.campbellsci.cc](http://www.campbellsci.cc) • [info@campbellsci.cc](mailto:info@campbellsci.cc)

**Campbell Scientific Africa Pty. Ltd. (CSAf)**

PO Box 2450  
Somerset West 7129  
SOUTH AFRICA

[www.csafrica.co.za](http://www.csafrica.co.za) • [cleroux@csafrica.co.za](mailto:cleroux@csafrica.co.za)

**Campbell Scientific Ltd. (CSL)**

Campbell Park  
80 Hathern Road  
Shepshed, Loughborough LE12 9GX  
UNITED KINGDOM

[www.campbellsci.co.uk](http://www.campbellsci.co.uk) • [sales@campbellsci.co.uk](mailto:sales@campbellsci.co.uk)

**Campbell Scientific Australia Pty. Ltd. (CSA)**

PO Box 8108  
Garbutt Post Shop QLD 4814  
AUSTRALIA

[www.campbellsci.com.au](http://www.campbellsci.com.au) • [info@campbellsci.com.au](mailto:info@campbellsci.com.au)

**Campbell Scientific Ltd. (CSL France)**

3 Avenue de la Division Leclerc  
92160 ANTONY  
FRANCE

[www.campbellsci.fr](http://www.campbellsci.fr) • [info@campbellsci.fr](mailto:info@campbellsci.fr)

**Campbell Scientific (Beijing) Co., Ltd.**

8B16, Floor 8 Tower B, Hanwei Plaza  
7 Guanghua Road  
Chaoyang, Beijing 100004  
P.R. CHINA

[www.campbellsci.com](http://www.campbellsci.com) • [info@campbellsci.com.cn](mailto:info@campbellsci.com.cn)

**Campbell Scientific Ltd. (CSL Germany)**

Fahrenheitstraße 13  
28359 Bremen  
GERMANY

[www.campbellsci.de](http://www.campbellsci.de) • [info@campbellsci.de](mailto:info@campbellsci.de)

**Campbell Scientific do Brasil Ltda. (CSB)**

Rua Apinagés, n.br. 2018 — Perdizes  
CEP: 01258-00 — São Paulo — SP  
BRASIL

[www.campbellsci.com.br](http://www.campbellsci.com.br) • [vendas@campbellsci.com.br](mailto:vendas@campbellsci.com.br)

**Campbell Scientific Spain, S. L. (CSL Spain)**

Avda. Pompeu Fabra 7-9, local 1  
08024 Barcelona  
SPAIN

[www.campbellsci.es](http://www.campbellsci.es) • [info@campbellsci.es](mailto:info@campbellsci.es)

**Campbell Scientific Canada Corp. (CSC)**

14532 – 131 Avenue NW  
Edmonton AB T5L 4X4  
CANADA

[www.campbellsci.ca](http://www.campbellsci.ca) • [dataloggers@campbellsci.ca](mailto:dataloggers@campbellsci.ca)

Please visit [www.campbellsci.com](http://www.campbellsci.com) to obtain contact information for your local US or international representative.