

# INSTRUCTION MANUAL



## **52202 Electrically Heated Rain and Snow Gage**

Revision: 5/11



Copyright © 2010-2011  
Campbell Scientific, Inc.

# Warranty and Assistance

---

**PRODUCTS MANUFACTURED BY CAMPBELL SCIENTIFIC, INC.** are warranted by Campbell Scientific, Inc. ("Campbell") to be free from defects in materials and workmanship under normal use and service for twelve (12) months from date of shipment unless otherwise specified on the corresponding Campbell invoice. Batteries, fine-wire thermocouples, desiccant, and other consumables have no warranty. Campbell's obligation under this warranty is limited to repairing or replacing (at Campbell's option) defective products, which shall be the sole and exclusive remedy under this warranty. The customer shall assume all costs of removing, reinstalling, and shipping defective products to Campbell. Campbell will return such products by surface carrier prepaid within the continental United States of America. To all other locations, Campbell will return such products best way CIP (Port of Entry) INCOTERM® 2010, prepaid. This warranty shall not apply to any Campbell products which have been subjected to modification, misuse, neglect, improper service, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied. The warranty for installation services performed by Campbell such as programming to customer specifications, electrical connections to products manufactured by Campbell, and product specific training, is part of Campbell's product warranty. **CAMPBELL EXPRESSLY DISCLAIMS AND EXCLUDES ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.** Campbell is not liable for any special, indirect, incidental, and/or consequential damages.

Products may not be returned without prior authorization. The following contact information is for US and International customers residing in countries served by Campbell Scientific, Inc. directly. Affiliate companies handle repairs for customers within their territories. Please visit [www.campbellsci.com](http://www.campbellsci.com) to determine which Campbell Scientific company serves your country.

To obtain a Returned Materials Authorization (RMA), contact Campbell Scientific, Inc., phone (435) 753-2342. After an applications engineer determines the nature of the problem, an RMA number will be issued. Please write this number clearly on the outside of the shipping container. Campbell Scientific's shipping address is:

**CAMPBELL SCIENTIFIC, INC.**

RMA# \_\_\_\_\_

815 West 1800 North

Logan, Utah 84321-1784

For all returns, the customer must fill out a "Declaration of Hazardous Material and Decontamination" form and comply with the requirements specified in it. The form is available from our website at [www.campbellsci.com/repair](http://www.campbellsci.com/repair). A completed form must be either emailed to [repair@campbellsci.com](mailto:repair@campbellsci.com) or faxed to 435-750-9579. Campbell Scientific will not process any returns until we receive this form. If the form is not received within three days of product receipt or is incomplete, the product will be returned to the customer at the customer's expense. Campbell Scientific reserves the right to refuse service on products that were exposed to contaminants that may cause health or safety concerns for our employees.

# 52202 Table of Contents

---

*PDF viewers note: These page numbers refer to the printed version of this document. Use the Adobe Acrobat® bookmarks tab for links to specific sections.*

<b>1. General Description</b>	<b>1</b>
<b>2. Specifications</b>	<b>1</b>
<b>3. Installation</b>	<b>2</b>
3.1 Siting	2
3.2 Mounting	2
<b>4. Wiring</b>	<b>4</b>
4.1 Heater Wiring	4
4.2 Wiring to a Pulse Channel	4
4.3 Wiring to a Control Port	5
<b>5. Datalogger Programming</b>	<b>5</b>
5.1 Pulse Channel Example Programs	5
5.1.1 CR1000 Example Program	6
5.1.2 CR200(X) Series Example Program	6
5.1.3 CR10X Example Program	7
5.2 Control Port Example	7
5.2.1 CR1000 Example Program	8
5.2.2 CR10X Example Program	9
<b>6. Troubleshooting</b>	<b>9</b>
6.1 Precipitation	9
<b>7. Maintenance</b>	<b>10</b>

## **Figures**

3-1. 52202 Precipitation Gage	2
3-2. The CM220 Mounted to a Crossarm	3
3-3. The CM216 Atop a Stainless-Steel Tripod	3

## **Tables**

4-1. Wiring for Pulse Channel Input	4
4-2. Wiring for Control Port Input	5
5-1. Multipliers	5



# 52202 Electrically Heated Rain and Snow Gage

---

## 1. General Description

RM Young's Model 52202-L is an electrically heated precipitation gage that provides year-round measurement of rain or snow. This gage requires a reliable source of 24 Vac power. It includes a wall transformer that plugs into a wall socket and provides 24 Vac.

Output is a switch closure for each bucket tip.

A -L after the model number indicates that the cable length is specified when ordering. Throughout this manual, the rain gage will be referred to as the 52202.

The 260-953 Alter-Type Wind Screen can be used with the 52202 to minimize the effect of strong winds on the 52202's measurements.

## 2. Specifications

Sensor Type: Tipping bucket with magnetic reed switch

Accuracy: 2% up to 1 in. h<sup>-1</sup> (25 mm h<sup>-1</sup>);  
3% up to 2 in. h<sup>-1</sup> (50 mm h<sup>-1</sup>)

Resolution: 0.004 in. (0.1 mm)

Orifice Diameter: 6.3 in. (16 cm)

Catchment Area: 31 in.<sup>2</sup> (200 cm<sup>2</sup>)

Temperature Range: -20° to +50°C

Humidity Range: 0 to 100%

Power: 18 Watts @ 24 Vac

Contact Rating: 24 Vac/dc, 500 mA maximum

Dimensions

Diameter: 7.3 in (18.5 cm)

Height: 11.8 in. (30 cm)

---

### NOTE

The black outer jacket of the cable is Santoprene® rubber. This compound was chosen for its resistance to temperature extremes, moisture, and UV degradation. However, this jacket will support combustion in air. It is rated as slow burning when tested according to U.L. 94 H.B. and will pass FMVSS302. Local fire codes may preclude its use inside buildings.

---

### 3. Installation

#### NOTE

The 260-953 Alter-Type Wind Screen's siting information and installation procedure are provided in the 260-953 manual.

#### 3.1 Siting

The 52202 should be mounted in a relatively level spot which is representative of the surrounding area. The lip of the funnel should be horizontal and at least 30 cm. above the ground. It should be high enough to be above the average snow depth. The ground surface around the rain gage should be natural vegetation or gravel. It should not be paved.

The gage should be placed away from objects that obstruct the wind. The distance should be two to four times the height of the obstruction.

#### 3.2 Mounting

The 52202 precipitation gage uses a clamp to fasten onto the 3659 12-in.-long, aluminum pipe or to a user-supplied 1-in. IPS pipe (see Figure 3-1). The 3659 pipe is shipped with the 52202 gage.


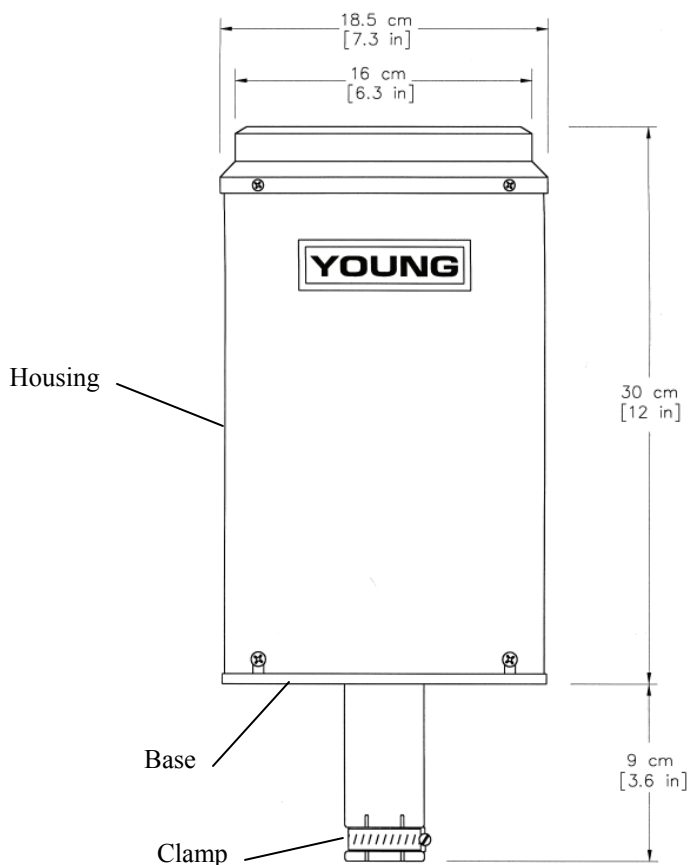



FIGURE 3-1. 52202 Precipitation Gage

The pipe attaches to a CM202, CM204, or CM206 crossarm via a CM220 Right Angle Mounting Bracket (see Figure 3-2). The crossarm attaches to a tripod mast, tower leg, CM300-series mounting pole, or a user-supplied vertical pipe (1.0-in. to 2.1-in. OD).

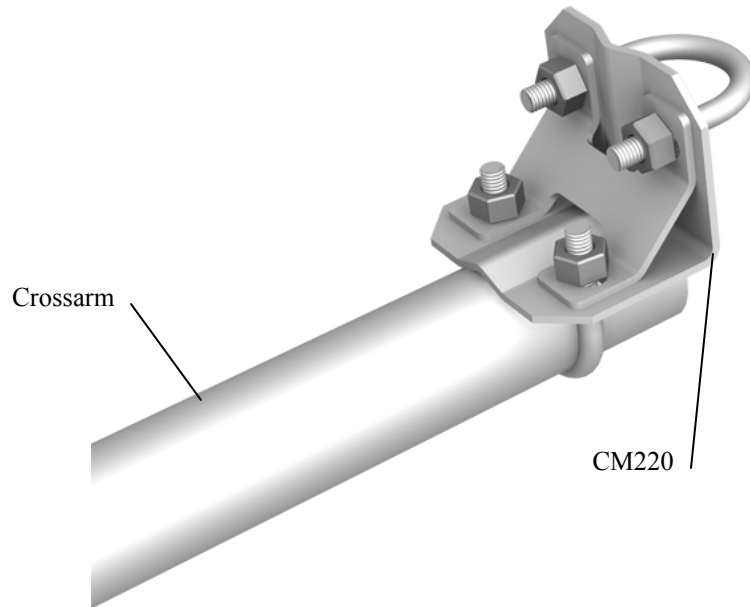

*FIGURE 3-2. The CM220 Mounted to a Crossarm*

Alternatively, the 3659 pipe can be attached to the top of our stainless-steel tripods via the CM216 Sensor Mounting Kit. The CM216 extends 4-in. above the mast of a stainless-steel CM110, CM115, or CM120 tripod (see Figure 3-3).

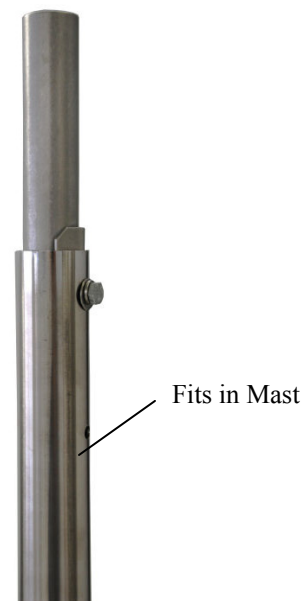

*FIGURE 3-3. The CM216 Atop a Stainless-Steel Tripod*

After mounting the 52202, level the gage and remove the shipping retainer by performing the following procedure:

1. Loosen the three screws that retain housing to base assembly (see Figure 3-1). Carefully lift housing free of base.
2. Remove shipping retainer from bucket. Verify that bucket tips freely.
3. Adjust leveling screws until bulls eye level is centered.
4. Replace housing and retighten screws.

## 4. Wiring

### WARNING

**Disconnect heater power before attempting to service or repair this equipment. Failure to do so may result in personal injury or death due to electrocution.**

### 4.1 Heater Wiring

Attach the power plug supplied with the 52202 by following the instructions supplied with the plug. This gage requires an adequately grounded, reliable source of 24 Vac power.

### 4.2 Wiring to a Pulse Channel

#### NOTE

When Short Cut software is used to generate the datalogger program, the sensor should be wired to the channels shown on the wiring diagram created by Short Cut.

The 52202 is typically wired to a datalogger's pulse channel (see Table 4-1).

TABLE 4-1. Wiring for Pulse Channel Input					
Color	Description	CR800 CR1000 CR3000 CR5000	CR500 CR510, CR10(X)	21X, CR7, CR23X	CR200(X) Series
Black	Signal	Pulse Channel	Pulse Channel	Pulse Channel	P_SW
White	Signal Return	$\perp$	G	$\perp$	$\perp$
Clear	Shield	$\perp$	G	$\perp$	$\perp$



### 4.3 Wiring to a Control Port

Dataloggers listed in Table 4-2 have the capability of counting switch closures on some of their control ports. When a control port is used, the return from the rain gage switch must be connected to +5 volts on the datalogger.

TABLE 4-2. Wiring for Control Port Input					
Color	Description	CR800 CR1000 CR3000	CR500 CR510	CR10X	CR23X
Black	Signal	Control Port	C2/P3	Control Port	Control Port
White	Signal Return	5 V	5 V	5 V	5 V
Clear	Shield	$\perp$	$\perp$	G	$\perp$

The CR10 does not support the use of control port inputs with the Pulse Count instruction.

## 5. Datalogger Programming

### NOTE

This section is for users who write their own programs. A datalogger program to measure this sensor can be generated using Campbell Scientific's Short Cut Program Builder software. You do not need to read this section to use Short Cut.

Precipitation is measured using a Pulse Count with a switch closure configuration code. The multiplier used in the Pulse Count instruction determines the units in which rainfall is reported (see Table 5-1).

TABLE 5-1. Multipliers				
Rain Gage	0.01 in.	1 in.	0.1 mm	1 mm
52202	0.394	0.00394	1.0	0.1

### 5.1 Pulse Channel Example Programs

The following example programs use a pulse channel to read the output from the precipitation gage. The CR1000 example will also work with the CR800, CR850, CR3000, and CR5000. CR9000(X) programming is similar to the CR1000 except it has an additional parameter in the PulseCount instruction to specify the pulse module's slot.

The CR10X program will also work with the CR500, CR510, CR10, 21X or CR23X. CR7 programming is similar to the CR10X but has an additional parameter in the PulseCount instruction to specify the slot that the Pulse Card is in.

### 5.1.1 CR1000 Example Program

```
'CR1000

'RM_Young Tipping   Blk > P1
'                   Wht > ground
'Cabling for heater goes to 24VAC power supply

Public Rain_mm
Units Rain_mm=mm
DataTable(Rain,True,-1)
    DataInterval(0,60,Min,0)
    Totalize(1,Rain_mm,FP2,0)
EndTable

BeginProg
    Scan(1,Sec,1,0)
        PulseCount(Rain_mm,1,1,2,0,0.1,0)
        CallTable(Rain)
    NextScan
EndProg
```

### 5.1.2 CR200(X) Series Example Program

```
'CR200(X) Series

'RM_Young Tipping   Blk > P_SW
'                   Wht > ground
'Cabling for heater goes to 24VAC power supply

'Declare Variables and Units

Public Rain_mm

Units Rain_mm=mm

'Define Data Tables
DataTable(Rain,True,-1)
    DataInterval(0,60,Min)
    Totalize(1,Rain_mm,0)
EndTable

'Main Program
BeginProg
    Scan(1,Sec)

        '52202 Rain Gage measurement Rain_mm:
        PulseCount(Rain_mm,P_SW,2,0,0.1,0)

        'Call Data Tables and Store Data
        CallTable(Rain)
    NextScan
EndProg
```

### 5.1.3 CR10X Example Program

```

;{CR10X}
*Table 1 Program
01: 1.0000      Execution Interval (seconds)

1: Pulse (P3)
  1: 1          Reps
  2: 1          Pulse Channel 1
  3: 2          Switch Closure, All Counts
  4: 3          Loc [ Rain_mm ]
  5: 0.1        Multiplier
  6: 0          Offset

2: If time is (P92)
  1: 0          Minutes (Seconds --) into a
  2: 60          Interval (same units as above)
  3: 10         Set Output Flag High (Flag 0)

3: Set Active Storage Area (P80)
  1: 1          Final Storage Area 1
  2: 101        Array ID

4: Real Time (P77)
  1: 1220       Year,Day,Hour/Minute (midnight = 2400)

5: Totalize (P72)
  1: 1          Reps
  2: 3          Loc [ Rain_mm ]

*Table 2 Program
01: 0          Execution Interval (seconds)

*Table 3 Subroutines

End Program

```

## 5.2 Control Port Example

The following example programs use a control port to read the output from the precipitation gage. The CR1000 example will also work with the CR800, CR850, and CR3000. The CR10X program will also work with the CR500, CR510, or CR23X.

### 5.2.1 CR1000 Example Program

```

'CR1000

'RM_Young Tipping Blk > C4
'                               Wht > 5v
'Cabling for heater goes to 24VAC power supply

'Declare Variables and Units
Public BattV
Public RM_Young

Units BattV = Volts
Units RM_Young =inch

DataTable(OneMin,True,-1)
    DataInterval(0,1,Min,10)
    Totalize (1,RM_Young,FP2,False)
EndTable

'Define Data Tables
DataTable(OneDay,True,-1)
DataInterval(0,1440,Min,10)
    Minimum(1,BattV,FP2,False,False)
    Totalize (1,RM_Young,FP2,False)           'RM Young tipping bucket
EndTable

'Main Program
BeginProg
    Scan(5,Sec,1,0)
        'Default Datalogger Battery Voltage measurement BattV
        PanelTemp (PTemp,_60Hz)
        Battery(BattV)

        'RM Young Heated Rain Gage measurement Rain_in
        PulseCount(RM_Young,1,14,2,0,0.0039,0)

        'Call Data Tables and Store Data
        CallTable(OneMin)
        CallTable(OneDay)
    NextScan
EndProg

```

## 5.2.2 CR10X Example Program

```

;{CR10X}
;
*Table 1 Program
01: 1          Execution Interval (seconds)

1: Pulse (P3)
1: 1          Reps
2: 8          Control Port 8 (switch closure only) ;Black wire connect to C8
3: 2          Switch Closure, All Counts
4: 1          Loc [ Rain_mm ]
5: 0.1        Multiplier
6: 0          Offset

2: If time is (P92)
1: 0          Minutes (Seconds --) into a
2: 60         Interval (same units as above)
3: 10         Set Output Flag High (Flag 0)

3: Set Active Storage Area (P80)
1: 1          Final Storage Area 1
2: 101        Array ID

4: Real Time (P77)
1: 1220       Year,Day,Hour/Minute (midnight = 2400)

5: Totalize (P72)
1: 1          Reps
2: 1          Loc [ Rain_mm ]

*Table 2 Program
02: 0.0000     Execution Interval (seconds)

*Table 3 Subroutines

End Program

```

Output Instruction 72, Totalize, is used in the output section of the program to output the total rainfall over the output interval. This section should be executed every scan and not placed in a subroutine or conditional statement.

## 6. Troubleshooting

### 6.1 Precipitation

Symptom: No Precipitation

1. Check that the sensor is wired to the pulse channel or control port specified by the pulse count instruction.
2. Verify that the Configuration Code (Switch Closure), and Multiplier and Offset parameters for the Pulse Count instruction are correct for the datalogger type.

3. Disconnect the sensor from the datalogger and use an ohm meter to do a continuity check of the switch. The resistance measured at the terminal block on the inside of the bucket between the black and white leads should vary from infinite (switch open) when the bucket is tipped, to less than an ohm when the bucket is balanced.

## 7. Maintenance

The rain gage should be inspected periodically. Accumulated dirt and debris should be cleaned from funnel, screen and bucket assembly. Electrical connections should be inspected and cleaned. Leveling screws may be readjusted at this time.

Periodic recalibration may be desirable to ensure measurement accuracy. The following calibration check is advised every 12 months.

1. With the rain gage properly leveled, slowly pour a measured volume of water into the collection funnel. The rate should be about 10 ml per minute which is approximately 1-in. per hour. The bucket should tip five times for each 10 ml of water. For example, 100 ml should give a count of  $50 \pm 1$ . Bucket tips may be counted manually or with a counter connected to the rain gage terminals.
2. If the count shows an error of more than 2%, adjust the calibrating screws to correct the error. Raise the screws if the count is low, lower the screws if the count is high. Always adjust both screws equally.



## **Campbell Scientific Companies**

---

### **Campbell Scientific, Inc. (CSI)**

815 West 1800 North  
Logan, Utah 84321  
UNITED STATES  
[www.campbellsci.com](http://www.campbellsci.com) • [info@campbellsci.com](mailto:info@campbellsci.com)

### **Campbell Scientific Africa Pty. Ltd. (CSAf)**

PO Box 2450  
Somerset West 7129  
SOUTH AFRICA  
[www.csafrica.co.za](http://www.csafrica.co.za) • [cleroux@csafrica.co.za](mailto:cleroux@csafrica.co.za)

### **Campbell Scientific Australia Pty. Ltd. (CSA)**

PO Box 444  
Thuringowa Central  
QLD 4812 AUSTRALIA  
[www.campbellsci.com.au](http://www.campbellsci.com.au) • [info@campbellsci.com.au](mailto:info@campbellsci.com.au)

### **Campbell Scientific do Brazil Ltda. (CSB)**

Rua Luisa Crapsi Orsi, 15 Butantã  
CEP: 005543-000 São Paulo SP BRAZIL  
[www.campbellsci.com.br](http://www.campbellsci.com.br) • [suporte@campbellsci.com.br](mailto:suporte@campbellsci.com.br)

### **Campbell Scientific Canada Corp. (CSC)**

11564 - 149th Street NW  
Edmonton, Alberta T5M 1W7  
CANADA  
[www.campbellsci.ca](http://www.campbellsci.ca) • [dataloggers@campbellsci.ca](mailto:dataloggers@campbellsci.ca)

### **Campbell Scientific Centro Caribe S.A. (CSCC)**

300 N Cementerio, Edificio Breller  
Santo Domingo, Heredia 40305  
COSTA RICA  
[www.campbellsci.cc](http://www.campbellsci.cc) • [info@campbellsci.cc](mailto:info@campbellsci.cc)

### **Campbell Scientific Ltd. (CSL)**

Campbell Park  
80 Hathern Road  
Shepshed, Loughborough LE12 9GX  
UNITED KINGDOM  
[www.campbellsci.co.uk](http://www.campbellsci.co.uk) • [sales@campbellsci.co.uk](mailto:sales@campbellsci.co.uk)

### **Campbell Scientific Ltd. (France)**

3 Avenue de la Division Leclerc  
92160 ANTONY  
FRANCE  
[www.campbellsci.fr](http://www.campbellsci.fr) • [info@campbellsci.fr](mailto:info@campbellsci.fr)

### **Campbell Scientific Spain, S. L.**

Avda. Pompeu Fabra 7-9, local 1  
08024 Barcelona  
SPAIN  
[www.campbellsci.es](http://www.campbellsci.es) • [info@campbellsci.es](mailto:info@campbellsci.es)

*Please visit [www.campbellsci.com](http://www.campbellsci.com) to obtain contact information for your local US or International representative.*