


# CD100 TEMPLATE

## TEMPLATE INSTRUCTIONS:

1. Carefully remove center from paper template.
2. Prepunch center of marked mounting holes.
3. Position template on lid.
4. Mark lid by tracing inside center area and center of mounting holes.
5. Remove template.
6. Cut out center.
7. Drill mounting holes.
8. Mount CD100.

**CAUTION:**  
 CD100 should be mounted in an area that allows at least 1.8" of clearance from the inside face of the lid.

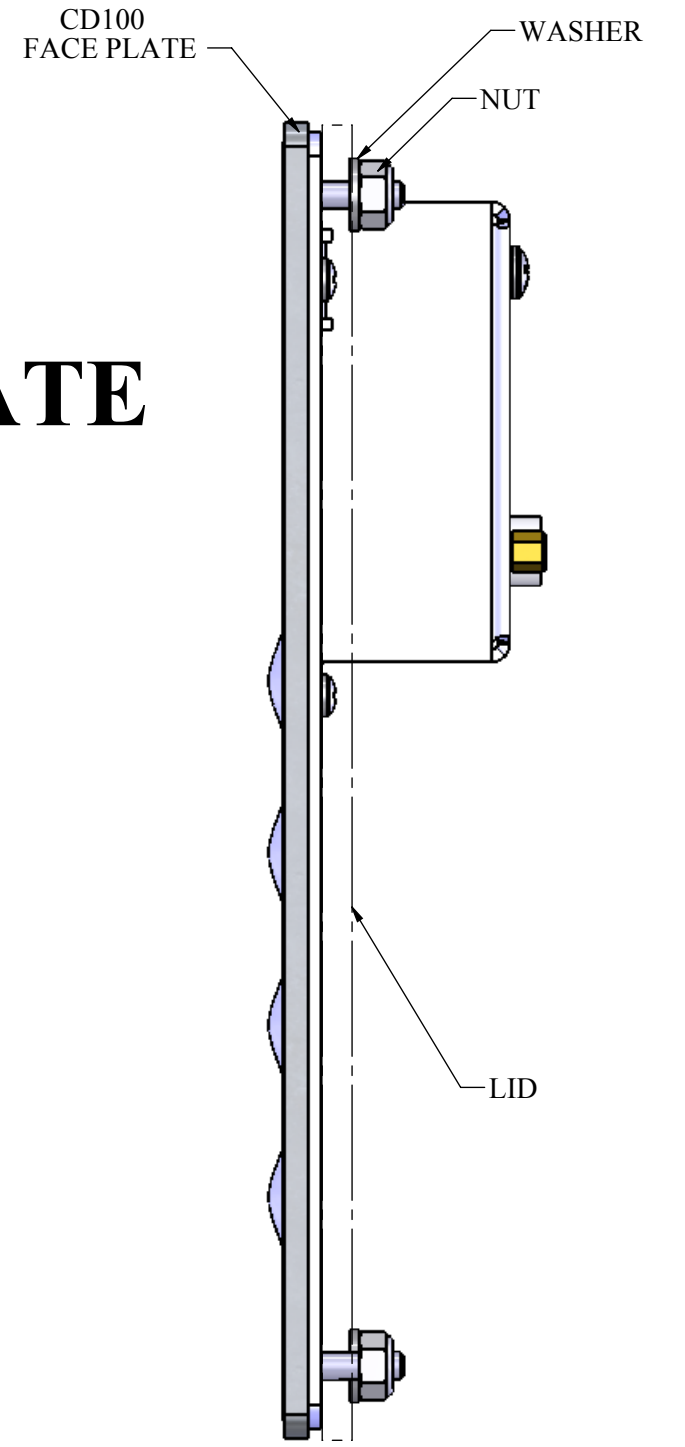

**NOTES:**  
 1. Dimensions are in inches  
 2. Pattern allows 0.05 In. clearance around CD100.