


INSTRUCTION MANUAL

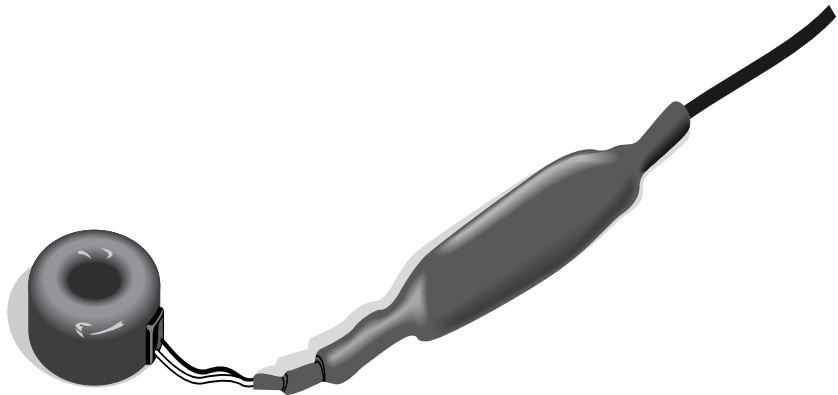

CS15-L Current Transformer

Revision: 10/08



Copyright © 2001-2008
Campbell Scientific, Inc.

Warranty and Assistance

The **CS15-L CURRENT TRANSFORMER** is warranted by CAMPBELL SCIENTIFIC, INC. to be free from defects in materials and workmanship under normal use and service for twelve (12) months from date of shipment unless specified otherwise. Batteries have no warranty. CAMPBELL SCIENTIFIC, INC.'s obligation under this warranty is limited to repairing or replacing (at CAMPBELL SCIENTIFIC, INC.'s option) defective products. The customer shall assume all costs of removing, reinstalling, and shipping defective products to CAMPBELL SCIENTIFIC, INC. CAMPBELL SCIENTIFIC, INC. will return such products by surface carrier prepaid. This warranty shall not apply to any CAMPBELL SCIENTIFIC, INC. products which have been subjected to modification, misuse, neglect, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for a particular purpose. CAMPBELL SCIENTIFIC, INC. is not liable for special, indirect, incidental, or consequential damages.

Products may not be returned without prior authorization. The following contact information is for US and International customers residing in countries served by Campbell Scientific, Inc. directly. Affiliate companies handle repairs for customers within their territories. Please visit www.campbellsci.com to determine which Campbell Scientific company serves your country. To obtain a Returned Materials Authorization (RMA), contact CAMPBELL SCIENTIFIC, INC., phone (435) 753-2342. After an applications engineer determines the nature of the problem, an RMA number will be issued. Please write this number clearly on the outside of the shipping container. CAMPBELL SCIENTIFIC's shipping address is:

CAMPBELL SCIENTIFIC, INC.

RMA# _____

815 West 1800 North

Logan, Utah 84321-1784

CAMPBELL SCIENTIFIC, INC. does not accept collect calls.

CS15-L Table of Contents

PDF viewers note: These page numbers refer to the printed version of this document. Use the Adobe Acrobat® bookmarks tab for links to specific sections.

1. General Description	1
2. Specifications	1
3. Installation	2
4. Wiring	2
5. Measurement Instruction	2
5.1 Sample Program.....	2

Figure

1. CS15-L Current Transformer	1
-------------------------------------	---

CS15-L Current Transformer

1. General Description

The CS15-L uses a modified CR Magnetic's CR8459 Current Transformer to measure the approximate current over a range of 0 to 125 A. The CS15-L outputs a millivolt signal allowing it to be directly connected to the CR2XX dataloggers. The CS15-L is recommended for measurements that do not require high accuracy.

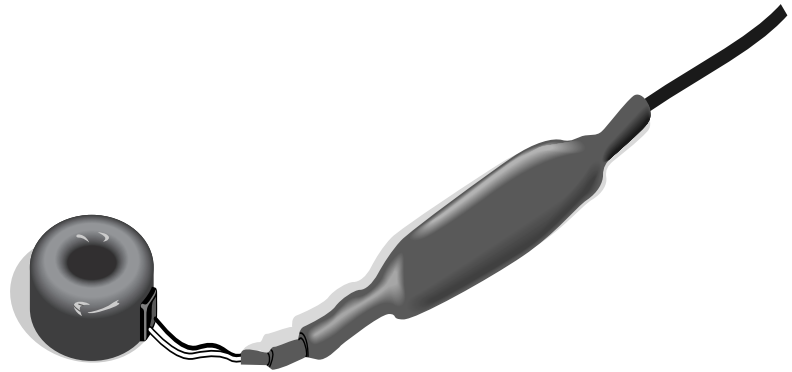


FIGURE 1. CS15-L Current Transformer

2. Specifications

Example Applications:

- Motor or generator load conditions
- Efficiency studies
- Intermittent fault detection
- Rough submetering

Manufacturer's Specifications

Frequency:	50 and 60 Hz
Insulation Resistance:	100 M ohm @ 500 VDC
High Potential:	2000 volts
Rated Current:	125 A
Storage Temperature:	-25°C to 70°C
Operating Temperature:	-25°C to 55°C
Case Material:	Polypropylene Resin
Construction:	Epoxy Encapsulated
Accuracy with 10 ohm burden max. (resistive):	typically ± 5 percent of actual value with provided multiplier
Dimensions:	Outer diameter: 1.89" (4.8 cm) Inner diameter: 0.75" (1.9 cm) Depth: 0.67" (1.7 cm)

3. Installation

Mount the AC load wire through the hole of the CS15-L.

4. Wiring

The CS15-L uses a single-ended analog channel.

Red ----- Ex
White----- Single-Ended Channel
Black ----- AG
Clear----- AG

5. Measurement Instruction

In the CR2XX datalogger the VoltSE instruction is used.

NOTE SCWIN users: This manual was written primarily for those whose needs are not met by SCWin. Your procedure is much simpler: just add the CS15-L (it's in the Miscellaneous Sensors folder), save your program, and follow the wiring shown in Step 2 of SCWin.

NOTE The example measurement instructions that follow do not store data to final storage. Additional instructions (DataTable and CallTable for the CR2XX) are required to store data permanently.

5.1 Sample Program

This sample program measures a single CS15-L Current Transformer directly connected to the SE 1 channel of the CR2xx.

The multiplier in this program example is 0.2 and is representative of one application. The multiplier can be changed to match calibrated measurements. You should use a multiplier that you have validated for your purposes.

EXAMPLE 1

```
'CR200 Series
'Program Name CS15-L.CR2
'
'Wiring:
'SE1 White
'Gnd Black
'EX1 Red
'Gnd Clear
'
'Declare Public Variables
```

```
Public Crnt_A
Public N
Dim Offset
Dim SumSqr
Dim mV
Dim I

Units Crnt_A = Amps

'Main Program
BeginProg
  N = 48
  Scan (1,Sec)
    'CS15 Current Transformer measurement CS15_L:
    ExciteV (Ex1,mV2500)
    Offset=0
    SumSqr=Offset
    For I=1 to N
      VoltSe (mV,1,1,1.0,0)
      SumSqr=SumSqr+mV^2
      Offset=Offset+mV
    Next
    ExciteV (Ex1,0)
    Crnt_A=SQR ((SumSqr - (Offset^2/N))/N) *0.2
    If Crnt_A<0.2 then Crnt_A=0
    'Call Output Tables to store data
  NextScan
EndProg
```


Campbell Scientific Companies

Campbell Scientific, Inc. (CSI)

815 West 1800 North
Logan, Utah 84321
UNITED STATES
www.campbellsci.com
info@campbellsci.com

Campbell Scientific Africa Pty. Ltd. (CSAf)

PO Box 2450
Somerset West 7129
SOUTH AFRICA
www.csafrica.co.za
cleroux@csafrica.co.za

Campbell Scientific Australia Pty. Ltd. (CSA)

PO Box 444
Thuringowa Central
QLD 4812 AUSTRALIA
www.campbellsci.com.au
info@campbellsci.com.au

Campbell Scientific do Brazil Ltda. (CSB)

Rua Luisa Crapsi Orsi, 15 Butantã
CEP: 005543-000 São Paulo SP BRAZIL
www.campbellsci.com.br
suporte@campbellsci.com.br

Campbell Scientific Canada Corp. (CSC)

11564 - 149th Street NW
Edmonton, Alberta T5M 1W7
CANADA
www.campbellsci.ca
dataloggers@campbellsci.ca

Campbell Scientific Ltd. (CSL)

Campbell Park
80 Hathern Road
Shepshed, Loughborough LE12 9GX
UNITED KINGDOM
www.campbellsci.co.uk
sales@campbellsci.co.uk

Campbell Scientific Ltd. (France)

Miniparc du Verger - Bat. H
1, rue de Terre Neuve - Les Ulis
91967 COURTABOEUF CEDEX
FRANCE
www.campbellsci.fr
info@campbellsci.fr

Campbell Scientific Spain, S. L.

Psg. Font 14, local 8
08013 Barcelona
SPAIN
www.campbellsci.es
info@campbellsci.es