


INSTRUCTION MANUAL



Model 024A Met One **Wind Direction Sensor**

Revision: 10/12

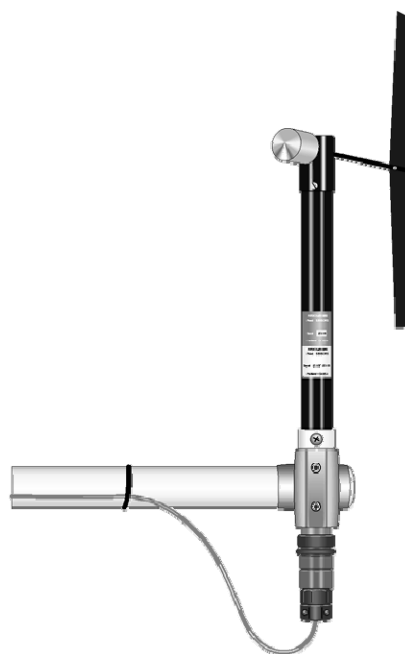

Copyright © 1989 - 2012
Campbell Scientific, Inc.

WARRANTY AND ASSISTANCE

This equipment is warranted by CAMPBELL SCIENTIFIC (CANADA) CORP. ("CSC") to be free from defects in materials and workmanship under normal use and service for **twelve (12) months** from date of shipment unless specified otherwise. ***** **Batteries are not warranted.** ***** CSC's obligation under this warranty is limited to repairing or replacing (at CSC's option) defective products. The customer shall assume all costs of removing, reinstalling, and shipping defective products to CSC. CSC will return such products by surface carrier prepaid. This warranty shall not apply to any CSC products which have been subjected to modification, misuse, neglect, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for a particular purpose. CSC is not liable for special, indirect, incidental, or consequential damages.

Products may not be returned without prior authorization. To obtain a Return Merchandise Authorization (RMA), contact CAMPBELL SCIENTIFIC (CANADA) CORP., at (780) 454-2505. An RMA number will be issued in order to facilitate Repair Personnel in identifying an instrument upon arrival. Please write this number clearly on the outside of the shipping container. Include description of symptoms and all pertinent details.

CAMPBELL SCIENTIFIC (CANADA) CORP. does not accept collect calls.

Non-warranty products returned for repair should be accompanied by a purchase order to cover repair costs.



CAMPBELL[®]
SCIENTIFIC

Campbell Scientific (Canada) Corp.
11564 149 Street | Edmonton AB T5M 1W7
780.454.2505 | fax 780.454.2655 | campbellsci.ca

PLEASE READ FIRST

About this manual

Please note that this manual was originally produced by Campbell Scientific Inc. (CSI) primarily for the US market. Some spellings, weights and measures may reflect this origin.

Some useful conversion factors:

Area: 1 in² (square inch) = 645 mm²

Length: 1 in. (inch) = 25.4 mm
1 ft (foot) = 304.8 mm
1 yard = 0.914 m
1 mile = 1.609 km

Mass: 1 oz. (ounce) = 28.35 g
1 lb (pound weight) = 0.454 kg

Pressure: 1 psi (lb/in²) = 68.95 mb

Volume: 1 US gallon = 3.785 litres

In addition, part ordering numbers may vary. For example, the CABLE5CBL is a CSI part number and known as a FIN5COND at Campbell Scientific Canada (CSC). CSC Technical Support will be pleased to assist with any questions.

Table of Contents

PDF viewers: These page numbers refer to the printed version of this document. Use the PDF reader bookmarks tab for links to specific sections.

1. Introduction	1
2. Cautionary Statements	1
3. Initial Inspection	1
4. Quickstart	2
4.1 Step 1 — Mount the Sensor	2
4.2 Step 2 — Use SCWin Short Cut to Program Datalogger and Generate Wiring Diagram.....	4
5. Overview	6
6. Specifications	7
7. Installation	7
7.1 Siting	7
7.2 Mounting Options	8
7.3 Wiring	9
7.4 Programming.....	9
7.4.1 Datalogger Instruction.....	9
7.4.2 Calibration and Orientation.....	10
7.4.3 Example Programs	11
8. Maintenance	13
8.1 6 to 12 Month Periodic Service *	13
8.2 24 to 36 Month Service *	13
9. References	17

Appendix

A. Wind Direction Sensor Orientation	A-1
A.1 Determining True North and Sensor Orientation	A-1

Figures

4-1.	Bushing installation on 024A sensor	2
4-2.	The 024A mounted to a crossarm via the 17953 NU-RAIL	3
7-1.	CM220 mount attached to a crossarm	8
7-2.	CM216 mount	8
7-3.	Schematic of 024A Wind Direction Sensor	9
8-1.	Cable diagram	14
8-2.	Parts diagram	15
A-1.	Magnetic declination for the contiguous United States (2004)	A-2
A-2.	Declination angles east of True North are subtracted from 0 to get True North	A-3
A-3.	Declination angles west of True North are added to 0 to get True North	A-3

Tables

5-1.	Recommended Cable Lengths	6
7-1.	Connections to Campbell Scientific Dataloggers	9
7-2.	Parameters for Wind Direction	10
8-1.	Met-One Parts List Reproduced by Campbell Scientific, Inc.	16

024A Met-One Wind Direction Sensor

1. Introduction

The 024A is a wind vane manufactured by Met One. It measures wind direction only and is traditionally used in tandem with Met One's 014A Wind Speed Sensor.

Before installing the 024A, please study

- Section 2, *Cautionary Statements*
- Section 3, *Initial Inspection*
- Section 4, *Quickstart*

2. Cautionary Statements

- The 024A is a precision instrument. Please handle it with care.
- If the 024A is to be installed at heights over 6 feet, be familiar with tower safety and follow safe tower climbing procedures.
- Danger—Use extreme care when working near overhead electrical wires. Check for overhead wires before mounting the 024A or before raising a tower.
- The black outer jacket of the cable is Santoprene® rubber. This compound was chosen for its resistance to temperature extremes, moisture, and UV degradation. However, this jacket will support combustion in air. It is rated as slow burning when tested according to U.L. 94 H.B. and will pass FMVSS302. Local fire codes may preclude its use inside buildings.

3. Initial Inspection

- Upon receipt of the 024A, inspect the packaging and contents for damage. File damage claims with the shipping company. Immediately check package contents against the shipping documentation. Contact Campbell Scientific about any discrepancies.
- The model number and cable length are printed on a label at the connection end of the cable. Check this information against the shipping documents to ensure the expected product and cable length are received.

4. Quickstart

4.1 Step 1 — Mount the Sensor

Please review Section 7, *Installation*, for siting and other guidelines.

Install the 024A using:

- CM220 Right-Angle Mounting Kit, or
- 17953 1 x 1 inch NURAIL Crossover Fitting

1. Remove the Allen hex screw in the lower part of the sensor housing (see FIGURE 4-1).
2. Insert the 024A in the mounting bushing (see FIGURE 4-1).
3. Tighten the screw in the bushing onto the sensor housing (see FIGURE 4-1).

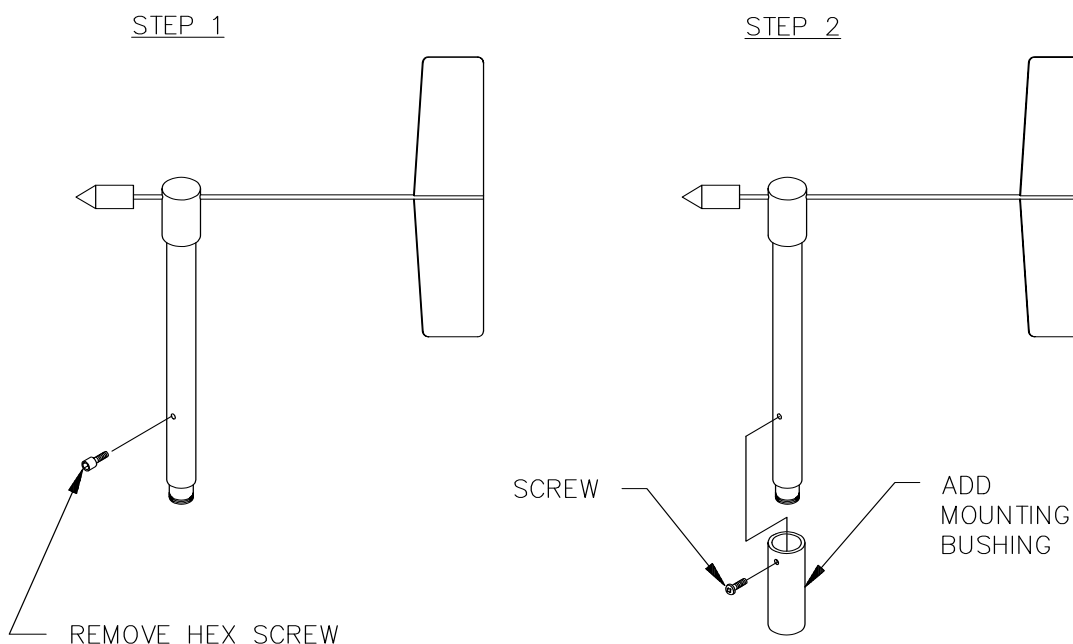


FIGURE 4-1. Bushing installation on 024A sensor

4. Mount a CM202, CM204, or CM206 crossarm to a tripod or tower.
5. Orient the crossarm north-south, with the CM220 or 17953 NU-RAIL on the north end. Appendix A contains detailed information on determining True North using a compass and the magnetic declination for the site.
6. Insert the sensor in the CM220 or NU-RAIL fitting (see FIGURE 4-2).

7. Align the sensor so that the counter weight points to True South and tighten the U-bolts on the CM220 or tighten the set screws on the NU-RAIL fitting.
8. Connect the cable assembly to the sensor receptacle.
9. Route the sensor cable along the underside of the crossarm to the tripod or tower, and to the instrument enclosure.
10. Secure the cable to the crossarm and tripod or tower using cable ties.


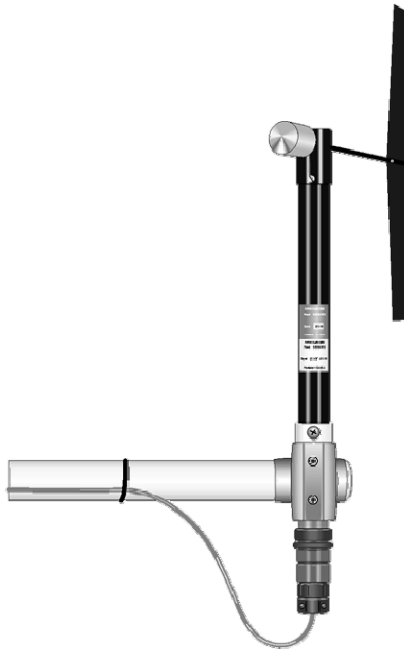


FIGURE 4-2. The 024A mounted to a crossarm via the 17953 NU-RAIL


4.2 Step 2 — Use SCWin Short Cut to Program Datalogger and Generate Wiring Diagram

The simplest method for programming the datalogger to measure the 024A is to use Campbell Scientific's SCWin Short Cut Program Generator.


1. Open Short Cut and click on **New Program**.

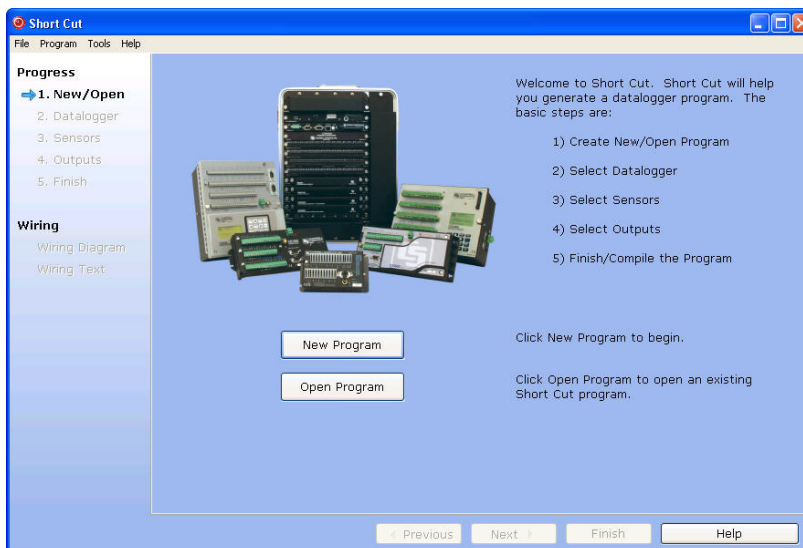


2. Select the datalogger and enter the scan interval.

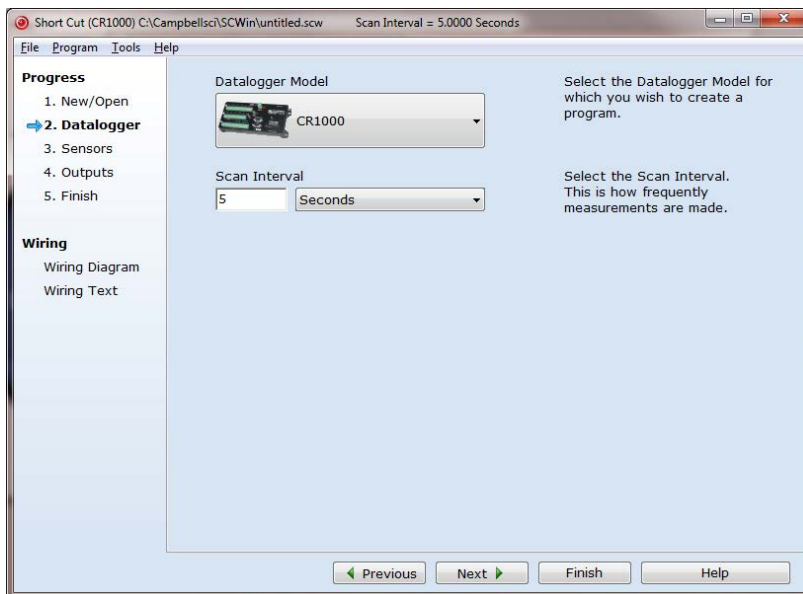


3. Select 024A Wind Direction Sensor and select the right arrow to add it to the list of sensors to be measured then select next.

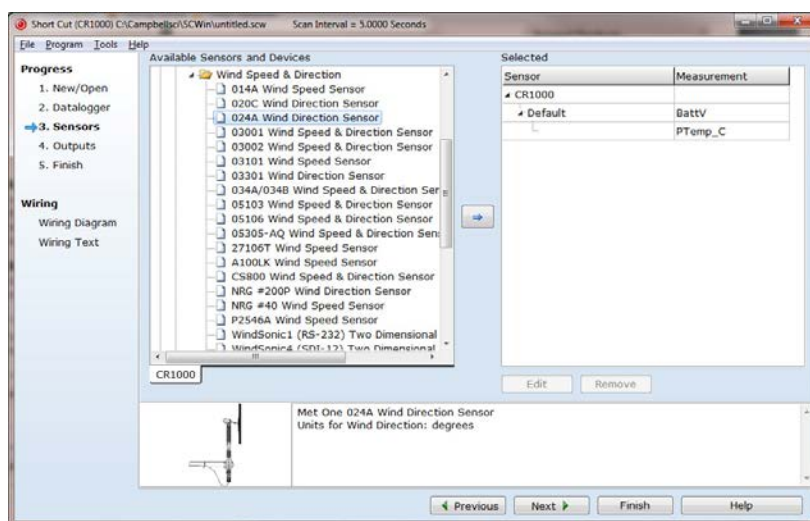

4. Select Sample for the output and then select finish

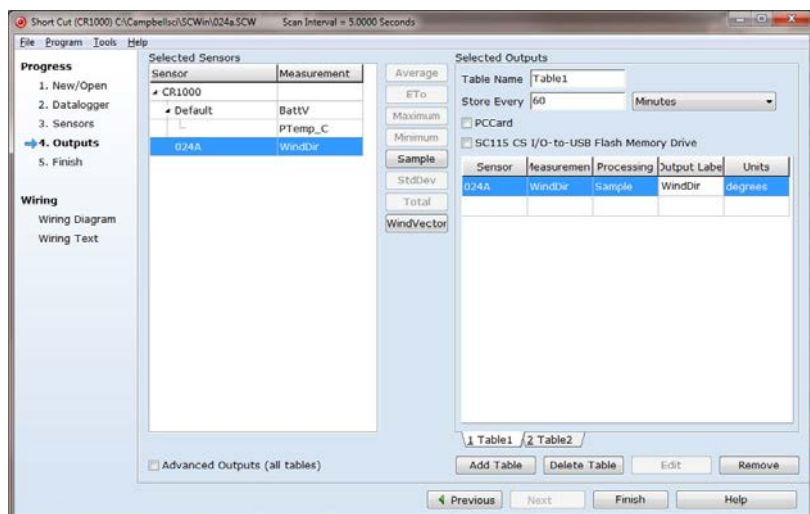

5. Wire according to the wiring diagram generated by SCWin Short Cut.

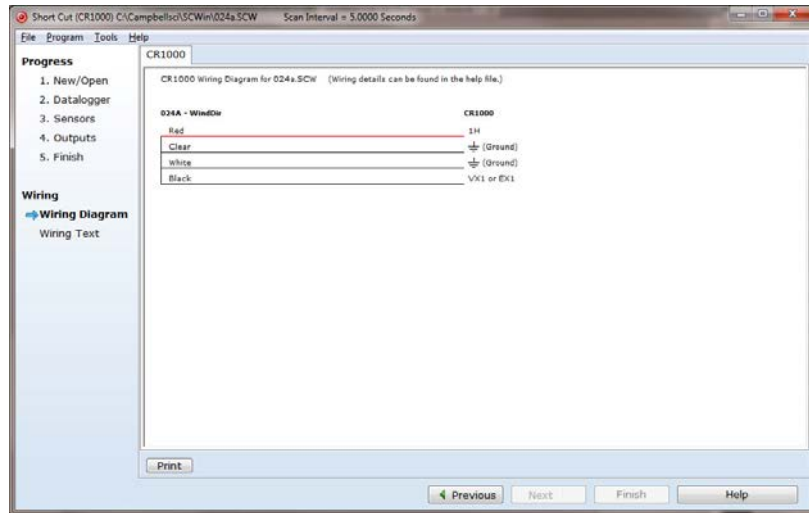

5. Overview

Met One's 024A is a wind vane that measures wind direction from 0 to 360 degrees with a 5 degree accuracy. It uses a 10-kohm potentiometer to sense wind direction. A datalogger applies a precision excitation voltage to the potentiometer, resulting in an analog voltage output that is directly proportional to the wind direction's azimuth.

Cable length for the 024A is specified when the sensor is ordered. TABLE 5-1 gives the recommended cable length for mounting the sensor at the top of a tripod/tower via a CM202 crossarm.

TABLE 5-1. Recommended Cable Lengths						
CM106	CM110	CM115	CM120	UT10	UT20	UT30
11 ft	14 ft	19 ft	24 ft	14 ft	24 ft	37 ft

The 024A's cable can terminate in:

- Pigtails that connect directly to a Campbell Scientific datalogger (option –PT).
- Connector that attaches to a prewired enclosure (option –PW). Refer to www.campbellsci.com/prewired-enclosures for more information.

6. Specifications

Compatible Dataloggers:	CR200(X) CR800 series CR1000 CR3000 CR5000 CR9000(X) CR510 CR10(X) CR23X CR7 21X
Range:	0 to 360 degrees
Threshold:	0.447 m s ⁻¹ (1.0 mph)
Accuracy:	±5 degrees
Temperature Range:	-50° to +70°C
Delay Distance:	Less than 1.5 m (5 ft.)
Damping Ratio	
Standard:	0.25
Optional:	0.4
Potentiometer Specifications	
Sand, Dust, and Fungus:	MIL-E-5272
Salt Spray:	MIL-E-12934
Resistance:	0 to 10,000 ohms
Weight:	450 g (1 lb)
Dimensions	
Overall Height:	33.8 cm (13.3 in)
Overall Length:	44.7 cm (17.6 in)
Tail Height:	30.5 cm (12 in)
Tail Width:	7.6 cm (3 in)

7. Installation

7.1 Siting

Locate wind sensors away from obstructions (e.g. trees and building). As a general rule of thumb there should be a horizontal distance of at least ten times the height of the obstruction between the windset and the obstruction. If it is necessary to mount the sensors on the roof of a building, the height of the sensors, above the roof, should be at least 1.5 times the height of the building. See Section 9, *References*, for a list of references that discuss siting wind direction sensors.

7.2 Mounting Options

The 024A can be attached to a CM202, CM204, or CM206 crossarm via a 17953 NU-RAIL fitting (see FIGURE 4-2 in Quickstart) or a CM220 Right Angle Mounting Bracket (see FIGURE 7-1). Alternatively, the 024A can be attached to the top of our stainless-steel tripods via the CM216 Sensor Mounting Kit (see FIGURE 7-2). The CM216 extends 4 in. above the mast of a stainless-steel CM110, CM115, or CM120 tripod.

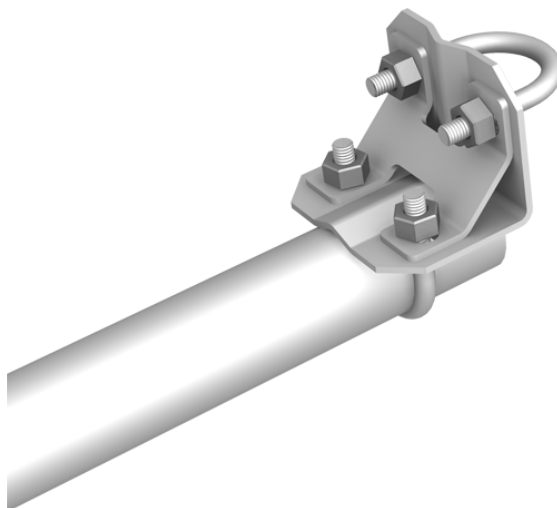


FIGURE 7-1. CM220 mount attached to a crossarm



FIGURE 7-2. CM216 mount

7.3 Wiring

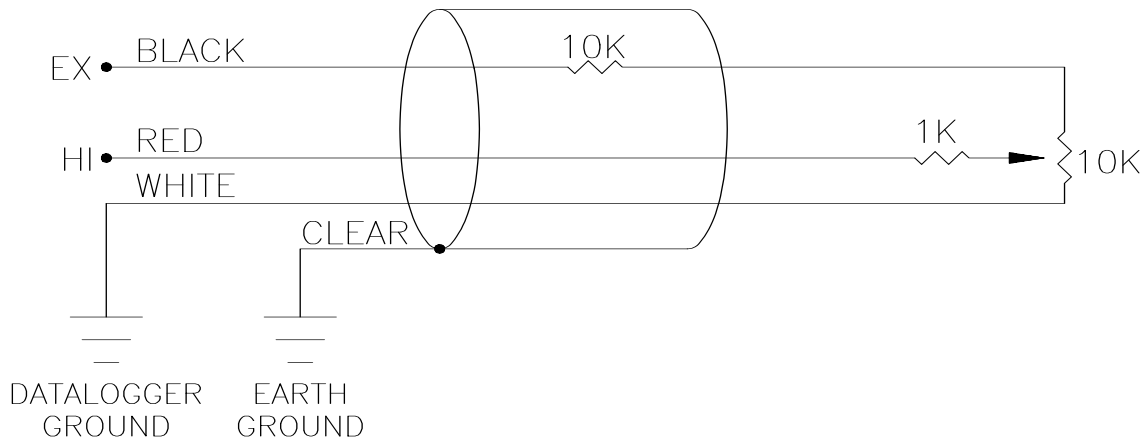


FIGURE 7-3. Schematic of 024A Wind Direction Sensor

FIGURE 7-3 and TABLE 7-1 shows wiring; a detailed cable diagram is provided in Section 8, *Maintenance* (FIGURE 8-1). When Short Cut is used to create the datalogger program, the sensor should be wired to the channels shown on the wiring diagram created by Short Cut.

TABLE 7-1. Connections to Campbell Scientific Dataloggers

Color	Description	CR800 CR5000 CR3000 CR1000	CR510 CR500 CR10(X)	21X CR7 CR23X	CR200(X)
Red	Wind Dir. Signal	SE Analog	SE Analog	SE Analog	SE Analog
Black	Wind Dir. Excitation	Excitation	Excitation	Excitation	Excitation
White	Wind Dir. Reference	⏏	AG	⏏	⏏
Clear	Wind Dir. Shield	⏏	G	⏏	⏏

7.4 Programming

NOTE

This section is for users who write their own programs. A datalogger program to measure this sensor can be created using Campbell Scientific's Short Cut Program Builder software. You do not need to read this section to use Short Cut.

7.4.1 Datalogger Instruction

The datalogger instruction that measures the 024A is datalogger dependent. The **BRHalf()** measurement instruction is used for our CR800, CR850, CR1000, CR3000, and CR5000 dataloggers. Our CR200(X)-series dataloggers use the **EX-DEL_SE()**. Our Edlog dataloggers (e.g., CR510, CR10(X), CR23X) use Instruction 4 – Excite, Delay, Measure. Excitation voltages, range

codes, and delays for CSI dataloggers are listed in TABLE 7-2. The process for determining the correct multiplier is provided in Section 7.4.2, *Calibration and Orientation*.

TABLE 7-2. Parameters for Wind Direction

	CR200(X)	CR10(X), CR510	CR7, 21X, CR23X	CR800, CR850, CR1000	CR5000, CR3000
Measurement Range	2500 mV	250 mV, fast	500 mV, fast	2500 mV, 250 microsecond integration, reverse excitation	5000 mV, 250 microsecond integration, reverse excitation
Excitation Voltage	2500 mV	500 mV	1000 mV	2500 mV	5000 mV
Delay or Settling Time	2 ms	2 ms	2 ms	2 ms	2 ms
Multiplier	See Section 7.4.2	See Section 7.4.2	See Section 7.4.2	See Section 7.4.2	See Section 7.4.2
Offset	0	0	0	0	0

7.4.2 Calibration and Orientation

Conversion of the voltage output into wind direction is done by entering the proper multiplier. The proper multiplier is calculated by dividing 360 by the full scale input voltage (i.e., 360/FSIV). The full scale input voltage (FSIV) is the maximum voltage output from the wind vane. This is found by creating a datalogger program with a multiplier of 1, the default excitation, and a fast scan interval. With a multiplier of 1, the value stored in the variable or input location is simply the voltage output. Slowly turn the wind vane; the shoulder screw must first be removed. The maximum value observed is the full scale input voltage (FSIV).

NOTE

If the reading is -99999, exceeds 500 on the 21X or CR7, or exceeds 250 on the CR10, then reduce the millivolts of excitation by 5 mV.

Multiplier 360/FSIV*
Offset 0.0

*FSIV = Full scale input voltage

Enter the calculated multiplier in the program.

Orientation of the 024A Wind Direction Sensor should be complete if the 024A counter weight was aligned due south.

7.4.3 Example Programs

NOTE

For these examples, the multiplier is listed as 1. The multiplier is unique to individual devices. Follow the procedure provided in Section 7.4.2, *Calibration and Orientation*, to acquire the correct multiplier for your sensor.

```
'CR200(X) Series
'Created by Short Cut (2.5)

'Declare Variables and Units
Public Batt_Volt
Public WindDir
Public NewMult

Units Batt_Volt=Volts
Units WindDir=degrees

'Define Data Tables
DataTable(Table2,True,-1)
  DataInterval(0,1440,Min)
  Minimum(1,Batt_Volt,False,False)
EndTable

'Main Program
BeginProg
  Scan(10,Sec)
    'Default Datalogger Battery Voltage measurement Batt_Volt:
    Battery(Batt_Volt)
    '024A Wind Direction Sensor measurement WindDir:
    ExDeISE(WindDir,1,1,1,2500,2000,1.0,0)
    NewMult=360/WindDir
    'Call Data Tables and Store Data
    CallTable(Table2)
  NextScan
EndProg
```

```
'CR1000
'Created by Short Cut (2.5 Beta)

'Declare Variables and Units
Public Batt_Volt
Public WindDir
Public NewMult

Units Batt_Volt=Volts
Units WindDir=degrees

'Define Data Tables
DataTable(Table1,True,-1)
  DataInterval(0,60,Min,10)
  Sample(1,WindDir,FP2)
EndTable

DataTable(Table2,True,-1)
  DataInterval(0,1440,Min,10)
  Minimum(1,Batt_Volt,FP2,False,False)
EndTable
```

```

'Main Program
BeginProg
  Scan(5,Sec,1,0)
  'Default Datalogger Battery Voltage measurement Batt_Volt:
  Battery(Batt_Volt)
  '024A Wind Direction Sensor measurement WindDir:
  BrHalf(WindDir,1,mV2500,1,1,1,2500,True,2000,250,1.0,0)
  NewMult=360/WindDir
  'Call Data Tables and Store Data
  CallTable(Table1)
  CallTable(Table2)
  NextScan
EndProg

```

```

'CR3000
'Created by Short Cut (2.5)

'Declare Variables and Units
Public Batt_Volt
Public WindDir
Public NewMult

Units Batt_Volt=Volts
Units WindDir=degrees

'Define Data Tables
DataTable(Table1,True,-1)
  DataInterval(0,60,Min,10)
  Sample(1,WindDir,FP2)
EndTable

DataTable(Table2,True,-1)
  DataInterval(0,1440,Min,10)
  Minimum(1,Batt_Volt,FP2,False,False)
EndTable

'Main Program
BeginProg
  Scan(5,Sec,1,0)
  'Default Datalogger Battery Voltage measurement Batt_Volt:
  Battery(Batt_Volt)
  '024A Wind Direction Sensor measurement WindDir:
  BrHalf(WindDir,1,mV5000,1,1,1,5000,True,2000,250,1.0,0)
  NewMult=360/WindDir
  'Call Data Tables and Store Data
  CallTable(Table1)
  CallTable(Table2)
  NextScan
EndProg

```

```

;{CR10X}
;
*Table 1 Program
01: 10          Execution Interval (seconds)

;Measure sensor. Multiplier is unique to individual devices.
1: Excite-Delay (SE) (P4)
  1: 1          Reps
  2: 14         250 mV Fast Range
  3: 1          SE Channel
  4: 1          Excite all reps w/Exchan 1
  5: 2          Delay (0.01 sec units)
  6: 500        mV Excitation
  7: 1          Loc [ wind_dir ]
  8: 1.0        Multiplier
  9: 0.0        Offset

;Store measurements in final storage
2: If time is (P92)
  1: 0000       Minutes (Seconds --) into a
  2: 60         Interval (same units as above)
  3: 10         Set Output Flag High (Flag 0)

3: Set Active Storage Area (P80)
  1: 1          Final Storage Area 1
  2: 101        Array ID

4: Real Time (P77)
  1: 1220       Year,Day,Hour/Minute (midnight = 2400)

5: Sample (P70)
  1: 1          Reps
  2: 1          Loc [ wind_dir ]

```

8. Maintenance

8.1 6 to 12 Month Periodic Service *

Inspect sensor for physical damage and verify that the vane assembly rotates freely. To verify parts and locations, refer to the parts diagram (FIGURE 8-2) and the parts list (TABLE 8-1).

8.2 24 to 36 Month Service *

A complete factory overhaul of the sensor, including the replacement of the potentiometer, is recommended. To send the 024A to Campbell Scientific, the customer must receive an RMA number and fill out a "Statement of Product Cleanliness". For more information, refer to the Assistance section that is at the beginning of this document.

* Schedule is based on average to adverse environments.

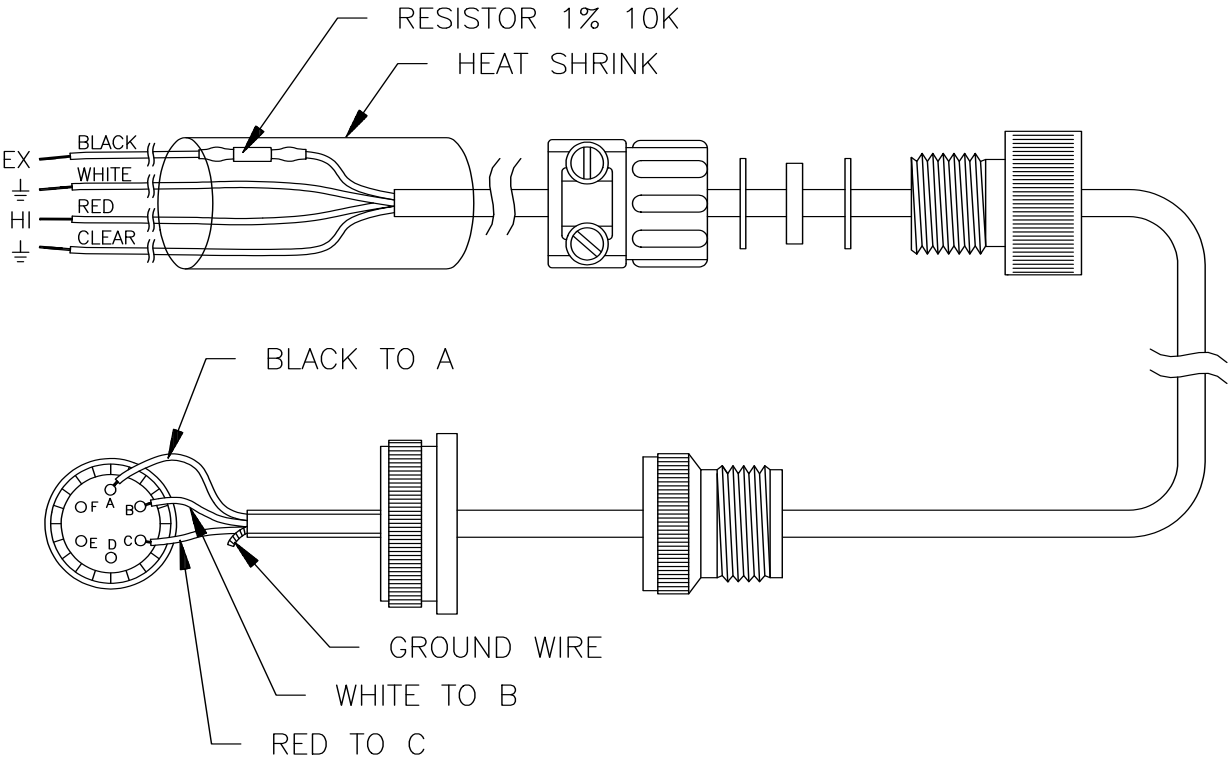


FIGURE 8-1. Cable diagram

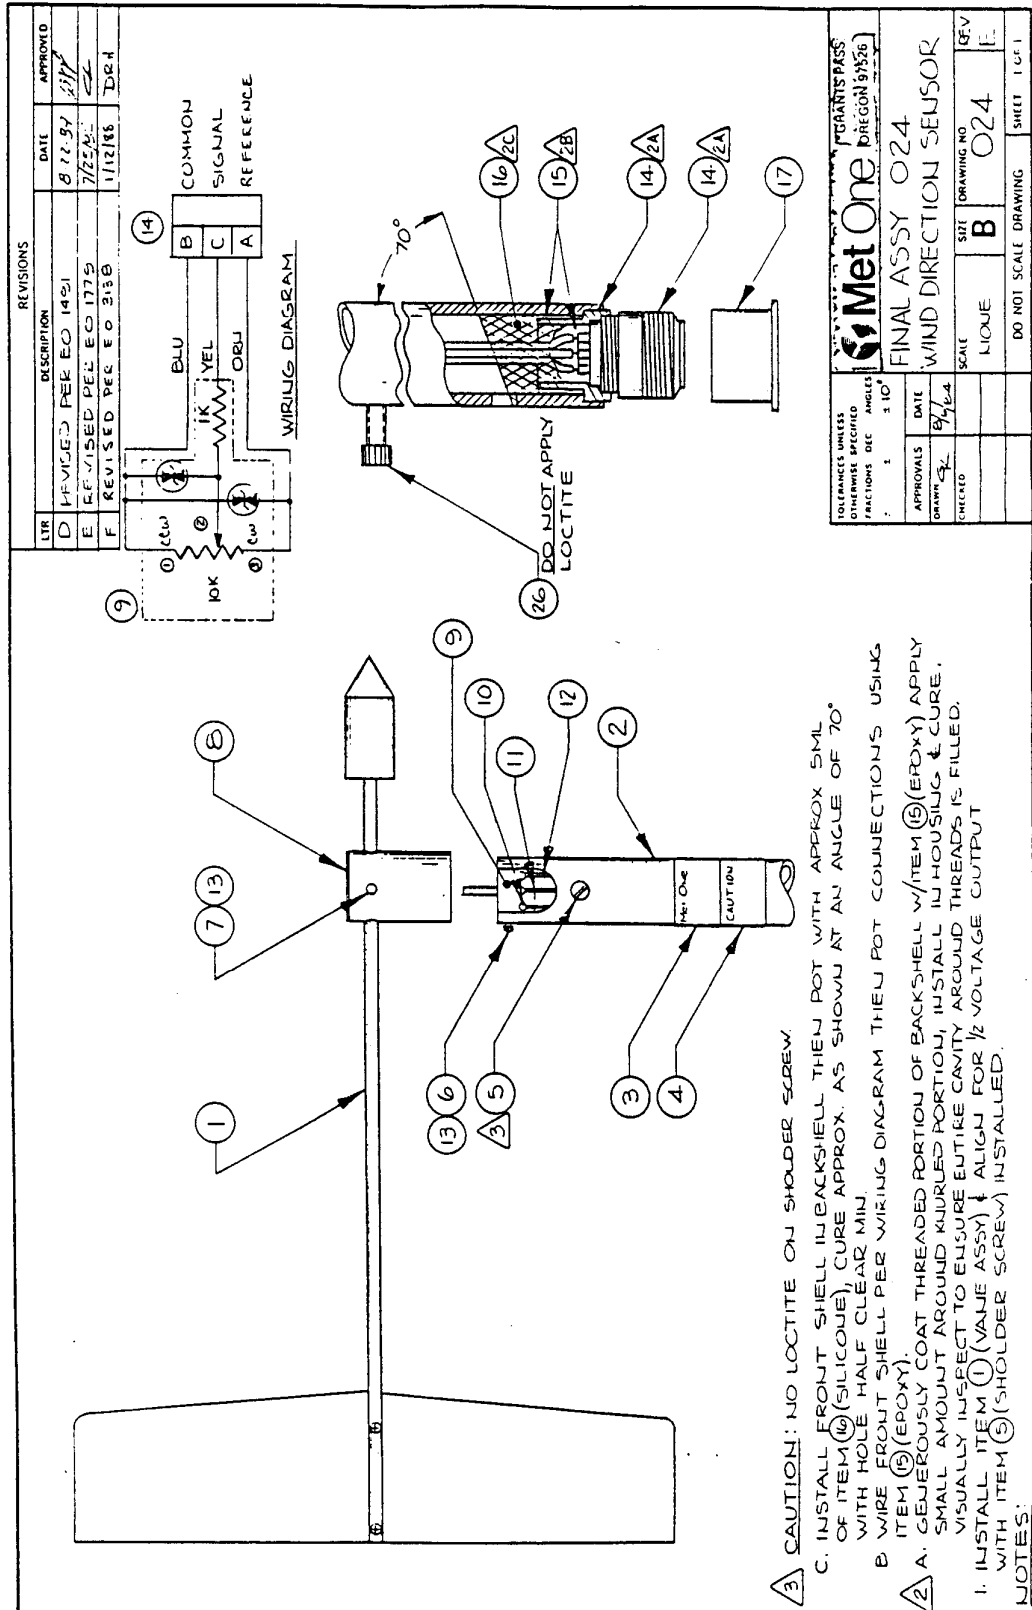


FIGURE 8-2. Parts diagram

TABLE 8-1. Met-One Parts List Reproduced by Campbell Scientific, Inc.			
Item	Part No.	Description.	Qty./Assy
1	102105	Vane Assembly	1
2	101685-1	Wind Dir. Support	1
3	101049-2	Label, Wind Dir.	1
4	101789	Label, Caution	1
5	860015	Screw, Shoulder	1
6	601100	Screw, Pan Hd Ph, 2-56x3/16	3
7	601680	Scrw, Set A/H, 8-32x3/8	2
8	101687	Label, Met-One	1
9	102017	Assy, Potentiometer	1
10	980495	Wire, 22Ga, Yel	1
11	980450	Wire, 22Ga, Blu	1
12	980475	Wire, 22Ga, Orn	1
13	995425	Loctite 222	A/R
14	500280	Connector, 6 Pin	1
15	995100	Adhesive, Epoxy	A/R
16	995060	Adhesive, Silicone	5ml
17	510020	Cap	1
18			
19			
20			
21	101806	Assembly, Cable	Ref
22	101699	Assy Instructions	Ref
23	101706	014 & 024 Installation	Ref
24	101697	Wir. Diagram	Ref
25			
26	601850	Scrw, Cap A/H SS 10-32x5/8	1

9. References

The following references give detailed information on siting wind speed and wind direction sensors.

EPA, 1989: *Quality Assurance Handbook for Air Pollution Measurements System*, Office of Research and Development, Research Triangle Park, NC, 27711.

EPA, 1987: *On-Site Meteorological Program Guidance for Regulatory Modeling Applications*, EPA-450/4-87-013, Office of Air Quality Planning and Standards, Research Triangle Park, NC 27711.

The State Climatologist, 1985: *Publication of the American Association of State Climatologists: Height and Exposure Standards*, for Sensors on Automated Weather Stations, vol. 9, No. 4.

WMO, 1983: *Guide to Meteorological Instruments and Methods of Observation*, World Meteorological Organization, No. 8, 5th edition, Geneva, Switzerland.

Appendix A. Wind Direction Sensor Orientation

A.1 Determining True North and Sensor Orientation


Orientation of the wind direction sensor is done after the datalogger has been programmed, and the location of True North has been determined. True North is usually found by reading a magnetic compass and applying the correction for magnetic declination; where magnetic declination is the number of degrees between True North and Magnetic North. The preferred method to obtain the magnetic declination for a specific site is to use a computer service offered by NOAA at www.ngdc.noaa.gov/geomag. Magnetic declination can also be obtained from a map or local airport. A general map showing magnetic declination for the contiguous United States is shown in FIGURE A-1.

Declination angles east of True North are considered negative, and are subtracted from 360 degrees to get True North as shown FIGURE A-2 (0° and 360° are the same point on the compass). For example, the declination for Logan, Utah is 14° East. True North is 360° - 14°, or 346° as read on a compass. Declination angles west of True North are considered positive, and are added to 0 degrees to get True North as shown in FIGURE A-3.

Orientation is most easily done with two people, one to aim and adjust the sensor, while the other observes the wind direction displayed by the datalogger.

1. Establish a reference point on the horizon for True North.
2. Sighting down the instrument center line, aim the nose cone, or counterweight at True North. Display the input location or variable for wind direction using a hand-held keyboard display, PC, or palm.
3. Loosen the u-bolt on the CM220 or the set screws on the NU-RAIL that secure the base of the sensor to the crossarm. While holding the vane position, slowly rotate the sensor base until the datalogger indicates 0 degrees. Tighten the set screws.

Magnetic Declination for the U.S. 2004

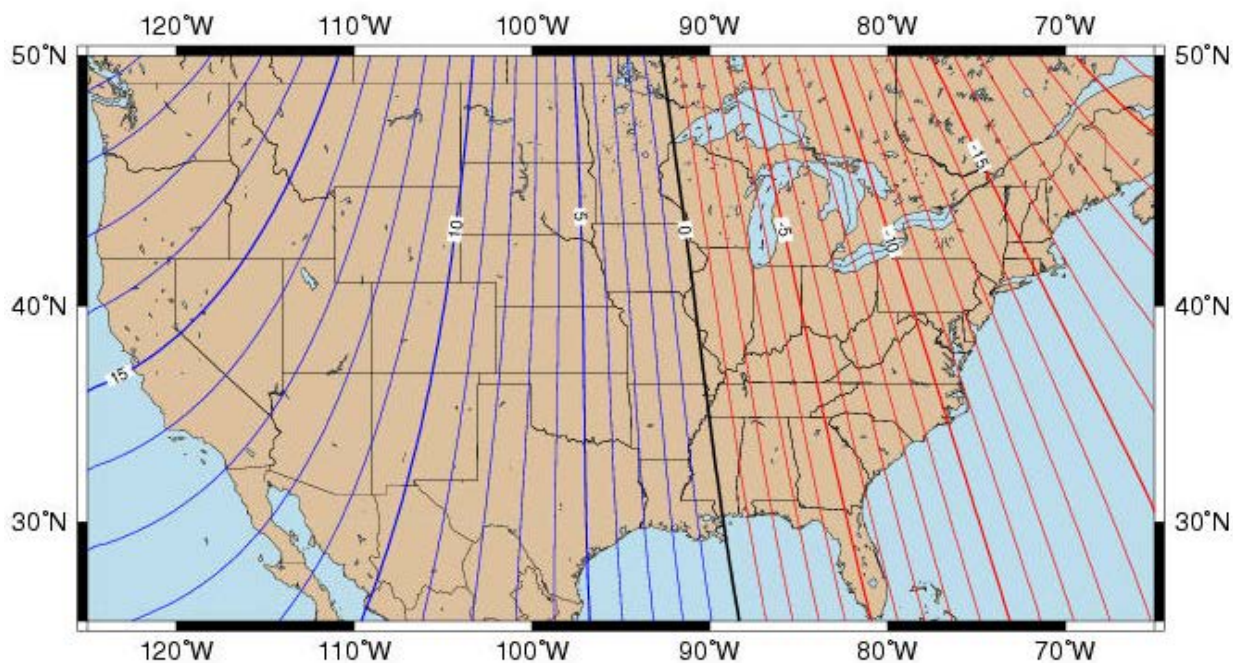

Mercator Projection

Contours of Declination of the Earth's magnetic field. Contours are expressed in degrees. Contour Interval: 1 Degree (Positive declinations in blue, negative in red)

Produced by NOAA's National Geophysical Data Center (NGDC), Boulder, Colorado

<http://www.ngdc.noaa.gov>

Based on the International Geomagnetic Reference Field (IGRF), Epoch 2000 updated to December 31, 2004

The IGRF is developed by the International Association of Geomagnetism and Aeronomy (IAGA). Division V

FIGURE A-1. Magnetic declination for the contiguous United States (2004)

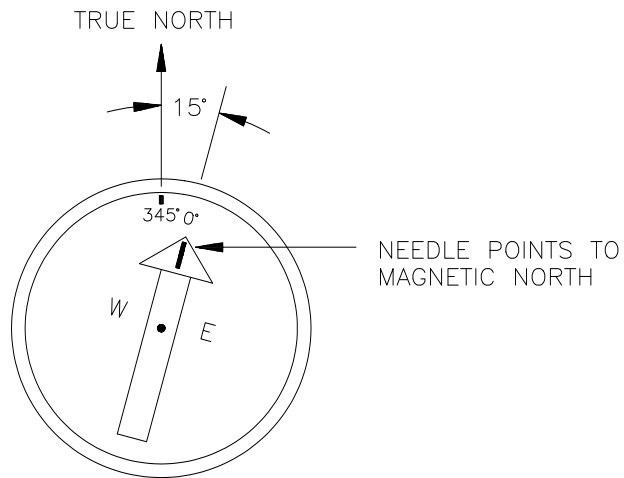


FIGURE A-2. Declination angles east of True North are subtracted from 0 to get True North

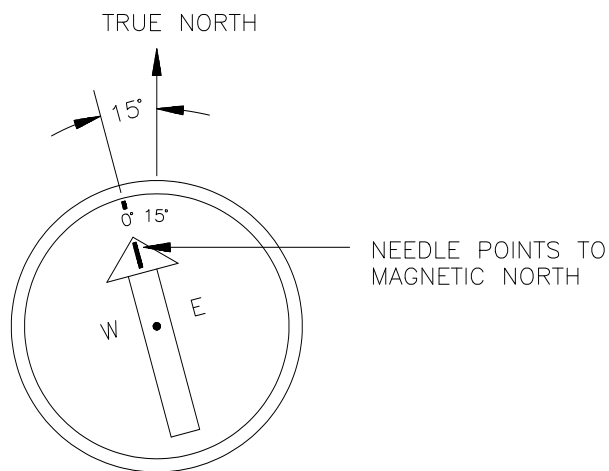


FIGURE A-3. Declination angles west of True North are added to 0 to get True North

Campbell Scientific Companies

Campbell Scientific, Inc. (CSI)

815 West 1800 North

Logan, Utah 84321

UNITED STATES

www.campbellsci.com • info@campbellsci.com

Campbell Scientific Africa Pty. Ltd. (CSAf)

PO Box 2450

Somerset West 7129

SOUTH AFRICA

www.csafrica.co.za • cleroux@csafrica.co.za

Campbell Scientific Australia Pty. Ltd. (CSA)

PO Box 8108

Garbutt Post Shop QLD 4814

AUSTRALIA

www.campbellsci.com.au • info@campbellsci.com.au

Campbell Scientific do Brazil Ltda. (CSB)

Rua Luisa Crapsi Orsi, 15 Butantã

CEP: 005543-000 São Paulo SP BRAZIL

www.campbellsci.com.br • suporte@campbellsci.com.br

Campbell Scientific Canada Corp. (CSC)

11564 - 149th Street NW

Edmonton, Alberta T5M 1W7

CANADA

www.campbellsci.ca • dataloggers@campbellsci.ca

Campbell Scientific Centro Caribe S.A. (CSCC)

300 N Cementerio, Edificio Breller

Santo Domingo, Heredia 40305

COSTA RICA

www.campbellsci.cc • info@campbellsci.cc

Campbell Scientific Ltd. (CSL)

Campbell Park

80 Hathern Road

Shepshed, Loughborough LE12 9GX

UNITED KINGDOM

www.campbellsci.co.uk • sales@campbellsci.co.uk

Campbell Scientific Ltd. (France)

3 Avenue de la Division Leclerc

92160 ANTONY

FRANCE

www.campbellsci.fr • info@campbellsci.fr

Campbell Scientific Spain, S. L.

Avda. Pompeu Fabra 7-9, local 1

08024 Barcelona

SPAIN

www.campbellsci.es • info@campbellsci.es

Please visit www.campbellsci.com to obtain contact information for your local US or international representative.