


AP200

CO₂/H₂O Atmospheric Profile System

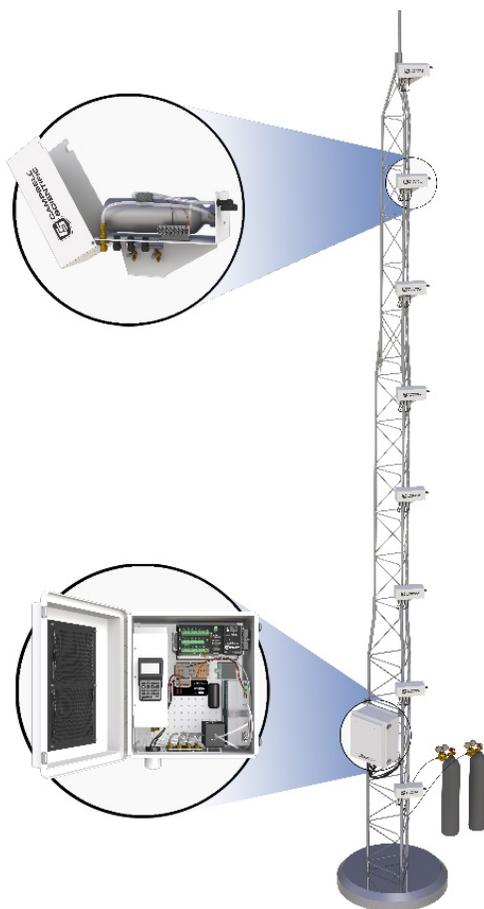

Limited Warranty

“Products manufactured by CSI are warranted by CSI to be free from defects in materials and workmanship under normal use and service for twelve months from the date of shipment unless otherwise specified in the corresponding product manual. (Product manuals are available for review online at www.campbellsci.com.) Products not manufactured by CSI, but that are resold by CSI, are warranted only to the limits extended by the original manufacturer. Batteries, fine-wire thermocouples, desiccant, and other consumables have no warranty. CSI’s obligation under this warranty is limited to repairing or replacing (at CSI’s option) defective Products, which shall be the sole and exclusive remedy under this warranty. The Customer assumes all costs of removing, reinstalling, and shipping defective Products to CSI. CSI will return such Products by surface carrier prepaid within the continental United States of America. To all other locations, CSI will return such Products best way CIP (port of entry) per Incoterms ® 2010. This warranty shall not apply to any Products which have been subjected to modification, misuse, neglect, improper service, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied. The warranty for installation services performed by CSI such as programming to customer specifications, electrical connections to Products manufactured by CSI, and Product specific training, is part of CSI’s product warranty. **CSI EXPRESSLY DISCLAIMS AND EXCLUDES ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. CSI hereby disclaims, to the fullest extent allowed by applicable law, any and all warranties and conditions with respect to the Products, whether express, implied or statutory, other than those expressly provided herein.**”

Assistance

Products may not be returned without prior authorization. The following contact information is for US and international customers residing in countries served by Campbell Scientific, Inc. directly. Affiliate companies handle repairs for customers within their territories. Please visit www.campbellsci.com to determine which Campbell Scientific company serves your country.

To obtain a Returned Materials Authorization (RMA) number, contact CAMPBELL SCIENTIFIC, INC., phone (435) 227-9000. Please write the issued RMA number clearly on the outside of the shipping container. Campbell Scientific's shipping address is:

CAMPBELL SCIENTIFIC, INC.

RMA# _____
815 West 1800 North
Logan, Utah 84321-1784

For all returns, the customer must fill out a "Statement of Product Cleanliness and Decontamination" form and comply with the requirements specified in it. The form is available from our website at www.campbellsci.com/repair. A completed form must be either emailed to repair@campbellsci.com or faxed to (435) 227-9106. Campbell Scientific is unable to process any returns until we receive this form. If the form is not received within three days of product receipt or is incomplete, the product will be returned to the customer at the customer's expense. Campbell Scientific reserves the right to refuse service on products that were exposed to contaminants that may cause health or safety concerns for our employees.

Safety

DANGER — MANY HAZARDS ARE ASSOCIATED WITH INSTALLING, USING, MAINTAINING, AND WORKING ON OR AROUND TRIPODS, TOWERS, AND ANY ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC. FAILURE TO PROPERLY AND COMPLETELY ASSEMBLE, INSTALL, OPERATE, USE, AND MAINTAIN TRIPODS, TOWERS, AND ATTACHMENTS, AND FAILURE TO HEED WARNINGS, INCREASES THE RISK OF DEATH, ACCIDENT, SERIOUS INJURY, PROPERTY DAMAGE, AND PRODUCT FAILURE. TAKE ALL REASONABLE PRECAUTIONS TO AVOID THESE HAZARDS. CHECK WITH YOUR ORGANIZATION'S SAFETY COORDINATOR (OR POLICY) FOR PROCEDURES AND REQUIRED PROTECTIVE EQUIPMENT PRIOR TO PERFORMING ANY WORK.

Use tripods, towers, and attachments to tripods and towers only for purposes for which they are designed. Do not exceed design limits. Be familiar and comply with all instructions provided in product manuals. Manuals are available at www.campbellsci.com or by telephoning (435) 227-9000 (USA). You are responsible for conformance with governing codes and regulations, including safety regulations, and the integrity and location of structures or land to which towers, tripods, and any attachments are attached. Installation sites should be evaluated and approved by a qualified engineer. If questions or concerns arise regarding installation, use, or maintenance of tripods, towers, attachments, or electrical connections, consult with a licensed and qualified engineer or electrician.

General

- Prior to performing site or installation work, obtain required approvals and permits. Comply with all governing structure-height regulations, such as those of the FAA in the USA.
- Use only qualified personnel for installation, use, and maintenance of tripods and towers, and any attachments to tripods and towers. The use of licensed and qualified contractors is highly recommended.
- Read all applicable instructions carefully and understand procedures thoroughly before beginning work.
- Wear a **hardhat** and **eye protection**, and take **other appropriate safety precautions** while working on or around tripods and towers.
- **Do not climb** tripods or towers at any time, and prohibit climbing by other persons. Take reasonable precautions to secure tripod and tower sites from trespassers.
- Use only manufacturer recommended parts, materials, and tools.

Utility and Electrical

- **You can be killed** or sustain serious bodily injury if the tripod, tower, or attachments you are installing, constructing, using, or maintaining, or a tool, stake, or anchor, come in **contact with overhead or underground utility lines**.
- Maintain a distance of at least one-and-one-half times structure height, 20 feet, or the distance required by applicable law, **whichever is greater**, between overhead utility lines and the structure (tripod, tower, attachments, or tools).
- Prior to performing site or installation work, inform all utility companies and have all underground utilities marked.
- Comply with all electrical codes. Electrical equipment and related grounding devices should be installed by a licensed and qualified electrician.

Elevated Work and Weather

- Exercise extreme caution when performing elevated work.
- Use appropriate equipment and safety practices.
- During installation and maintenance, keep tower and tripod sites clear of un-trained or non-essential personnel. Take precautions to prevent elevated tools and objects from dropping.
- Do not perform any work in inclement weather, including wind, rain, snow, lightning, etc.

Maintenance

- Periodically (at least yearly) check for wear and damage, including corrosion, stress cracks, frayed cables, loose cable clamps, cable tightness, etc. and take necessary corrective actions.
- Periodically (at least yearly) check electrical ground connections.

WHILE EVERY ATTEMPT IS MADE TO EMBODY THE HIGHEST DEGREE OF SAFETY IN ALL CAMPBELL SCIENTIFIC PRODUCTS, THE CUSTOMER ASSUMES ALL RISK FROM ANY INJURY RESULTING FROM IMPROPER INSTALLATION, USE, OR MAINTENANCE OF TRIPODS, TOWERS, OR ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC.

Table of Contents

PDF viewers: These page numbers refer to the printed version of this document. Use the PDF reader bookmarks tab for links to specific sections.

1. Introduction.....	1
2. Precautions	1
3. Initial Inspection	2
4. Overview	2
4.1 System Components.....	2
4.1.1 Standard Components	2
4.1.2 Optional Components	5
4.1.3 Common Accessories.....	7
4.1.4 Other Accessories	10
4.1.5 Support Software	10
4.1.6 Replacement Parts.....	11
4.2 Theory of Operation.....	12
4.2.1 Intake Assemblies	14
4.2.2 Valve Manifold	16
4.2.3 Pump Module.....	17
4.3 Specifications	19
4.3.1 CO ₂ /H ₂ O Analyzer.....	19
4.3.2 System Enclosure.....	19
4.3.3 Intake Assembly.....	21
5. Installation	21
5.1 Mounting.....	21
5.1.1 Support Structure	21
5.1.2 AP200 Enclosure	22
5.1.3 Intake Assemblies	23
5.2 Plumbing.....	24
5.2.1 Profile Sample Tubes	24
5.2.2 Zero and CO ₂ Span	26
5.2.3 H ₂ O Span	27
5.3 Wiring	28
5.3.1 Ground Connection.....	28
5.3.2 Intake Heater Cables	29
5.3.3 Power.....	33
5.4 Configure the Program.....	35
5.4.1 System Configuration Variables	36
5.4.2 Compile Switches	38
5.5 Starting and Stopping the Sequence.....	38
5.6 Verify Performance.....	39
5.6.1 Quick Status Check Using a Keyboard Display.....	39
5.6.2 Checking Status Remotely	40
5.6.3 On-site System Checks	40

6. Infrared Gas Analyzer (IRGA) Zero and Span	40
6.1 Automatic Zero and Span.....	41
6.2 Manual Zero and Span	42
6.2.1 Check Zero and CO ₂ Span	42
6.2.2 Do CO ₂ and H ₂ O Zero.....	43
6.2.3 Do CO ₂ Span.....	44
6.2.4 Do H ₂ O Span.....	44
6.2.5 Restart the Sequence	46
6.2.6 Check the System.....	47
7. Maintenance and Troubleshooting.....	47
7.1 Plumbing Leaks.....	47
7.2 Enclosure Desiccant	48
7.3 Intake Filters	48
7.4 LI-850 (IRGA)	51
7.4.1 Installing and Removing the IRGA.....	51
7.4.2 Configuring the IRGA	52
7.5 Zero/Span Flow.....	53
8. Repair	54
 Appendices	
A. Keyboard Display Menu	A-1
B. AP200 Diagnostics	B-1
C. Public Variables	C-1
D. Output Tables	D-1
E. Temperature Profile.....	E-1
F. Valve Sequence Timing.....	F-1
G. AC/DC Adapter Kit.....	G-1
H. Swagelok® Fittings	H-1
H.1 Assembly.....	H-1
H.2 Common Replacement Parts	H-2
I. Useful Equations	I-1
J. AP200 Pump Replacement.....	J-1
J.1 Introduction.....	J-1
J.2 Removal	J-1
J.3 Installation.....	J-6

Figures

4-1.	Interior of AP200 system enclosure	3
4-2.	Side view of AP200 intake assembly	3
4-3.	Side view of earlier generation AP200 intake assembly	4
4-4.	The IRGA installed in the AP200 system enclosure	6
4-5.	Campbell Scientific NL115 and CFM100 CompactFlash® storage modules.....	6
4-6.	CFMC2G 2GB CompactFlash® memory card	6
4-7.	AP200 keyboard display mounted in system enclosure	7
4-8.	AC/DC power adapter kit installed in AP200	8
4-9.	17752 USB memory card reader/writer	9
4-10.	107-L temperature probe mounted with radiation shield	9
4-11.	CR1000KD handheld keyboard/display.....	10
4-12.	Syringe filter of current AP200 intake assembly	11
4-13.	Disk filter of early AP200 intake assembly.....	11
4-14.	Single desiccant pack	11
4-15.	Humidity indicator card	12
4-16.	Diaphragm pump used in AP200	12
4-17.	Plumbing diagram of AP200 system.....	13
4-18.	AP200 intake assembly shown open	14
4-19.	Nominal ambient pressure as related to increasing elevation.....	15
4-20.	Nominal sample flow rate as related to increasing ambient pressure	15
4-21.	Valve module and Swagelok® feedthrough fittings on bottom of AP200 enclosure.....	16
4-22.	Pump module of AP200 system	18
4-23.	Average power consumption relative to temperature.....	20
5-1.	Installation (showing mounting hardware) of AP200 system enclosure on UT30 tower.....	22
5-2.	Mounting clip orientation for pipe diameters between 1.3 and 3.8 cm	23
5-3.	Mounting clip orientation for pipe diameters between 3.9 and 5.1 cm	23
5-4.	Installation of AP200 assembly on a small-diameter pipe (left) and large-diameter pipe (right)	24
5-5.	Tubing connections on bottom of AP200 enclosure	24
5-6.	Labeled inlet connections inside enclosure	25
5-7.	Tubing connections from four intake assemblies connected to inlets 1 – 4.....	26
5-8.	AP200 system enclosure configured with cylinders of zero air and CO ₂	27
5-9.	H ₂ O span inlet configured for a dewpoint generator.....	28
5-10.	AP200 earth grounded on a UT30 tower.....	28
5-11.	Cable feedthrough cap shown removed to admit cables into the system enclosure	29
5-12.	Proper wiring of heater cable onto DIN bus of AP200 system enclosure.....	30
5-13.	Use AP200 system screwdriver to open contacts for wiring heater cable.....	30
5-14.	Tabs for opening intake assembly	31
5-15.	Wiring of heater cable on AP200 intake assembly	31
5-16.	Three intake assemblies with heater cables daisy chained to the AP200 system enclosure.....	32
5-17.	Proper wiring of power cable onto DIN bus of AP200 system enclosure	34

5-18. Power cables secured to cable tie loop on pump module of AP200 enclosure34

5-19. Cut-away view showing proper replacement of feedthrough cap35

7-1. Releasing rain diverter from intake assembly49

7-2. Order of replacement for orifice, filter, and rain diverter.....50

7-3. Correct reassembly after filter replacement50

7-4. Installed IRGA in system enclosure.....51

7-5. Components and fittings of IRGA installation.....52

E-1. 107-L temperature probe mounted with radiation shield E-1

G-1. Installation location of power adapter G-1

G-2. Bundled cable of power adapter..... G-1

G-3. Cable extension connected to AP200 power input terminal..... G-2

G-4. AC power cord secured within AP200 system enclosure..... G-2

G-5. Power adapter output cable plugged into cable extension..... G-3

H-1. Swagelok® insert H-3

H-2. Front and back Swagelok® ferrules H-3

H-3. Swagelok® plug..... H-4

H-4. Swagelok® cap H-5

J-1. Location of pump enclosure inside AP200 system enclosureJ-1

J-2. Location of six screws of pump enclosure coverJ-2

J-3. AP200 pumpJ-2

J-4. Removal of original pump module inner plate and replacement with new inner plate provided in pump replacement kit (pn 33241).....J-3

J-5. New inner plate with adhesive tape.....J-4

J-6. New inner plate placement on pump module coverJ-4

J-7. Location of pump connector in AP200 pump electronicsJ-5

J-8. Self-tapping screws attaching pump to metal box.....J-5

J-9. Location of cuts to remove pump assembly from tubingJ-6

J-10. Inlet and outlet tubing reconnected to pumpJ-6

J-11. Pump side with inlet and outlet tubing connected.....J-7

J-12. Proper placement of AP200 pump (SN 33240) back into foam of pump enclosure.J-7

Tables

4-1. Parts Included with the AP200 Fittings and Tools Pack4

5-1. Equivalent Resistance for Intake Heaters Connected in Parallel.....33

7-1. IRGA Settings53

7-2. IRGA Outputs53

B-1. Summary of Bit Numbers Indicating Conditions Outside Normal Operating RangeB-1

C-1. Public VariablesC-1

D-1. Variables of the IntAvg Table D-1

D-2. Variables of the CalAvg Table..... D-4

D-3. Variables of the SiteAvg Table D-6

D-4. Variables of the RawDataTable D-8

D-5. Variables of the TimeInfo Table D-10

D-6. Variables of the message_log Table..... D-12

F-1. Profile Sequence-timing Variables..... F-1

F-2. System Configuration Variables of Zero/Span..... F-3

F-3. Timing for Zero/Span Sequence (check only)..... F-4

F-4. Timing for Zero/Span Sequence (setting the IRGA)..... F-5

H-1. Available Plastic Tubing Sizes, Construction, and Usage Guidelines H-2

H-2. Dimensions and Part Numbers for Swagelok® Inserts H-3

H-3. Dimensions and Part Numbers for Swagelok® Ferrules..... H-4
H-4. Dimensions and Part Numbers for Swagelok® Plugs..... H-4
H-5. Dimensions and Part Numbers for Swagelok® Caps..... H-5

AP200 CO₂/H₂O Atmospheric Profile System

1. Introduction

The AP200 CO₂/H₂O Atmospheric Profile System (AP200) measures atmospheric carbon dioxide and water vapor at up to eight positions. Intake assemblies are normally spaced along the height of a tower to enable measurement of a vertical profile. The AP200 is commonly used in conjunction with an eddy-covariance system to measure the storage term to give a more complete measurement of the surface exchange.

Before using the AP200, please study:

- Section 2, *Precautions*
- Section 3, *Initial Inspection*
- Section 5, *Installation*

Operational instructions critical to preserving accurate measurements of the system are found throughout this manual. Before using the AP200, please study the entire manual. Several other user manuals provide additional information and should be consulted before using the AP200. These include:

- *CR1000 Measurement and Control System Operator's Manual*
- *CFM100 CompactFlash® Module Instruction Manual*
- *NL115 Ethernet and CompactFlash® Module Instruction Manual*
- *Application Note 3SM-F, CF Card Information*
- *ENC10/12, ENC12/14, ENC14/16, ENC16/18 Instruction Manual*
- *CM106 Tripod Instruction Manual*
- *Tripod Installation Manual Models CM110, CM115, CM120*
- *Model 107 Temperature Probe Instruction Manual*

all available at www.campbellsci.com, and

- *LI-850 CO₂/H₂O Gas Analyzer Instruction Manual*

available at www.licor.com

2. Precautions

- WARNING:
 - The AP200 can be damaged by unfiltered air being pulled into the sampling sub system. To avoid this, each inlet must be capped or have a particulate filter installed before applying power to the system. Use care when connecting and disconnecting intake assembly tubes, and zero and span tubes (see Section 5.2, *Plumbing*) to avoid introducing dust or other contaminants.
 - Do not overtighten the Swagelok® fittings on the sampling system or intake assemblies. See Appendix H, *Swagelok® Fittings*, for information on proper connection.

- Careful design of the power source for the AP200 should be undertaken to ensure uninterrupted power. If needed, contact a Campbell Scientific application engineer for assistance.
- Retain all spare caps and plugs as these are required when shipping or storing the AP200 system.

3. Initial Inspection

Upon receipt of the AP200, inspect the packaging and contents for damage. File damage claims with the shipping company.

Model numbers are found on each product. On cables, the model number is often found at the connection end of the cable. Check this information against the enclosed shipping documents to verify the expected products and the correct lengths of cable are included.

4. Overview

The AP200 measures atmospheric carbon dioxide and water vapor at up to eight positions. Intake assemblies are generally spaced along the height of a tower to enable measurement of the vertical profile. The AP200 is commonly used in conjunction with an eddy-covariance system to measure the storage term to give a more complete measurement of the surface exchange.

4.1 System Components

The AP200 consists of several components, some of which are optional. Some additional accessories are required to complete a fully functioning AP200 system and are described and illustrated in the sections that follow.

4.1.1 Standard Components

Standard with the AP200 are the AP200 system enclosure and four to eight intake assemblies.

AP200 System Enclosure

The AP200 system enclosure always includes a sample pump, valve manifold, CR1000 datalogger, and other electronics to control and monitor the system. The components within the AP200 are shown in FIGURE 4-1. The CR1000 records data, selects valves, adjusts pumping speed to control system pressure, and controls the temperatures of the pump and valve manifold.

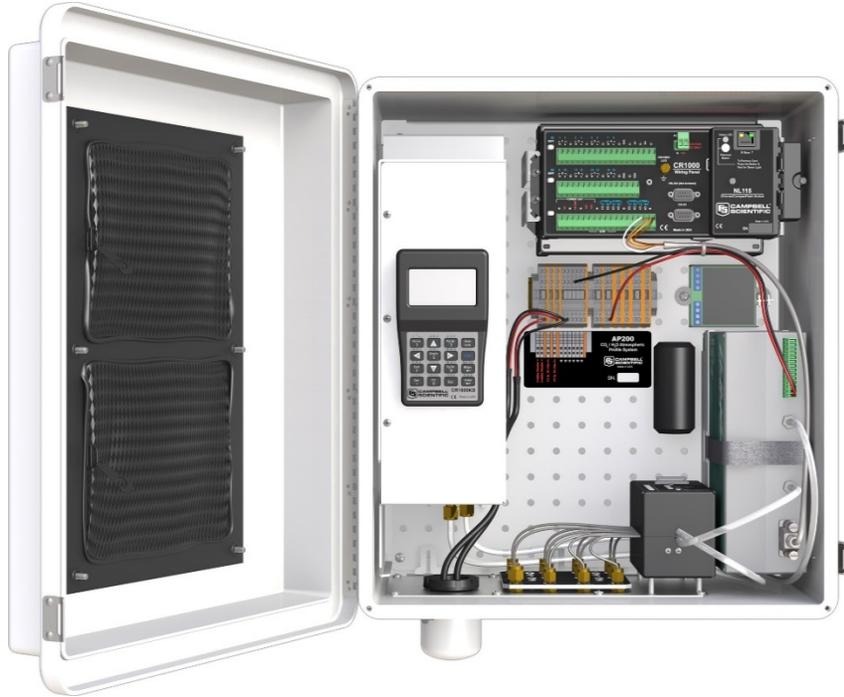


FIGURE 4-1. Interior of AP200 system enclosure

AP200 Intake Assembly

The AP200 intake assembly (pn 27693) includes an orifice to set the flow rate, a filter that removes particulates, and a rain diverter to admit a sample of ambient air without allowing precipitation to enter. The rain diverter is heated to prevent condensation. The intake assembly includes a mixing volume to dampen fluctuations in ambient concentrations of CO₂ and H₂O. The closed intake assembly is shown in FIGURE 4-2.



FIGURE 4-2. Side view of AP200 intake assembly

NOTE Intake assemblies shipped prior to August 2013 had the rain diverter located at the end of the assembly rather than below, as shown in FIGURE 4-3. This assembly also uses a different filter, which is shown in FIGURE 4-13, and available for replacement as pn 27809.

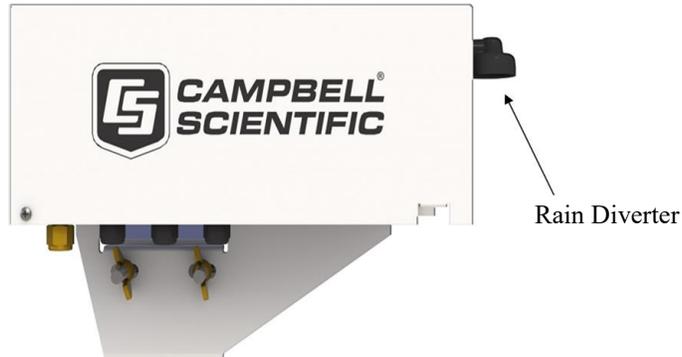


FIGURE 4-3. Side view of earlier generation AP200 intake assembly

The AP200 ships with the following separate items.

AP200 Enclosure Fitting & Tools Pack

This pack of tools and fitting (pn 29237) includes the items listed in TABLE 4-1.

TABLE 4-1. Parts Included with the AP200 Fittings and Tools Pack			
Part Number	Qty	Description	Notes
10873	1	Serial cable	Connects user's PC to AP200 datalogger
8125	1	Screw driver	Wiring power cables
7680	1	Tubing cutter	Cutting intake and calibration tubing
15831	10	1/4 in Swagelok® cap	Capping intake and zero/span tubes when not in use
15830	32	Swagelok® insert for 1/4 in OD, 0.17 in ID tubing	Intake and zero/span tubing
15890	10	Swagelok® front/back ferrule sets for 1/4 in OD tubing	Intake and zero/span tubing
15884	1	Swagelok® 1/4 in tee	Connection to dewpoint generator
17327	2	Swagelok® 1/4 in port connectors	Connection to dewpoint generator
15887	1	Swagelok® 1/4 in union	Connection to dewpoint generator
15834	2	Swagelok® insert for 1/4 in OD, 1/8 in ID tubing	Connection to dewpoint generator

Support Software

The AP200 includes a CR1000 datalogger. A support CD (pn 28552) is included with the AP200 that contains the CR1000 program.

Inlet Connection Fittings

Included with the AP200 are eleven sets of Swagelok® nuts and ferrules compatible with the inlet connections of the AP200. For more information about using Swagelok® parts, see Appendix H, *Swagelok® Fittings*.

Spare Filters

Eight spare filters (pn 29998) are included to replace the filters which are installed in the intake assemblies. See Section 4.2.1, *Intake Assemblies*, for more information about these filters.

Enclosure Desiccant Pack

The AP200 enclosure should be equipped with desiccant bags to prevent damage caused by excessive humidity. The AP200 is initially supplied with a desiccant pack (pn 29236) that includes the items below. Part numbers are included for reference when it is time to replace the individual components. See Section 4.1.6, *Replacement Parts*, for more information.

- Four (4) desiccant bags (pn 4905)
- One (1) humidity indicator card (pn 6571)
- Ten (10) cable ties (pn 4005)

4.1.2 Optional Components

The AP200 requires an LI-850 analyzer (manufactured by LI-COR®, Inc, Lincoln, NE) to measure CO₂ and H₂O concentrations. This infrared gas analyzer (herein referred to as the IRGA) can be provided as a factory-installed option or it can be provided by the user. The AP200 is designed for easy installation of the LI-COR® IRGA. The IRGA installed in the AP200 enclosure is shown in FIGURE 4-4. For complete details, see the LI-850 instruction manual, available at www.licor.com.



FIGURE 4-4. The IRGA installed in the AP200 system enclosure

To store data on a CompactFlash® (CF) memory card, the AP200 requires either an NL115 or a CFM100 (FIGURE 4-5) both available from Campbell Scientific. Either storage module will provide data storage. The NL115 has the added capabilities provided by an Ethernet interface.



FIGURE 4-5. Campbell Scientific NL115 and CFM100 CompactFlash® storage modules

The AP200 can be ordered with either the NL115 or the CFM100 module factory installed or it can be ordered with neither. If the AP200 is ordered without a storage module, the user must provide one. The CF card (FIGURE 4-6) for the storage module can be ordered separately from www.campbellsci.com (see Section 4.1.3, *Common Accessories*). For details, see the *CFM100 CompactFlash Module Instruction Manual* or the *NL115 Ethernet and CompactFlash Module Instruction Manual*, and the *Application Note 3SM-F, CF Card Information*. All manuals are available at www.campbellsci.com.



FIGURE 4-6. CFMC2G 2GB CompactFlash® memory card

The AP200 can be ordered with an optional keyboard display factory mounted in the system enclosure (FIGURE 4-7). This keyboard display provides a convenient user interface to change settings or view status and data in the field.

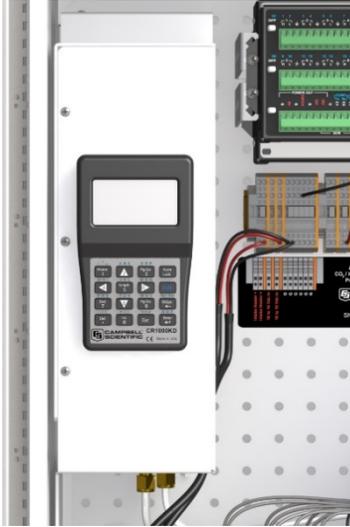


FIGURE 4-7. AP200 keyboard display mounted in system enclosure

NOTE

This user interface is also available using a hand-held, detachable keyboard display, the CR1000KD, as described in Section 4.1.4, *Other Accessories*. The CR1000KD may be preferred when multiple AP200s are to be maintained. The factory-mounted keyboard display is permanently attached, so it cannot be forgotten or misplaced. For more detail on the keyboard display, see the *CR1000 Measurement and Control System Operator's Manual*.

The AP200 can be configured with one of several mounting options for the system enclosure. The AP200 system enclosure is similar to the Campbell Scientific ENC16/18 enclosure. The same mounting options are available and outlined below:

- Triangular tower (UT10, UT20, or UT30)
- Tripod mast (1.5 in to 1.9 in diameter)
- Tripod leg (CM106 or CM106K tripod only)
- Large pole (4.0 in to 10.0 in diameter)
- No mounting bracket

Consult the *ENC10/12, ENC12/14, ENC14/16, ENC16/18 Instruction Manual*, available at www.campbellsci.com, for details on mounting bracket options.

4.1.3 Common Accessories

Additional accessories are required to conduct sampling with the AP200. Some of the most common accessories are described here.

Tubing for Sampling: A sample tube must be used to bring the air sample from each intake assembly to the AP200 system enclosure. Normally bulk tubing is cut to length and installed on site. Campbell Scientific pn 15702 or its equivalent is recommended. This tubing has a 0.25-in outer diameter to fit the Swagelok® fittings on the intake assemblies and the system enclosure. The tubing has an aluminum core to minimize diffusion through the tubing wall and

a UV-resistant, black, high-density polyethylene jacket. Maximum tubing length available is a 500-ft roll.

Intake Heater Cabling: The intake assemblies have a small heater in the rain diverter to prevent condensation. For normal applications, bulk cable is cut to length and installed on site to provide power to the intake assemblies. Heater cables may be daisy-chained from one intake assembly to the next. Campbell Scientific pn 9922 cable or its equivalent is recommended for this connection. This cable consists of a twisted red/black pair of wire gauge (AWG) 20 within a rugged Santoprene™ jacket.

System Power Cable: The AP200 requires a cable to connect it to the user's battery or other power source. The same cable may be used for the system power as for the heaters (pn 9922) if the length is short (less than 3 m, or 10 ft). The AP200 requires a current from 1.0 A to 3.0 A, which will cause a voltage drop in the power cable of 0.2 V to 0.6 V for a 10-ft length of pn 9922 cable. The corresponding power loss is 0.2 W to 1.8 W. For most applications, the preferred power cable is CABLEPCBL-L. This cable consists of a twisted red/black pair of wire gauge (AWG) 16 within a rugged Santoprene™ jacket. It is cut to the specified length and the end finished for easy installation. The voltage and power losses will be a factor of 2.5 smaller than for the pn 9922 cable. If the power cable must be longer than 8 m (25 ft), contact Campbell Scientific.

AC/DC Power Adapter Kit: A power adapter kit can be configured within the AP200 system enclosure to allow the AP200 to be powered from AC mains power. The AC/DC Power Adapter Kit (pn 28549) is shown in FIGURE 4-8 and instructions for installing the adapter kit are given in Appendix G, *AC/DC Adapter Kit*.



FIGURE 4-8. AC/DC power adapter kit installed in AP200

CF Card: The AP200 stores data on a CompactFlash® memory card. There are two types of CF cards available today: Industrial Grade and Standard or Commercial Grade. Industrial Grade PC/CF cards are certified to a higher standard in that they are designed to operate over a wider temperature range, offer better vibration and shock resistance, and have faster read/write times than their commercial counterparts. Campbell Scientific recommends the use of industrial-grade cards, such as the CFMC2G (FIGURE 4-6) available from

Campbell Scientific. For more details about this card, see *Application Note 3SM-F, CF Card Information*, available from www.campbellsci.com.

USB Memory Card Reader/Writer: The 17752 USB memory card reader/writer, shown in FIGURE 4-9, is a single-slot, high-speed reader/writer that allows a computer to read a memory card. When used with Campbell Scientific equipment, the 17752 typically reads data stored on CompactFlash[®] cards, but it can read many different types of memory cards. The 17752 connects to the computer's USB port.



FIGURE 4-9. 17752 USB memory card reader/writer

Temperature Probes: The AP200 system can measure a temperature profile at up to eight levels, using 107-L temperature probes. The 107 is a rugged, accurate probe that measures air temperature from -35 to +50 °C. The “-L” denotes that the cable length is specified at the time of order.

Radiation Shield: Each 107-L temperature probe is normally mounted with a 41303-5A radiation shield. The 41303-5A is a naturally aspirated, six-plate radiation shield. Its louvered construction allows air to pass freely through the shield, serving to keep the probe at or near ambient temperature. The shield's white color reflects solar radiation.

The temperature probe with its accompanying radiation shield is shown in FIGURE 4-10.



FIGURE 4-10. 107-L temperature probe mounted with radiation shield

4.1.4 Other Accessories

Portable Keyboard: The CR1000KD, shown in FIGURE 4-11, is a portable keyboard and display screen for the CR1000 datalogger. The CR1000KD can check the datalogger's status, display or plot sensor readings and stored values, and allows the user to enter numeric data. It is similar to the hard-mounted keyboard/display option for the AP200, but the CR1000KD may be carried from station to station and is useful when multiple AP200s are being maintained.



FIGURE 4-11. CR1000KD handheld keyboard/display

4.1.5 Support Software

There are several software products available from Campbell Scientific to allow the user to connect a PC to the AP200's datalogger.

PC200W: *PC200W* is a free, starter software package that provides basic tools (clock set, program download, monitor data, retrieve data, etc.). The *PC200W* supports direct connections between PC and datalogger but has no telecommunications or scheduled data-collection support.

PC400: *PC400* is a mid-level software package that supports a variety of telecommunication options, manual data collection, data display, and includes a full-featured CRBasic program editor. *PC400* does not support combined communication options (for example, phone-to-RF), PakBus[®] routing, or scheduled data collection.

LoggerNet: *LoggerNet* is a full-featured software package that supports programming, communication, and data collection and display. *LoggerNet* consists of a server application and several client applications integrated into a single product. This package is recommended for applications that require telecommunications support or scheduled data retrieval, or for large datalogger networks.

LoggerLink Mobile Apps: The LoggerLink Mobile Apps allows an iOS or Android device to communicate with an IP-enabled datalogger such as the

CR1000 in the AP200. The apps support field maintenance tasks such as viewing and collecting data, setting the clock, and downloading programs.

4.1.6 Replacement Parts

Syringe Filter: Intake assemblies shipped after August 2013 use a syringe filter with Luer lock connections. The filter is an in-line 2.5-cm (1.0-in) diameter, PTFE membrane filter (FIGURE 4-12) of 3-micron pore size. It is used to replace dirty filter elements in the AP200 intake assembly and is available as pn 29998.



FIGURE 4-12. Syringe filter of current AP200 intake assembly

Disk Filter: Intake assemblies shipped prior to August 2013 used a different filter, pn 27809. This filter is a 2.5-cm (1.0-in) diameter, sintered stainless steel disk filter (FIGURE 4-13) of 10-micron pore size. It is used to replace dirty filter elements in the AP200 intake assembly.

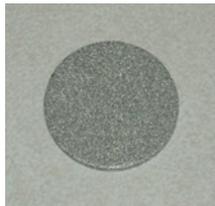


FIGURE 4-13. Disk filter of early AP200 intake assembly

Silica Desiccant Bags: The 4905 Single 4-unit Silica Desiccant Bag (FIGURE 4-14) is used to desiccate the AP200 system enclosure and should be periodically replaced. The 4905 can be purchased in quantities of 20 as pn 6714.



FIGURE 4-14. Single desiccant pack

Humidity Indicator Card: The replacement humidity indicator (FIGURE 4-15) card is pn 28878.



FIGURE 4-15. Humidity indicator card

Diaphragm Pump: The pump module for the AP200 includes a small double-head diaphragm pump with a brushless DC motor. The pump includes a speed-control input and a tachometer to measure actual pumping speed. It is mounted in an insulated, temperature-controlled box inside the AP200 system enclosure. If the pump fails, the replacement pump (FIGURE 4-16) is available as pn 33241. See Appendix J, *AP200 Pump Replacement*, for instructions on replacing the pump. The part includes the connector for easy installation.

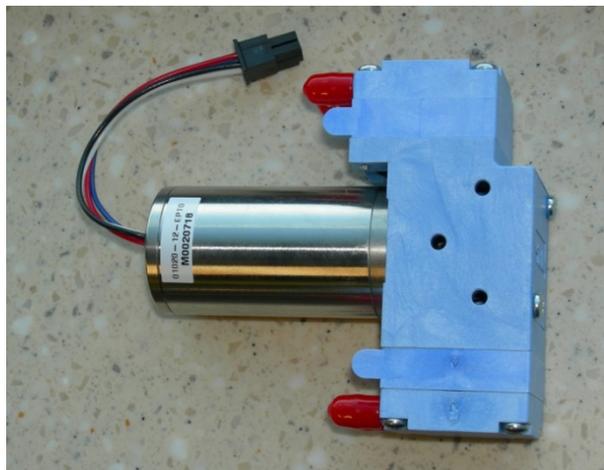


FIGURE 4-16. Diaphragm pump used in AP200

4.2 Theory of Operation

The AP200 system measures CO₂ and H₂O concentrations at multiple locations by pulling a continuous sample flow from each of several (four to eight) intake assemblies. Solenoid valves direct sample flow from one intake assembly at a time, through a CO₂/H₂O IRGA. A CR1000 datalogger records data, selects valves, adjusts pumping speed to control system pressure, and controls the

temperatures of the pump and valve manifold. FIGURE 4-17 is a plumbing diagram showing the various parts of the AP200 system connected. Details for each part of the system are given in this section.

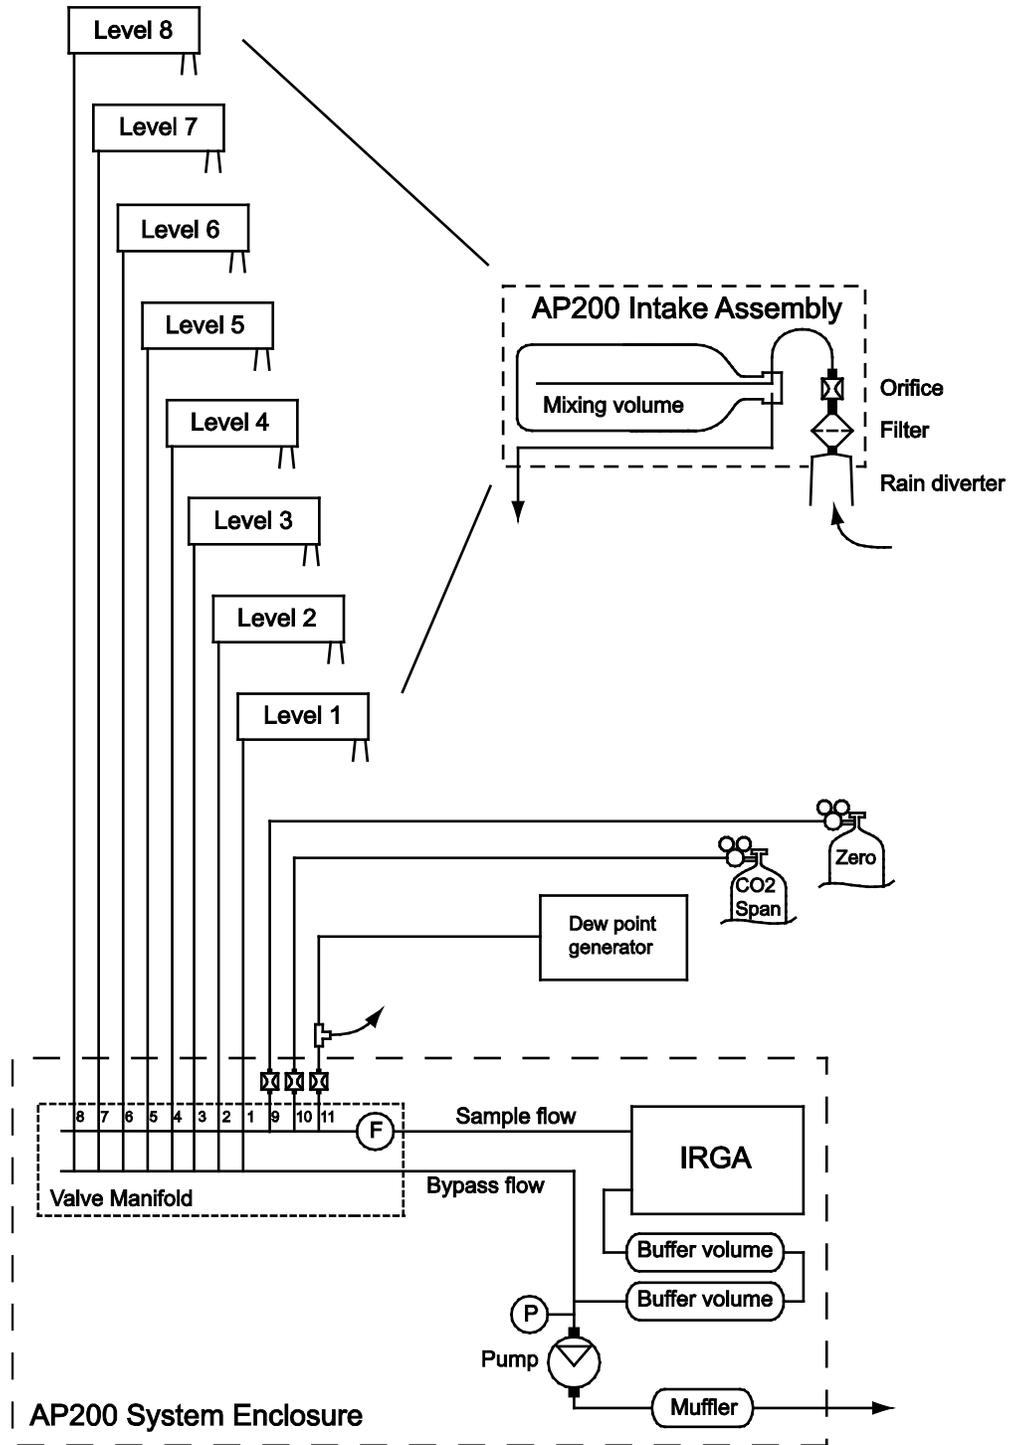


FIGURE 4-17. Plumbing diagram of AP200 system

4.2.1 Intake Assemblies

The AP200 intake assembly (pn 27693) includes a heated rain diverter, an inline filter, an orifice, and a mixing volume on a common mounting bracket with rain cover, shown opened in FIGURE 4-18. The inline filter element, pn 29998, is a 2.5-cm (1.0-in) diameter, PTFE membrane with a 3-micron pore size. It removes particulates from the air sample that could clog the orifice or valve.

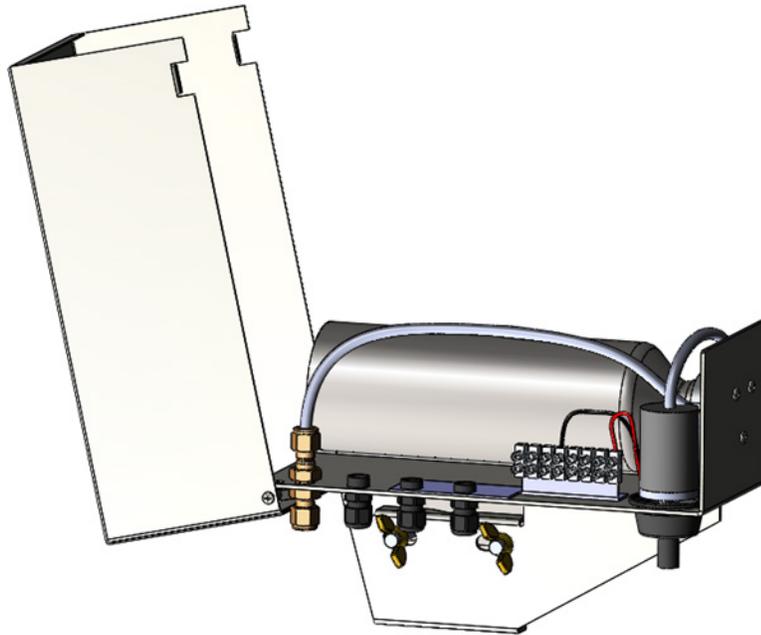


FIGURE 4-18. AP200 intake assembly shown open

The orifice has a diameter of 0.18 mm (0.007 in) to restrict flow to a maximum of approximately 247 standard ml•min⁻¹ at sea level. The flow will be reduced at higher elevations due to the lower atmospheric pressure. The nominal ambient pressure as a function of elevation is shown in FIGURE 4-19.

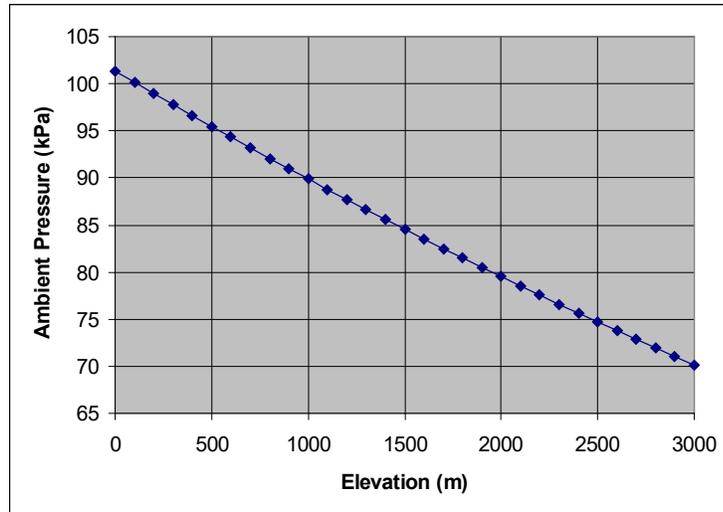


FIGURE 4-19. Nominal ambient pressure as related to increasing elevation

FIGURE 4-20 shows the nominal sample flow as a function of ambient pressure, assuming a 35-kPa pressure drop across the orifice.

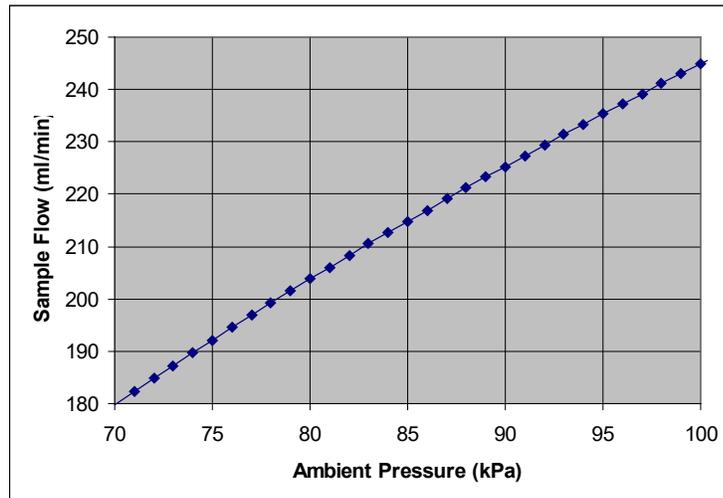


FIGURE 4-20. Nominal sample flow rate as related to increasing ambient pressure

Taken together, these two graphs show that the nominal flow varies from 247 ml/min at sea level to 180 ml/min at 3000 m. The flow rate is reported in public variable **sample_flow**. Some variation in flow (approximately 10%) is to be expected due to variation in the actual size of the orifices and in the calibration of the flow sensor. For example, at an elevation of 1000 m, the nominal ambient pressure is 90 kPa, which gives a nominal flow of 225 ml/min. The normal expected range for the flow would be from ~200 to ~250 ml/min.

The flow will also vary with ambient temperature due to the corresponding change in air density. Higher-temperature air has lower density, which will have lower flow (approximately 2% lower flow for a 10 °C temperature change).

The sample flow will decrease over time as particulates clog the filters. Eventually, the flow will be reduced to the extent that it will degrade the equilibration time after an intake is selected. As a general guideline, the filters should be replaced when the flow decreases by 25%. The filters will normally last a few months, but will require more frequent changes in dirty conditions.

The intake assembly has been designed with two separate elements intended to prevent condensation. First, the rain diverter has a small heater (0.25 W at 12 Vdc) to warm the air sample to approximately 10 °C above ambient temperature before reaching the filter and orifice. This prevents condensation on surfaces upstream of the orifice. Second, the flow path downstream of the orifice is kept at reduced pressure (typically 35 kPa below ambient pressure) to prevent condensation.

The intake assembly includes a mixing volume to dampen fluctuations in the CO₂ and H₂O concentrations. Assuming the nominal dependence of pressure and flow on elevation, and a 35-kPa pressure drop at the orifice, the mixing volume residence time will vary from 2.0 min at sea level to 1.5 min at 3000 m. This residence time is similar to the time to cycle through all of the intakes (1 to 2 min, depending on the number of intakes used). This ensures that a transient change in atmospheric CO₂ or H₂O concentration will be measured by each of the intakes, regardless of when it occurs during the valve-switching cycle.

4.2.2 Valve Manifold

The valve manifold is mounted on the bottom of the AP200 system enclosure. It has LEDs to show which valve is active and the state of the heater and fan. It has stainless steel tubes that connect the manifold to Swagelok® feedthrough fittings on the bottom of the enclosure as shown in FIGURE 4-21.



FIGURE 4-21. Valve module and Swagelok® feedthrough fittings on bottom of AP200 enclosure

The valve manifold has eleven inlets (eight for air samples and three for zero/span) and two outlets (sample and bypass). Each air sample inlet has a three-way solenoid valve that connects it to one of the two outlets. This valve connects its corresponding inlet to the bypass outlet when it is off and to the sample outlet when it is energized. The sample outlet connects to the IRGA and the bypass outlet connects directly to the pump. Therefore, the sample inlets will have a continuous flow, regardless of which inlet is sampled by the IRGA. This continuous flow stores an air-sample history in the intake assembly mixing volumes, keeps the mixing volumes and sample tubes at low pressure to prevent condensation, and minimizes flow and pressure transients caused by valve switching.

The zero/span inlets are not bypassed, thereby allowing flow only when they are selected. These inlets have flow restriction tubes connecting the bulkhead fittings to the valve manifold to set the flow. These tubes have the same outer diameter (0.062 in) as the ones for the air sample inlets, but they have a smaller inner diameter (0.015 in, compared to 0.040 in). This provides a flow restriction similar to the orifices in the AP200 intake assemblies. The flow for the zero and CO₂ span cylinders is affected by the pressure regulator setting.

The valve manifold has a mass flow sensor on the sample outlet. This sensor's measurements are reported in public variable **sample_flow**.

The valve manifold temperature is reported in public variable **valve_tmpr**. The operating range of the valves is 4 to 49 °C. If the valve temperature is outside this range, the AP200 will disable the valves and pump.

The valve module has a heater (8 W) that turns on if the valve temperature falls below 5 °C. If the AP200 is started at cold temperature it may take up to 20 minutes to warm the valve module (from -30 to +4 °C). When it reaches 5 °C the heater will cycle on/off as needed to maintain this temperature. The fraction of time the valve heater is on is reported in the output tables (**IntAvg**, **CalAvg**, and **SiteAvg**) as **valve_heat_Avg**. This will typically increase from zero at 0 °C ambient temperature to 0.5 (4 W average power) at -30 °C.

The valve module has a fan (0.7 W) that turns on if the valve temperature rises above 45 °C. The fan will stay on until the valve temperature falls below 43 °C. The fraction of time the valve fan is on is reported in the output tables (**IntAvg**, **CalAvg**, and **SiteAvg**) as **valve_fan_Avg**. This will typically increase from zero at 35 °C ambient temperature to 1.0 (0.7 W average power) at 45 °C.

4.2.3 Pump Module

The AP200 pump module is mounted on the left side of the AP200 system enclosure as shown in [FIGURE 4-22](#).



FIGURE 4-22. Pump module of AP200 system

The AP200 pump module pulls air through the system and exhausts it through the **Exhaust** fitting on the bottom of the system enclosure. It uses a small double-head diaphragm pump with a brushless DC motor. This pump includes a speed control input and a tachometer to measure the actual pumping speed. It is mounted in an insulated, temperature-controlled box inside the AP200 system enclosure. The following sections describe the monitored pump operating parameters.

Pump Inlet Pressure: The measured inlet pressure of the pump is reported in public variable **pump_press**. The AP200 sets the value of public variable **pump_control** to a value between 0 (off) and 1 (full speed) to adjust the pump's speed as needed to match the measured pressure to the setpoint pressure **PUMP_P_SETPT**. **PUMP_P_SETPT** is a system configuration variable (see Section 5.4.1, *System Configuration Variables*). This pressure setting affects the power required for the pump (lower pressure requires more power), the possibility of water condensing in the tubing (lower pressure helps to prevent condensation), and the flow rate (lower pressure will increase the flow rate). The pump can achieve a maximum of approximately 60 kPa pressure drop from ambient pressure at zero flow. The recommended setting for the pump is 35 kPa below ambient pressure.

The pump module includes two buffer volumes to dampen the pressure fluctuations from the pump. The sample flow from the IRGA flows through these volumes in series on the way to the pump. The bypass flow (from non-selected inlets) connects directly to the pump.

Pump Speed: The measured pumping speed is reported in public variable **pump_speed**. This is the rotational speed of the pump, given in Hz. The pumping speed will typically be 25 Hz to 40 Hz. The actual value is not critical, however, as long as the pressure can be maintained at the setpoint.

Pump Temperature: The temperature of the pump module is reported in public variable **pump_tmpr**. The operating range of the pump is 0 to 55 °C. If the pump temperature is outside this range, the AP200 will disable the pump.

The pump module has a heater (8 W) that turns on if the pump temperature falls below 2 °C. If the AP200 is started at cold temperature, it may take up to 50 minutes to warm the pump module (from –30 to 0 °C). When it reaches 2 °C the heater will cycle on/off as needed to maintain this temperature. The fraction of time the pump heater is on is reported in the output tables (**IntAvg**, **CalAvg**, and **SiteAvg**) as **pump_heat_Avg**. Once the pump is warmed up and starts running, it will normally keep itself warm without additional heat to approximately –30 °C ambient.

The pump module has a fan (0.7 W) that turns on if the pump temperature rises above 45 °C. The fan will stay on until the pump temperature falls below 40 °C. The fraction of time the pump fan is on is reported in the output tables (**IntAvg**, **CalAvg**, and **SiteAvg**) as **pump_fan_Avg**. This will typically increase from zero at 15 °C ambient temperature to 1.0 (0.7 W average power) at 35 °C.

The outlet of the pump connects to a small volume to reduce noise, and then to the **Exhaust** fitting on the bottom of the system enclosure. This fitting has a screen to prevent insects or debris from entering when the pump is off. If exhausting the air samples at this location is a problem (for example, if it is close enough to an inlet to affect its measurement), this screen may be removed and a tube may be attached to divert the pump exhaust to another location. The screen may be attached to the end of the tube with a Swagelok® union. In most cases the screen may simply be left in place.

4.3 Specifications

4.3.1 CO₂/H₂O Analyzer

CO₂ and H₂O are measured with an LI-850 IRGA. See the LI-850 manual (available at www.licor.com) for specifications.

4.3.2 System Enclosure

Dimensions:	52.1 cm x 44.5 cm x 29.7 cm (20.5 in x 17.5 in x 11.7 in)
Weight	
AP200 base model:	15.9 kg (35.0 lb)
Options	
IRGA:	1.0 kg (2.3 lb)
CR100KD:	0.3 kg (0.7 lb)
CFM100/NL115:	0.2 kg (0.4 lb)
Operating Temperature:	–30 to 45 °C
Power Requirement	
Voltage:	10 Vdc to 16 Vdc
Power	
Maximum (cold start up):	3.75 A at 12 V dc (45.0 W)

Average power varies from 14 W above 35 °C to 24 W at –30 °C as shown in FIGURE 4-23. This includes 2.0 W for the intake heaters (8 intake assemblies at 0.25 W each).

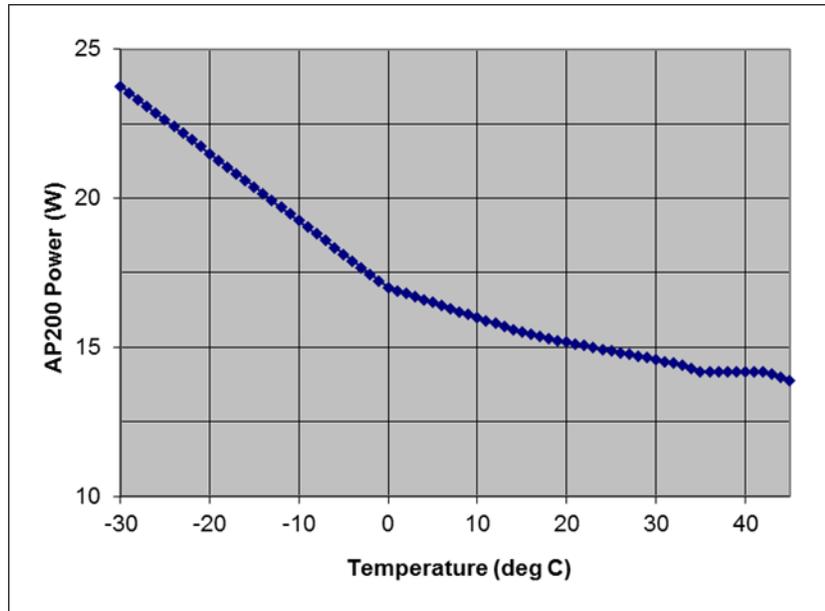


FIGURE 4-23. Average power consumption relative to temperature

Pump Module

Pump type:	Dual-head diaphragm pump with a brushless DC motor
Mounting:	Mounted in an insulated, temperature-controlled box inside system enclosure
Control:	Pumping speed is automatically controlled to maintain the pump inlet pressure at the set point
Maximum pumping speed:	9.0 liters per minute (LPM)
Pressure sensor range:	15.0 kPa to 115.0 kPa
Heater:	8.0 W, turns on/off at 2 °C
Warm-up time:	Approximately 50 minutes from –30 to 2 °C
Fan:	0.7 W (turns on at 45 °C and off at 40 °C)

Valve Manifold

Mounting:	Mounted inside system enclosure
Inlets:	Eight air sample inlets plus one inlet for zero, one inlet for CO ₂ span, and one inlet for H ₂ O span
Connections:	0.25-in Swagelok®
Mass Flow Sensor:	0 to 1.0 standard liters per minute (SLPM)
Heater:	8.0 W, turns on/off at 5 °C
Warm-up time:	Approximately 20 minutes from –30 to 4 °C
Fan:	0.7 W; turns on at 45 °C and off at 43 °C

4.3.3 Intake Assembly

Dimensions:	27.9 cm x 12.5 cm x 19.0 cm (11.0 in x 5.0 in x 7.5 in)
Weight:	1.4 kg (3.1 lb)
Filter:	1.0 in diameter, inline PTFE membrane filter, 3 micron pore size, CSI pn 29998
Orifice:	0.007-in inside diameter
Heater:	560 ohms (0.25 W at 12Vdc)
Mixing volume:	750 ml
Sample connection:	0.25-in Swagelok [®]
Heater cable entry seals	
Number of connections:	3 (one in, and up to two out)
Cable diameter:	2.8 mm to 6.6 mm (0.11 in to 0.26 in)
Heater cable screw terminals	
Wire diameter:	26 to 12 AWG
Wire stripping length:	5.0 mm (0.2 in)
Screw tightening torque:	0.4 Newton meter (N•m)

5. Installation

The following tools are required to install the AP200 system in the field. Additional tools may be required for a user-supplied tripod or tower.

- 9/16-in open-end wrench
- Adjustable wrench
- Tubing cutter (included with AP200)
- Small, flat-tip screwdriver (included with AP200)
- Wire stripping tool

5.1 Mounting

5.1.1 Support Structure

The AP200 system has two types of components that must be mounted to a support structure: the intake assemblies and the AP200 system enclosure. The support structure itself is not included in the AP200 so that it can be tailored to specific needs, but several options are available. Contact a Campbell Scientific application engineer for more information on site-specific mounting options. The following installation notes show a typical application using a UT30 tower.

The AP200 intake assemblies are designed to mount on a vertical pipe of 1.3-cm to 5.1-cm (0.5-in to 2.0-in) diameter. They should be mounted at the positions where the air is to be sampled.

The AP200 system enclosure should be mounted where it can be accessed easily to retrieve data from the CF cards on the datalogger. The AP200 can be configured with one of these mounting options, similar to the standard ENC16/18 enclosure:

- Triangular tower (UT10, UT20, or UT30)
- Tripod mast (1.5-in to 1.9-in diameter)
- Tripod leg (CM106 or CM106K tripod only)
- Large pole (4.0-in to 10.0-in diameter)
- No mounting bracket

Consult the *ENC10/12, ENC12/14, ENC14/16, ENC16/18 Instruction Manual*, available at www.campbellsci.com, for details on mounting bracket options.

5.1.2 AP200 Enclosure

Mount the AP200 system enclosure where it can be accessed easily to retrieve data from the CF cards on the datalogger. The AP200 system enclosure is similar to the ENC16/18 enclosure, and it has the same mounting options available. Consult the *ENC10/12, ENC12/14, ENC14/16, ENC16/18 Instruction Manual*, available at www.campbellsci.com, for mounting details. Typical installation of an AP200 system enclosure on a UT30 tower is shown in FIGURE 5-1.



FIGURE 5-1. Installation (showing mounting hardware) of AP200 system enclosure on UT30 tower

Open the sealed bag containing the desiccant packs and humidity card. Place two of the desiccant packs and the humidity indicator card in the mesh pocket in the enclosure door to desiccate the inside of the enclosure. Reseal the remaining two desiccant packs in the bag to use later.

5.1.3 Intake Assemblies

The intake assemblies are mounted at the desired air sampling positions. They can be mounted on vertical pipes of 1.3-cm (0.5-in) to 5.1-cm (2.0-in) diameter. The orientation of the intake assembly mounting clip must be reversed to accommodate this range of diameters. For mounting the intake assembly on smaller pipes, orient the mounting clips with their notches toward the pipe, as shown in FIGURE 5-2. For larger pipes, orient the mounting clips with their notches away from the pipe, as shown in FIGURE 5-3.

NOTE

Orienting the mounting clip with its notch against the mounting pipe will help to prevent rotation of the intake assembly, which can happen for small-diameter pipes. For larger pipe diameters, greater than approximately 3.9 cm (1.5 in), it may become difficult to install the intake assembly because of the length of the bolts. Reversing the clip allows it to fit on a larger-diameter pipe.

In some mounting situations, it may be easier to access the wing nuts if they are on the other side.

Loosen the wing nuts but do not remove them completely to avoid the risk of dropping them. Place the assembly against the vertical support, swing the bracket around the back of the vertical support, slide the bolt into the slot and hand tighten the wing nuts. A typical installation of an AP200 intake assembly on pipes of differing diameters is shown in FIGURE 5-4.

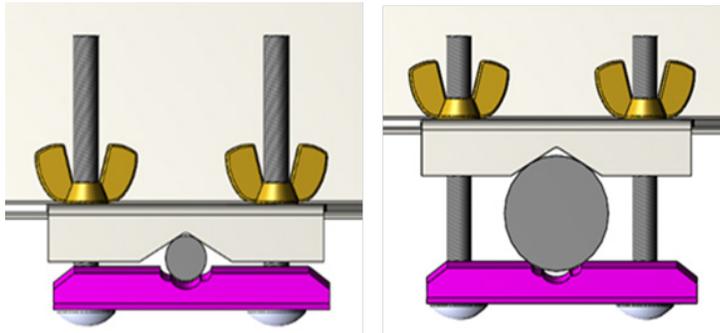


FIGURE 5-2. Mounting clip orientation for pipe diameters between 1.3 and 3.8 cm

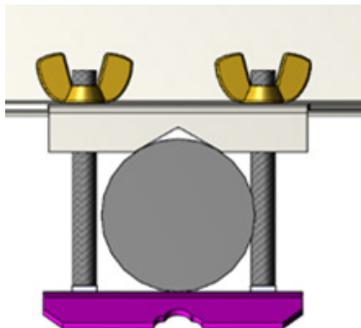


FIGURE 5-3. Mounting clip orientation for pipe diameters between 3.9 and 5.1 cm

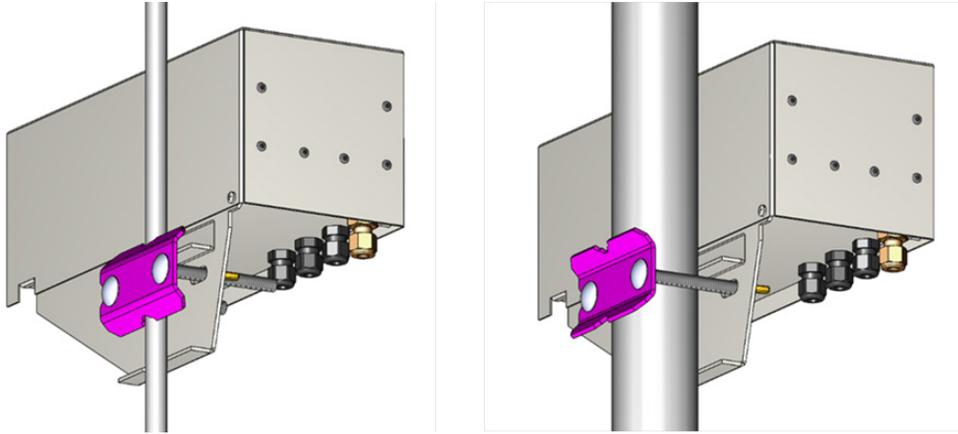


FIGURE 5-4. Installation of AP200 assembly on a small-diameter pipe (left) and large-diameter pipe (right)

5.2 Plumbing

5.2.1 Profile Sample Tubes

A sample tube must be used to bring the air sample from each intake assembly to the AP200 system enclosure. Campbell Scientific pn 15702 or equivalent is recommended. This tubing has an aluminum layer to minimize diffusion through the wall of the tube. See Appendix H, *Swagelok® Fittings*, for important information.

The AP200 has eleven inlets, labeled **1** through **8**, **Zero**, **CO₂ Span**, and **H₂O Span**, and one outlet labeled **Exhaust**. All connections are 0.25-in Swagelok® fittings mounted on the bottom of the enclosure, as shown in FIGURE 5-5.

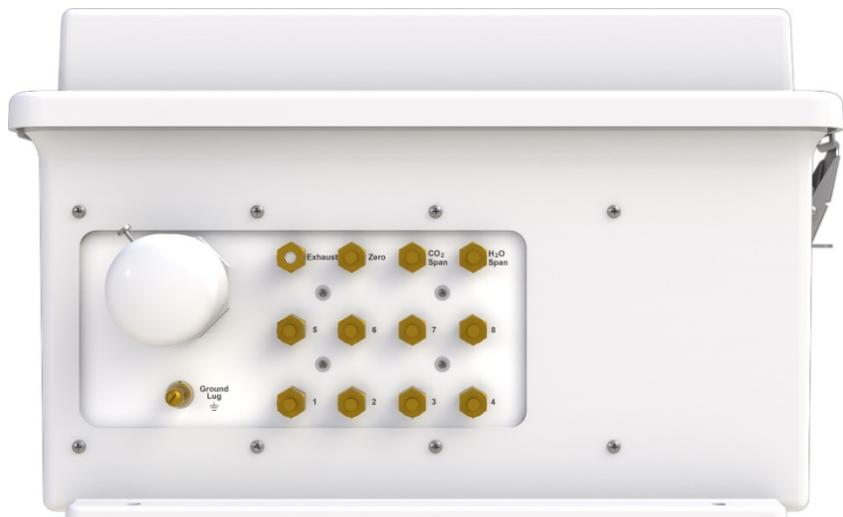


FIGURE 5-5. Tubing connections on bottom of AP200 enclosure

NOTE

If the AP200 system enclosure is mounted low to the ground, it may be difficult to read the label on the bottom of the enclosure. For convenience, the inlet connections are also labeled on the inside of the enclosure as shown in FIGURE 5-6.

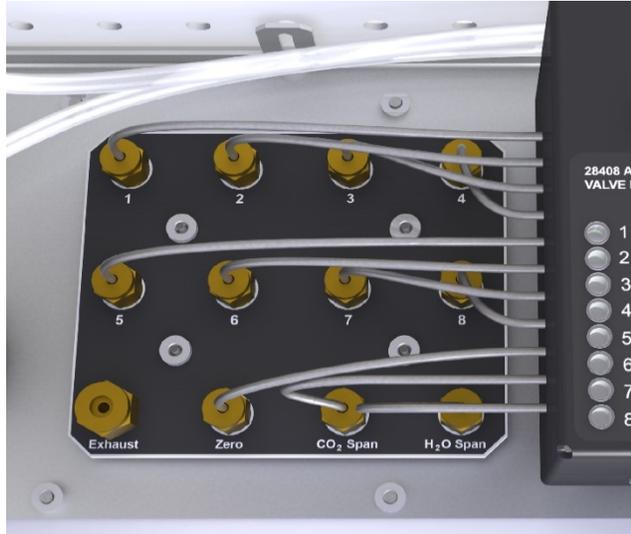


FIGURE 5-6. Labeled inlet connections inside enclosure

Connect the lowest intake assembly to inlet **1** on the AP200 system enclosure, the next intake assembly to inlet **2**, and so forth. Connecting the tubes in this order (shortest to longest) will minimize the time skew between intake assemblies. If using fewer than eight intake assemblies, they must be connected to the AP200 system enclosure inlets in order, starting with **1**. Plug unused inlets using Swagelok® plugs (pn 15891) that are included with the AP200.

FIGURE 5-7 shows the tubing connections from the intake assemblies to the system enclosure.

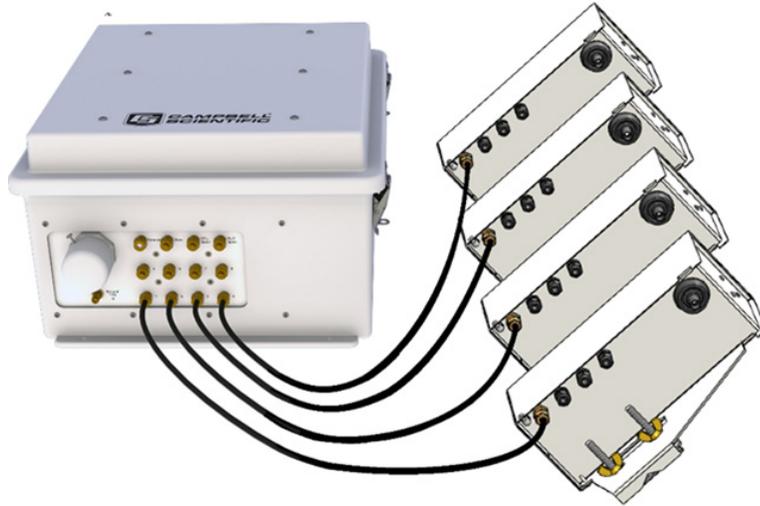


FIGURE 5-7. Tubing connections from four intake assemblies connected to inlets 1 – 4

5.2.2 Zero and CO₂ Span

The AP200 can perform automated zero (CO₂ and H₂O) and CO₂ span of the IRGA. This requires the user to supply cylinders of zero air and CO₂ span gas, with appropriate regulators.

NOTE

Use high-quality gases for the zero and CO₂ span. The zero gas must be free of significant water vapor and CO₂. The CO₂ span gas should have a well-known concentration of CO₂ balanced in air (not nitrogen).

Install these cylinders in close proximity to the AP200 system enclosure. Each cylinder must have a pressure regulator to control the outlet pressure at 0 psig and must have a 0.25-in Swagelok[®] fitting on the outlet. Connect these fittings to the valve module inlets using 0.25-in OD tubing, such as pn 15702. Minimize the length of these tubes to reduce the equilibration time after the zero or CO₂ span cylinder is selected. FIGURE 5-8 illustrates this configuration. Refer to Appendix H, *Swagelok[®] Fittings*, for information on installing and replacing Swagelok[®] fittings. For convenience, Campbell Scientific can supply pre-swaged tube assemblies (pn 21823-L) for this purpose.

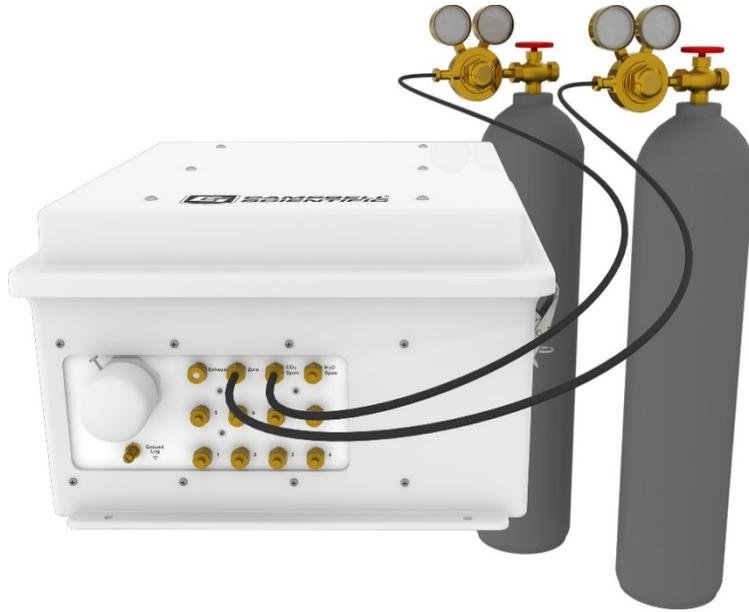


FIGURE 5-8. AP200 system enclosure configured with cylinders of zero air and CO₂

NOTE Flow meters and needle valves are not needed because the AP200 zero and span inlets have flow restriction inside the system enclosure to set the flow rate.

Make sure there are no leaks in the regulators or the connections to the valve module. For automatic operation, the tank shutoff valves are left continuously open. A plumbing leak could cause the contents of the tank to be lost.

When inlets are not in use, replace the Swagelok[®] plug to keep the system clean.

Open the shut-off valves on the cylinders and set the pressure regulators for 0-psig delivery pressure.

NOTE If the pressure is inadvertently adjusted to high, the tube fitting may need to be slightly loosened to bleed off the excess pressure. Retighten the fitting when the proper setting is reached.

5.2.3 H₂O Span

The H₂O span can be performed only as a manual operation. Automated H₂O span is not feasible because it would require a dewpoint generator to provide the H₂O span gas all the time. The H₂O span inlet is not bypass equipped, so it will flow only when selected. This inlet can be connected to the output of a dewpoint generator using a tee at the inlet, as shown in FIGURE 5-9, to bleed off excess flow and avoid pressurizing the dewpoint generator.



FIGURE 5-9. H₂O span inlet configured for a dewpoint generator

5.3 Wiring

5.3.1 Ground Connection

The AP200 must be earth grounded. Refer to Section 7.1, *ESD Protection* in the *CR1000 Measurement and Control System Operator's Manual*, for information on earth grounding and lightning protection. All component grounds of the AP200 profile system are pre-wired at the factory to a common ground lug located at the bottom of the enclosure. Ground this lug using heavy-gauge copper wire. An AP200 grounded to the UT30 tower is shown in FIGURE 5-10.



FIGURE 5-10. AP200 earth grounded on a UT30 tower

5.3.2 Intake Heater Cables

The AP200 intake assemblies have a small heater in the rain diverter to prevent condensation. Power for these heaters is available in the AP200 system enclosure. Campbell Scientific pn 9922 cable or equivalent is recommended for connecting the intake assemblies to the system enclosure. The system is designed to daisy-chain the heater cables from one intake assembly to the next as described below and shown in FIGURE 5-16.

NOTE Make sure power is disconnected from the AP200 before connecting the heater cable.

To bring cables into the AP200 enclosure, remove the cap from the cable feedthrough by loosening the thumbscrew and twisting the cap while pulling it off. See FIGURE 5-11.



FIGURE 5-11. Cable feedthrough cap shown removed to admit cables into the system enclosure

Insert the heater cable through the feedthrough, and connect it to the DIN rail bus in the system enclosure. The red, positive wire connects to one of the terminals labeled **Intake Heater +**. Connect the black, negative wire to one of the terminals labeled **G**, as shown in FIGURE 5-12. Two connections are provided for convenience if multiple cables are to be connected (for example, if the intake assemblies are mounted on two separate towers).

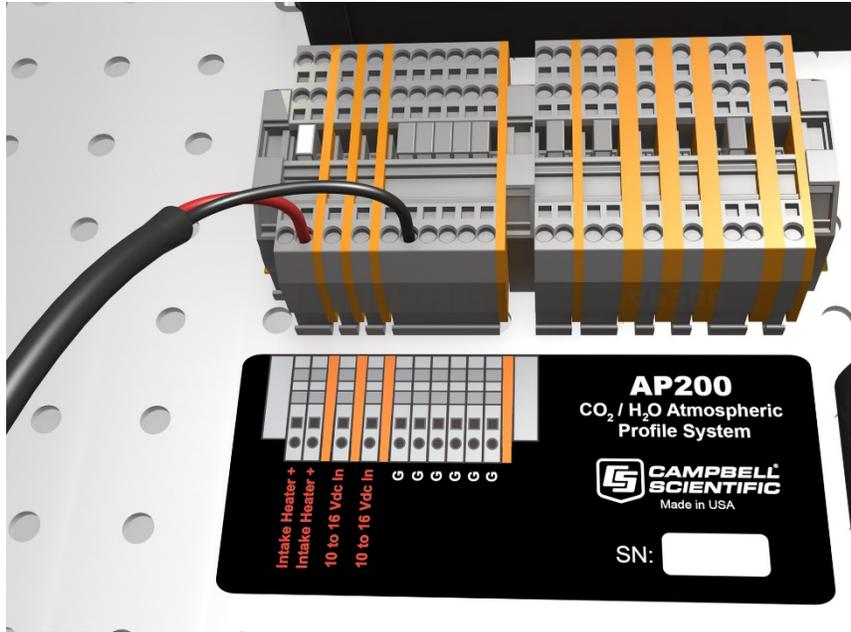


FIGURE 5-12. Proper wiring of heater cable onto DIN bus of AP200 system enclosure

NOTE

To connect a wire to the DIN rail terminal blocks of the AP200 enclosure, insert a small screwdriver into the square hole to open the spring-loaded contacts as shown in FIGURE 5-13. Insert the wire into the corresponding round hole and remove the screwdriver. Gently tug the wire to confirm it is secure.

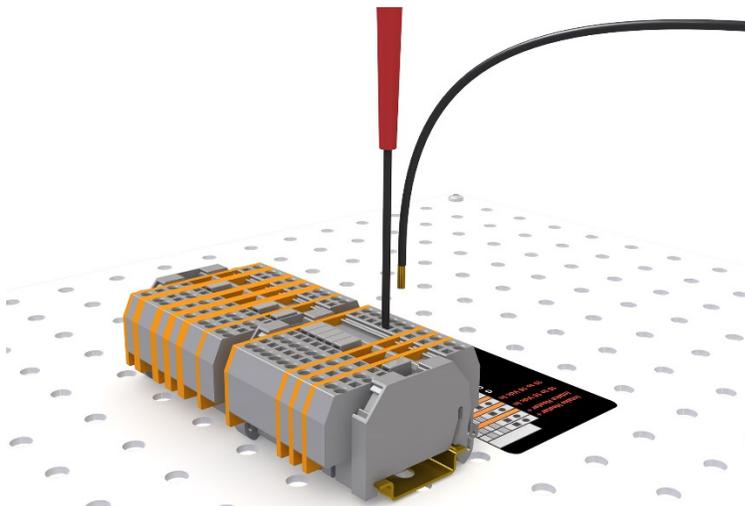


FIGURE 5-13. Use AP200 system screwdriver to open contacts for wiring heater cable

Route the heater cable to the first intake assembly and cut it to the needed length. Open the intake assembly cover by gently spreading the tabs on the lower-front corner and tilting it back. See FIGURE 5-14.

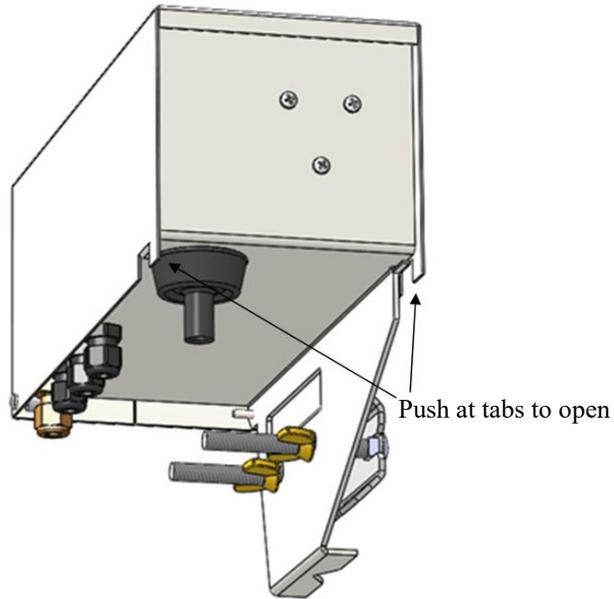


FIGURE 5-14. Tabs for opening intake assembly

Loosen the nut on one of the three cable glands (to avoid the risk of dropping the nut, do not remove it completely). Insert the cable and tighten the nut. Connect the red and black wires to the corresponding terminal blocks as shown in FIGURE 5-15.

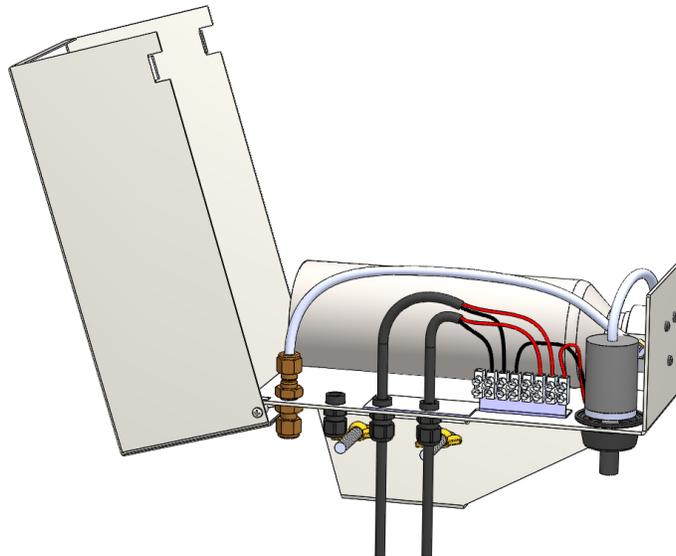


FIGURE 5-15. Wiring of heater cable on AP200 intake assembly

Insert and connect a second length of heater cable for the next intake assembly. Continue this “daisy chain” from one intake assembly to the next until all of the intake assemblies are connected as shown in FIGURE 5-16. Intake assemblies will accommodate a third heater power cable that may be used to branch off to another intake assembly. This may be useful if the intake assemblies are mounted on two or more towers.

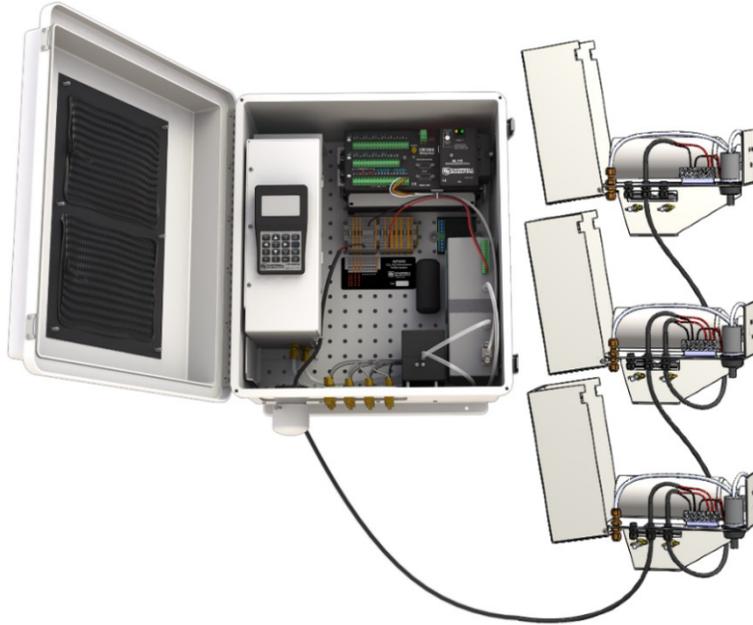


FIGURE 5-16. Three intake assemblies with heater cables daisy chained to the AP200 system enclosure

To check the intake heater wiring, temporarily disconnect the heater cable from the AP200 system enclosure and measure the resistance between the red and black wires. A hand-held digital multimeter works well for this. Each heater has a resistance of approximately 560 ohms and should be wired in parallel. The nominal resistance will be 560 divided by the number of heaters. TABLE 5-1 shows the nominal equivalent resistance for 4 through 8 intake heater wired in parallel. It also gives the acceptable range, which accounts for the 5% tolerance on the resistance of each heater. If the resistance is outside this range it is likely there is a problem with the connections or with a heater.

NOTE

The resistance of the cable is small enough that it can generally be ignored.

TABLE 5-1. Equivalent Resistance for Intake Heaters Connected in Parallel		
Number Of Heaters	Nominal Resistance (ohms)	Acceptable Range (ohms)
4	140	133 to 147
5	112	106 to 118
6	93	88 to 98
7	80	76 to 84
8	70	66 to 74

5.3.3 Power

The AP200 requires a 10 Vdc to 16 Vdc power source. The average power consumption varies with ambient temperature, mostly due to the heater in the IRGA that maintains its sample cell at 50 °C. There are also heaters and fans that will cycle on and off to maintain the temperatures of the pump and the valve manifold. The maximum power consumption may briefly be as high as 45 W if the system is started at cold temperatures (below 0 °C).

CAUTION

Carefully design any DC power source to ensure uninterrupted power. Contact a Campbell Scientific application engineer for assistance if needed.

The AP200 can be damaged by pulling unfiltered air into the valve manifold. Before applying power to the AP200, make sure each inlet has a filter (such as included in the AP200 intake assemblies) or is capped.

To reduce the risk of shorting the power supply (this is especially important when using batteries), connect the power cable to the AP200 first and then connect the other end to the power source.

Insert the power cable, CABLEPCBL-L, through the feedthrough and connect it to the DIN rail bus in the system enclosure. The red, positive wire connects to one of the terminals labeled **10 to 16 Vdc In**. Connect the black, negative wire to one of the terminals labeled **G** as shown in FIGURE 5-17. Two connections are provided for convenience if multiple power sources are to be connected (for example, two batteries, or a battery and an AC/DC power adapter).

NOTE

Each of these two power connections has a diode to prevent reverse current flow. This allows two batteries to be connected safely to the AP200 even if one is fully charged and the other is discharged.

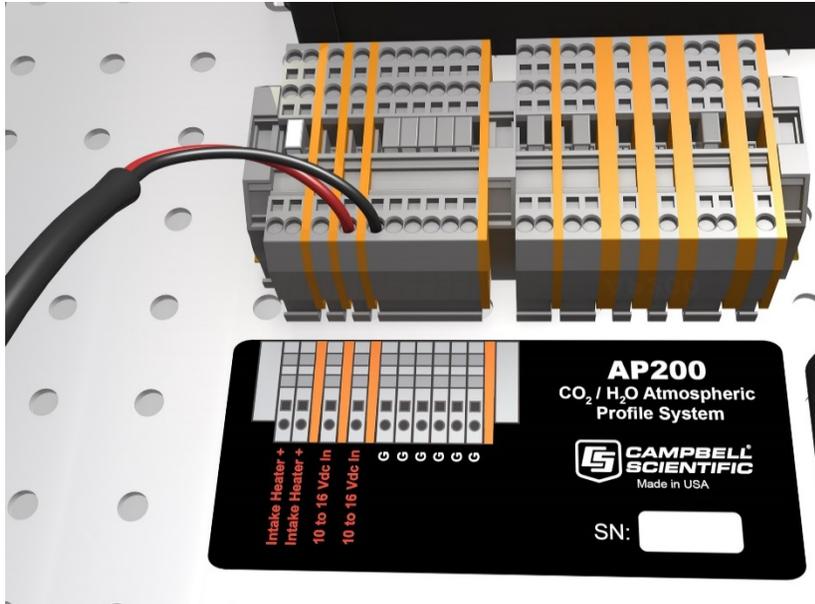


FIGURE 5-17. Proper wiring of power cable onto DIN bus of AP200 system enclosure

To relieve strain on the AP200 cables, use a cable tie to secure the cables to the cable-tie loop on the pump module as shown in FIGURE 5-18.

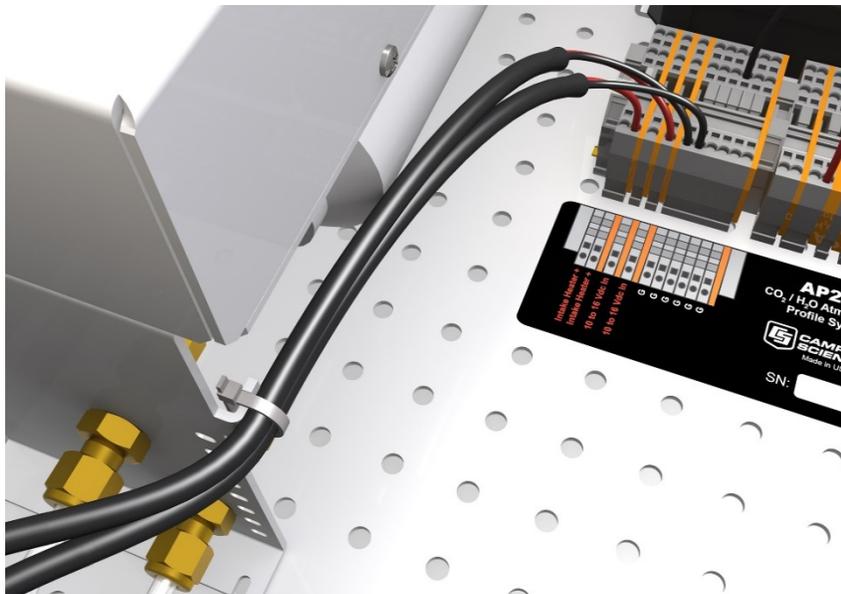


FIGURE 5-18. Power cables secured to cable tie loop on pump module of AP200 enclosure

Replace the cap on the AP200 enclosure feedthrough. Gently bend the cables back while sliding the cap on and rotating the cap to minimize the space around the cables as shown in FIGURE 5-19. Tighten the thumbscrew to secure it.

This will relieve further strain on the cable and also minimize air infiltration to extend the life of the enclosure desiccant packs.



FIGURE 5-19. Cut-away view showing proper replacement of feedthrough cap

NOTE

In very humid conditions, it may be helpful to seal the cable feedthrough with plumber's putty.

The AP200 stores energy in a capacitor to provide backup power in the event power is interrupted. The capacitor will power the datalogger for a few seconds allowing it to finish writing data to the CF card and close the file to prevent loss of data or damage to the CF card. Do not attach additional sensors or other devices that are powered from the datalogger without consulting a Campbell Scientific application engineer.

5.4 Configure the Program

The AP200 is shipped with the program AP200_vx_x.cr1 installed on the CR1000 datalogger. A copy of the program is found on the AP200 Support CD (pn 28552) or can be downloaded from www.campbellsci.com. The AP200 program uses both constants and variables to customize the behavior of the system for a particular installation. Constants are used for parameters that must be determined when the program is compiled and variables are used otherwise.

Constants are most easily modified using the CRBasic Editor, which is part of the PC400 and LoggerNet datalogger support software packages. They may also be edited with a simple text editor and uploaded to the datalogger using PC200W, which may be downloaded from www.campbellsci.com. The AP200

uses some constants as “compile switches” to define the state of the system during compilation.

Variables may be edited while the program is running using either a keyboard display or a PC connected through *PC200W*, *PC400*, or *LoggerNet*. Variables that define the operational configuration of the system are defined as system configuration variables. Any changes to these variables are automatically saved in non-volatile memory.

NOTE

A change to a system configuration variable that affects the valve switching sequence will not take effect until the sequence is started.

Other modifications to the AP200 program (for example, to measure additional sensors) are not recommended without first consulting a Campbell Scientific application engineer.

5.4.1 System Configuration Variables

Several special variables are used to configure the AP200. These variables are stored in the **sys_conf_var.dat** file, so their values will be saved and recalled if the program is recompiled. They are intended to be set when a new system is installed, but they may be edited at any time. When a system configuration variable is changed, the AP200 will write a message to the **message_log** table and save the new values in **sys_conf_var.dat**. This section gives a brief description of each of these variables and refers the reader to the appropriate section of the user manual if a lengthy discussion is required.

PRESS_AMBIENT: This is the ambient pressure, in kPa. It depends primarily on elevation (see FIGURE 4-19), but also varies slightly with barometric pressure. This variable is used to convert the dewpoint temperature measured in the IRGA sample cell **Td_cell** to dewpoint temperature at ambient pressure **Td_ambient**. It is also used during a manual H₂O span operation. There are three methods to determine the appropriate value for **PRESS_AMBIENT**.

- If nominal ambient pressure is known, simply enter the value.
- If elevation is known, determine ambient pressure from FIGURE 4-19.
- Ambient pressure can be measured by turning the AP200 pump off, waiting for the pressure to stabilize at ambient pressure, and then using the pressure measured in the IRGA (see Section 6.2.4, *Do H₂O Span*, for details).

PUMP_P_SETPT: This is the setpoint pressure (kPa) for the pump speed control algorithm. The AP200 will adjust the pumping speed to make the measured pump pressure, **pump_press**, match this value. For most applications it should be set to approximately 35 kPa below ambient pressure (see notes on variable **PRESS_AMBIENT** above). The factory default is 200, which will prevent the AP200 from working properly until **PUMP_P_SETPT** is set by the user.

LEVELS_USED: This is the number of profile levels (air sample intakes) to be sampled. It must be an integer from four to eight. If fewer than eight inlets

are used, they should be connected to the lowest-number inlets (starting with one). The default is eight.

The next five variables configure the automatic calibration (zero/span) sequence. See Section 6, *Infrared Gas Analyzer (IRGA) Zero and Span*, for details.

MEASURE_TANKS: This Boolean variable determines whether the AP200 will periodically switch between the profile sequence and the calibration (zero/span) sequence. Set this variable to **True** to periodically switch to the zero and CO₂ span cylinders (tanks). Set it to **False** to disable this feature. The default is **MEASURE_TANKS = True**.

AUTO_ZEROSPAN: This Boolean variable determines whether the AP200 will command the IRGA to perform a zero and span (True) or whether it will merely measure the zero and span cylinders (False). It is ignored if **MEASURE_TANKS** is false. The default is **AUTO_ZEROSPAN = True**.

CAL_INTERVAL: This variable determines how often (given as time in minutes) the calibration (zero/span) sequence will be run. It is ignored if **MEASURE_TANKS** is false. The minimum time is the output interval (30 min). The maximum time is 1,440 min (once per day).

CAL_TIMEOFFSET: This variable determines when the calibration (zero/span) sequence is started within the **CAL_INTERVAL** time. If **CAL_TIMEOFFSET** is set to zero, the calibration (zero/span) sequence will start at the start of the **CAL_INTERVAL**. Setting this variable to a non-zero value will delay the start of the zero/span sequence by the set number of minutes. **CAL_TIMEOFFSET** may be set to any value from zero to **CAL_INTERVAL**.

CO2_SPAN_PPM: This is the concentration of the CO₂ span tank, in ppm. If **MEASURE_TANKS** and **AUTO_ZEROSPAN** are both **TRUE**, the system will automatically span the IRGA to this value during the zero/span sequence. This value is also used during a manual CO₂ span operation. Any value may be entered for **CO2_SPAN_PPM**, but spanning the IRGA will be disabled unless the value is between 100 and 20,000. The factory default is -99 to intentionally disable setting the CO₂ span until the user enters the value for the CO₂ span tank.

The next two variables control the AP200 automatic power shutdown function. If the supply voltage drops too low, the AP200 automatically powers down as much of the system as possible. The AP200 requires 10.0 Vdc to 16.0 Vdc at the input terminals. Note that the voltage measured in the datalogger, **batt_volt**, will be approximately 0.3 V lower than the input voltage due to a reverse-polarity protection diode.

BATT_LOWLIMIT: If the supply voltage **batt_volt** falls below this value, the AP200 will set the **batt_volt_LOW** flag and shut down as much of the system as possible until the voltage recovers. **BATT_LOWLIMIT** must be 9.7 V to 15 V. The default value for **BATT_LOWLIMIT** is 9.7 V, which corresponds to 10.0 V at the input terminal. This power-down feature is to protect the battery from deep discharge cycles. The user should set **BATT_LOWLIMIT** as appropriate to protect his battery. If AC main power and an AC/DC adapter are used, the limit may be left at 9.7 V.

BATT_DEADBAND: This variable, along with **BATT_LOWLIMIT**, determine when the AP200 will restart after an automatic power shutdown. The AP200 will not restart until the supply voltage **batt_volt** reaches at least **BATT_LOWLIMIT + BATT_DEADBAND**. The purpose of the deadband (the gap between the shut-down voltage and the turn-on voltage) is to protect the AP200 from repeated power cycles when the battery voltage is very near the limit. **BATT_DEADBAND** must be zero to 10.0 V. The default is 1.0 V.

5.4.2 Compile Switches

The AP200 program defines three constants that are used as compile switches. These constants define which optional values are to be stored in the output tables.

MaxLevels: **MaxLevels** defines the maximum number of profile levels. The default is eight, but it may be set to the actual number of levels used (four to eight) to avoid null data for unused levels in the **IntAvg** output table. The number of levels measured is determined by system configuration variable **LEVELS_USED**.

SaveAll_diagnostics: If constant **SaveAll_diagnostics** is set to False (the default), the **RawData** output table will contain only those values required for normal operation. If it is set to **True**, the AP200 will save some additional diagnostic values in output table **RawData**.

N_AirTemps: Constant **N_AirTemps** determines the number of 107-L temperature sensors to measure. It may be from one to eight, or zero, which is used to disable air-temperature measurements. The default is zero. See Appendix E, *Temperature Profile*, for more details on adding a temperature profile measurement.

5.5 Starting and Stopping the Sequence

In normal operation, the AP200 will automatically cycle through the profile inlets. If configured for automatic zero/span, it will periodically run the calibration (zero/span) sequence and then return to the profile sequence. The user may stop the sequence to control the valves manually and then restart the sequence using the public variables described below. If any of the variables that control the valve sequence are edited, the sequence must be stopped and restarted before changes will be in effect. The following public variables allow the user to start and stop the sequence and to control the valves manually.

seq_ACTIVE: Reports whether the AP200 is controlling the valves (True) or not (False). If **seq_ACTIVE = False**, the valves can be controlled manually. This variable is for information only; its value cannot be directly changed by the user.

STARTsequence: Allows the user to start the sequence. Set this variable to **True** to start the automatic valve switching sequence. The AP200 will change **valve_number** to 1 and wait until it can synchronize the valve sequence to the real-time clock. This may take up to two minutes (see Appendix F, *Valve Sequence Timing*, for timing details). When the sequence is restarted, the AP200 will set **seq_ACTIVE = True** and **STARTsequence = False**.

STOPsequence: Allows the user to stop the sequence. Set this variable to **True** to stop the automatic valve switching sequence. The AP200 will

immediately set `seq_ACTIVE = False` and leave the `valve_number` in its current state.

valve_number: Controls which valve is selected. It may be 1 through 8 (profile inlets), 9 (zero), 10 (CO₂ Span), or 11 (H₂O Span). If the sequence is active (`seq_ACTIVE = True`) the AP200 controls the state of `valve_number` and the user may not change it. If the sequence is stopped (`seq_ACTIVE = False`), the user may change the value of `valve_number` to control the valves manually.

5.6 Verify Performance

After the AP200 is installed, it is important to make sure it is operating properly.

5.6.1 Quick Status Check Using a Keyboard Display

The optional, hard-mounted keyboard display or a hand-held CR1000KD provides an easy user interface to the AP200. See Appendix A, *Keyboard Display Menu*, for a listing of the AP200 keyboard display menus. See the *CR1000KD User Manual* for operating instructions. Press a key to activate the display and select the **Check Status** page:

Check Status:	
diag_AP200	
CO2	
H2O	
seq_ACTIVE	
valve_number	
sample_flow	
cell_press	

This menu page gives a quick look at the following public variables:

diag_AP200: this should be zero. If not, see Appendix B, *AP200 Diagnostics*.

CO2: this is the CO₂ concentration given in ppm. Verify that this is a reasonable value.

H2O: this is the H₂O concentration given in ppt. Verify that this is a reasonable value.

seq_ACTIVE: this should be **True**. If not, see Section 5.5, *Starting and Stopping the Sequence*.

valve_number: this is normally an integer from 1 to 8, indicating which profile level is being sampled. If the sequence is active, this number should increment approximately every 15 s (see Appendix F, *Valve Sequence Timing*, for details). It may be 9 (Zero) or 10 (CO₂ Span) if the zero/span sequence is running. The corresponding LED on the valve module should be ON.

sample_flow: The expected value for the sample flow depends on the elevation (see FIGURE 4-19 and FIGURE 4-20 for details). A significantly higher flow indicates there may be a leak, whereas a significantly lower flow indicates the filter or orifice may be plugged.

cell_press: This should be within ± 2 kPa of the pressure setpoint. See Section 4.2.3, *Pump Module*, for details.

To access other tables in the CR1000, press <ESC> to go back to the top menu and then select **System Menu**. This gives access to all of the system tables. In particular, the status table is helpful for assessing the status of the CR1000 datalogger (see the *CR1000 User Manual* for details), and the public table shows the value of each public variable as it updates in real time. See Appendix C, *Public Variables*, for details on the variables in the Public Table.

5.6.2 Checking Status Remotely

If the system is configured with an NL115 and a network connection is available, the AP200 can be checked remotely by connecting a PC via *LoggerNet* (other software is also available that provides some of the functionality of *LoggerNet* – see Section 4.1.5, *Support Software*). *LoggerNet* may also be used on-site with a serial cable connected directly to the datalogger. All of the variables listed in the on-site access can be checked in the Public table. For thorough performance verification, each of the variables in the public table can be compared to their normal values. See Appendix C, *Public Variables*, for details.

5.6.3 On-site System Checks

There are several important checks that can be done on site, during initial installation, and during routine site visits to retrieve data and maintain the system.

NL115 or CFM100: Check that the status LED is blinking red periodically, indicating that data are being written to the card. See the NL115 or CFM100 manual for details.

Sample pump: Listen to the sample pump which should be making a steady hum. A slight change in pitch is normal when switching between the calibration (zero/span) and profile sequences, but a sustained oscillation in the pitch indicates a problem. See Appendix B, *AP200 Diagnostics*, Bit 4.

Enclosure humidity: Check the humidity indicator card on the door of the AP200 system enclosure and replace the desiccant when the humidity reaches 50%. See Section 7.2, *Enclosure Desiccant*.

Zero and span cylinders: Check the cylinder and regulator outlet pressures. It is recommended to log the tank pressures at each site visit and note the trend.

6. Infrared Gas Analyzer (IRGA) Zero and Span

The IRGA should be zeroed and spanned periodically to maintain its accuracy. There are three ways to accomplish this:

1. The IRGA can be removed from the AP200 system and zeroed and spanned per the manufacturer's recommendation. See Section 7.4.1,

Installing and Removing the IRGA, for instructions on installing and removing the IRGA, and see the LI-850 IRGA user manual for details on performing the zero and span outside the AP200 system.

2. The IRGA zero and span may be performed manually without removing the IRGA from the AP200. Further details for this option are given in Section 6.2, *Manual Zero and Span*.
3. The IRGA zero and CO₂ span may be performed automatically by the AP200 system. This option can zero both CO₂ and H₂O, but it can span only CO₂. It is not practical to automatically span H₂O because of the difficulty in providing an online H₂O span gas (dewpoint generator) in the field. Further details for this option are given in Section 6.1, *Automatic Zero and Span*.

See Sections 5.2.2, *Zero and CO₂ Span*, and 5.2.3, *H₂O Span*, for details on plumbing connections to zero and span the IRGA while installed in the AP200. The following sections give details on configuring the AP200 for automatic or manual zero and span.

6.1 Automatic Zero and Span

This section describes how to configure the AP200 for periodic, automated zero (CO₂ and H₂O) and CO₂ span of the IRGA. Five public variables are used to configure the AP200 for automatic zero and span. These variables may be edited with keyboard display, either at the Configure System menu, or through the normal Public Table. They may also be edited using *LoggerNet*.

NOTE

These variables are stored in the `sys_conf_var.dat` file, so their values will be saved if the program is recompiled. See Section 5.4, *Configure the Program*, for more details.

MEASURE_TANKS: Set this variable to **True** to periodically switch to the zero and CO₂ span cylinders.

AUTO_ZEROSPAN: This variable can be set to either **True** or **False**. **True** will command the IRGA to perform the zero and span. **False** will command the IRGA to measure the cylinders but not perform the zero and span. The recommended default is to set this variable to **True**.

CAL_INTERVAL: This variable determines how often the calibration (zero/span) cylinders are measured. The recommended default is 1,440 min (once per day).

CAL_TIMEOFFSET: This variable determines when the zero/span is performed within the **CAL_INTERVAL** time. The recommended default is 720 min to start the calibration (zero/span) sequence at noon.

CO2_SPAN_PPM: Enter the concentration of the CO₂ span tank in ppm.

After these variables are set, the valve sequence must be restarted to make the changes effective. See Section 5.5, *Starting and Stopping the Sequence*, for details on starting and stopping the sequence. The program will then set its

timing variables as appropriate for the options selected (see Appendix F, *Valve Sequence Timing*, for details).

6.2 Manual Zero and Span

This section describes how to perform a manual zero and span of the IRGA. This procedure assumes the use of a keyboard display, but the process is similar when using *LoggerNet*.

The AP200 keyboard menus are designed to guide the user step by step through the manual zero/span process. Each line in a menu is either a submenu or it displays or edits a public variable. At the top-level AP200 menu, select **Manual Zero/Span**.

The **Manual Zero/Span** menu has four submenus that should be visited in the order listed.

```

Manual Zero/Span:
Check Span, Zero      >
Do Zero (CO2&H2O)    >
Do CO2 Span           >
Do H2O Span           >
seq_ACTIVE            |
valve_number          |
STARTsequenc         |
  
```

After the steps on the four submenus are completed, there are three lines to restart the valve switching sequence. The following section provides details on this procedure.

6.2.1 Check Zero and CO₂ Span

At the **Manual Zero/Span** menu, select <**Check Span, Zero**>. This menu guides the user through the steps to flow the CO₂ span and zero gases to assess the current state of the IRGA.

```

Check Span, Zero:
seq_ACTIVE            |
STOPsequence         |
valve_number          |
CO2_SPAN_PPM         |
diag_AP200           |
CO2                   |
H2O                   |
  
```

If **seq_ACTIVE** is **True**, then set **STOPsequence = True** to stop the sequence and then verify that **seq_ACTIVE** changes to **False**.

Set **valve_number** to Zero (9). Look at the LEDs on the valve module to confirm the selected valve is now active.

The **CO2_SPAN_PPM** variable displays the concentration in the CO₂ span tank.

Check the value of **diag_AP200**. If it is not zero, a problem in the AP200 system should be resolved before continuing (see Appendix B, *AP200 Diagnostics*).

Wait for the values of CO₂ and H₂O to stabilize. Normally, this takes one or two minutes.

Record the value of CO₂. This is the measured CO₂ concentration in ppm. If the zero cylinder is selected, the value should be close to zero. If the CO₂ span tank is selected, it should be close to the value of **CO2_SPAN_PPM**.


Record the value of H₂O. This is the measured H₂O concentration in ppt. The value should be close to zero for either cylinder.

Set **valve_number** to CO₂span (10) and repeat the previous steps.

Press <Esc> to return to the **Manual Zero/Span** menu.

6.2.2 Do CO₂ and H₂O Zero

At the **Manual Zero/Span** menu, select <**Do Zero (CO2&H2O)**>. This menu guides the user through the steps to flow the zero gas and to send the command to zero the IRGA.

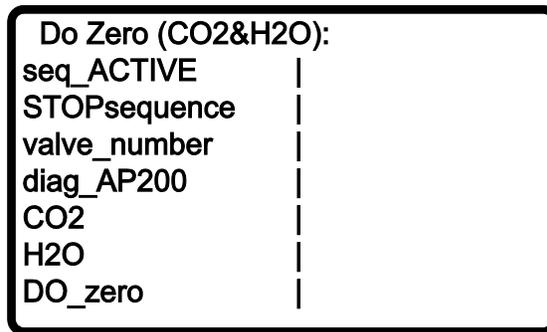

If **seq_ACTIVE** is **True**, then set **STOPsequence = True** to stop the sequence. Then verify **seq_ACTIVE** changes to **False**.

Set **valve_number** to Zero (9). Look at the LEDs on the valve module to confirm the Zero valve is now active.

Check the value of **diag_AP200**. If it is not zero, a problem in the AP200 system should be resolved before continuing (see Appendix B, *AP200 Diagnostics*).

Wait for the value of CO₂ and H₂O to stabilize. This normally takes one to two minutes.


Set **DO_zero** to **True**. The AP200 will send the commands to the IRGA to do a CO₂ zero and then an H₂O zero. While the IRGA is setting to zero, the values for CO₂ and H₂O will not be available and NAN (not a number) will be displayed. This will take approximately 20 s. When the process is complete,

CO₂ and H₂O will again be displayed. Verify that both of these values are close to zero.

Press <Esc> to return to the **Manual Zero/Span** menu.

6.2.3 Do CO₂ Span

At the **Manual Zero/Span** menu, select **Do CO₂ Span**. This menu guides the user through the steps to begin flow of the CO₂ span gas and to send the command to the IRGA to set its CO₂ span.

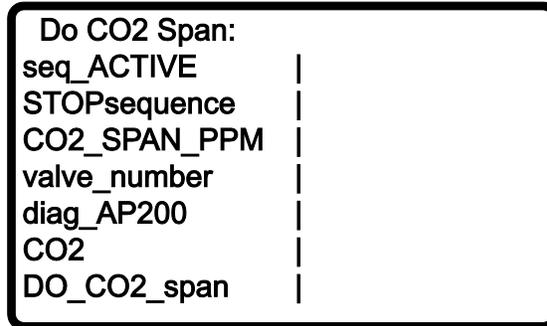

If **seq_ACTIVE** is **True**, set **STOPsequence = True** to stop the sequence. Then verify that **seq_ACTIVE** changes to **False**.

Check the value of **CO₂ SPAN_PPM**. This is the span value that will be sent to the IRGA. Ensure that the value is correct for the concentration in the CO₂ span cylinder.

Set **valve_number** to CO₂span (10). Look at the LEDs on the valve module to confirm the CO₂ span valve is now active.

Check the value of **diag_AP200**. If it is not zero, a problem in the AP200 system should be resolved before continuing (see Appendix B, *AP200 Diagnostics*).

Wait for the value of CO₂ to stabilize. This normally takes one to two minutes.

Set **DO_CO₂ span** to **True**. The AP200 will send the command to the IRGA to do a CO₂ span. While the IRGA is setting the span, the value for CO₂ will not be available and NAN will be displayed. This will take approximately 10 s. When the process is complete, CO₂ will again be displayed. Verify the value is close to the value of **CO₂ SPAN_PPM**.

Press <Esc> to return to the **Manual Zero/Span** menu.

6.2.4 Do H₂O Span

At the **Manual Zero/Span** menu, select **Do H₂O Span**. This menu guides the user through the steps to flow the H₂O span gas and to send the command to the IRGA to set its H₂O span.

H₂O is more difficult to span than CO₂ due to the difficulty of providing a source of air with known humidity. Therefore, a dewpoint generator, such as the LI-610 (LI-COR[®], Inc., Lincoln, NE), is used for many applications. An

additional complication is the need to correct the dewpoint temperature for the difference in pressure between the dewpoint generator and the IRGA sample cell. The AP200 is capable of making this correction, but three variables must be set first.

H2OSpanDewPt: This variable is the dewpoint temperature setting (in °C) on the dewpoint generator. Any value may be entered for **H2OSpanDewPt**. However, the IRGA H₂O span setting will be disabled unless the value is between 0 and 20. The default is -99 to intentionally disable setting the H₂O span until the user enters the value for the dewpoint generator.

PRESS_AMBIENT: This variable is the ambient pressure (kPa), which is assumed to be the same as the pressure in the dewpoint generator.

SpanCellP: This variable (given in kPa) is the pressure in the IRGA sample cell during the H₂O span procedure. The steps below will measure these pressures as part of the H₂O span procedure. **PRESS_AMBIENT** and **SpanCellP** are used to calculate a pressure-corrected, span dewpoint temperature to send to the IRGA (see Appendix I, *Useful Equations*, for details).

All three of these variables must be set for the IRGA H₂O span setting to be enabled.

Do H2O Span	
seq_ACTIVE	
STOPsequence	
cell_press	
pump_ON	
H2OSpanDewPt	
PRESS_AMBIEN	
SETpressAmbi	
Td_cell	
Td_ambient	
cell_press	
pump_ON	
SpanCellP	
SETspanCellP	
valve_number	
diag_AP200	
Td_ambient	
DO_H2O_span	

If **seq_ACTIVE** is **True**, then set **STOPsequence = True** to stop the sequence, and then verify **seq_ACTIVE** changes to **False**.

Variable **cell_press** is the pressure in the IRGA sample cell. Set **pump_ON = False** to turn the pump off and it should be possible to hear the pump stop. Wait for the value of **cell_press** to rise and stabilize to ambient pressure. This may take several minutes as the intake tubes and mixing volumes fill with air.

Make sure the dewpoint generator is connected to the H₂O Span inlet as shown in Section 5.2.3, *H₂O Span*. Consult the dewpoint generator's user manual for proper operation of the dewpoint generator.

Enter the dewpoint generator's temperature setpoint (in °C) for **H2OSpanDewPt**.

While the pump is off and the IRGA sample cell is still at ambient pressure, set **SETpressAmbient = True**. The AP200 will store the value of **cell_press** in **PRESS_AMBIENT**. Verify that the value in **PRESS_AMBIENT** now matches **cell_press**.

The next two variables are **Td_cell** and **Td_ambient**. **Td_cell** is the dewpoint temperature measured by the IRGA. **Td_ambient** is corrected for the difference in pressure between the sample cell and ambient (see Appendix I, *Useful Equations*). With the pump off, these two dewpoint temperatures should match.

Step down to **pump_ON** and set it to **True** to turn the pump on. It should be possible to hear the pump start to run at full speed and then slow down to stabilize the pump pressure to its setpoint.

While the pump is on and the IRGA sample cell is stable at its normal operating pressure, set **SETspanCellP = True**. The AP200 will store the value of **cell_press** in **SpanCellP**. Verify that the value in **SpanCellP** now matches that of **cell_press**.

Set **valve_number** to H2Ospan (11). Look at the LEDs on the valve module to confirm the H₂O span valve is now active.

Check the value of **diag_AP200**. If it is not zero, a problem in the AP200 system should be resolved before continuing (see Appendix B, *AP200 Diagnostics*).

Wait for the value of **Td_ambient** to stabilize. This normally takes one to two minutes.

Set **DO_H2O_span** to **True**. The AP200 will send the command to the IRGA to do an H₂O span. While the IRGA is setting the span, the value for **Td_ambient** will not be available and NAN will be displayed. This will take approximately 10 s. When the process is complete, **Td_ambient** will again be displayed. Verify that the value is close to the value of **H2OSpanDewPt**.

NOTE

To avoid pulling unfiltered air into the AP200, do not shut down or disconnect the dewpoint generator until the valve sequence has been restarted as described in Section 6.2.5, *Restart the Sequence*.

Press <Esc> to return to the **Manual Zero/Span** menu.

6.2.5 Restart the Sequence

At the conclusion of the manual zero/span process, restart the automatic valve sequence. Go to the last line of the **Manual Zero/Span** menu and set **STARTsequence = True**. Verify **valve_number** changes to 1 and look at the LEDs on the valve module to confirm that valve 1 is active. The AP200 will

stay on valve 1 until it is synchronized with the real-time clock. Then it will set `seq_ACTIVE` to `True` and begin the valve sequence. See Section 5.5, *Starting and Stopping the Sequence*, for more details on starting the sequence.

Once the `valve_number` changes to `1`, the dewpoint generator may be shut down and disconnected. Replace the plug on the AP200 H₂O Span inlet.

Press <Esc> to return to the AP200 menu.

6.2.6 Check the System

When the manual zero/span process is complete and the valve sequence is restarted, select **Check Status** from the main AP200 menu and verify proper operation of the system, as described in Section 5.6.1, *Quick Status Check Using a Keyboard Display*.

7. Maintenance and Troubleshooting

Most of the basic diagnostic and troubleshooting issues for the AP200 are covered in Appendix B, *AP200 Diagnostics*. This section provides additional detail on some issues.

7.1 Plumbing Leaks

Most of the AP200 plumbing operates at reduced pressure. If there is a leak, ambient air will be pulled into the air stream, mixing with the intended air sample and changing the concentration of CO₂ and H₂O. A large leak can be easily identified by the higher-than-normal flow rate, but a small leak may be difficult to detect. One technique that may be helpful to check for leaks is to breathe on a suspect fitting while observing the measured CO₂ concentration. Because exhaled breath contains much higher CO₂ than ambient air, breathing on the location of a leak will cause a rise in measured CO₂. It may be helpful to blow through a short piece of tubing to direct breath onto one fitting at a time. If testing a fitting near the sample inlet, take care that exhalations do not reach the inlet directly. There may be a substantial time delay when checking for leaks at the intake assembly. The mixing volume can cause the delay and smooth the response. A long intake tube will also introduce a significant time delay.

Some common causes of leaks include:

- Forgetting to tighten a fitting during the installation. It is good practice to check all of the tube connections before turning the system on. If a fitting can be loosened with fingers, it is not properly tightened.
- Dirt or debris in the tube fitting. Use care when connecting or disconnecting tubes, and install caps and plugs on tubes and fittings when they are not in use.
- Excessive bending. Be careful to observe the minimum bend radius and avoid bending the tube near the end at the connections.

7.2 Enclosure Desiccant

Check the humidity indicator card in the mesh pocket in the AP200 system enclosure door. The humidity indicator card has three colored circles that indicate the percentage of humidity. Desiccant packets inside the enclosure should be replaced with fresh packets when the upper dot on the indicator begins to turn pink. The indicator card does not need to be replaced unless the colored circles overrun.

CAUTION

Campbell Scientific strongly suggests replacing desiccant instead of reactivating old desiccant. Improper reactivation can cause the desiccant packets to explode. If the user is determined to reactivate old desiccant packets, follow the procedure provided in the *ENC16/18 User Manual*.

The replacement desiccant pack is the 4905 Single 4-Unit Silica Desiccant Bag. (The 4905 can be purchased in quantities of 20 as pn 6714.) The replacement humidity indicator card is pn 28878.

If the desiccant packs are being replaced very frequently, make sure the feedthrough cap is properly installed (see Section 5.3.3, *Power*, and FIGURE 5-19). In very humid conditions, it may be helpful to seal the cable feedthrough with plumber's putty.

7.3 Intake Filters

The sample flow will decrease over time as particulates clog the intake filters. Eventually, the flow will be reduced to the extent that it will degrade the equilibration time after an intake is selected. As a general guideline, the filters should be replaced when the flow decreases by 25%. The filters will normally last a few months, but will require more frequent changes in conditions with high particulate matter in the air.

To change the intake filter, first turn the pump off to avoid pulling dirty air into the system.

Open the cover of the intake assembly as shown in FIGURE 5-14. The rain diverter, intake assembly with filter, and intake tubing are shown in FIGURE 5-15.

Press the rain diverter upwards and out of the bracket as shown in FIGURE 7-1.

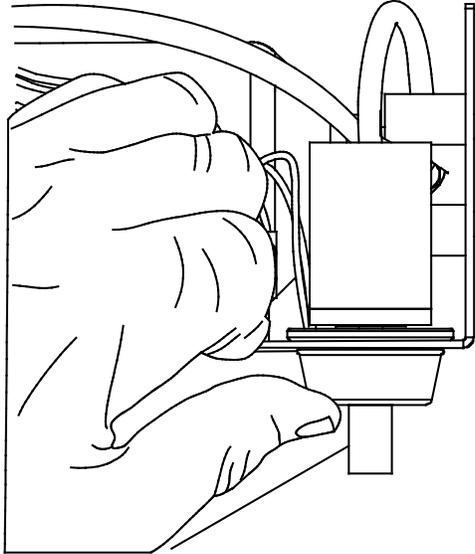


FIGURE 7-1. Releasing rain diverter from intake assembly

Slide the foam insulation down the tube to expose the filter.

Unthread the rain diverter from the filter. Place the rain diverter loosely in its mounting hole to keep it from falling.

Unthread the filter from the orifice.

NOTE

To avoid the risk of dropping the orifice, keep the orifice attached to the tube.

The orifice usually does not need to be replaced as a result of normal usage. However, if it becomes clogged, damaged, or lost, it may be replaced with pn 29999.

Thread a new filter (pn 29998) onto the orifice.

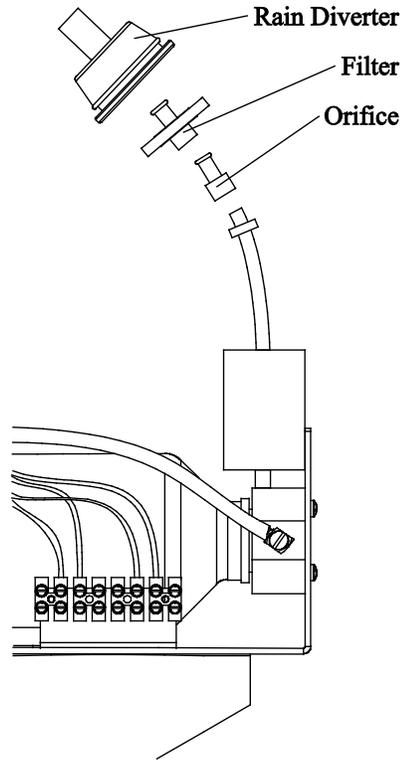


FIGURE 7-2. Order of replacement for orifice, filter, and rain diverter

Thread the rain diverter onto the filter and slide the insulation back down the tube to the filter. Press the rain diverter back through its opening in the intake assembly. See FIGURE 7-3.

NOTE

Take care not to loosen the connections between the rain diverter, filter, orifice, and tube when snapping the rain diverter back into its mounting hole.

Restart the pump and check the sample flow. If replacing the filter has not restored the flow, contact Campbell Scientific.

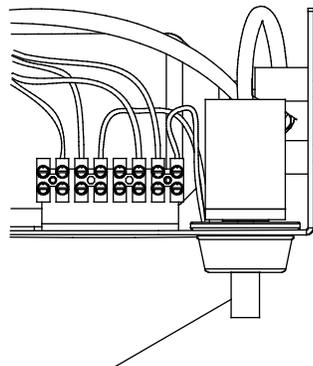


FIGURE 7-3. Correct reassembly after filter replacement

7.4 LI-850 (IRGA)

Consult the LI-COR® LI-850 manual (at www.licor.com) for details on maintaining the IRGA. The following section gives details on installation/removal and configuration of the IRGA as it relates to its installation in the AP200.

7.4.1 Installing and Removing the IRGA

The IRGA is easily installed or removed from the AP200 system. The installed IRGA is shown in FIGURE 7-4.

To install the IRGA in the AP200:

1. Disconnect power from the AP200.
2. Insert the IRGA into its mounting bracket and secure it with the Velcro strap.
3. Remove the union fitting that connects the “IN” tube to the “OUT” tube. Remove the green, vinyl caps from the IRGA fittings, slide the caps onto the union, and store the union in the storage pocket in the door of the AP200 system enclosure. Connect the inlet and outlet tubes to the IRGA (connect “IN” to “IN” and “OUT” to “OUT”). Push the tube fully onto the fitting and tighten the knurled nut by hand. Hold the tube to prevent it from rotating while tightening the nut.
4. Connect the serial cable.
5. Connect the power connector.



FIGURE 7-4. Installed IRGA in system enclosure

To remove the IRGA from the AP200:

1. Disconnect power from the AP200.
2. Disconnect the power connector from the IRGA. Leave the wires connected to the terminal block and pull the terminal block out of the IRGA. If the IRGA is to be powered outside the AP200, use the spare terminal block supplied with the IRGA.
3. Disconnect the serial cable from the IRGA.
4. Disconnect the inlet and outlet tubes from the IRGA. Hold the tube to prevent it from rotating while loosening the knurled nut. Pull the tube off the fitting.
5. To keep the AP200 and the IRGA clean, connect the “IN” tube to the “OUT” tube using the union fitting in the storage pocket in the door of the AP200 system enclosure. Plug the IRGA fittings with the green, vinyl caps.
6. Undo the Velcro strap and remove the IRGA from the mounting bracket.



FIGURE 7-5. Components and fittings of IRGA installation

7.4.2 Configuring the IRGA

The IRGA is automatically configured by the AP200 program. This configuration is sent to the IRGA when the program compiles or if the IRGA fails to respond for five consecutive samples. Messages are written to the **message_log** output table when the configuration command is sent and when the settings are acknowledged. The IRGA settings are given in TABLE 7-1.

TABLE 7-1. IRGA Settings		
Setting	Value	Notes
OUTRATE	0.5	Output data every 0.5 s
HEATER	TRUE	Turn heater on
PCOMP	TRUE	Pressure compensation on
FILTER	0	No filter

The outputs from the IRGA are shown in TABLE 7-2 and include:

TABLE 7-2. IRGA Outputs		
Public variable	Description	Units
CO ₂	CO ₂ concentration	ppm
H ₂ O	H ₂ O concentration	ppt
cell_tmpr	Sample cell temperature	°C
cell_press	Sample cell pressure	kPa
Td_cell	H ₂ O dewpoint	°C

7.5 Zero/Span Flow

The flow for the zero and CO₂ span cylinders is affected by the pressure regulator performance. Pressure regulators designed for a low delivery pressure will generally perform better and should be used where possible. To adjust these regulators, start with them set for 0-psig outlet pressure. Select the corresponding inlet and observe the sample flow. Adjust the regulator outlet pressure to give approximately the same sample flow as for the profile inlets (within 10%).

Most pressure regulators will regulate the pressure only when there is flow through them. When the flow stops (because the AP200 selects some other valve), the pressure will rise above the setting. It will remain high until the zero or CO₂ span valve is again selected, and the flow can resume. The flow will be higher than normal (because pressure is higher than normal) until the excess pressure is bled from the regulator and tube.

Most pressure regulators will also be affected by ambient temperature. If the zero or CO₂ span sample flow varies excessively as the ambient temperature changes, or if the pressure rise at shut-off is excessive, consider using a different regulator.

The amount of zero or CO₂ span gas consumed depends on the details of the application. The following example shows how to estimate the expected consumption.

Assume there are eight profile levels and that the AP200 is configured to set the zero and span every four hours.

From Appendix F, *Valve Sequence Timing*, the zero/span sequence will select the CO₂ span cylinder for 40 s, the zero cylinder for 100 s, and then the CO₂ span cylinder again for 70 s. The total sequence time for the CO₂ span cylinder will be 110 s (as, 40 s + 70 s = 110 s) and 100 s for the zero cylinder. Assuming a flow of 250 ml/min, each zero/span cycle will consume:

$$250 \text{ ml/min} \cdot 110 \text{ s} \cdot (1 \text{ min}/60 \text{ s}) \cdot (1 \text{ L}/1000 \text{ ml}) = 0.46 \text{ L for the CO}_2 \text{ span tank, and}$$

$$250 \text{ ml/min} \cdot 100 \text{ s} \cdot (1 \text{ min}/60 \text{ s}) \cdot (1 \text{ L}/1000 \text{ ml}) = 0.42 \text{ L for the zero tank}$$

Rounding this volume up to 0.5 L, and assuming the cylinders hold 200 cf (5.7 m³), each cylinder will last:

$$5.7 \text{ m}^3 \cdot (1000 \text{ L}/\text{m}^3)/0.5 \text{ L} = 11,400 \text{ zero/span cycles}$$

At a 4-hr interval, this is 1,900 days, or more than five years.

8. Repair

The AP200 is designed to give years of trouble-free service with reasonable care. However, if factory repair is needed, first contact a Campbell Scientific application engineer to obtain an RMA (Return Materials Authorization) number. An RMA number and product-safety documents are required prior to any repair shipments being accepted at Campbell Scientific.

Consult with a Campbell Scientific application engineer to determine which parts or assemblies should be sent for repair. Do not attempt to disassemble the system without specific instructions from Campbell Scientific. Exceptions are the IRGA and the NL115/CFM100, which are easy to remove and install.

If the system enclosure is to be returned, plug the inlets and cap the ends of all tubes to keep debris out. Swagelok® caps and plugs have been provided for this purpose.

Appendix A. Keyboard Display Menu

The AP200 CRBasic program includes a custom menu for the keyboard display. This menu provides a user-friendly interface for some of the more common functions which are shown below. The custom menu can be bypassed such that the user can interact directly with the datalogger through the datalogger's default menus. To bypass the custom menus, select <System Menu>.

AP200 Menu	
Check Status	>
Manual ValveControl	>
Manual Zero/Span	>
Configure System	>
System Menu	>

Check Status:	
diag_AP200	
CO2	
H2O	
seq_ACTIVE	
valve_number	
sample_flow	
cell_press	

Manual ValveControl:	
STOPsequence	
STARTsequenc	
seq_ACTIVE	
valve_number	
sample_flow	
CO2	
H2O	

Manual Zero/Span:
Check Span, Zero >
Do Zero (CO2&H2O) >
Do CO2 Span >
Do H2O Span >
seq_ACTIVE |
valve_number |
STARTsequenc |

Check Span, Zero:
seq_ACTIVE |
STOPsequence |
valve_number |
CO2_SPAN_PPM |
diag_AP200 |
CO2 |
H2O |

Do Zero (CO2&H2O):
seq_ACTIVE |
STOPsequence |
valve_number |
diag_AP200 |
CO2 |
H2O |
DO_zero |

Do CO2 Span:
seq_ACTIVE |
STOPsequence |
CO2_SPAN_PPM |
valve_number |
diag_AP200 |
CO2 |
DO_CO2_span |

Do H2O Span	
seq_ACTIVE	
STOPsequence	
cell_press	
pump_ON	
H2OSpanDewPt	
PRESS_AMBIEN	
SETpressAmbi	
Td_cell	
Td_ambient	
cell_press	
pump_ON	
SpanCellP	
SETspanCellP	
valve_number	
diag_AP200	
Td_ambient	
DO_H2O_span	

Configure System	
PRESS_AMBIEN	
PUMP_P_SETPT	
LEVELS_USED	
MEASURE_TANK	
AUTO_ZEROSPA	
CAL_INTERVAL	
CAL_TIMEOFFS	
CO2_SPAN_PPM	
BATT_LOWLIMI	
BATT_DEADBAN	

Appendix B. AP200 Diagnostics

The public variable **diag_AP200** indicates conditions outside the normal operating range for the AP200. Any value other than zero indicates a problem. **Diag_AP200** contains several error flags encoded as binary bits. To diagnose a problem, first decode the value according to TABLE B-1 and then see the corresponding section in this appendix.

Binary Bit (LSB = 1)	Numeric Value	Error Condition
1	1	Battery voltage is too low
2	2	Valve temperature is outside its operating range
3	4	Pump temperature is outside its operating range
4	8	Pump pressure is not at the setpoint
5	16	Sample flow is outside its normal range
6	32	Cell temperature is outside its operating range
7	64	Cell pressure is not at the setpoint

Example 1:

Assume **diag_AP200 = 34**

Because $34 = 32 + 2$, this indicates bit 6 (numeric value = 32) and bit 2 (numeric value = 2) are set. This means there are two problems:

- Bit 6: Cell temperature is outside its operating range
- Bit 2: Valve temperature is outside its operating range

This could arise if the system is powered up in cold weather, and the valve manifold and IRGA sample cell have not yet reached their operating temperatures.

Example 2:

Assume **diag_AP200 = 16**

This indicates bit 5 (numeric value = 16) is set. This means the sample flow is outside its normal range of 100 to 300 ml/min.

Output Tables

Every sample of **diag_AP200** is stored in the **RawData** output table. However, only an average of **diag_AP200** is stored in the output tables **IntAvg**, **CalAvg**, and **SiteAvg**. The interpretation of this average, given as **diag_AP200_Avg**, is slightly different than the original variable, **diag_AP200**, for two reasons. First, it represents only the samples that are included in the averages (see Appendix F, *Valve Sequence Timing*, for timing details).

Second, because it is an average over time, it is impossible to tell which bits are set. For example, an average of 4.0 could mean that bit 3 (numeric value = 4) is set all the time or it could mean that bit 4 (numeric value = 8) is set half the time, etc. For this reason, **diag_AP200_Avg** can indicate only whether or not there was a problem (nonzero value) or not. If **diag_AP200_Avg** is nonzero, use the time series of **diag_AP200** in the **RawData** table to diagnose the problem.

The following sections give details on each of the diagnostic bits.

Bit 1: Battery voltage is too low

If bit 1 of **diag_AP200** is set, this indicates the power source for the AP200 has dropped below the acceptable voltage limit. This triggers the AP200 to power down as much of the system as possible to protect the user's battery from a deep discharge that might damage the battery. The pump, valves, pump and valve heaters and fans, and intake heaters will all be turned off. The IRGA is powered directly, so it cannot be turned off. The AP200 will power up again when the supply voltage reaches an acceptable level.

There are two system configuration variables, **BATT_LOLIMIT** and **BATT_DEADBAND**, that determine the shut-down and turn-on voltage (see Section 5.4.1, *System Configuration Variables*).

To confirm the problem, verify public variable **batt_volt_LOW = True**. This variable is set to **True** if the battery voltage falls below the shutoff limit:

batt_volt < BATT_LOLIMIT

Note that **batt_volt_LOW** will remain **True** until the supply voltage reaches the turn-on voltage:

batt_volt > BATT_LOLIMIT + BATT_DEADBAND

The purpose of the deadband (the gap between the shut-down voltage and the turn-on voltage) is to protect the AP200 from repeated power cycles when the battery voltage is very near the shut-down limit. Note that for troubleshooting purposes, if **batt_volt_LOW = True** and **batt_volt** is in the deadband, manually set **batt_volt_LOW = False**. This will let the AP200 power up.

If this does not work, measure the voltage at the AP200 power input terminals, and compare this to **batt_volt**. Note that **batt_volt** is measured in the datalogger which has a diode for reverse voltage protection. The actual voltage at the input terminals will be approximately 0.3 volts higher than the value reported by **batt_volt**.

The AP200 supply voltage must be 10.0 Vdc to 16.0 Vdc. See Section 4.3.2, *System Enclosure*, for details on the power required, especially the extra power required for a cold startup.

Bit 2: Valve temperature is outside its operating range

Bit 2 of **diag_AP200** indicates the valve temperature is outside its operating range. This triggers the AP200 to shut down the valves and pump to protect the valves from possible damage.

To confirm the problem, verify that public variable **valve_tmpr_OK = False**. This variable is set to **True** if the valve temperature is within its operating range and is set to **False** if it is outside this range.

For diagnosing a problem using data saved in the output tables (**IntAvg**, **CalAvg**, or **SiteAvg**), the variable **valve_tmpr_OK** is not available. Instead, check the value of **ValveTmprOK_Avg**. This is a floating point number that represents the fraction of time (from 0 to 1) that **valve_tmpr_OK** is true during the averaging period. A value of 1 indicates no valve temperature problem at any time during the averaging period. A value of 0 indicates a valve temperature problem during the entire time.

Also check the measured valve temperature, **valve_tmpr**, and compare it to the operating range (4 to 49 °C). The valve module has a heater that turns on if **valve_tmpr** falls below 5 °C. If the valve temperature is too low, check the operation of the heater which is controlled by public variable **valve_heat_ON**. This variable is saved in **RawData** only if saving all diagnostics. Its corresponding variable **valve_heat_Avg** is saved in the averaged output tables (**IntAvg**, **CalAvg**, and **SiteAvg**).

The valve module has a fan that turns on if **valve_tmpr** rises above 45 °C. The fan will stay on until the valve temperature falls below 43 °C. If the valve temperature is too high, check the operation of the fan which is controlled by public variable **valve_fan_ON**. This variable is saved in **RawData** only if saving all diagnostics. Its corresponding variable **valve_fan_Avg** is saved in the averaged output tables (**IntAvg**, **CalAvg**, and **SiteAvg**).

If the fan is on and the valve temperature is too high, check the ambient temperature. The AP200 is rated for ambient temperatures from –30 to 45 °C.

Bit 3: Pump temperature is outside its operating range

Bit 3 of **diag_AP200** indicates the pump temperature is outside its operating range. This triggers the AP200 to shut down the pump and valves to protect the pump from possible damage.

To confirm the problem, verify that public variable **pump_tmpr_OK = False**. This variable is set to **True** if the pump temperature is within its operating range and is set to **False** if it is outside this range.

For diagnosing a problem using data saved in the output tables (**IntAvg**, **CalAvg**, or **SiteAvg**), the variable **pump_tmpr_OK** is not available. Instead, check the value of **PumpTmprOK_Avg**. This is a floating point number that represents the fraction of time (from 0 to 1) that **pump_tmpr_OK** is true during the averaging period. A value of 1 indicates no pump temperature problem at any time during the averaging period. A value of 0 indicates a pump temperature problem during the entire time.

Also check the measured pump temperature, **pump_tmpr** and compare it to the operating range (0 to 55 °C). The pump module has a heater that turns on if **pump_tmpr** falls below 2 °C. If the pump temperature is too low, check the operation of the heater which is controlled by public variable **pump_heat_ON**. This variable is saved in **RawData** only if saving all diagnostics. Its corresponding variable **pump_heat_Avg** is saved in the averaged output tables (**IntAvg**, **CalAvg**, and **SiteAvg**).

The pump module has a fan that turns on if **pump_tmpr** rises above 45 °C. The fan will stay on until the pump temperature falls below 40 °C. If the pump temperature is too high, check the operation of the fan which is controlled by public variable **pump_fan_ON**. This variable is saved in **RawData** only if saving all diagnostics. Its corresponding variable, **pump_fan_Avg**, is saved in the averaged output tables (**IntAvg**, **CalAvg**, and **SiteAvg**).

If the fan is on and the pump temperature is too high, check the ambient temperature. The AP200 is rated for ambient temperatures from –30 to 45 °C.

Bit 4: Pump pressure is not at the setpoint

If bit 4 of **diag_AP200** is set, this indicates the pump is not able to control the pressure at the setpoint. To confirm the problem, compare the value of **pump_press** to **PUMP_P_SETPT**. Diagnostic bit 4 indicates they differ by more than 1.0 kPa.

Compare **pump_press** (pressure measured at the pump inlet) to **cell_press** (pressure measured by the IRGA). These two points are physically connected by a tube with relatively low flow such that they should be at similar pressures. The measured pressure should agree within the combined uncertainty of the respective pressure sensors. If they disagree by more than 4 kPa, turn the pump off (set **pump_ON = False**) and allow the system to stabilize at ambient pressure. Compare each pressure sensor to the pressure expected for the given elevation. This test may help to diagnose a problem with the pump's pressure sensor. Also see the notes on bit 7.

If the pump pressure is too high, check **pump_control**. If **pump_control = 0**, this indicates the AP200 has turned the pump off. There are several reasons the AP200 may shut the pump off:

- Low supply voltage (see notes on bit 1)
- Valve temperature out of range (see notes on bit 2)
- Pump temperature out of range (see notes on bit 3)
- Pump has been turned off by the user; if public variable **pump_ON = False**, set **pump_ON = True** to turn the pump on

If the pump pressure is too high and **pump_control** is > 0 , check the value of **pump_speed** to verify the pump is running. If there is physical access to the AP200, listen for the sound of the pump to confirm it is running.

If the pump pressure is too high and the pump is running, check the system for leaks. If no leaks are found there may be a problem with the pump. Contact Campbell Scientific for information on replacing the pump.

If the pump pressure is too low, check **pump_control** and **pump_speed**. When the pressure falls below the setpoint, the AP200 will respond by

reducing **pump_control**. This should reduce **pump_speed** and allow **pump_press** to rise to the setpoint. If **pump_control** = 0 but the pump is still running, contact Campbell Scientific.

If the pump speed is oscillating, check the value of **BuffDepth**. This variable is found in the Status table (see the *CR1000 User Manual* at www.campbellsci.com for more information). The AP200 CRBasic program runs in Pipeline mode, which allows measurements to stay on schedule even when processing tasks fall behind. **BuffDepth** indicates how far processing has fallen behind measurements (number of scans). If processing falls too far behind, the delay between measuring the pump pressure and adjusting the pump speed can cause the pump speed to oscillate. Normally, **BuffDepth** will be 2 or less. If the value is higher than 2, contact Campbell Scientific.

Bit 5: Sample flow is outside its normal range

If bit 5 of **diag_AP200** is set, this indicates the sample flow is outside the normal range. To confirm this error, check the value of **sample_flow** which is measured by a mass-flow sensor mounted on the outlet of the valve manifold. The sensor measures the flow to the IRGA. The normal range for the sample flow is 100 to 350 ml/min. If the sample flow is outside this range, see the appropriate section below.

Profile Inlets

The sample flow for profile inlets is set by an orifice in the intake assembly. See Section 4.2.1, *Intake Assemblies*, for details.

If the flow goes too high at a valve switch but comes into the normal range within a few seconds, this is normal. It is caused by a different pressure drop through the valve manifold depending on whether the inlet is selected or bypassed. The combined flow from the bypassed inlets causes slightly more pressure drop than for the inlet selected to go to the IRGA. Consequently, the pressure in the intake tubes and mixing volumes increases slightly when they are bypassed. When a bypassed inlet is selected, the pressure equalizes by pushing slightly higher flow than normal through the IRGA. This is acceptable as long as the sample flow is within the normal range by the time the data are included in the average.

If the flow for one or more of the inlets stabilizes at a high flow, this may indicate a leak in a tube or connection. See Section 7.1, *Plumbing Leaks*, for leak-checking suggestions.

If the flow is too low for one or more inlets, this is most likely caused by a filter that is plugged with particulates. This normally happens over a span of weeks or months. It may happen more quickly in dirty conditions. Try replacing the filter (see Section 4.1.6, *Replacement Parts*). If this does not resolve the problem, the orifice may be plugged, and Campbell Scientific should be contacted.

Zero/Span Inlets

The sample flow for zero/span inlets is set by restriction in the small, stainless steel tubes that connect the bulkhead fittings to the valve manifold. See Section 4.2.2, *Valve Manifold*, for details.

If the flow goes too high at a valve switch, but comes into the normal range in a few seconds, this is normal. It is caused by the pressure regulator on the cylinder. See notes on pressure regulators in Section 7.5, *Zero/Span Flow*. As long as the sample flow is within the normal range by the time the data are included in the average, this is acceptable.

If the flow for a zero or CO₂ span inlet stabilizes at a flow that is too high or too low, this is most likely caused by the pressure setting on the regulator. Adjust the pressure regulator to give the desired sample flow with the corresponding inlet selected.

Bit 6: Cell temperature is outside its operating range

If bit 6 of **diag_AP200** is set, this indicates the IRGA sample cell temperature is outside the normal range. To confirm this error, check the value of **cell_tmpr**, which is measured by the IRGA. The normal range for the sample cell temperature is 48 to 52 °C.

The IRGA heats the sample cell to maintain its temperature at a nominal 50 °C. It may take several minutes to stabilize at this temperature when the system is powered up (as much as 20 or 30 min if starting from -20 °C). If the system has been powered for at least 30 min and the cell temperature is still below 48 °C, contact LI-COR®.

The IRGA does not actively cool the sample cell when the ambient temperature is too high. If the sample cell temperature is above 52 °C, make sure the ambient temperature is no higher than 45 °C and contact LI-COR® if the problem persists.

Bit 7: Cell pressure is not at the setpoint

If bit 7 of **diag_AP200** is set, this indicates the IRGA sample cell pressure is not at the setpoint. Compare the value of **cell_press** to **PUMP_P_SETPT**. Diagnostic bit 7 indicates they differ by more than 2.0 kPa.

The AP200 will control the speed of the sample pump to maintain **pump_press** (measured at the inlet of the pump) at the setpoint pressure **PUMP_P_SETPT**. If there is a problem with the pump, this will normally result in both bits 4 and 7 being set (see the notes above on bit 4). Having two independent diagnostics allows some insurance that both of the pressure sensors are working properly.

Compare **cell_press** (pressure measured by the IRGA) to **pump_press** (pressure measured at the pump inlet). These two points are physically connected by a tube with relatively low flow, such that they should be at similar pressures. The pressure values should agree within the combined uncertainty of the respective pressure sensors. If they disagree by more than 4 kPa, turn the pump off (set **pump_ON = False**) and allow the system to stabilize at ambient pressure. Compare each pressure sensor to the pressure expected for the given elevation. This test may help to diagnose a problem with the pump's pressure sensor or the IRGA's pressure sensor.

Appendix C. Public Variables

Some of the variables in the AP200's CRBasic program are included in the Public table. These public variables may be displayed or edited with a keyboard display or PC. Other program variables are hidden from the user to reduce clutter in the Public table. Many of these public variables are saved in the output tables. Some of the public variables allow the user to set the operation of the system or to give diagnostic information. The intended usage of the public variables is categorized as follows:

- IRGA** measured directly by the IRGA
- TAIR** air temperature (defined only if $N_AirTemps > 0$)
- DIAG** diagnostic
- USER** user setting
- INFO** provides information on system status
- INFO/USER** conditional user setting (may set if the sequence is stopped)
- CONFIG** system configuration parameter - saved in file **sys_conf_var.dat**.

The public variables are listed in TABLE C-1.

Usage	Variable Name	Units	Description
	RecNum	RN	record number
	TimeStamp	TS	date and time the record was measured
DIAG	diag_AP200		AP200 diagnostic word (nonzero value indicates a problem detected)
INFO	interval_counter		number of scans since the start of this output interval (half hour)
IRGA	CO2	ppm	CO ₂ concentration measured by the IRGA
IRGA	H2O	ppt	H ₂ O concentration measured by the IRGA
IRGA	cell_tmpr	°C	IRGA sample cell temperature
IRGA	cell_press	kPa	IRGA sample cell pressure
IRGA	Td_cell	°C	dewpoint temperature measured by the IRGA
INFO	Td_ambient	°C	Td_cell, corrected to ambient pressure
DIAG	sample_flow	ml·min ⁻¹	sample flow to the IRGA
USER	STARTsequence		set = to True to start the automatic valve sequence
USER	STOPsequence		set = to True to stop the automatic valve sequence

Usage	Variable Name	Units	Description
INFO	seq_ACTIVE		Boolean flag: True if the valve sequence is active
INFO/USER	valve_number		valve number (1 to 11); determines which inlet is selected
INFO	sequence_index		index for valve switching sequence; cycles from 1 to LEVELS_USED
INFO	smpl_counter		number of scans since last valve switch
INFO	end_omit		Boolean flag: True when equilibration time after valve switch is satisfied
DIAG	panel_tmpr	°C	temperature of the datalogger wiring panel
DIAG	batt_volt	V	supply voltage; measured inside datalogger after diode voltage drop
DIAG	batt_volt_LOW		Boolean flag: True if batt_volt is too low (controls power shutdown)
DIAG	valve_tmpr	°C	temperature of the valve manifold
DIAG	valve_tmpr_OK		Boolean flag: True if the valve module is within operating limits
DIAG	valve_heat_ON		Boolean flag: True if the valve heater is on
DIAG	valve_fan_ON		Boolean flag: True if the valve fan is on
USER	pump_ON		set = to True to enable the sample pump
DIAG	pump_press	kPa	pressure measured at the pump inlet
DIAG	pump_control		pump speed control variable; can be from 0 (off) to 1 (full speed)
DIAG	pump_speed	Hz	pump speed; measured by a tachometer on the pump
DIAG	pump_tmpr	°C	temperature of the pump
DIAG	pump_tmpr_OK		Boolean flag: True if the pump temperature is within its operating range
DIAG	pump_heat_ON		Boolean flag: True if the pump heater is on
DIAG	pump_fan_ON		Boolean flag: True if the pump fan is on
INFO	intake_heat_ON		Boolean flag: True if the intake heaters are on
TAIR	T_air(1)	°C	air temperature profile (optional, defined only if N_AirTemps > 0)
TAIR	T_air(2)	°C	air temperature profile (optional, defined only if N_AirTemps > 1)
TAIR	T_air(3)	°C	air temperature profile (optional, defined only if N_AirTemps > 2)
TAIR	T_air(4)	°C	air temperature profile (optional, defined only if N_AirTemps > 3)

TABLE C-1. Public Variables			
Usage	Variable Name	Units	Description
TAIR	T_air(5)	°C	air temperature profile (optional, defined only if N_AirTemps > 4)
TAIR	T_air(6)	°C	air temperature profile (optional, defined only if N_AirTemps > 5)
TAIR	T_air(7)	°C	air temperature profile (optional, defined only if N_AirTemps > 6)
TAIR	T_air(8)	°C	air temperature profile (optional, defined only if N_AirTemps > 7)
USER	H2OSpanDewPt	°C	setpoint temperature on dewpoint generator; used for H ₂ O span
USER	SETpressAmbient		set = to True for AP200 to store the value of cell_press in PressAmbient
USER	SETspanCellP		Set = True for AP200 to store the value of cell_press in SpanCellP
USER	SpanCellP	kPa	sample cell operating pressure; used for H ₂ O span
INFO/USER	DO_zero		set = to True for AP200 to send CO ₂ & H ₂ O zero commands to the IRGA
INFO/USER	DO_CO2_span		set = to True for AP200 to send CO ₂ span command to the IRGA
INFO/USER	DO_H2O_span		Set = True for AP200 to send H ₂ O span command to the IRGA
CONFIG	PRESS_AMBIENT	kPa	ambient pressure; used to calculate Td_ambient and for H ₂ O span
CONFIG	PUMP_P_SETPT	kPa	setpoint pressure for the pump speed control
CONFIG	LEVELS_USED		number of profile levels to be used
CONFIG	MEASURE_TANKS		set = to True to automatically measure zero and span cylinders
CONFIG	AUTO_ZEROSPAN		set = to True to zero and span the IRGA when cylinders are measured
CONFIG	CAL_INTERVAL	min	time between automatic zero/span sequences
CONFIG	CAL_TIMEOFFSET	min	time offset for starting automatic zero/span sequences
CONFIG	CO2_SPAN_PPM	ppm	CO ₂ concentration in the CO ₂ span cylinder
CONFIG	BATT_LOWLIMIT	V	AP200 will shut down if supply voltage falls below this limit
CONFIG	BATT_DEADBAND	V	AP200 will power up if supply voltage rises this much above lower limit

Appendix D. Output Tables

The AP200 program stores data in several output tables. Details are given for each table.

IntAvg

The primary output table is **IntAvg** (Interval Average). A record is written to this table at the end of every output interval (30 min). Space is allocated on the memory card for 4,800 records (100 days at one record per 30 min). The CPU has storage allocated for 480 records (10 days).

This table has a set of values for each level that includes **CO2**, **H2O**, **cell_tmpr**, **cell_press**, **NumSamples**, and **sample_flow**. These values are averages of all samples on that level after omitting data subsequent to the valve switch for equilibration. For example, if all eight levels are used, the cycle time is 2 min. In each 2-min cycle, the AP200 will spend 15 s on each level (one to eight). For each level, the first 10 s are omitted and the remaining 5 s are included in the averages. For this example, the number of samples in the half-hour averaging interval will be $5 \text{ s} \times 2 \text{ samples/s} \times 15 \text{ cycles} = 150$ samples. This number will change if a different number of levels is used or if a zero/span sequence is run during the averaging interval.

If fewer than eight levels are used (as determined by system configuration variable **LEVELS_USED**), the unused levels will contain 0 or NAN.

Note: The columns for extra levels will be omitted if constant **MaxLevels** has been set to a value less than 8.

See Section 5.4.2, *Compile Switches*, for details on setting program constants.

In addition to the level-specific data, several other parameters apply to all levels. Some are similar to the level-specific data; they are averaged only during the time **end_omit = True**. The rest of the parameters are averages that include all data, regardless of **end_omit**.

At the end of the table are the average air temperatures for the optional temperature profile. These data will be included only as specified by constant **N_AirTemps**. See Section 5.4.2, *Compile Switches*, for details on setting program constants.

The variables stored in **IntAvg** are listed below including notes on when samples are included in the statistic and when the variable will be included in the TABLE D-1.

Name	Units	Statistic	When Used in Calculation	When Included in Table
TIMESTAMP	TS			always
RECORD	RN			always

Name	Units	Statistic	When Used in Calculation	When Included in Table
diag_AP200_Avg		Avg	end_omit	always
L1_NumSamples		Tot	end_omit	always
L1_CO2	ppm	Avg	end_omit	always
L1_H2O	ppt	Avg	end_omit	always
L1_cell_tmpr	°C	Avg	end_omit	always
L1_cell_press	kPa	Avg	end_omit	always
L1_sample_flow	ml·min ⁻¹	Avg	end_omit	always
L2_NumSamples		Tot	end_omit	always
L2_CO2	ppm	Avg	end_omit	always
L2_H2O	ppt	Avg	end_omit	always
L2_cell_tmpr	°C	Avg	end_omit	always
L2_cell_press	kPa	Avg	end_omit	always
L2_sample_flow	ml·min ⁻¹	Avg	end_omit	always
L3_NumSamples		Tot	end_omit	always
L3_CO2	ppm	Avg	end_omit	always
L3_H2O	ppt	Avg	end_omit	always
L3_cell_tmpr	°C	Avg	end_omit	always
L3_cell_press	kPa	Avg	end_omit	always
L3_sample_flow	ml·min ⁻¹	Avg	end_omit	always
L4_NumSamples		Tot	end_omit	always
L4_CO2	ppm	Avg	end_omit	always
L4_H2O	ppt	Avg	end_omit	always
L4_cell_tmpr	°C	Avg	end_omit	always
L4_cell_press	kPa	Avg	end_omit	always
L4_sample_flow	ml·min ⁻¹	Avg	end_omit	always
L5_NumSamples		Tot	end_omit	MaxLevels > 4
L5_CO2	ppm	Avg	end_omit	MaxLevels > 4
L5_H2O	ppt	Avg	end_omit	MaxLevels > 4
L5_cell_tmpr	°C	Avg	end_omit	MaxLevels > 4
L5_cell_press	kPa	Avg	end_omit	MaxLevels > 4
L5_sample_flow	ml·min ⁻¹	Avg	end_omit	MaxLevels > 4
L6_NumSamples		Tot	end_omit	MaxLevels > 5
L6_CO2	ppm	Avg	end_omit	MaxLevels > 5

Name	Units	Statistic	When Used in Calculation	When Included in Table
L6_H2O	ppt	Avg	end_omit	MaxLevels > 5
L6_cell_tmpr	°C	Avg	end_omit	MaxLevels > 5
L6_cell_press	kPa	Avg	end_omit	MaxLevels > 5
L6_sample_flow	ml·min ⁻¹	Avg	end_omit	MaxLevels > 5
L7_NumSamples		Tot	end_omit	MaxLevels > 6
L7_CO2	ppm	Avg	end_omit	MaxLevels > 6
L7_H2O	ppt	Avg	end_omit	MaxLevels > 6
L7_cell_tmpr	°C	Avg	end_omit	MaxLevels > 6
L7_cell_press	kPa	Avg	end_omit	MaxLevels > 6
L7_sample_flow	ml·min ⁻¹	Avg	end_omit	MaxLevels > 6
L8_NumSamples		Tot	end_omit	MaxLevels > 7
L8_CO2	ppm	Avg	end_omit	MaxLevels > 7
L8_H2O	ppt	Avg	end_omit	MaxLevels > 7
L8_cell_tmpr	°C	Avg	end_omit	MaxLevels > 7
L8_cell_press	kPa	Avg	end_omit	MaxLevels > 7
L8_sample_flow	ml·min ⁻¹	Avg	end_omit	MaxLevels > 7
pump_press_Avg	kPa	Avg	end_omit	always
pump_control_Avg		Avg	end_omit	always
pump_speed_Avg	Hz	Avg	end_omit	always
PumpTmprOK_Avg		Avg	all	always
pump_tmpr_Avg	°C	Avg	all	always
pump_heat_Avg		Avg	all	always
pump_fan_Avg		Avg	all	always
ValveTmprOK_Avg		Avg	all	always
valve_tmpr_Avg	°C	Avg	all	always
valve_heat_Avg		Avg	all	always
valve_fan_Avg		Avg	all	always
intake_heat_Avg		Avg	all	always
batt_volt_Avg	V	Avg	all	always
BattVoltLOW_Avg		Avg	all	always
panel_tmpr_Avg	°C	Avg	all	always
T_air_Avg(1)	°C	Avg	all	N_AirTemps > 0
T_air_Avg(2)	°C	Avg	all	N_AirTemps > 1

TABLE D-1. Variables of the IntAvg Table				
Name	Units	Statistic	When Used in Calculation	When Included in Table
T_air_Avg(3)	°C	Avg	all	N_AirTemps > 2
T_air_Avg(4)	°C	Avg	all	N_AirTemps > 3
T_air_Avg(5)	°C	Avg	all	N_AirTemps > 4
T_air_Avg(6)	°C	Avg	all	N_AirTemps > 5
T_air_Avg(7)	°C	Avg	all	N_AirTemps > 6
T_air_Avg(8)	°C	Avg	all	N_AirTemps > 7

CalAvg

The **CalAvg** table contains data from the automated zero/span sequences. Records are written to this table when the calibration (zero/span) sequence is run (as determined by **CAL_INTERVAL**). If **MEASURE_TANKS = False**, the AP200 will not write to this table.

Each calibration sequence will put multiple records in the **CalAvg** table. If **AUTO_ZEROSPAN = False**, each sequence will place two records in the table:

- measured values for the CO2 span tank and
- zero tank

These are distinguished by **valve_number** (9 = Zero Tank and 10 = CO₂ Span Tank).

If **AUTO_ZEROSPAN = True**, each sequence will place five records in the table: CO₂ span tank, zero tank (before and after doing the zero), and CO₂ span tank (before and after doing the CO₂ span).

Space is allocated on the card for 24,000 records (100 days at five records per 30 min). The CPU has storage allocated for 240 records (1 day). The list of values saved is similar to the list for the **IntAvg** table. Additionally, the **CalAvg** table includes the **valve_number** and standard deviations of several values.

TABLE D-2. Variables of the CalAvg Table				
Name	Units	Statistic	When Used in Calculation	When Included in Table
TIMESTAMP	TS			always
RECORD	RN			always
valve_number		Smp	last sample	always
diag_AP200_Avg		Avg	end_omit	always
NumSamples		Tot	end_omit	always

TABLE D-2. Variables of the CalAvg Table				
Name	Units	Statistic	When Used in Calculation	When Included in Table
CO2_Avg	ppm	Avg	end_omit	always
H2O_Avg	ppt	Avg	end_omit	always
cell_tmpr_Avg	°C	Avg	end_omit	always
cell_press_Avg	kPa	Avg	end_omit	always
Td_cell_Avg	°C	Avg	end_omit	always
Td_ambient_Avg	°C	Avg	end_omit	always
sample_flow_Avg	ml·min ⁻¹	Avg	end_omit	always
pump_press_Avg	kPa	Avg	end_omit	always
pump_control_Avg		Avg	end_omit	always
pump_speed_Avg	Hz	Avg	end_omit	always
PumpTmprOK_Avg		Avg	all	always
pump_tmpr_Avg	°C	Avg	all	always
pump_heat_Avg		Avg	all	always
pump_fan_Avg		Avg	all	always
ValveTmprOK_Avg		Avg	all	always
valve_tmpr_Avg	°C	Avg	all	always
valve_heat_Avg		Avg	all	always
valve_fan_Avg		Avg	all	always
intake_heat_Avg		Avg	all	always
batt_volt_Avg	V	Avg	all	always
BattVoltLOW_Avg		Avg	all	always
panel_tmpr_Avg	°C	Avg	all	always
interval_counter		Smp	last sample	always
CO2_Std	ppm	Std	end_omit	always
H2O_Std	ppt	Std	end_omit	always
cell_tmpr_Std	°C	Std	end_omit	always
cell_press_Std	kPa	Std	end_omit	always
sample_flow_Std	ml·min ⁻¹	Std	end_omit	always
pump_press_Std	kPa	Std	end_omit	always
pump_control_Std		Std	end_omit	always
pump_speed_Std	Hz	Std	end_omit	always
T_air_Avg(1)	°C	Avg	all	N_AirTemps > 0

Name	Units	Statistic	When Used in Calculation	When Included in Table
T_air_Avg(2)	°C	Avg	all	N_AirTemps > 1
T_air_Avg(3)	°C	Avg	all	N_AirTemps > 2
T_air_Avg(4)	°C	Avg	all	N_AirTemps > 3
T_air_Avg(5)	°C	Avg	all	N_AirTemps > 4
T_air_Avg(6)	°C	Avg	all	N_AirTemps > 5
T_air_Avg(7)	°C	Avg	all	N_AirTemps > 6
T_air_Avg(8)	°C	Avg	all	N_AirTemps > 7

SiteAvg

The **SiteAvg** table saves the same data as the **CalAvg** table. A record is written to the **SiteAvg** table when the automatic valve sequence switches to a new valve. Records are also written to **SiteAvg** any time records are written to the **CalAvg** table. This includes measurement of the zero tank before and after doing the zero, for example.

The **SiteAvg** table is useful if a finer time resolution is desired; either to see how CO₂ and H₂O concentrations changed during a 30-minute averaging interval or to troubleshoot the system if a problem is detected. Space is allocated on the card for 576,000 records (100 days at one record every 15 s). The CPU has storage allocated for 576 records (2.4 hr at one record every 15 s).

Name	Units	Statistic	When used in calculation	When included in table
TIMESTAMP	TS			always
RECORD	RN			always
valve_number		Smp	last sample	always
diag_AP200_Avg		Avg	end_omit	always
NumSamples		Tot	end_omit	always
CO2_Avg	ppm	Avg	end_omit	always
H2O_Avg	ppt	Avg	end_omit	always
cell_tmpr_Avg	°C	Avg	end_omit	always
cell_press_Avg	kPa	Avg	end_omit	always
Td_cell_Avg	°C	Avg	end_omit	always
Td_ambient_Avg	°C	Avg	end_omit	always
sample_flow_Avg	ml·min ⁻¹	Avg	end_omit	always

Name	Units	Statistic	When used in calculation	When included in table
pump_press_Avg	kPa	Avg	end_omit	always
pump_control_Avg		Avg	end_omit	always
pump_speed_Avg	Hz	Avg	end_omit	always
PumpTmprOK_Avg		Avg	all	always
pump_tmpr_Avg	°C	Avg	all	always
pump_heat_Avg		Avg	all	always
pump_fan_Avg		Avg	all	always
ValveTmprOK_Avg		Avg	all	always
valve_tmpr_Avg	°C	Avg	all	always
valve_heat_Avg		Avg	all	always
valve_fan_Avg		Avg	all	always
intake_heat_Avg		Avg	all	always
batt_volt_Avg	V	Avg	all	always
BattVoltLOW_Avg		Avg	all	always
panel_tmpr_Avg	°C	Avg	all	always
interval_counter		Smp	last sample	always
CO2_Std	ppm	Std	end_omit	always
H2O_Std	ppt	Std	end_omit	always
cell_tmpr_Std	°C	Std	end_omit	always
cell_press_Std	kPa	Std	end_omit	always
sample_flow_Std	ml·min ⁻¹	Std	end_omit	always
pump_press_Std	kPa	Std	end_omit	always
pump_control_Std		Std	end_omit	always
pump_speed_Std	Hz	Std	end_omit	always
T_air_Avg(1)	°C	Avg	all	N_AirTemps > 0
T_air_Avg(2)	°C	Avg	all	N_AirTemps > 1
T_air_Avg(3)	°C	Avg	all	N_AirTemps > 2
T_air_Avg(4)	°C	Avg	all	N_AirTemps > 3
T_air_Avg(5)	°C	Avg	all	N_AirTemps > 4
T_air_Avg(6)	°C	Avg	all	N_AirTemps > 5
T_air_Avg(7)	°C	Avg	all	N_AirTemps > 6
T_air_Avg(8)	°C	Avg	all	N_AirTemps > 7

RawData

The **RawData** table stores each sample of the AP200 data (two records per second). This table is normally used only for troubleshooting. The files on the card and in the CPU are allocated to use remaining available space. The number of days for which space is available on the card will depend on the options chosen. The first set of values is always stored in **RawData**. The air temperature profile data are stored as determined by constant **N_AirTemps**. The remaining values are stored only if the constant **SaveAll_diagnostics** = **True**. This constant may be set to **False** to reduce the amount of data stored or set to **True** to allow more detailed analysis of diagnostic values for troubleshooting. See Section 5.4.2, *Compile Switches*, for details on setting program constants. A 2GB card will store over 50 days with all diagnostics, or over 100 days if **SaveAll_diagnostics** = **False**. The actual table fill time for the **RawData** table can be seen in the datalogger status table by either using *LoggerNet* or with a keyboard display.

TABLE D-4. Variables of the RawData Table

Name	Units	Statistic	When Used in Calculation	When Included in Table
TIMESTAMP	TS			always
RECORD	RN			always
valve_number		Smp	last sample	always
smp1_counter		Smp	last sample	always
diag_AP200		Smp	last sample	always
CO2	ppm	Smp	last sample	always
H2O	ppt	Smp	last sample	always
cell_tmpr	°C	Smp	last sample	always
cell_press	kPa	Smp	last sample	always
Td_cell	°C	Smp	last sample	always
Td_ambient	°C	Smp	last sample	always
sample_flow	ml·min ⁻¹	Smp	last sample	always
pump_press	kPa	Smp	last sample	always
panel_tmpr	°C	Smp	last sample	always
batt_volt	V	Smp	last sample	always
T_air(1)	°C	Smp	last sample	N_AirTemps > 0
T_air(2)	°C	Smp	last sample	N_AirTemps > 1
T_air(3)	°C	Smp	last sample	N_AirTemps > 2
T_air(4)	°C	Smp	last sample	N_AirTemps > 3
T_air(5)	°C	Smp	last sample	N_AirTemps > 4
T_air(6)	°C	Smp	last sample	N_AirTemps > 5
T_air(7)	°C	Smp	last sample	N_AirTemps > 6

Name	Units	Statistic	When Used in Calculation	When Included in Table
T_air(8)	°C	Smp	last sample	N_AirTemps > 7
pump_control		Smp	last sample	SaveAll_diagnostics = True
pump_speed	Hz	Smp	last sample	SaveAll_diagnostics = True
pump_tmpr	°C	Smp	last sample	SaveAll_diagnostics = True
pump_heat		Smp	last sample	SaveAll_diagnostics = True
pump_fan		Smp	last sample	SaveAll_diagnostics = True
valve_tmpr	°C	Smp	last sample	SaveAll_diagnostics = True
valve_heat		Smp	last sample	SaveAll_diagnostics = True
valve_fan		Smp	last sample	SaveAll_diagnostics = True
intake_heat		Smp	last sample	SaveAll_diagnostics = True
STARTsequence		Smp	last sample	SaveAll_diagnostics = True
STOPsequence		Smp	last sample	SaveAll_diagnostics = True
seq_ACTIVE		Smp	last sample	SaveAll_diagnostics = True
valve_mode		Smp	last sample	SaveAll_diagnostics = True
ZeroSpanMode		Smp	last sample	SaveAll_diagnostics = True
DO_zero		Smp	last sample	SaveAll_diagnostics = True
DO_CO2_span		Smp	last sample	SaveAll_diagnostics = True
DO_H2O_span		Smp	last sample	SaveAll_diagnostics = True
interval_counter		Smp	last sample	SaveAll_diagnostics = True
end_omit		Smp	last sample	SaveAll_diagnostics = True
sequence_index		Smp	last sample	SaveAll_diagnostics = True
NewSite		Smp	last sample	SaveAll_diagnostics = True
SiteOutput		Smp	last sample	SaveAll_diagnostics = True
SiteAvgDisable		Smp	last sample	SaveAll_diagnostics = True

TimeInfo

The **TimeInfo** table stores all of the timing parameters for the automatic valve switching sequence. A record is stored whenever the profile sequence starts (when the program first starts up, and when the sequence is manually stopped and restarted). This table can generally be ignored, but it provides useful historical information about the valve sequence timing. It may be helpful for troubleshooting sequence timing issues.

The first values stored are the system configuration variables that control the sequence timing: **LEVELS_USED**, **MEASURE_TANKS**,

AUTO_ZEROSPAN, **CAL_INTERVAL**, and **CAL_TIMEOFFSET**. The next value, **sync_interval**, is calculated by the program. It is the duration of the valve sequence in seconds. This value is used by the program to synchronize the valve sequence to the real-time clock. For example, if **sync_interval** is 90 s, the sequence will start at the top of the hour, or 1:30 later, or 3:00 later, etc.

The rest of the **TimeInfo** contains the arrays of timing parameters. Each array holds eight values, where the index corresponds to the index in the sequence. If **LEVELS_USED** is less than 8, zero is stored for the parameters that are not used.

ProfileSequence: the valve number for this step in the profile sequence. This will simply increment from 1 to **LEVELS_USED**.

ProfileOnCounts: the time (number of scans) to spend at this step, typically 30 counts (15 s).

ProfileOmitCounts: the time (number of scans) to wait after a valve switch before including data in the averages, typically 20 scans (10 s).

The next arrays contain the corresponding values for the calibration (zero/span) sequence.

TABLE D-5. Variables of the TimeInfo Table	
Name	Units
TIMESTAMP	TS
RECORD	RN
LEVELS_USED	
MEASURE_TANKS	
AUTO_ZEROSPAN	
CAL_INTERVAL	min
CAL_TIMEOFFSET	min
sync_interval	s
ProfileSequence(1)	
ProfileSequence(2)	
ProfileSequence(3)	
ProfileSequence(4)	
ProfileSequence(5)	
ProfileSequence(6)	
ProfileSequence(7)	
ProfileSequence(8)	
ProfileOnCounts(1)	

TABLE D-5. Variables of the TimeInfo Table	
Name	Units
ProfileOnCounts(2)	
ProfileOnCounts(3)	
ProfileOnCounts(4)	
ProfileOnCounts(5)	
ProfileOnCounts(6)	
ProfileOnCounts(7)	
ProfileOnCounts(8)	
ProfileOmitCounts(1)	
ProfileOmitCounts(2)	
ProfileOmitCounts(3)	
ProfileOmitCounts(4)	
ProfileOmitCounts(5)	
ProfileOmitCounts(6)	
ProfileOmitCounts(7)	
ProfileOmitCounts(8)	
CalSequence(1)	
CalSequence(2)	
CalSequence(3)	
CalSequence(4)	
CalSequence(5)	
CalSequence(6)	
CalSequence(7)	
CalSequence(8)	
CalOnCounts(1)	
CalOnCounts(2)	
CalOnCounts(3)	
CalOnCounts(4)	
CalOnCounts(5)	
CalOnCounts(6)	
CalOnCounts(7)	
CalOnCounts(8)	
CalOmitCounts(1)	
CalOmitCounts(2)	

TABLE D-5. Variables of the TimeInfo Table	
Name	Units
CalOmitCounts(3)	
CalOmitCounts(4)	
CalOmitCounts(5)	
CalOmitCounts(6)	
CalOmitCounts(7)	
CalOmitCounts(8)	

Message_log

The **message_log** table contains a history of events, and is intended as a troubleshooting tool. A record is written to this table when a predefined event occurs, including:

- Starting/stopping the valve sequence
- Sending a command to the IRGA (configuration, zero, or span)
- Error messages related to IRGA commands
- Acknowledgement from the IRGA for these commands
- Changing the value of a system configuration variable

In normal operation, each calibration sequence with **AUTO_ZEROSPAN** enabled will generate six records: send and acknowledge for each of the CO₂ zero, H₂O zero, and CO₂ span commands. The memory card has space allocated for 28,800 records (100 days with a calibration sequence every 30 min). The CPU has space allocated for 288 records.

The **message_log** table also includes several values to document the state of the AP200 in case of trouble.

TABLE D-6. Variables of the message_log Table	
Name	Units
TIMESTAMP	TS
RECORD	RN
message_str	
diag_AP200	
sequence_index	
smp1_counter	
valve_mode	
ZeroSpanMode	

Appendix E. Temperature Profile

The AP200 system can measure a temperature profile at up to eight levels, with 107-L temperature probes. These temperature probes are not part of the AP200 system – they must be ordered separately. See the *Model 107 Temperature Probe Instruction Manual*, available from Campbell Scientific, www.campbellsci.com, for details.

The following section gives brief instructions for using these temperature probes with the AP200 system.

Mounting

See the *107 Temperature Probe Instruction Manual* for more detail on installing the temperature probes. Normally, the probes will be mounted at the same heights as the air sample intake assemblies. See Section 4.1.4, *Other Accessories*, for more detailed discussion of the 107-L temperature probe and its associated radiation shield. The assembled probe and shield are shown in FIGURE E-1.



FIGURE E-1. 107-L temperature probe mounted with radiation shield

Wiring

The 107 temperature probes should be wired to consecutive single-ended channels, starting at SE1. Any number of probes from 0 to 8 may be used. All temperature probes should use the VX1 excitation terminal.

Configuring the CRBasic program

The AP200 program has a constant, `N_AirTemps` that is used as a compile switch to tell the program how many 107-L temperature probes are used. Set this constant to zero (the default) to disable reading temperature probes or to a number from 1 to 8 that indicates the number of probes to be measured.

Example 1: temperature probes disabled:

Const N_AirTemps = 0 'number of 107-L temperature sensors to measure (may be 1 to 8), or zero to disable air temperature measurements

Example 2: measure eight temperature probes:

Const N_AirTemps = 8 'number of 107-L temperature sensors to measure (may be 1 to 8), or zero to disable air temperature measurements

The value of this constant will determine how large to allocate the data array **T_air()**, how many measurements to make, and how many temperatures to record in the output tables.

Data

The real-time air temperature measurements can be found in public variable **T_air(N_AirTemps)**. **T_air(1)** will be the air temperature in °C, measured by the probe wired to SE1. Additional probes wired to consecutive channels will be in consecutive elements of **T_air()**.

The air temperature profile data will be saved in output tables **RawData**, **SiteAvg**, **CalAvg**, and **IntAvg**.

Appendix F. Valve Sequence Timing

The AP200 has two valve sequences: the profile sequence and the calibration (zero/span) sequence. The AP200 will run the majority of the time in the profile sequence, cycling through the profile inlets in order from one to the number of levels selected (4 to 8). If configured for automatic zero/span, then the AP200 will periodically run the calibration sequence before returning to the profile sequence. The timing of the valve switching depends on settings of the following system configuration variables (see Section 5.4.1, *System Configuration Variables*, for details on the system configuration variables):

LEVELS_USED

MEASURE_TANKS

AUTO_ZEROSPAN

CAL_INTERVAL

CAL_TIMEOFFSET

Profile Sequence

The profile sequence cycles through the profile inlets in order, starting at 1, and ending at the value of **LEVELS_USED**. This cycle repeats until it is interrupted for an automated calibration sequence (if this feature is enabled) or until the sequence is stopped by the user.

The AP200 has pre-programmed parameters that determine the timing of the profile sequence. These timing parameters allow for at least 15 s on each level, with 10 s omitted to allow the CO₂ and H₂O concentrations to equilibrate, and 5 s included in the average. In addition to these constraints, the timing parameters depend on the number of levels used (**LEVELS_USED**) to give an integer number of complete cycles in each half-hour averaging period. As shown in TABLE F-1, the timing for 4, 6, or 8 levels simply use these minimum values, giving 15, 20, or 30 cycles per half hour. The times are extended slightly for 5 or 7 levels to give integer number of cycles per half hour.

Number of Levels	Time on Level (s)	Omitted Time (s)	Averaged Time (s)	Cycle Time (s)	Cycles/ Half Hour
4	15	10	5	60	30
5	18	12	6	90	20
6	15	10	5	90	20
7	18/17*	12/11*	6	120	15
8	15	10	5	120	15

*18 s on level 1 with 12 s omitted; 17 s with 11 s omitted for the rest of the levels

The profile sequence timing parameters are implemented in the AP200 CRBasic program as a set of three arrays. These arrays have eight locations to accommodate up to eight levels. These arrays are not accessible in the Public table, but they are output to the **TimeInfo** table as a record of the system configuration. See Appendix D, *Output Tables*, for details on this table. As the AP200 program steps through the profile sequence, variable **sequence_index** cycles from 1 to **LEVELS_USED** to access the values stored in the corresponding location in these arrays.

Array ProfileSequence() contains the valve number for each step in the profile sequence. The values in this array increment from 1 to **LEVELS_USED**. If the intake assemblies are installed according to normal convention, the lowest intake will be designated level 1 and will connect to inlet 1 on the AP200 system enclosure. This gives a one-to-one correspondence between public variables **valve_number** and **sequence_index**, as well as the terms level and step. (The intake assembly at the bottom of the tower (level 1) connects to inlet 1 on the AP200 system enclosure, which is controlled by valve number 1. This valve is selected during step one of the profile sequence, defined by **seq_index = 1**). Array locations beyond **LEVELS_USED** are filled with zero.

Array ProfileOnCounts() contains the time (number of scans) for each step in the profile sequence. This is similar to the **Time on Level** given in TABLE F-1, except it is multiplied by two to account for the datalogger scan rate (2 scans/s). For most cases, the same value is used for each step in the sequence. However, for seven levels, one extra second is allocated for level 1 to achieve an integer number of cycles per half hour. Array locations beyond **LEVELS_USED** are filled with zero.

ProfileOmitCounts() is the time (number of scans) to wait after a valve switch before including data in the average. This is the **Omitted Time** given in TABLE F-1, multiplied by two to account for the datalogger scan rate (2 scans/s). For most cases, the same value is used for each step in the sequence. For seven levels, an extra second is allocated for level 1 to achieve an integer number of cycles per half hour. Array locations beyond **LEVELS_USED** are filled with zero.

Synchronization to the Real-time Clock

When the AP200 program starts or when the user restarts the sequence (see Section 5.5, *Stopping and Starting the Sequence*), the AP200 will delay the actual profile sequence start by up to two minutes to synchronize the sequence to the datalogger real-time clock. The following examples illustrate this synchronization:

Example 1: **LEVELS_USED = 8**, **STARTsequence** set to **True** at 9:15:25:

As shown in TABLE F-1, the cycle time for 8 levels is 120 s (2 min). To synchronize with the real time clock, the sequence must start at a multiple of 2 min (for example, 9:00:00, 9:02:00, 9:04:00, etc.). Valve 1 will be selected as soon as **STARTsequence** is set = **True** (9:15:25), but the sequence will not actually start until 9:16:00 (the earliest multiple of 2 min). Data will be included in the average for level 1 from 9:16:10 to 9:16:15, when the valve will switch to level 2. Data will be included in the average for level 2 from 9:16:25 to 9:16:30, when the valve will switch to level 3, and so on.

Example 2: **LEVELS_USED = 5**, **STARTsequence** set to **True** at 9:00:20.

As shown in TABLE F-1, the cycle time for 5 levels is 90 s. To synchronize with the real-time clock, the sequence must start at multiples of 90 s, (for example, 9:00:00, 9:01:30, 9:03:00, etc.) Valve 1 will be selected as soon as **STARTsequence** is set = **True** (9:00:20), but the sequence will not actually start until 9:01:30. Data will be included in the average for level 1 from 9:01:42 to 9:01:48, when the valve will switch to level 2. Data will be included in the average for level 2 from 9:02:00 to 9:02:06, when the valve will switch to level 3, and so on.

Calibration Sequence

The calibration (zero/span) sequence timing depends on the number of levels used and also on whether the zero/span is merely to be checked or if the IRGA is to set its internal zero and span coefficients. In either case the zero/span sequence cycle time is chosen to replace an integer multiple of profile sequences. This allows a seamless transition back and forth between the profile sequence and the calibration sequence.

The zero/span behavior is determined by two of the system configuration variables as shown in TABLE F-2.

TABLE F-2. System Configuration Variables of Zero/Span		
MEASURE_TANKS	AUTO_ZEROSPAN	
False	False	Do not measure cylinders. Run profile sequence all the time
	True	
True	False	Measure cylinders but do not set the zero or span
	True	Measure cylinders and set the zero and span

Without Setting Zero and Span

If the AP200 is configured with **MEASURE_TANKS = True** and **AUTO_ZEROSPAN = False**, it will check the zero and CO₂ span, but it will not command the IRGA to set them. This section gives timing details for this case. The AP200 zero/span sequence will:

- Select inlet 10 (CO₂ Span), omit at least 20 s for equilibration, and include 10 s in the average.
- Select inlet 9 (Zero), omit at least 30 s for equilibration, and include 10 s in the average.
- Select inlet 1 for at least 10 s. This allows the humidity in the tubing and IRGA to equilibrate before restarting the profile sequence.

As shown in TABLE F-3, this minimum timing adds up to 80 s for the zero/span sequence. The time for one or more of the steps is increased as

needed to equal the profile sequence cycle time (or a multiple of the cycle time). For example, if there are eight levels used, the profile cycle time is 120 s. This means 40 s must be added to the zero/span sequence. This has been allocated as 10 s extra (each) for the span and zero, and 20 s extra for equilibration on level 1 at the end of the sequence.

The zero/span sequence takes the place of one profile cycle for five, six, seven, or eight levels. However, if there are four levels used, the profile cycle time is only 60 s. This is less than the 80 s required for a zero/span check, so two profile cycles must be replaced. This gives a total of 120 s, the same as the scenario with eight levels.

TABLE F-3. Timing for Zero/Span Sequence (check only)					
Number of Levels	Profile Cycle Time (s)	Span Time (s)	Zero Time (s)	Equilibration Time (s)	Total Zero/Span Time (s)
Minimum		30	40	10	80
4	60	40	50	30	120
5	90	30	40	20	90
6	90	30	40	20	90
7	120	40	50	30	120
8	120	40	50	30	120

Similar to the profile sequence, the zero/span sequence timing parameters are implemented as a set of three arrays: **CalSequence()**, **CalOnCounts()**, and **CalOmitCounts()**. These arrays are not accessible in the Public table, but they are output to the TimeInfo table as a record of the system configuration. See Appendix D, *Output Tables*, for details on this table.

Each zero/span sequence adds two records to the **SiteAvg** and **CalAvg** output tables: one for CO₂ Span and one for Zero.

With Zero and Span

If the AP200 is configured with **MEASURE_TANKS = True** and **AUTO_ZEROSPAN = True**, it will check the zero and CO₂ span, command the IRGA to set them, and then verify the new readings. This section gives timing details for this case. The AP200 zero/span sequence will:

- Select inlet 10 (CO₂ Span), omit at least 20 s for equilibration, and include 10 s in the average
- Select inlet 9 (Zero), omit at least 30 s for equilibration, and include 10 s in the average
- Stay on inlet 9 (Zero) and set the CO₂ zero (~10 s)
- Stay on inlet 9 (Zero) and set the H₂O zero (~10 s)
- Stay on inlet 9 (Zero) and average for ~10 s
- Select inlet 10 (CO₂ Span), equilibrate for 30 s, and average 10 s
- Stay on inlet 10 (CO₂ Span) and set the CO₂ span (~10 s)
- Stay on inlet 10 (CO₂ Span) and average for ~10 s

- Select inlet 1 to allow at least 10 s extra equilibration time. This allows the humidity in the tubing and IRGA to equilibrate before restarting the profile sequence.

As shown in TABLE F-4, this minimum timing adds up to 170 s for the zero/span sequence. The timing parameters are adjusted as needed to equal a multiple of the profile sequence cycle time. For example, if there are 8 levels used, the profile cycle time is 120 s. Because this is less than the 170 s required, it is doubled to 240 s. Extra equilibration time is added to each step to make the zero/span sequence equal 240 s. If there are four levels used, the profile cycle time is only 60 s. Three profile cycles times are used to give 180 s for the zero/span sequence.

TABLE F-4. Timing for Zero/Span Sequence (setting the IRGA)

Number of Levels	Profile Cycle Time (s)	Measure CO ₂ Span Time (s)	Measure & Set Zero Time (s)	Measure & Set CO ₂ Span Time (s)	Equilibration Time (s)	Zero/Span Time (s)
Minimum		30	70	60	10	170
8	120	40	100	70	30	240
7	120	40	100	70	30	240
6	90	30	70	60	20	180
5	90	30	70	60	20	180
4	60	30	70	60	20	180

Each time the zero/span sequence is run, five records will be added to the **SiteAvg** and **CalAvg** tables:

- CO₂ Span tank before setting zero or span
- Zero tank before setting zero or span
- Zero tank after setting zero
- CO₂ Span tank after setting zero
- CO₂ Span tank after setting span

Appendix G. AC/DC Adapter Kit

The 28549 AC/DC Power Adapter Kit allows an AP200 CO₂/H₂O Atmospheric Profile System to be powered from AC mains power.

To install the 28549 in an AP200 system enclosure, untie the power adapter output cable and feed it under the tubes below the AP200 pump module. Position the power adapter on the rubberized tab and secure it with the Velcro strap as shown in FIGURE G-1.



FIGURE G-1. Installation location of power adapter

Bundle the cable, leaving the connector end free, and tie it down to the ribbon cable and the green, grounding wires as shown in FIGURE G-2.



FIGURE G-2. Bundled cable of power adapter

Strip the ends of the cable extension 3/8 inch and connect it to the AP200 power input terminals as shown in FIGURE G-3.

NOTE

The wire with the white stripe goes to the positive input terminal.

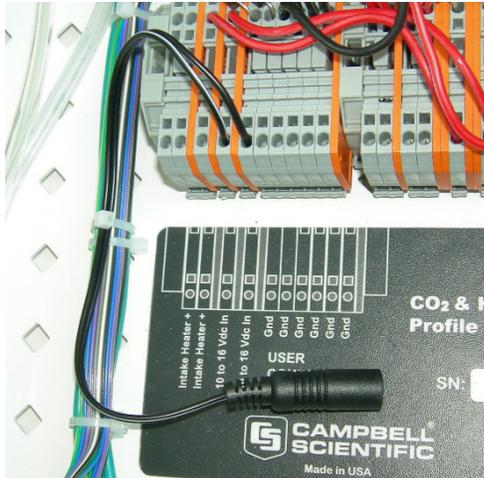


FIGURE G-3. Cable extension connected to AP200 power input terminal

If the power adapter kit was ordered with a detachable power cord, remove the AP200 enclosure feedthrough cap, insert the end of the power cord, and plug it into the power adapter.

NOTE

If a long AC power cord is required, have a qualified electrician connect the field-wireable plug (pn 28771, supplied with the kit) to a user-supplied cord.

Secure the AC power cord with a wire tie and replace the feedthrough cap as shown in FIGURE G-4.



FIGURE G-4. AC power cord secured within AP200 system enclosure

Plug the AC power cord into AC mains power, 100 Vac to 240 Vac, 47 Hz to 63 Hz.

Plug the power adapter output cable into the cable extension as shown in FIGURE G-5.



FIGURE G-5. Power adapter output cable plugged into cable extension

Appendix H. Swagelok[®] Fittings

This appendix gives a few tips on using Swagelok[®] tube fittings. For more information, consult a local Swagelok[®] dealer or visit their website at www.swagelok.com.

General Notes:

- Do not use fitting components from other manufacturers. They are not interchangeable with Swagelok[®] fittings.
- Do not attempt to use metric fittings—6.0 mm is very close to 0.25 in, but they are not interchangeable. Metric fittings can be identified by the stepped shoulder on the nut and on the body hex.
- Make sure that the tubing rests firmly on the shoulder of the fitting body before tightening the nut.
- Never turn the fitting body. Instead, hold the fitting body and turn the nut.
- Keep tubing and fittings clean. Always use caps and plugs to keep dirt and debris out.
- Do not overtighten fittings as it will damage the threads.
- If a nut cannot be easily tightened by hand, it is an indication that the threads have been damaged. Replace any damaged nuts and fittings.

H.1 Assembly

The first time a Swagelok[®] fitting is assembled, the ferrules become permanently swaged onto the tube. Assembly instructions vary depending on plastic or metal tubing. The assembly instructions are also slightly different for an initial installation than for subsequent reassembly.

First-time assembly, plastic tubing:

1. Cut the tubing to length.
2. Make sure the cut is square and free of burrs.
3. Some types of plastic tubing have an aluminum layer. Take care not to flatten the tube as it is being cut.
4. Push an insert into the end of the tubing.
5. Do not remove the nuts and ferrules from the fitting. Simply insert the tube into the assembled fitting until it bottoms out.
6. Rotate the nut finger-tight.
7. While holding the fitting body steady, tighten the nut one and one-quarter turns. (For 1/16-in or 1/8-in sized fittings, tighten the nut three-quarters turn.)

First-time assembly, metal tubing:

Extra care is needed to avoid over-tightening brass fittings when used with metal tubing. These notes apply to reducers and port connectors as well as metal tubing.

NOTE

No insert is required with metal tubing.

1. Do not remove the nuts and ferrules from the fitting. Simply insert the tube into the assembled fitting until it bottoms out.
2. Rotate the nut until it is finger tight.
3. While holding the fitting body steady, tighten the nut until it feels tight. Normally, this will be less than one full turn. Tightening a full one and one-quarter turns will damage the threads on the fitting and nut.

Reassembly, plastic or metal tubing:

Swagelok® tube fittings may be assembled and disassembled many times, but the assembly process is slightly different than the first assembly.

1. Insert the tube with pre-swaged ferrules into the fitting until the front ferrule seats against the fitting body.
2. Rotate the nut until it is finger tight.
3. While holding the fitting body steady, tighten the nut slightly with a wrench.

H.2 Common Replacement Parts

Tubing

Campbell Scientific can provide several types and sizes of plastic tubing. A tubing cutter, pn 7680, can be used to cut these tubes.

CSI pn	Tubing Type	OD (in)	ID (in)	Length (ft)	Construction	Notes
15702	Synflex 1300	1/4	0.17	500	Black HDPE jacket, overlapped aluminum tape, ethylene copolymer liner	Aluminum layer limits diffusion; best for sample tubes
15703		3/8	1/4	250		
19164		1/2	3/8	250		
26506	LLDPE	3/8	1/4	500	Black, linear, low-density polyethylene	More flexible than HDPE
25539		1/2	3/8	500		
19499	HDPE	5/8	1/2	100	Black, high-density polyethylene	Required for larger diameter

Tubing inserts

Inserts are recommended for use in plastic tubing. These inserts become permanently attached to the tubing at the first assembly, so spare inserts may be needed for replacing the ends of tubing.



FIGURE H-1. Swagelok® insert

TABLE H-2. Dimensions and Part Numbers for Swagelok® Inserts			
Tubing OD (in)	Tubing ID (in)	Swagelok® pn	CSI pn
1/4	1/8	B-405-2	15834
1/4	0.17	B-405-170	15830
1/4	3/16	B-405-3	15713
3/8	1/4	B-605-4	9845
1/2	3/8	B-815-6	17380
5/8	1/2	B-1015-8	19495

Ferrules

Each Swagelok® fitting comes assembled with the front and back ferrules included. These ferrules are permanently swaged onto the tubing at the first assembly, so spare ferrules may be needed for replacing the ends of tubing.



Back ferrule



Front ferrule

FIGURE H-2. Front and back Swagelok® ferrules

TABLE H-3. Dimensions and Part Numbers for Swagelok® Ferrules		
Tubing OD (in)	Swagelok® pn (front/back)	CSI pn (1 set)
1/8	B-203-1/B-204-1	N/A
1/4	B-403-1/B-404-1	15890
3/8	B-603-1/B-604-1	15889
1/2	B-813-1/B-814-1	N/A
5/8	B-1013-1/B-1014-1	N/A

Plugs

Swagelok® plugs are used to plug a fitting when its tube is disconnected. It is strongly recommended to plug all fittings to keep them clean. Spare plugs may be needed if they become lost or damaged.



FIGURE H-3. Swagelok® plug

TABLE H-4. Dimensions and Part Numbers for Swagelok® Plugs		
Tubing OD (in)	Swagelok® pn	CSI pn
1/8	B-200-P	26803
1/4	B-400-P	15891
3/8	B-600-P	13712
1/2	B-810-P	17381
5/8	B-1010-P	N/A

Caps

Swagelok® caps are used to cap the end of tubes when they are disconnected from the fitting. It is strongly recommended to cap all disconnected tubes to keep them clean. Spare caps may be needed if they become lost or damaged.



FIGURE H-4. Swagelok® cap

TABLE H-5. Dimensions and Part Numbers for Swagelok® Caps		
Tubing OD (in)	Swagelok® pn	CSI pn
1/8	B-200-C	19219
1/4	B-400-C	15831
3/8	B-600-C	15547
1/2	B-810-C	17335
5/8	B-1010-C	19496

Appendix I. Useful Equations

Dewpoint Temperature Calculations

The IRGA reports the dewpoint temperature (public variable **Td_cell**), but this represents the conditions in the sample cell. The AP200 converts this to dewpoint temperature in the ambient air, **Td_ambient**. This conversion is a three-step process: 1) calculate vapor pressure in the sample cell, 2) compensate for the pressure difference between the ambient and the sample cell, and 3) calculate ambient dewpoint temperature from ambient vapor pressure. The equations are adapted from:

Buck, A.L. 1981, "New equations for computing vapor pressure and enhancement factor", *Journal of Applied Meteorology*, **20**, 1527-1532.

Calculate vapor pressure from dewpoint temperature:

$$e_{cell} = (0.1)f_3 6.1121 e^{\left(\frac{17.502T_{cell}}{240.97+T_{cell}}\right)} \quad \text{Buck, eq. 8}$$

$$f_3 = 1.0007 + 3.46 \times 10^{-6} (10P_{amb}) \quad \text{Buck, eq. 7c}$$

where:

e_{cell} is the vapor pressure in the sample cell

the factor 0.1 converts the vapor pressure from mb to kPa.

f_3 is the enhancement factor

T_{cell} is the dewpoint temperature in the sample cell

$10P_{amb}$ is the ambient pressure, converted from kPa to mb

Compensate for the reduced pressure in the sample cell:

$$e_{amb} = e_{cell} \left(\frac{P_{amb}}{P_{cell}} \right)$$

where:

e_{amb} is the ambient vapor pressure

P_{cell} is the pressure in the sample cell

Calculate the ambient dewpoint temperature:

$$T_{amb} = \frac{240.97z}{17.502 - z} \quad \text{Buck, eq. 7a}$$

$$z = \ln\left(\frac{10e_{amb}}{6.1121f_3}\right) \quad \text{Buck, eq. 7b}$$

where:

T_{amb} is the ambient dewpoint temperature

z is an intermediate result

\ln is the natural logarithm

Appendix J. AP200 Pump Replacement

J.1 Introduction

A properly maintained AP200 system will exceed the lifetime of the system's pump. This section provides step-by-step instructions for the user to replace the system pump (pn 33241), rather than needing to return the pump enclosure to Campbell Scientific for replacement.

J.2 Removal

The AP200 pump module is mounted to the left side of the AP200 system enclosure as shown in FIGURE J-1.



FIGURE J-1. Location of pump enclosure inside AP200 system enclosure

To remove an AP200 pump, carry out the following steps:

1. Place the pump module on a horizontal surface.

NOTE

It is very difficult to replace the pump if the module is mounted vertically on a tower.

2. Remove the six screws that hold the cover on the AP200 pump module enclosure (see FIGURE J-2). If the screws become lost or damaged, they can be replaced with pn488.

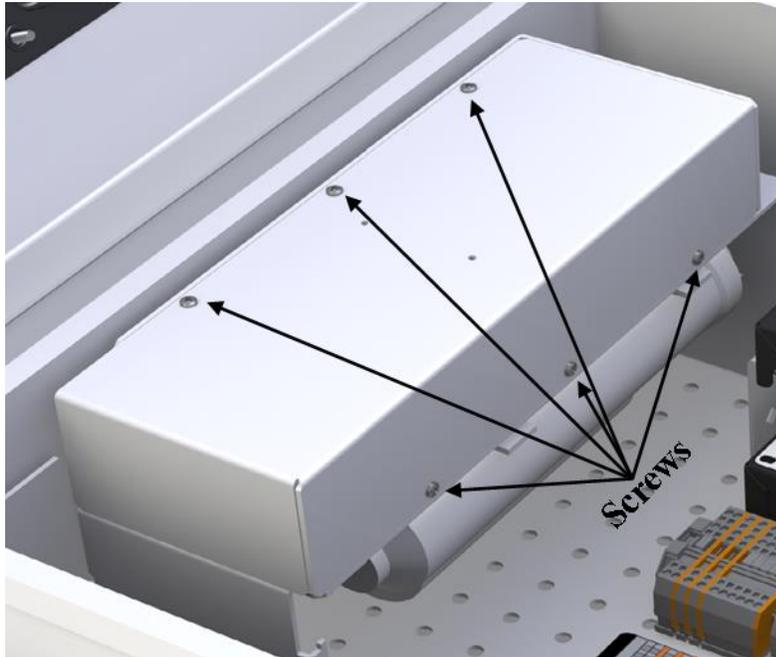


FIGURE J-2. Location of six screws of pump enclosure cover

3. Remove the cover to expose the pump (FIGURE J-3).

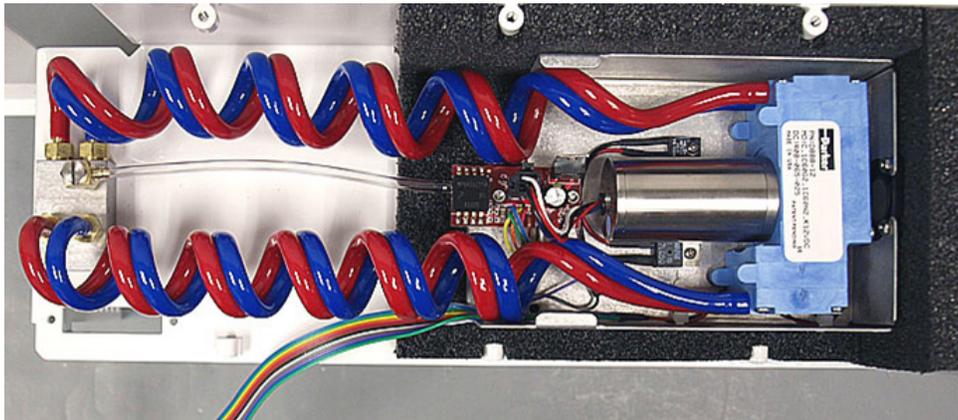


FIGURE J-3. AP200 pump

NOTE

As of May 2017, replacement pumps shipping from Campbell Scientific, Inc. have the wire exiting the pump from the top (original pumps had the wire exiting the side of the pump). To account for this change, the original pump module inner plate needs to be replaced with one that includes a large notch to provide clearance for the wire. This replacement inner plate is included in the replacement pump kit (pn 33241).

4. Using the “notched” end of the new inner plate, slowly pry away the original inner plate working around all sides and being careful not to damage the foam backing (FIGURE J-4).



FIGURE J-4. Removal of original pump module inner plate and replacement with new inner plate provided in pump replacement kit (pn 33241)

5. Remove the paper from the back of the adhesive tape on the new inner plate (FIGURE J-5) and adhere to the foam in the same location as the original plate paying attention to the direction of the notch (FIGURE J-6).

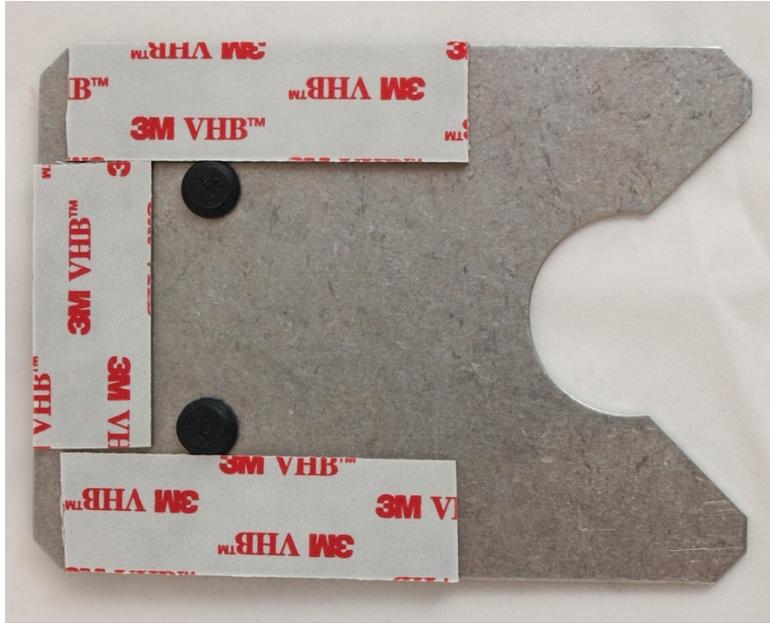


FIGURE J-5. New inner plate with adhesive tape

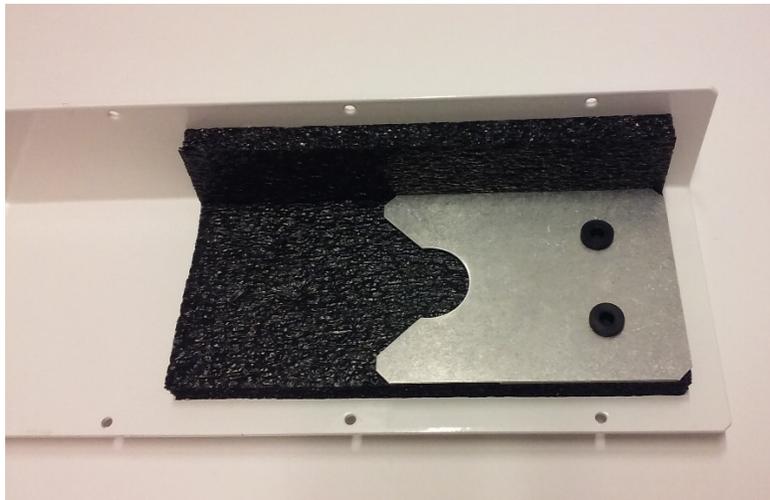


FIGURE J-6. New inner plate placement on pump module cover

6. Remove pump connector from the pump electronics (FIGURE J-7).

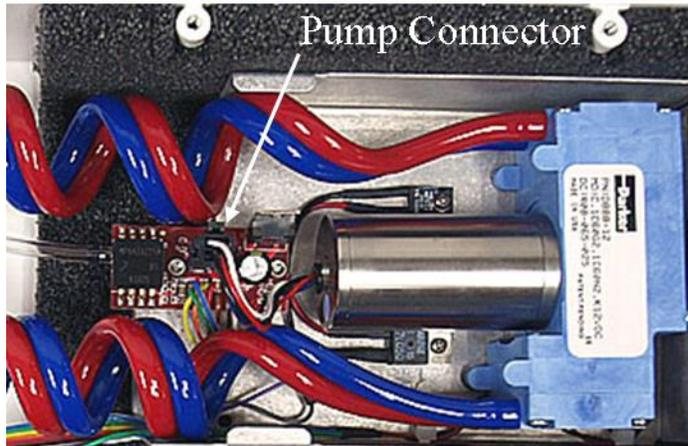


FIGURE J-7. Location of pump connector in AP200 pump electronics

7. Gently lift the pump assembly from foam, leaving the tubing attached.
8. Turn assembly over and remove the two self-tapping #6 screws that attach the pump to the metal box, as shown in FIGURE J-8. If these screws become lost or damaged, replace them with pn 13535.

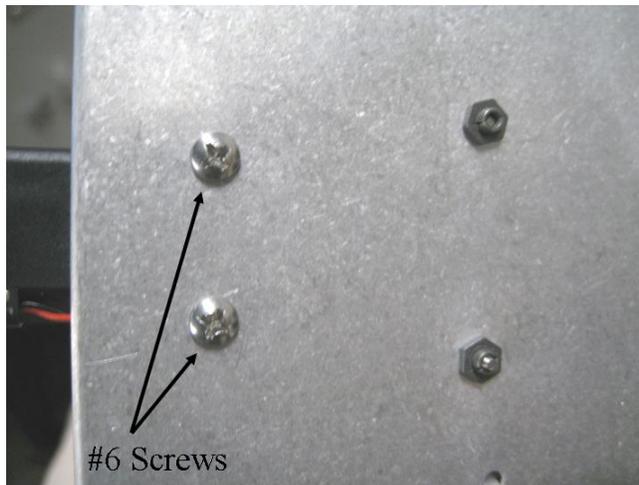


FIGURE J-8. Self-tapping screws attaching pump to metal box

9. Cut the blue (inlet) and red (outlet) tubing on each side of the pump behind the barbed connector as shown in FIGURE J-9.



FIGURE J-9. Location of cuts to remove pump assembly from tubing

10. Remove the pump from the assembly.

J.3 Installation

To reinstall the AP200 pump, carry out the following steps:

1. Position the pump with the label up and connect the coiled tubing on both sides of the pump (see FIGURE J-10). Blue tubing connects the inlets and red connects the outlets as directional arrows show on the side of the pump (FIGURE J-11).

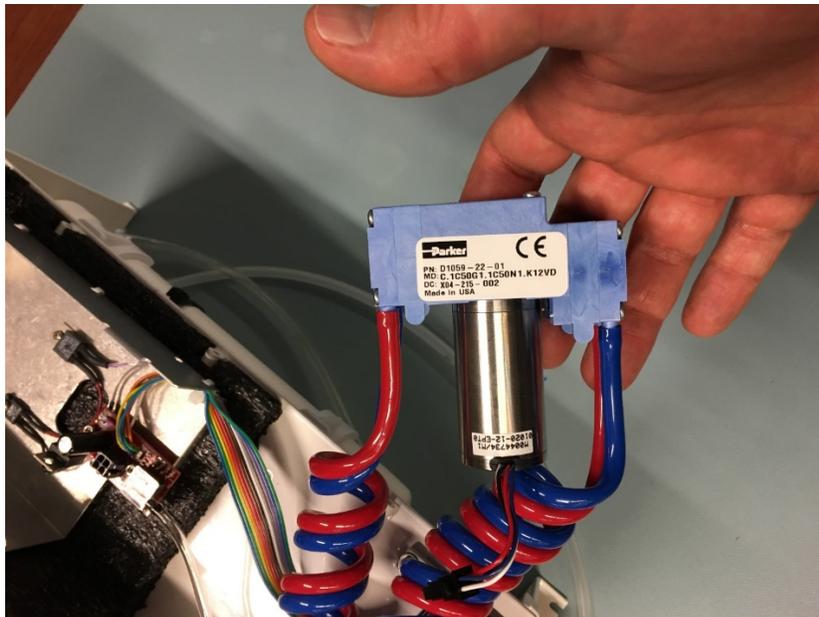


FIGURE J-10. Inlet and outlet tubing reconnected to pump

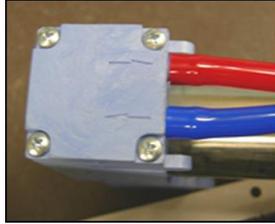


FIGURE J-11. Pump side with inlet and outlet tubing connected

2. Reattach the pump to metal box with two self-tapping screws on the back of the pump module electronics plate (FIGURE J-8).

NOTE

Be careful to not pinch the fan wires under the pump and do not overtighten the screws.

3. Reattach the pump connector to the pump electronics (FIGURE J-7).
4. Place the pump assembly back into the foam of the pump enclosure (FIGURE J-12).



FIGURE J-12. Proper placement of AP200 pump (SN 33240) back into foam of pump enclosure.

5. Hold the pump assembly securely while replacing the cover of the pump enclosure. Make sure the fan does not slide back out of its hole in the foam. Fasten the cover in place with the six screws as indicated in FIGURE J-2.

NOTE

Do not overtighten screws.

Campbell Scientific Worldwide Offices

Australia

Location: Garbutt, QLD Australia
Email: info@campbellsci.com.au
Website: www.campbellsci.com.au

Brazil

Location: São Paulo, SP Brazil
Email: andread@campbellsci.com.br
Website: www.campbellsci.com.br

Canada

Location: Edmonton, AB Canada
Email: dataloggers@campbellsci.ca
Website: www.campbellsci.ca

China

Location: Beijing, P. R. China
Email: info@campbellsci.com.cn
Website: www.campbellsci.com.cn

Costa Rica

Location: San José, Costa Rica
Email: info@campbellsci.cc
Website: www.campbellsci.cc

France

Location: Antony, France
Email: info@campbellsci.fr
Website: www.campbellsci.fr

Germany

Location: Bremen, Germany
Email: info@campbellsci.de
Website: www.campbellsci.de

South Africa

Location: Stellenbosch, South Africa
Email: sales@csafrica.co.za
Website: www.campbellscientific.co.za

Southeast Asia

Location: Bangkok, Thailand
Email: info@campbellsci.asia
Website: www.campbellsci.asia

Spain

Location: Barcelona, Spain
Email: info@campbellsci.es
Website: www.campbellsci.es

UK

Location: Shepshed, Loughborough, UK
Email: sales@campbellsci.co.uk
Website: www.campbellsci.co.uk

USA

Location: Logan, UT USA
Email: info@campbellsci.com
Website: www.campbellsci.com

Please visit www.campbellsci.com/contact to obtain contact information for your local US or international representative.