


# INSTRUCTION MANUAL



## CS10-L and CS15-L Current Transformers

Revision: 1/10

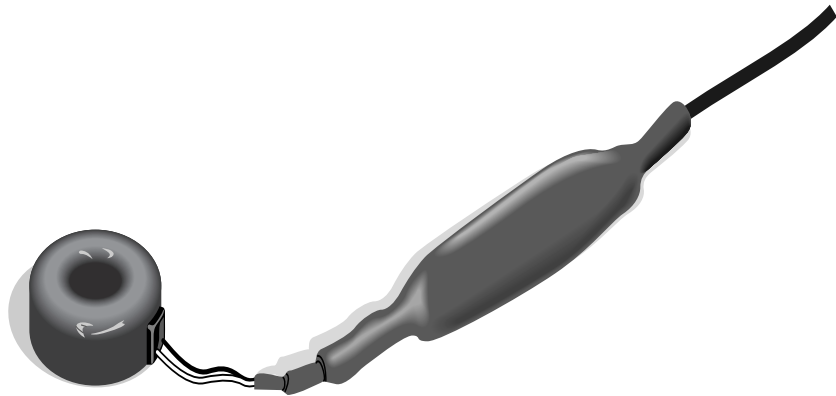

Copyright © 2001-2010  
Campbell Scientific, Inc.

# **Warranty and Assistance**

---

The **CS10-L AND CS15-L CURRENT TRANSFORMERS** are warranted by CAMPBELL SCIENTIFIC, INC. to be free from defects in materials and workmanship under normal use and service for twelve (12) months from date of shipment unless specified otherwise. Batteries have no warranty. CAMPBELL SCIENTIFIC, INC.'s obligation under this warranty is limited to repairing or replacing (at CAMPBELL SCIENTIFIC, INC.'s option) defective products. The customer shall assume all costs of removing, reinstalling, and shipping defective products to CAMPBELL SCIENTIFIC, INC. CAMPBELL SCIENTIFIC, INC. will return such products by surface carrier prepaid. This warranty shall not apply to any CAMPBELL SCIENTIFIC, INC. products which have been subjected to modification, misuse, neglect, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for a particular purpose. CAMPBELL SCIENTIFIC, INC. is not liable for special, indirect, incidental, or consequential damages.

Products may not be returned without prior authorization. The following contact information is for US and International customers residing in countries served by Campbell Scientific, Inc. directly. Affiliate companies handle repairs for customers within their territories. Please visit [www.campbellsci.com](http://www.campbellsci.com) to determine which Campbell Scientific company serves your country.

To obtain a Returned Materials Authorization (RMA), contact CAMPBELL SCIENTIFIC, INC., phone (435) 753-2342. After an applications engineer determines the nature of the problem, an RMA number will be issued. Please write this number clearly on the outside of the shipping container. CAMPBELL SCIENTIFIC's shipping address is:

**CAMPBELL SCIENTIFIC, INC.**  
RMA# \_\_\_\_\_  
815 West 1800 North  
Logan, Utah 84321-1784

For all returns, the customer must fill out a "Declaration of Hazardous Material and Decontamination" form and comply with the requirements specified in it. The form is available from our website at [www.campbellsci.com/repair](http://www.campbellsci.com/repair). A completed form must be either emailed to [repair@campbellsci.com](mailto:repair@campbellsci.com) or faxed to 435-750-9579. Campbell Scientific will not process any returns until we receive this form. If the form is not received within three days of product receipt or is incomplete, the product will be returned to the customer at the customer's expense. Campbell Scientific reserves the right to refuse service on products that were exposed to contaminants that may cause health or safety concerns for our employees.

# CS10-L and CS15-L Table of Contents

---

PDF viewers note: These page numbers refer to the printed version of this document. Use the Adobe Acrobat® bookmarks tab for links to specific sections.

<b>1. General Description</b> .....	1
<b>2. Specifications</b> .....	1
<b>3. Installation</b> .....	2
<b>4. Wiring</b> .....	3
<b>5. Programming</b> .....	3
5.1 CR800, CR850, CR1000, or CR3000 Programming .....	3
5.2 CR200(X)-series Dataloggers.....	4
5.3 CR510, CR10X, CR23X Dataloggers .....	6
5.4 21X, CR7 Dataloggers.....	8
5.5 CR1000 with Multiplexer Sample Program .....	10
5.6 CR10X with Multiplexer Sample Program.....	11

## Appendix

<b>A. Theory of Operation</b> .....	A-1
A.1 Typical Electrical Circuit.....	A-1
A.2 Current Transformer Description.....	A-3
A.3 Converting a Milliamp Signal to a Millivolt Signal.....	A-4
A.4 Multiplier .....	A-5
A.5 CS10/CS15 Comparison .....	A-5

## Figures

1. CS10-L Current Transformer .....	1
2. AC Load Wire Installed in CS10 (color of ac load wire can vary).....	2
3. Graph of a CS15 Waveform .....	5
4. Graph of CS10 Waveform using Burst Mode .....	7
5. Graph of a CS10 Waveform using 90 Samples of Amperage .....	8
A-1. Generator Schematic .....	A-1
A-2. Schematic of Generator with Current Transformer .....	A-2
A-3. Schematic of Current Transformer with the Wire .....	A-2
A-4. CS10 with the Wire .....	A-3
A-5. Magnetic Flux Schematic .....	A-3
A-6. Windings Schematic.....	A-4
A-7. CS10 Schematic.....	A-5
A-8. Adding 1250 mV Creates Positive Output .....	A-6
A-9. CS15 Schematic.....	A-6
A-10. CS15 Measurement Range .....	A-7




# ***CS10-L and CS15-L Current Transformers***

---

## **1. General Description**

Campbell Scientific's CS10 and CS15 detect and measure the ac current along an electrical wire using the magnetic field that is generated by that current. The CS10 or the CS15 do not have direct electrical connection to the system. These sensors output a millivolt signal allowing them to be directly connected to our dataloggers.

The CS10 is compatible with our CR800, CR850, CR1000, CR3000, CR510, CR10(X), and CR23X dataloggers. It uses CR Magnetic's CR8459 Current Transducer to measure the approximate current over a range of 0 to 200 A. The CS15 was developed specifically for our CR200(X)-series dataloggers. It is a modified version of the CS10 that measures the approximate current over the range of 0 to 125 A. Both sensors are recommended for measurements that do not require high accuracy.

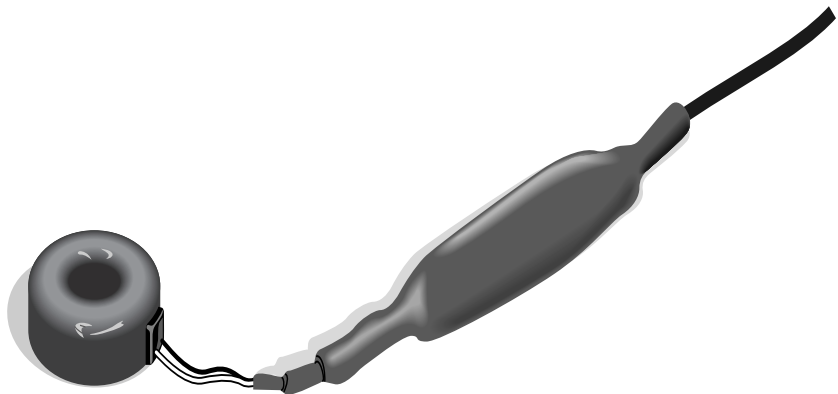

*FIGURE 1. CS10-L Current Transformer*

## **2. Specifications**

### **Example Applications:**

- Motor or generator load conditions
- Efficiency studies
- Intermittent fault detection
- Rough submetering

**Specifications**

<b>Measurement Ranges:</b>	0.15 to 200 A (CS10) 0.15 to 125 A (CS15)
<b>Frequency:</b>	50 and 60 Hz
<b>Insulation Resistance:</b>	100 M ohm @ 500 VDC
<b>High Potential:</b>	2000 volts
<b>Rated Current:</b>	200 A (CS10), 125 A (CS15)
<b>Storage Temperature:</b>	-25°C to 70°C
<b>Operating Temperature:</b>	-25°C to 55°C
<b>Case Material:</b>	Polypropylene Resin
<b>Construction:</b>	Epoxy Encapsulated
<b>Accuracy with 10 ohm burden max. (resistive):</b>	typically $\pm 5$ percent of actual value with provided multiplier
<b>Dimensions:</b>	Outer diameter: 1.89" (4.8 cm) Inner diameter: 0.75" (1.9 cm) Height: 0.67" (1.7 cm)

### 3. Installation

Place one AC load wire through the hole of the CS10-L or CS15-L (see Figure 2).



*FIGURE 2. AC Load Wire Installed in CS10  
(color of ac load wire can vary)*

## 4. Wiring

The CS10-L and CS15-L use a single-ended analog channel as follows.

CS10-L	
White	Single-Ended Channel
Black	AG or $\underline{\underline{\text{---}}}$
Shield	AG or $\underline{\underline{\text{---}}}$

CS15-L	
Red	EX
White	SE
Black	$\underline{\underline{\text{---}}}$
Shield	$\underline{\underline{\text{---}}}$

## 5. Programming

### NOTE

SCWIN users: This manual was written primarily for those whose needs are not met by SCWin. Your procedure is much simpler: just add the CS10-L or CS15 (in the Miscellaneous Sensors folder), save your program, and follow the wiring shown in Step 2 of SCWin.

The datalogger is programmed using either CRBasic or Edlog. Dataloggers that use CRBasic include our CR200(X)-series, CR800, CR850, CR1000, and CR3000. Dataloggers that use Edlog include our CR510, CR10(X), and CR23X. In CRBasic, the VoltSE instruction is used to measure the sensor. In Edlog, a P1 instruction is used.

In order to monitor the amperage of an alternating current circuit, the program must take many samples from the CS10-L or CS15-L sensor to capture the waveform over a specified time, and then calculate the average energy under the curve. There are many methods to do this, depending on the datalogger, the untapped programming capacity, and other factors.

### 5.1 CR800, CR850, CR1000, or CR3000 Programming

With these dataloggers, the best method for monitoring amperage is to make millivolt burst measurements, and then calculate RMS. The millivolt burst measurements are made by using the VoltSE instruction with multiple reps on the same channel (i.e., negative value for channel number). The SpaDevSpa instruction calculates RMS.

### NOTE

Program must be run in the pipeline mode.

It is important to get complete cycles. If you make 100 measurements during a 0.1 second time period, you'll get five complete cycles for a 50 Hz waveform or six complete cycles for a 60 Hz waveform.

**CAUTION**

Do not average the waveform or use 60 Hz (or 50 Hz) rejection. Under these circumstances, the amperage value will always be zero.

Below is an example CR1000 program. In the program, a multiplier of 0.2 is applied to the RMS value; see Section A.4 for more information.

```
'CR1000 program to measure rms current
PipeLineMode           'must be pipeline mode

Const num_samples = 100  '100 Samples @ 1000 micro sec = 0.1 second (5 @ 50Hz, or 6 @ 60 Hz).
Public Amps            'the line current
Public Amp_mult
Dim i_sig (num_samples) 'to hold the burst measurements, each 100 samples long
PreserveVariables      'to store values between power cycles

DataTable (AmpTable,True,-1)
  DataInterval (0,1,Min,10)
  Maximum (1,Amps,IEEE4,False,False)
  Average (1,Amps,FP2,False)
EndTable

BeginProg
  Amp_mult = 0.2          '0.2 multiplier for the CS10-L
  Scan (250, mSec, 10, 0)
    VoltSe (i_sig (1), num_samples, mV2500,-1, True, 1000, 0, 1.0, 0)
    StdDevSpa (Amps, num_samples, i_sig (1))
    Amps = Amps * Amp_mult 'put in amps
    CallTable (AmpTable)
  NextScan
EndProg
```

## 5.2 CR200(X)-series Dataloggers

The CS15 is manufactured specifically for the CR200(X)-series dataloggers. It has an extra wire and requires an ExciteV instruction in the program. The voltage excitation creates a positive reference output that the CR200(X)-series can measure.

The recommended programming method for CR200(X)-series dataloggers (where the scan interval is limited to once per second) is to place the VoltSE instruction within a loop. The first CR200(X) example program has a loop that samples 25 times, and the second CR200(X) example program has a loop that samples 30 times. A 25-sample loop produces almost two cycles of a 60 Hz wave form, and a 30-sample loop produces almost two cycles of a 50 Hz wave form (see Figure 3). The average energy under the curve is calculated using the RMSSpa instruction. A multiplier of 0.2 is applied to the RMS value; see Section A.4 for more information.

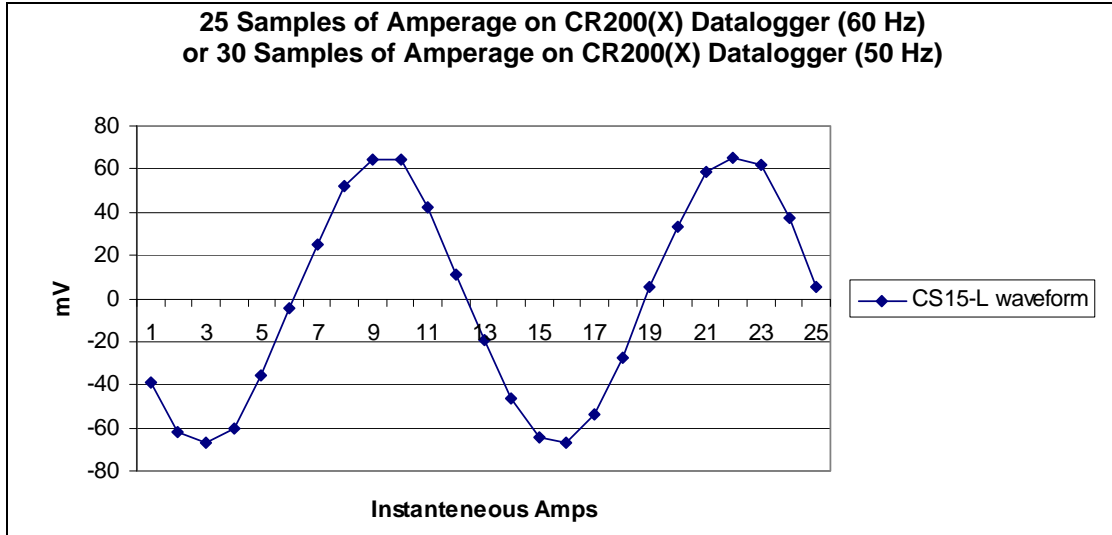


FIGURE 3. Graph of a CS15 Waveform

**CR200(X) Program for 60 Hz**

```
'CR200(X) Series Datalogger
' Program name: CS15-LManual.cr2
'date: 4 Mar 2009
'program author: Brad Maxfield

Const Samples = 25           ' 25 samples for 2 waves of 60 Hz.
'Const Samples = 30         ' 30 samples for 2 waves of 50 Hz.
Public Crnt_A
Public mV(Samples)
Dim Counter

'Define Data Tables
DataTable (Test,1,-1)
    DataInterval (0,1,min)
    Average (1,Crnt_A,False)
    Maximum (1,Crnt_A,False,0)
EndTable

'Main Program
BeginProg
    Scan (1,Sec)
    ExciteV (Ex1,mV2500)
    For Counter = 1 To Samples
        VoltSe (mV(Counter),1,1,1.0,-1250)
    Next
    ExciteV (Ex1,mV0)
    RMSSpa (Crnt_A,(Samples-0),mV(1))
    Crnt_A=Crnt_A*0.2         ' Multiplier for sensor
    If Crnt_A<0.15 Then      ' Eliminate noise below 0.15 amps.
        Crnt_A = 0
    EndIf
```

```

    CallTable Test
  NextScan
EndProg

```

**CR200(X) Program for 50 Hz**

```

' CR200(X) Series Datalogger
' Program name: CS15-LManual.cr2
' date: 4 Mar 2009
' program author: Brad Maxfield

Const Samples = 30           ' 30 samples for 2 waves of 50 Hz.
'Const Samples = 25         ' 25 samples for 2 waves of 60 Hz.
Public Crnt_A
Public mV(Samples)
Dim Counter

'Define Data Tables
DataTable (Test,1,-1)
  DataInterval (0,1,min)
  Average (1,Crnt_A,False)
  Maximum (1,Crnt_A,False,0)
EndTable

'Main Program
BeginProg
  Scan (1,Sec)
  ExciteV (Ex1,mV2500)
  For Counter = 1 To Samples
    VoltSe (mV(Counter),1,1,1.0,-1250)
  Next
  ExciteV (Ex1,mV0)
  RMSSpa (Crnt_A,(Samples-0),mV(1))
  Crnt_A=Crnt_A*0.2           ' Multiplier for sensor
  If Crnt_A<0.15 Then        ' Eliminate noise below 0.15 amps.
    Crnt_A = 0
  EndIf
  CallTable Test
NextScan
EndProg

```

**5.3 CR510, CR10X, CR23X Dataloggers**

With these dataloggers, the best method for monitoring amperage is to make millivolt burst measurements using Instruction 23 and then calculate RMS using Instruction 82. For Instruction 23, the entry for parameter 4 needs to be 0001. This triggers on the first channel, triggers immediately, stores data in input locations, and makes single-ended measurements.

Remember that it is important to get complete cycles. For Instruction 23, if parameters 5 and 6 are 2.0 and 0.05, respectively, then you get five complete cycles for a 50-Hz waveform, and six complete cycles for a 60-Hz waveform (see Figure 4). The multiplier for the CS10 is 0.2; see Section A.4 for more information.

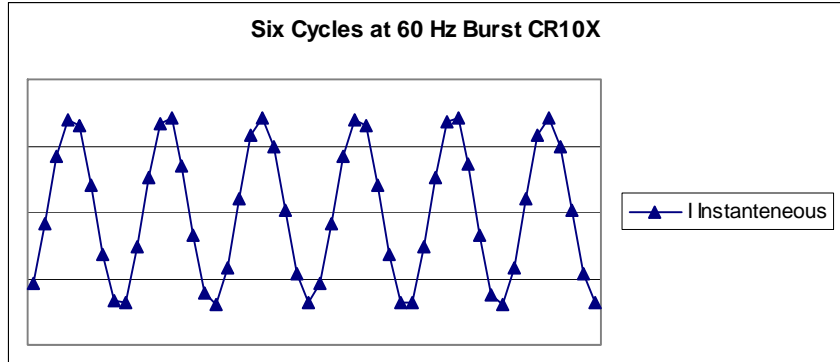


FIGURE 4. Graph of CS10 Waveform using Burst Mode

The following CR10X program generates the waveforms shown in Figure 4.

**NOTE**

The instructions listed below do not store data in final storage. P92, P77, and output processing instructions such as P70 are required to store the data permanently.

```

; Parameter 2 should be 2500 mV for 50-200 amps
; should be 250 mV for 5-49 amps
; should be 25 mV for 0-4.9 amps
; Parameter 5 should be 2.0 msec for 50 Hz or 60 Hz
; Parameter 6 should be 0.05 thousand scans for 50 Hz or 60 Hz
; if parameter 5 & 6 are 2.0 and 0.05, then you have 5 complete cycles at 50 Hz
; or 6 complete cycles at 60 Hz.
;
1: Burst Measurement (P23)
  1: 1      Input Channels per Scan      ; Should always be 1
  2: 15     2500 mV Fast Range          ; Change according to expected Amperage
  3: 1      In Chan                    ; Change according to Wiring
  4: 0001   Trig/Trig/Dest/Meas Options ; Should always be 0001
  5: 2.0    Time per Scan (msec)       ; Must be 2.0
  6: .05    Scans (in thousands)       ; Must be 0.05 (for 50 measurements * 2.0 msec = 100 mS)
  7: 0      Samples before Trigger     ; Should always be 0
  8: 0.0    mV Limit                   ; Should always be 0
  9: 0000   mV Excitation               ; Should always be 0
  10: 4     Loc [ Amps_1 ]              ; First location of Block (array)
  11: .2    Multiplier                  ; Match Multiplier of CT:0.2 for CS10-L with 10 ohm shunt
  12: 0.0   Offset

2: Z=F x 10^n (P30)
  1: 0.0    F
  2: 00     n, Exponent of 10
  3: 1     Z Loc [ Counter ]
    
```

```

; This part of the program will calculate the RMS Amperage
; Standard Deviation in this part of the code works mathematically the same
; as RMS calculation, and it is easier to program this way. The RMS
; value is calculated and stored back into an input location for further
; processing if needed.

```

3: Beginning of Loop (P87)

```

1: 0          Delay
2: 50         Loop Count

```

4: Z=Z+1 (P32)

```

1: 1          Z Loc [ Counter ]

```

5: If (X<=>F) (P89)

```

1: 1          X Loc [ Counter ]
2: 1          =
3: 50         F
4: 10         Set Output Flag High (Flag 0)

```

6: Set Active Storage Area (P80)

```

1: 3          Input Storage Area
2: 2          Loc [ BurstAmps ]

```

7: Standard Deviation (P82)^3012

```

1: 1          Reps
2: 4          -- Sample Loc [ Amps_1 ]

```

8: End (P95)

## 5.4 21X, CR7 Dataloggers

Some Edlog dataloggers such as the 21X and CR7 do not have a burst mode. For those dataloggers, you can use a “Loop Measurement Method” similar to the method used with the CR200(X). This method is also an option for our CR510, CR10X, and CR23X, but only three measurements per period will be made. Figure 5 shows a graph produced by a CR10X program with a loop that samples 90 times. A portion of this program is shown below.

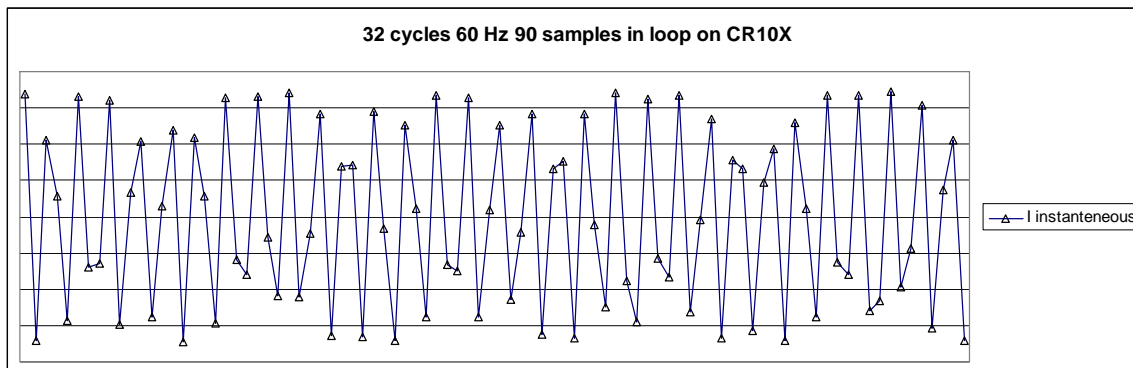


FIGURE 5. Graph of a CS10 Waveform using 90 Samples of Amperage

**NOTE** The instructions listed below do not store data in final storage. P92, P77, and output processing instructions such as P70 are required to store the data permanently.

```

3: Beginning of Loop (P87)
  1: 0          Delay
  2: 90         Loop Count

  4: Z=Z+1 (P32)
    1: 4          Z Loc [ Counter ]

  5: Volt (SE) (P1)
    1: 1          Reps
    2: 14         250 mV Fast Range
    3: 1          SE Channel
    4: 57         -- Loc [ LoopAmp_1 ]
    5: .2         Multiplier
    6: 0.0        Offset

  6: If (X<=>F) (P89)
    1: 4          X Loc [ Counter ]
    2: 1          =
    3: 90         F
    4: 10         Set Output Flag High (Flag 0)

  7: Z=X (P31)
    1: 57         -- X Loc [ LoopAmp_1 ]
    2: 3          Z Loc [ Sensor ]

  8: Set Active Storage Area (P80)
    1: 3          Input Storage Area
    2: 2          Loc [ Amp ]

  9: Standard Deviation (P82)^12989
    1: 1          Reps
    2: 3          Sample Loc [ Sensor ]

10: End (P95)

```

The above CR10X program may provide an adequate waveform because the program makes more than two measurements per period and samples many periods. However, if the datalogger's Burst Measurement Instruction is used with specific settings, the program will make more measurements per cycle assuring that complete periods for both 50 and 60 Hz (5 at 50 Hz and 6 at 60 Hz) will be monitored (see Figure 4).

## 5.5 CR1000 with Multiplexer Sample Program

This program uses the CR1000 and an AM16/32-series multiplexer to read 32 CS10-L current transformers.

```
'CR1000 program to measure rms current
PipeLineMode                               'must be pipeline mode
Const num_samples = 100                     '6 waveforms for 60 Hz, 5 waveforms for 50 Hz
Const NumSensors=32                         'Number of Sensors on the Mux MUX in 2X32 Mode *****
                                              'Sensor wired to Low on each of the 32 channels.
                                              'Odd Low on Mux wired to SE2 on Datalogger

Public Amps(NumSensors), i, Batt_Volt      'the line current
Public Amp_mult, TempAmps
Dim i_sig (num_samples)                    'to hold the burst measurements, each 100 samples long
PreserveVariables                          'to store values between power cycles

DataTable (AmpTable,True,-1)
  DataInterval (0,1,Min,10)
  Maximum (NumSensors,Amps,IEEE4,False,False)
  Average (NumSensors,Amps,FP2,False)
EndTable

BeginProg
  Amp_mult = 0.2                            '0.2 multiplier for the CS10-L/CS15-L
  Scan (10,Sec,0,0)
    Battery (Batt_volt)
    'Turn AM16/32 Multiplexor On
    PortSet(4,1)
    i=0
    SubScan(0,uSec,NumSensors)
      'Switch to next AM16/32 Multiplexer Channel
      PulsePort(5,10000)
      i=i+1
      VoltSe (i_sig (1), num_samples, mV2500,-2, True, 1000, 0, 1.0, 0)
      StdDevSpa (Amps(i), num_samples, i_sig (1))
      Amps(i) = Amps(i) * Amp_mult 'put in amps
      If Amps(i) <= 0.15 Then Amps(i) = 0
    NextSubScan
    'Turn AM16/32 Multiplexer Off
    PortSet(4,0)
    CallTable (AmpTable)
  NextScan
EndProg
```

## 5.6 CR10X with Multiplexer Sample Program

This program uses the CR10X and an AM16/32-series multiplexer to read 32 CS10-L current transformers.

```

;{CR10X}
; Example program for CS10-L
;
; Program to test the CS10-L or CS15-L sensor on a CR10X datalogger
; and AM1632 Multiplexer.
;
; Wiring:
; Datalogger Sensor
; SE1      White
; AG       Black
; AG       Clear
;
; Finish fixing wiring!!!!!!!!!!!!!!
;
*Table 1 Program
01: 30      Execution Interval (seconds)

; Turn on the multiplexer

1: Do (P86)
  1: 41      Set Port 1 High

2: Excitation with Delay (P22)
  1: 1       Ex Channel
  2: 0       Delay W/Ex (0.01 sec units)
  3: 15      Delay After Ex (0.01 sec units)
  4: 0       mV Excitation

3: Beginning of Loop (P87)
  1: 0000    Delay
  2: 32      Loop Count

; Clock multiplexer to next channel

4: Do (P86)
  1: 72      Pulse Port 2

5: Excitation with Delay (P22)
  1: 1       Ex Channel
  2: 0       Delay W/Ex (0.01 sec units)
  3: 1       Delay After Ex (0.01 sec units)
  4: 0       mV Excitation

6: Do (P86)
  1: 1       Call Subroutine 1

```

```

; This part of the program will calculate the RMS Amperage
; Standard Deviation in this part of the code works mathematically the same
; as RMS calculation, and it is easier to program this way. The RMS
; value is calculated and stored back into an input location for further
; processing if needed.

```

```

7: Do (P86)
  1: 2          Call Subroutine 2

8: Step Loop Index (P90)
  1: 2          Step

9: Z=X (P31)
  1: 2          X Loc [ BurstAmps ]
  2: 4          -- Z Loc [ CS10_1 ]

10: Do (P86)
  1: 3          Call Subroutine 3

11: Z=X (P31)
  1: 3          X Loc [ Burst_A2 ]
  2: 5          -- Z Loc [ CS10_2 ]

```

```
12: End (P95)
```

```
13: Do (P86)
  1: 51         Set Port 1 Low

```

```

; This part of the program will store a one minute average of the amperage.

```

```

14: If time is (P92)
  1: 0          Minutes (Seconds --) into a
  2: 1          Interval (same units as above)
  3: 10         Set Output Flag High (Flag 0)

```

```

15: Set Active Storage Area (P80)^17815
  1: 1          Final Storage Area 1
  2: 60         Array ID

```

```

16: Real Time (P77)^10331
  1: 1220       Year,Day,Hour/Minute (midnight = 2400)

```

```

17: Average (P71)^5143
  1: 64         Reps
  2: 4          Loc [ CS10_1 ]

```

```

*Table 2 Program
  02: 0.0000    Execution Interval (seconds)

```

## \*Table 3 Subroutines

```

;
; Parameter 2 should be 2500 mV for 50-200 amps
;     should be 250 mV for 5-49 amps
;     should be 25 mV for 0-4.9 amps
; Parameter 5 should be 2.0 msec for 50 Hz or 60 Hz
; Parameter 6 should be 0.05 thousand scans for 50 Hz or 60 Hz
; if parameter 5 & 6 are 2.0 and 0.05, then you have 5 complete cycles at 50 Hz
; or 6 complete cycles at 60 Hz.

```

## 1: Beginning of Subroutine (P85)

```
1: 1          Subroutine 1
```

## 2: Burst Measurement (P23)

```

1: 1          Input Channels per Scan
2: 15         2500 mV Fast Range
3: 1          In Chan
4: 0001       Trig/Trig/Dest/Meas Options
5: 2.0        Time per Scan (msec)
6: .05        Scans (in thousands)
7: 0          Samples before Trigger
8: 0.0        mV Limit
9: 0000       mV Excitation
10: 71        Loc [ Amps_1 ]
11: .2        Multiplier
12: 0.0       Offset

```

## 3: Burst Measurement (P23)

```

1: 1          Input Channels per Scan
2: 15         2500 mV Fast Range
3: 2          In Chan
4: 0001       Trig/Trig/Dest/Meas Options
5: 2.0        Time per Scan (msec)
6: .05        Scans (in thousands)
7: 0          Samples before Trigger
8: 0.0        mV Limit
9: 0000       mV Excitation
10: 123       Loc [ AmpsII_1 ]
11: .2        Multiplier
12: 0.0       Offset

```

## 4: End (P95)

## 5: Beginning of Subroutine (P85)

```
1: 2          Subroutine 2
```

6:  $Z=F \times 10^n$  (P30)

```

1: 0.0        F
2: 00         n, Exponent of 10
3: 1          Z Loc [ Counter ]

```

```

7: Beginning of Loop (P87)
  1: 0          Delay
  2: 50         Loop Count

  8: Z=Z+1 (P32)
    1: 1          Z Loc [ Counter ]

  9: If (X<=>F) (P89)
    1: 1          X Loc [ Counter ]
    2: 1          =
    3: 50         F
    4: 10         Set Output Flag High (Flag 0)

 10: Set Active Storage Area (P80)
    1: 3          Input Storage Area
    2: 2          Loc [ BurstAmps ]

 11: Standard Deviation (P82)^13110
    1: 1          Reps
    2: 71         -- Sample Loc [ Amps_1 ]

12: End (P95)

13: End (P95)

14: Beginning of Subroutine (P85)
    1: 3          Subroutine 3

 15: Z=F x 10^n (P30)
    1: 0.0        F
    2: 00         n, Exponent of 10
    3: 1          Z Loc [ Counter ]

 16: Beginning of Loop (P87)
    1: 0          Delay
    2: 50         Loop Count

    17: Z=Z+1 (P32)
        1: 1          Z Loc [ Counter ]

    18: If (X<=>F) (P89)
        1: 1          X Loc [ Counter ]
        2: 1          =
        3: 50         F
        4: 10         Set Output Flag High (Flag 0)

    19: Set Active Storage Area (P80)
        1: 3          Input Storage Area
        2: 3          Loc [ Burst_A2 ]

    20: Standard Deviation (P82)^6732
        1: 1          Reps
        2: 123         -- Sample Loc [ AmpsII_1 ]

```

21: End (P95)

22: End (P95)

End Program




# ***Appendix A. Theory of Operation***

---

## **A.1 Typical Electrical Circuit**

An example of a typical electrical circuit is a generator that provides energy in the form of a 60-Hz sine wave. The energy is carried from the point of generation to the point of consumption via two wires. The generator creates an electrical load that lights up the light bulb (see Figure A-1).

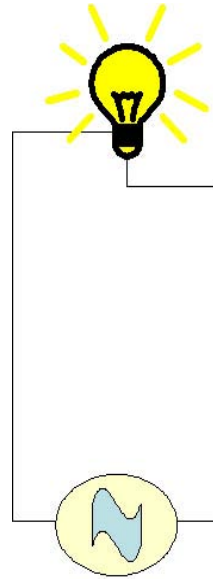

*FIGURE A-1. Generator Schematic*

If we want to know the consumption (amps) of the load, we need a way to measure what is passing through the wires.

We can add a sensor into the circuit to measure the amperage going through the circuit (see Figures A-2 through Figure A-4). This sensor is called a CT or Current Transformer. Our CS10 and CS15 are current transformers.

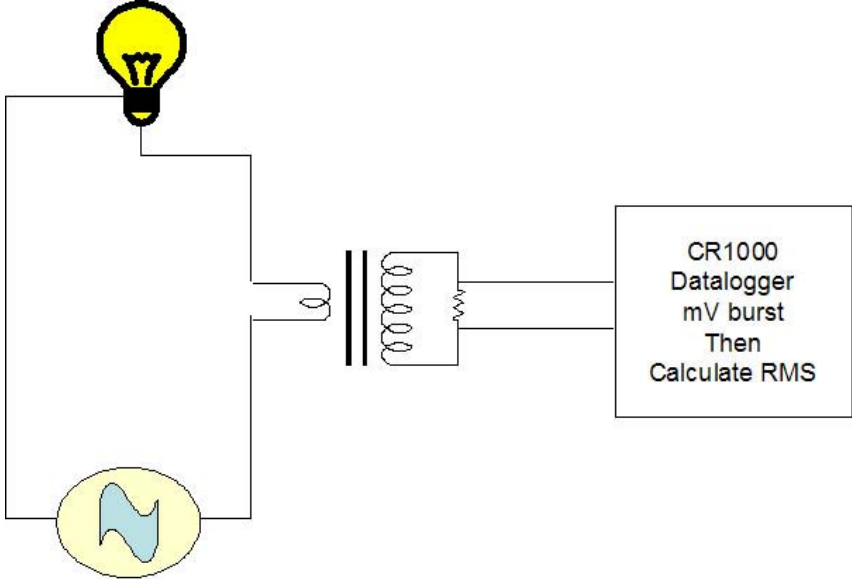


FIGURE A-2. Schematic of Generator with Current Transformer

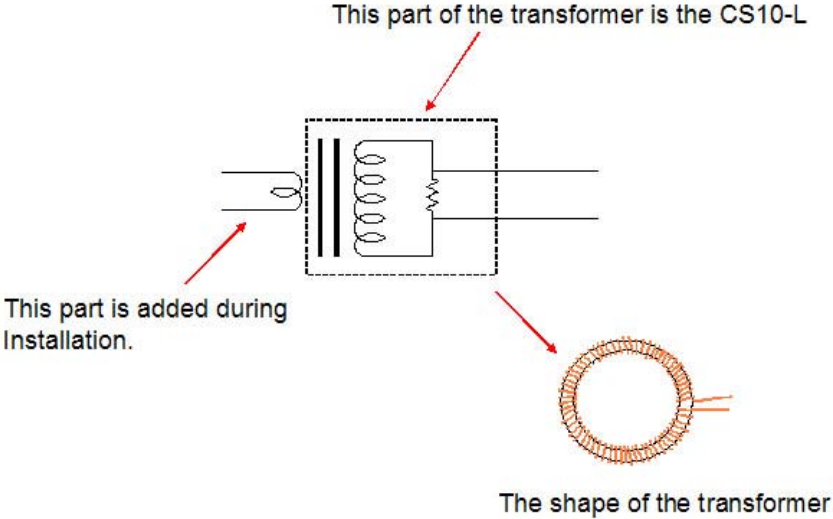


FIGURE A-3. Schematic of Current Transformer with the Wire

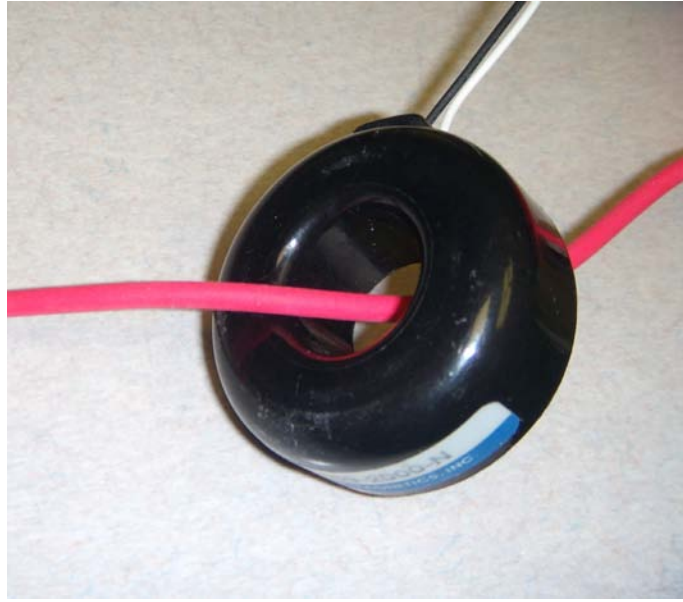


FIGURE A-4. CS10 with the Wire

## A.2 Current Transformer Description

A current transformer is a special kind of transformer that transfers energy from one side to another through magnetic fluxes (see Figure A-5).

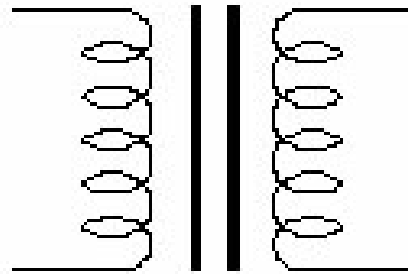


FIGURE A-5. Magnetic Flux Schematic

The formula for a transformer is as follows (Equation A):

$$i_1 * n_1 = i_2 * n_2$$

Equation A

Where  $i$  = amps and  $n$  = number of turns or windings

And where  $n_1$  is the primary winding and  $n_2$  is the secondary

With the current transformer, the primary coils or windings are minimized to avoid removing power out of the circuit, but still have a signal large enough to measure (see Figure A-6).

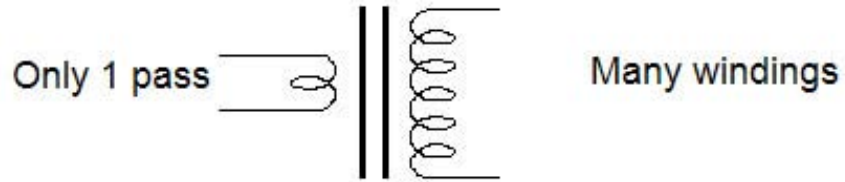


FIGURE A-6. Windings Schematic

A tiny bit of the current is transferred to the secondary coil.

We can find the current induced on the secondary windings by solving for  $i_2$ :

$$i_2 = i_1 * n_1/n_2 \quad \text{Equation B}$$

For Example: The CS10 current transducer has an  $n_2$  value of 2000 windings. If 20 amps pass through the primary winding, the following amperage is produced on the secondary winding:

$$i_2 = 20 * (1/2000) = 0.01 \text{ amp on secondary winding}$$

### A.3 Converting a Milliamp Signal to a Millivolt Signal

After the current is transformed from one level to another level, we need to convert the amperage signal into a voltage signal so that the datalogger can measure it.

Use Ohm's Law (Equation C) to convert amperage to voltage:

$$E = I * R \quad (E=\text{Volts, } I = \text{Amps, } R = \text{Ohms}) \quad \text{Equation C}$$

For Example: Using our previous example:

$$E = 0.01 \text{ amps} * R$$

The CS10-L contains a 10-ohm burden (shunt) resistor. Therefore E is:

$$E = 0.01 \text{ amps} * 10 \text{ ohms} = 0.1 \text{ volts (or 100 mV)}$$

From these calculations, we can determine if we want slightly better resolution on the measurement. We can lower the Range Code to 250 mV for some dataloggers.

## A.4 Multiplier

Use Equation D to calculate the multiplier.

$$m = C * n_2 / n_1 * (1/R) * (1 \text{ V} / 1000 \text{ mV}) \quad \text{Equation D}$$

Where, C = a correction constant

If we assume a correction constant of 1, then we can solve for the equation from the above information.

$$m = 1 * 2000/1 * (1/10) * (1/1000) = 0.2 \text{ multiplier}$$

## A.5 CS10/CS15 Comparison

The CS10 consists of a CR Magnetic's CR8459 Current Transducer with a 10-ohm burden resistor incorporated into its cable (see Figure A-7). The resistor allows most of our dataloggers to measure it.

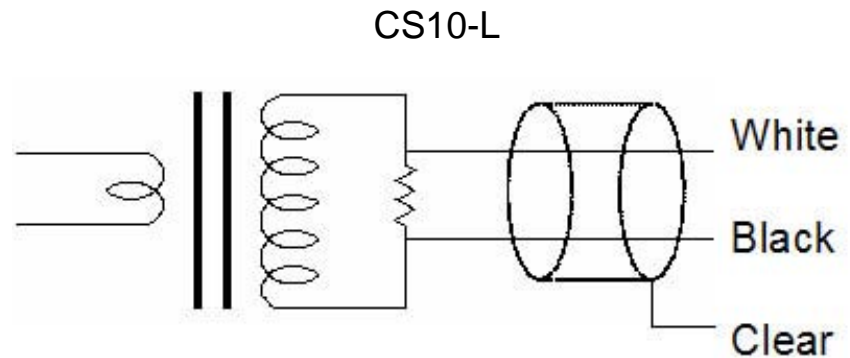


FIGURE A-7. CS10 Schematic

The CS15, a modified version of the CS10, was developed specifically for the CR200(X)-series dataloggers. CR200(X)-series dataloggers require special treatment because they cannot measure negative values; range is only 0 to 2500 mV (see Figure A-9). To create positive reference, the CS15-L uses Voltage Excitation to shift the measurement range (see Figures A-8 through A-10).

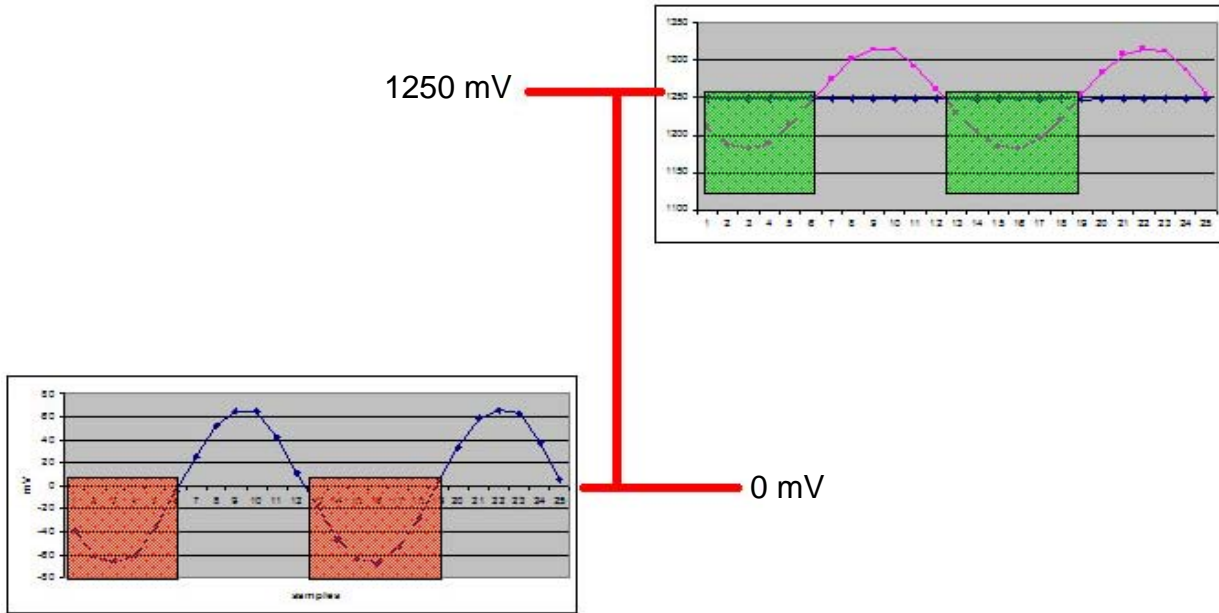


FIGURE A-8. Adding 1250 mV Creates Positive Output

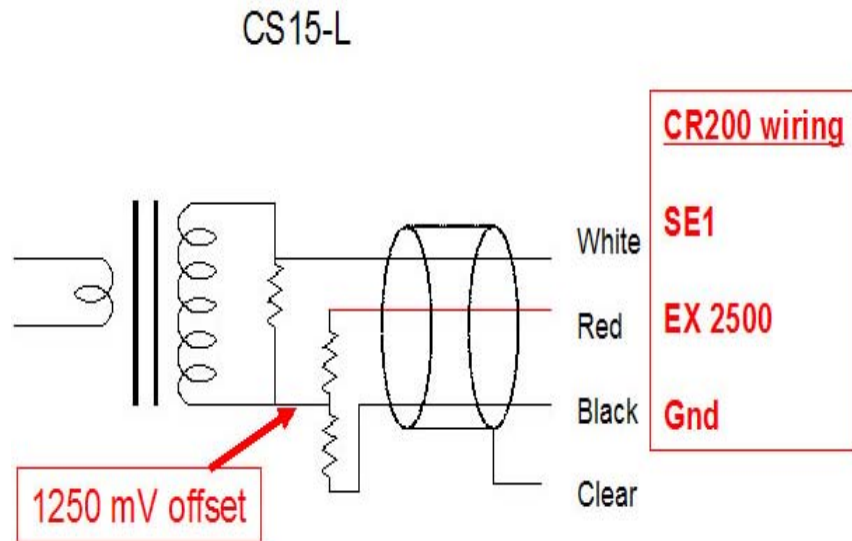


FIGURE A-9. CS15 Schematic

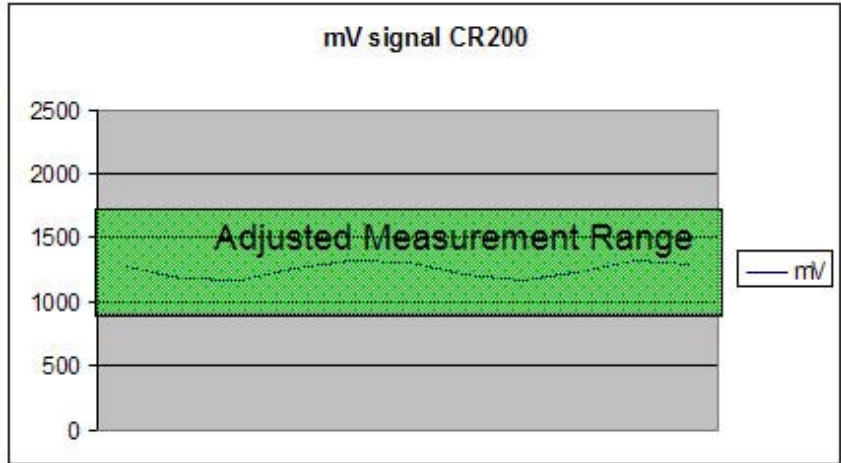


FIGURE A-10. CS15 Measurement Range





## **Campbell Scientific Companies**

---

**Campbell Scientific, Inc. (CSI)**

815 West 1800 North  
Logan, Utah 84321  
UNITED STATES

[www.campbellsci.com](http://www.campbellsci.com) • [info@campbellsci.com](mailto:info@campbellsci.com)

**Campbell Scientific Africa Pty. Ltd. (CSAf)**

PO Box 2450  
Somerset West 7129  
SOUTH AFRICA

[www.csafrica.co.za](http://www.csafrica.co.za) • [cleroux@csafrica.co.za](mailto:cleroux@csafrica.co.za)

**Campbell Scientific Australia Pty. Ltd. (CSA)**

PO Box 444  
Thuringowa Central  
QLD 4812 AUSTRALIA

[www.campbellsci.com.au](http://www.campbellsci.com.au) • [info@campbellsci.com.au](mailto:info@campbellsci.com.au)

**Campbell Scientific do Brazil Ltda. (CSB)**

Rua Luisa Crapsi Orsi, 15 Butantã  
CEP: 005543-000 São Paulo SP BRAZIL

[www.campbellsci.com.br](http://www.campbellsci.com.br) • [suporte@campbellsci.com.br](mailto:suporte@campbellsci.com.br)

**Campbell Scientific Canada Corp. (CSC)**

11564 - 149th Street NW  
Edmonton, Alberta T5M 1W7  
CANADA

[www.campbellsci.ca](http://www.campbellsci.ca) • [dataloggers@campbellsci.ca](mailto:dataloggers@campbellsci.ca)

**Campbell Scientific Centro Caribe S.A. (CSCC)**

300 N Cementerio, Edificio Breller  
Santo Domingo, Heredia 40305  
COSTA RICA

[www.campbellsci.cc](http://www.campbellsci.cc) • [info@campbellsci.cc](mailto:info@campbellsci.cc)

**Campbell Scientific Ltd. (CSL)**

Campbell Park  
80 Hathern Road  
Shepshed, Loughborough LE12 9GX  
UNITED KINGDOM

[www.campbellsci.co.uk](http://www.campbellsci.co.uk) • [sales@campbellsci.co.uk](mailto:sales@campbellsci.co.uk)

**Campbell Scientific Ltd. (France)**

Miniparc du Verger - Bat. H  
1, rue de Terre Neuve - Les Ulis  
91967 COURTABOEUF CEDEX  
FRANCE

[www.campbellsci.fr](http://www.campbellsci.fr) • [info@campbellsci.fr](mailto:info@campbellsci.fr)

**Campbell Scientific Spain, S. L.**

Psg. Font 14, local 8  
08013 Barcelona  
SPAIN

[www.campbellsci.es](http://www.campbellsci.es) • [info@campbellsci.es](mailto:info@campbellsci.es)

*Please visit [www.campbellsci.com](http://www.campbellsci.com) to obtain contact information for your local US or International representative.*