

IRTS-P Precision Infrared Temperature Sensor

User Guide

15.3.07

Copyright © 2002-2006 Campbell Scientific Inc.
Printed under Licence by Campbell Scientific Ltd.

Guarantee

This equipment is guaranteed against defects in materials and workmanship. This guarantee applies for twelve months from date of delivery. We will repair or replace products which prove to be defective during the guarantee period provided they are returned to us prepaid. The guarantee will not apply to:

- Equipment which has been modified or altered in any way without the written permission of Campbell Scientific
- Batteries
- Any product which has been subjected to misuse, neglect, acts of God or damage in transit.

Campbell Scientific will return guaranteed equipment by surface carrier prepaid. Campbell Scientific will not reimburse the claimant for costs incurred in removing and/or reinstalling equipment. This guarantee and the Company's obligation thereunder is in lieu of all other guarantees, expressed or implied, including those of suitability and fitness for a particular purpose. Campbell Scientific is not liable for consequential damage.

Please inform us before returning equipment and obtain a Repair Reference Number whether the repair is under guarantee or not. Please state the faults as clearly as possible, and if the product is out of the guarantee period it should be accompanied by a purchase order. Quotations for repairs can be given on request.

When returning equipment, the Repair Reference Number must be clearly marked on the outside of the package.

Note that goods sent air freight are subject to Customs clearance fees which Campbell Scientific will charge to customers. In many cases, these charges are greater than the cost of the repair.



Campbell Scientific Ltd,
Campbell Park, 80 Hathern Road,
Shepshed, Loughborough, LE12 9GX, UK
Tel: +44 (0) 1509 601141
Fax: +44 (0) 1509 601091
Email: support@campbellsci.co.uk
www.campbellsci.co.uk

IRTS-P Table of Contents

PDF viewers note: These page numbers refer to the printed version of this document. Use the Adobe Acrobat® bookmarks tab for links to specific sections.

1. General Description	1
2. Specifications	1
3. Installation.....	2
4. Wiring	3
5. Example Programs	3
6. Maintenance.....	11

Figures

3-1. IRTS-P on UT018 Crossarm	2
3-2. Mounting IRTS-P to UT018 Crossarm	2

Tables

5-1. Wiring for Example Programs	4
--	---

IRTS-P Precision Infrared Temperature Sensor

1. General Description

An infrared temperature sensor (IRTS) is a non-contact means of measuring the surface temperature of an object by sensing the infrared radiation given off. IRTS are widely used for measurements of leaf, canopy, and average surface temperature. With contact sensors it is difficult to avoid influencing the temperature, maintain thermal contact, and provide a spatial average.

By mounting the infrared sensor at an appropriate distance from the target, it can be used to measure an individual leaf, a canopy, or any surface of interest.

The IRTS-P is an infrared temperature sensor calibrated to output the signal for the target temperature with the same output voltage as if a Type K thermocouple were sensing the target temperature. A separate type K thermocouple is used to measure the temperature of the sensor body. The sensor body temperature is used to correct the target temperature for greater accuracy.

2. Specifications

Power Requirements	None: self-powered
Accuracy	$\pm 0.3^{\circ}\text{C}$ from -10° to 55°C ($\pm 0.1^{\circ}\text{C}$ when sensor body and target are at the same temperature)
Repeatability	0.05°C from -10° to 55°C
Mass	Less than 100 grams
Dimensions	6.3 cm long by 2.3 cm diameter
Response Time	Less than 1 second to changes in target temperature
Output Signal	2, type K, twisted, shielded pair thermocouple outputs (15 ft each), one for target temperature, one for sensor body temperature. The sensor body temperature is used to make a correction for target temperature.
Optics	Silicon lens
Wavelength Range	6 to 14 micrometers
Field of View	3:1 field of view (at 3 metres from sensor the FOV is a 1 metre diameter circle)
Operating Environment	Highly water resistant, designed for continuous outdoor use; temperature range: -10° to 55°C

3. Installation


The field of view for infrared sensors is calculated based on the geometry of the sensor and lens. However, optical and atmospheric scatter and unwanted reflections from outside the field of view may influence the measurement. Under typical conditions, 80 to 90 percent of the IR signal is from the field of view and 10 to 20 percent is from the area surrounding the field of view. If the target surface is small, for example a single leaf, try to mount the sensor close enough that the surface extends beyond the field of view.

To obtain the desired view of the canopy or surface of interest, the IRTS-P is often mounted separately from a met station tower. A hole threaded for a standard tripod camera mount screw (1/4 inch diameter; 20 threads per inch) can be used to mount the sensor to a user-supplied support.

The IRTS-P can be mounted to a Campbell Scientific tripod or tower with the 011E Crossarm.

4. Wiring

The IRTS-P has two thermocouple outputs. Each output is a pair of red and yellow wires. The pair labelled “Target” on the jacket near the wires is the output from the detector. The pair labelled “Body” is a thermocouple measuring the temperature of the sensor body. Previous versions of the sensor had a black band on the target cable to mark it. We recommend measuring the temperatures with differential voltage thermocouple measurements.

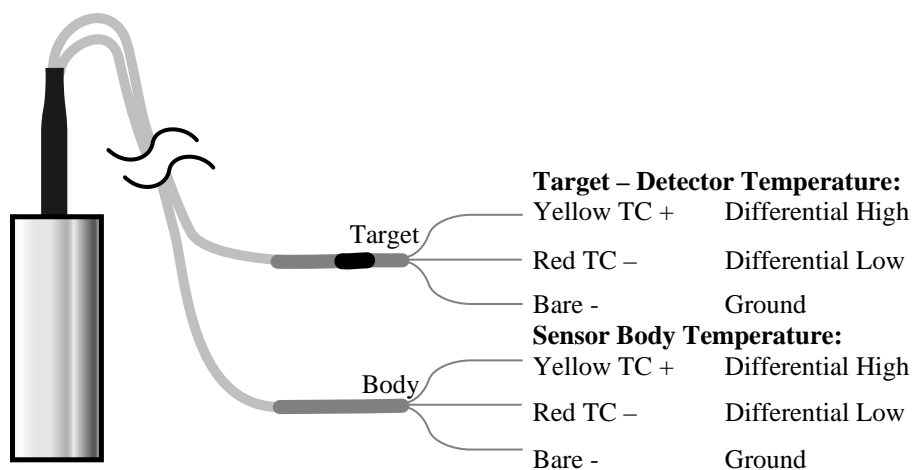

5. Example Programs

The datalogger program to measure the IRTS-P measures the thermocouple outputs to obtain the IRTS-P sensor body temperature and the apparent (uncorrected) temperature of the target.

The thermocouple temperature requires the temperature of the terminals to which the thermocouples are connected. The panel temperature is used as the reference for the CR23X, CR1000, and CR5000. The module temperature is not an accurate measurement of the CR10X panel temperature; a CR10XTCR is required to measure the reference temperature.

After measuring the thermocouple outputs, the sensor body temperature is used to calculate correction coefficients that are then used to correct the target temperature.

All three example programs measure the sensor once a second and output average values once an hour. The actual channels and outputs intervals need to be adjusted for the actual installation and application.

The equations implemented in the program are (Bugbee et.al. 1996)

Corrected Target Temperature, $CTT = ATT - SEC$

where ATT = Apparent Target Temperature,

and Sensor Error Correction, $SEC = (0.25 / P_{SB})((ATT - H_{SB})^2 - K_{SB})$;

$$P_{SB} = 49.9092 + 0.59237 \cdot SB + 0.00558 \cdot SB^2$$

$$H_{SB} = 4.2828 + 0.4248 \cdot SB - 0.00077 \cdot SB^2$$

$$K_{SB} = 52.0705 - 5.3816 \cdot SB + 0.387 \cdot SB^2$$

and SB = Sensor Body Temperature

The three example programs measure the sensor once a second and output average sensor and target temperatures once an hour. In an actual installation the measurement and output intervals, and channels used may be changed to accommodate the other measurements and outputs.

TABLE 5-1. Wiring for Example Programs				
Sensor/Lead	Description	CR10X	CR23X	CR1000
CR10XTCR	Reference Temp:		Not Used	Not Used
Black	Excitation	E3		
Red	Signal	SE1		
Clear	Ground	AG		
IRTS-P – Target/Black Band	Detector Temp			
Yellow	TC +	2H	1H	1H
Red	TC -	2L	1L	1L
IRTS-P – Body/No Band	Sensor Temp			
Yellow	TC +	3H	2H	2H
Red	TC -	3L	2L	2L
Bare wire	Shield	G	⚡	⚡

CR10X Example Program

```

;{CR10X}
;
*Table 1 Program
01: 1          Execution Interval (seconds)

;Measure CR10XTCR Reference Temperature

1: Temp (107) (P11)
1: 1          Reps
2: 1          SE Channel
3: 3          Excite all reps w/E3
4: 1          Loc [ RefTemp ]
5: 1.0        Mult
6: 0.0        Offset

;Measure IRt/c apparent target temperature

```

2: Thermocouple Temp (DIFF) (P14)

1:	1	Reps
2:	21	2.5 mV 60 Hz Rejection Range
3:	2	DIFF Channel
4:	3	Type K (Chromel-Alumel)
5:	1	Ref Temp (Deg. C) Loc [RefTemp]
6:	2	Loc [AppTargT]
7:	1.0	Mult
8:	0.0	Offset

;Measure Sensor Body Temp

3: Thermocouple Temp (DIFF) (P14)

1:	1	Reps
2:	21	2.5 mV 60 Hz Rejection Range
3:	3	DIFF Channel
4:	3	Type K (Chromel-Alumel)
5:	1	Ref Temp (Deg. C) Loc [RefTemp]
6:	3	Loc [SenBodyT]
7:	1.0	Mult
8:	0.0	Offset

;Calculate P, H, & K Coefficients

4: Polynomial (P55)

1:	1	Reps
2:	3	X Loc [SenBodyT]
3:	4	F(X) Loc [Psb]
4:	49.9092	C0
5:	0.59237	C1
6:	0.00558	C2
7:	0.0	C3
8:	0.0	C4
9:	0.0	C5

5: Polynomial (P55)

1:	1	Reps
2:	3	X Loc [SenBodyT]
3:	5	F(X) Loc [Hsb]
4:	4.2828	C0
5:	0.4248	C1
6:	-0.00077	C2
7:	0.0	C3
8:	0.0	C4
9:	0.0	C5

6: Polynomial (P55)

1:	1	Reps
2:	3	X Loc [SenBodyT]
3:	6	F(X) Loc [Ksb]
4:	52.0705	C0
5:	-5.3816	C1
6:	0.387	C2
7:	0.0	C3
8:	0.0	C4
9:	0.0	C5

;Calculate correction factor (SEC)

7: Z=1/X (P42) ; { 1/Psb }

1: 4 X Loc [Psb]
2: 4 Z Loc [Psb]

8: Z=X*F (P37) ; { .25/Psb }

1: 4 X Loc [Psb]
2: 0.25 F
3: 4 Z Loc [Psb]

9: Z=X-Y (P35) ; { ATT - Hsb }

1: 2 X Loc [AppTargT]
2: 5 Y Loc [Hsb]
3: 5 Z Loc [Hsb]

10: Z=X*Y (P36) ; { ATT - Hsb }^2

1: 5 X Loc [Hsb]
2: 5 Y Loc [Hsb]
3: 5 Z Loc [Hsb]

11: Z=X-Y (P35) ; { subtract Ksb }

1: 5 X Loc [Hsb]
2: 6 Y Loc [Ksb]
3: 6 Z Loc [Ksb]

12: Z=X*Y (P36) ; { calculate SEC }

1: 4 X Loc [Psb]
2: 6 Y Loc [Ksb]
3: 7 Z Loc [SEC]

;Calculate corrected target temperature (CTT)

13: Z=X-Y (P35) ;

1: 2 X Loc [AppTargT]
2: 7 Y Loc [SEC]
3: 8 Z Loc [CTT]

14: If time is (P92)

1: 0 Minutes (Seconds --) into a
2: 60 Interval (same units as above)
3: 10 Set Output Flag High (Flag 0)

15: Real Time (P77)

1: 1220 Year,Day,Hour/Minute (midnight = 2400)

16: Average (P71)

1: 3 Reps
2: 1 Loc [RefTemp]

17: Average (P71)

1: 1 Reps
2: 8 Loc [CTT]

```
*Table 2 Program
  02: 0.0000      Execution Interval (seconds)
```

```
*Table 3 Subroutines
```

```
End Program
```

```
-Input Locations-
1 RefTemp  1 2 1
2 AppTargT 1 2 1
3 SenBodyT 1 3 1
4 Psb      1 3 3
5 Hsb      1 4 3
6 Ksb      1 2 2
7 SEC      1 1 1
8 CTT      1 0 1
```

CR23X Example Program

```
:{CR23X}
;
;
*Table 1 Program
  01: 1      Execution Interval (seconds)

;Measure Panel Reference Temperature

1: Panel Temperature (P17)
  1: 1      Loc [ RefTemp  ]

;Measure IRt/c apparent target temperature

2: Thermocouple Temp (DIFF) (P14)
  1: 1      Reps
  2: 21     10 mV, 60 Hz Reject, Slow Range
  3: 1      DIFF Channel
  4: 3      Type K (Chromel-Alumel)
  5: 1      Ref Temp (Deg. C) Loc [ RefTemp  ]
  6: 2      Loc [ AppTargT  ]
  7: 1.0    Mult
  8: 0.0    Offset

;Measure Sensor Body Temp

3: Thermocouple Temp (DIFF) (P14)
  1: 1      Reps
  2: 21     10 mV, 60 Hz Reject, Slow Range
  3: 2      DIFF Channel
  4: 3      Type K (Chromel-Alumel)
  5: 1      Ref Temp (Deg. C) Loc [ RefTemp  ]
  6: 3      Loc [ SenBodyT  ]
  7: 1.0    Mult
  8: 0.0    Offset
```

;Calculate P, H, & K Coefficients

4: Polynomial (P55)

1:	1	Reps
2:	3	X Loc [SenBodyT]
3:	4	F(X) Loc [Psb]
4:	49.9092	C0
5:	0.59237	C1
6:	0.00558	C2
7:	0.0	C3
8:	0.0	C4
9:	0.0	C5

5: Polynomial (P55)

1:	1	Reps
2:	3	X Loc [SenBodyT]
3:	5	F(X) Loc [Hsb]
4:	4.2828	C0
5:	0.4248	C1
6:	-0.00077	C2
7:	0.0	C3
8:	0.0	C4
9:	0.0	C5

6: Polynomial (P55)

1:	1	Reps
2:	3	X Loc [SenBodyT]
3:	6	F(X) Loc [Ksb]
4:	52.0705	C0
5:	-5.3816	C1
6:	0.387	C2
7:	0.0	C3
8:	0.0	C4
9:	0.0	C5

;Calculate correction factor (SEC)

7: Z=1/X (P42); {1/Psb}

1:	4	X Loc [Psb]
2:	4	Z Loc [Psb]

8: Z=X*F (P37); {.25/Psb}

1:	4	X Loc [Psb]
2:	0.25	F
3:	4	Z Loc [Psb]

9: Z=X-Y (P35); {ATT - Hsb}

1:	2	X Loc [AppTargT]
2:	5	Y Loc [Hsb]
3:	5	Z Loc [Hsb]

10: Z=X*Y (P36); {ATT - Hsb}^2

1:	5	X Loc [Hsb]
2:	5	Y Loc [Hsb]
3:	5	Z Loc [Hsb]

```

11: Z=X-Y (P35) ; {subtract Ksb}
   1: 5          X Loc [ Hsb   ]
   2: 6          Y Loc [ Ksb   ]
   3: 6          Z Loc [ Ksb   ]

12: Z=X*Y (P36) ; {calculate SEC}
   1: 4          X Loc [ Psb   ]
   2: 6          Y Loc [ Ksb   ]
   3: 7          Z Loc [ SEC   ]

;Calculate corrected target temperature (CTT)

13: Z=X-Y (P35) ;
   1: 2          X Loc [ AppTargT ]
   2: 7          Y Loc [ SEC     ]
   3: 8          Z Loc [ CTT     ]

14: If time is (P92)
   1: 0          Minutes (Seconds --) into a
   2: 60         Interval (same units as above)
   3: 10         Set Output Flag High (Flag 0)

15: Real Time (P77)
   1: 1220       Year,Day,Hour/Minute (midnight = 2400)

16: Average (P71)
   1: 3          Reps
   2: 1          Loc [ RefTemp  ]

17: Average (P71)
   1: 1          Reps
   2: 8          Loc [ CTT     ]

*Table 2 Program
  02: 0.0000     Execution Interval (seconds)

*Table 3 Subroutines

End Program

-Input Locations-
1 RefTemp 1 3 1
2 AppTargT 1 2 1
3 SenBodyT 1 3 1
4 Psb     1 3 3
5 Hsb     1 4 3
6 Ksb     1 2 2
7 SEC     1 1 1
8 CTT     1 1 1

```

CR1000 Example Program

```
'CR1000

Dim SB, Psb, Hsb, Ksb, SenEC
Public PTemp_C, ATT_C, CTT_C

DataTable(IRTS-P,True,-1)
    DataInterval(0,60,Min,0)
    Average(1,ATT_C,IEEE4,0)
    Average(1,CTT_C,IEEE4,0)
EndTable

BeginProg

Scan(1,Sec,1,0)
    'Wiring Panel Temperature measurement PTemp_C:
    PanelTemp(PTemp_C,_60Hz)
    'IRTS-P Precision Infrared Temperature Sensor measurements ATT_C and CTT_C:
    'Measure apparent target temperature with IRTS-P.
    TCDiff(ATT_C,1,mV2_5C,1,TypeK,PTemp_C,True,0,_60Hz,1,0)
    'Measure IRTS-P sensor body temperature.
    TCDiff(SB,1,mV2_5C,2,TypeK,PTemp_C,True,0,_60Hz,1,0)
    'Calculate Psb, Hsb, & Ksb coefficients.
    Psb=49.9092+(0.59237*SB)+(0.00558*SB^2)
    Hsb=4.2828+(0.4248*SB)-(0.00077*SB^2)
    Ksb=52.0705-(5.3816*SB)+(0.387*SB^2)
    'Calculate correction factor.
    SenEC=(0.25/Psb)*((ATT_C-Hsb)^2-Ksb)
    'Calculate corrected target temperature.
    CTT_C=ATT_C-SenEC

    CallTable(IRTS-P)

NextScan
EndProg
```


CR5000 Example Program

```

Public RefT, TargetCorrT, TC(2), SensorCorr, Psb, Hsb, Ksb

Alias TC(1) = TargetApparentT
Alias TC(2) = SensorBodyT

DataTable (AllDat,1,-1)
    DataInterval (0,60,Min,10)
    Average (1,RefT,FP2,0)
    Average (2,TC(),IEEE4,0)
    Average (1,TargetCorrT,IEEE4,0)
EndTable

BeginProg
    Scan (1,Sec,3,0)
        PanelTemp (RefT,250)
        TCDiff (TC(),2,mV20C,1,TypeK,RefT,True,0,_60Hz,1.0,0)
        Psb = 49.9092 + 0.59237 * SensorBodyT + 0.00558 * SensorBodyT^2
        Hsb = 4.2828 + 0.4248 * SensorBodyT - 0.00077 * SensorBodyT^2
        Ksb = 52.0705 - 5.3816 * SensorBodyT + 0.387 * SensorBodyT^2
        SensorCorr = (0.25/Psb) * ((TargetApparentT - Hsb)^2 - Ksb)
        TargetCorrT = TargetApparentT - SensorCorr
        CallTable AllDat

    NextScan
EndProg

```

6. Maintenance

As with any optical sensor, it is important to keep the lens and view clean. Otherwise the sensor will be measuring the temperature of the obstruction instead of the surface of interest.

Clean the lens gently with a moistened cotton swab. Distilled water or alcohol works well for most dust/dirt. Salt deposits dissolve better in a weak acid solution (~0.1 molar).

CAMPBELL SCIENTIFIC COMPANIES

Campbell Scientific, Inc. (CSI)

815 West 1800 North
Logan, Utah 84321
UNITED STATES
www.campbellsci.com
info@campbellsci.com

Campbell Scientific Africa Pty. Ltd. (CSAf)

PO Box 2450
Somerset West 7129
SOUTH AFRICA
www.csafrica.co.za
sales@csafrica.co.za

Campbell Scientific Australia Pty. Ltd. (CSA)

PO Box 444
Thuringowa Central
QLD 4812 AUSTRALIA
www.campbellsci.com.au
info@campbellsci.com.au

Campbell Scientific do Brazil Ltda. (CSB)

Rua Luisa Crapsi Orsi, 15 Butantã
CEP: 005543-000 São Paulo SP BRAZIL
www.campbellsci.com.br
suporte@campbellsci.com.br

Campbell Scientific Canada Corp. (CSC)

11564 - 149th Street NW
Edmonton, Alberta T5M 1W7
CANADA
www.campbellsci.ca
dataloggers@campbellsci.ca

Campbell Scientific Ltd. (CSL)

Campbell Park
80 Hathern Road
Shepshed, Loughborough LE12 9GX
UNITED KINGDOM
www.campbellsci.co.uk
sales@campbellsci.co.uk

Campbell Scientific Ltd. (France)

Miniparc du Verger - Bat. H
1, rue de Terre Neuve - Les Ulis
91967 COURTABOEUF CEDEX
FRANCE
www.campbellsci.fr
campbell.scientific@wanadoo.fr

Campbell Scientific Spain, S. L.

Psg. Font 14, local 8
08013 Barcelona
SPAIN
www.campbellsci.es
info@campbellsci.es

Campbell Scientific Ltd. (Germany)

Fahrenheitstrasse1, D-28359 Bremen
GERMANY
www.campbellsci.de
info@campbellsci.de

Please visit www.campbellsci.com to obtain contact information for your local US or International representative.