

# INSTRUCTION MANUAL



## COM220 Telephone Modem

Revision: 6/16



Copyright © 1997-2016  
Campbell Scientific, Inc.



# Guarantee

---

This equipment is guaranteed against defects in materials and workmanship. We will repair or replace products which prove to be defective during the guarantee period as detailed on your invoice, provided they are returned to us prepaid. The guarantee will not apply to:

- Equipment which has been modified or altered in any way without the written permission of Campbell Scientific
- Batteries
- Any product which has been subjected to misuse, neglect, acts of God or damage in transit.

Campbell Scientific will return guaranteed equipment by surface carrier prepaid. Campbell Scientific will not reimburse the claimant for costs incurred in removing and/or reinstalling equipment. This guarantee and the Company's obligation thereunder is in lieu of all other guarantees, expressed or implied, including those of suitability and fitness for a particular purpose. Campbell Scientific is not liable for consequential damage.

Please inform us before returning equipment and obtain a Repair Reference Number whether the repair is under guarantee or not. Please state the faults as clearly as possible, and if the product is out of the guarantee period it should be accompanied by a purchase order. Quotations for repairs can be given on request. It is the policy of Campbell Scientific to protect the health of its employees and provide a safe working environment, in support of this policy a "Declaration of Hazardous Material and Decontamination" form will be issued for completion.

When returning equipment, the Repair Reference Number must be clearly marked on the outside of the package. Complete the "Declaration of Hazardous Material and Decontamination" form and ensure a completed copy is returned with your goods. Please note your Repair may not be processed if you do not include a copy of this form and Campbell Scientific Ltd reserves the right to return goods at the customers' expense.

Note that goods sent air freight are subject to Customs clearance fees which Campbell Scientific will charge to customers. In many cases, these charges are greater than the cost of the repair.



Campbell Scientific Ltd,  
80 Hathern Road,  
Shepshed, Loughborough, LE12 9GX, UK  
Tel: +44 (0) 1509 601141  
Fax: +44 (0) 1509 601091  
Email: [support@campbellsci.co.uk](mailto:support@campbellsci.co.uk)  
[www.campbellsci.co.uk](http://www.campbellsci.co.uk)



# PLEASE READ FIRST

---

## About this manual

Please note that this manual was originally produced by Campbell Scientific Inc. primarily for the North American market. Some spellings, weights and measures may reflect this origin.

Some useful conversion factors:

<b>Area:</b> 1 in <sup>2</sup> (square inch) = 645 mm <sup>2</sup>	<b>Mass:</b> 1 oz. (ounce) = 28.35 g 1 lb (pound weight) = 0.454 kg
<b>Length:</b> 1 in. (inch) = 25.4 mm 1 ft (foot) = 304.8 mm 1 yard = 0.914 m 1 mile = 1.609 km	<b>Pressure:</b> 1 psi (lb/in <sup>2</sup> ) = 68.95 mb
	<b>Volume:</b> 1 UK pint = 568.3 ml 1 UK gallon = 4.546 litres 1 US gallon = 3.785 litres

In addition, while most of the information in the manual is correct for all countries, certain information is specific to the North American market and so may not be applicable to European users.

Differences include the U.S standard external power supply details where some information (for example the AC transformer input voltage) will not be applicable for British/European use. *Please note, however, that when a power supply adapter is ordered it will be suitable for use in your country.*

Reference to some radio transmitters, digital cell phones and aerials may also not be applicable according to your locality.

Some brackets, shields and enclosure options, including wiring, are not sold as standard items in the European market; in some cases alternatives are offered. Details of the alternatives will be covered in separate manuals.

Part numbers prefixed with a “#” symbol are special order parts for use with non-EU variants or for special installations. Please quote the full part number with the # when ordering.

## Recycling information



At the end of this product's life it should not be put in commercial or domestic refuse but sent for recycling. Any batteries contained within the product or used during the products life should be removed from the product and also be sent to an appropriate recycling facility.

Campbell Scientific Ltd can advise on the recycling of the equipment and in some cases arrange collection and the correct disposal of it, although charges may apply for some items or territories.

For further advice or support, please contact Campbell Scientific Ltd, or your local agent.



Campbell Scientific Ltd, 80 Hathern Road, Shepshed, Loughborough, LE12 9GX, UK  
Tel: +44 (0) 1509 601141 Fax: +44 (0) 1509 601091  
Email: [support@campbellsci.co.uk](mailto:support@campbellsci.co.uk)  
[www.campbellsci.co.uk](http://www.campbellsci.co.uk)



# Precautions

---

DANGER — MANY HAZARDS ARE ASSOCIATED WITH INSTALLING, USING, MAINTAINING, AND WORKING ON OR AROUND **TRIPODS, TOWERS, AND ANY ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC.** FAILURE TO PROPERLY AND COMPLETELY ASSEMBLE, INSTALL, OPERATE, USE, AND MAINTAIN TRIPODS, TOWERS, AND ATTACHMENTS, AND FAILURE TO HEED WARNINGS, INCREASES THE RISK OF DEATH, ACCIDENT, SERIOUS INJURY, PROPERTY DAMAGE, AND PRODUCT FAILURE. TAKE ALL REASONABLE PRECAUTIONS TO AVOID THESE HAZARDS. CHECK WITH YOUR ORGANIZATION'S SAFETY COORDINATOR (OR POLICY) FOR PROCEDURES AND REQUIRED PROTECTIVE EQUIPMENT PRIOR TO PERFORMING ANY WORK.

Use tripods, towers, and attachments to tripods and towers only for purposes for which they are designed. Do not exceed design limits. Be familiar and comply with all instructions provided in product manuals. Manuals are available at [www.campbellsci.eu](http://www.campbellsci.eu) or by telephoning +44(0) 1509 828 888 (UK). You are responsible for conformance with governing codes and regulations, including safety regulations, and the integrity and location of structures or land to which towers, tripods, and any attachments are attached. Installation sites should be evaluated and approved by a qualified engineer. If questions or concerns arise regarding installation, use, or maintenance of tripods, towers, attachments, or electrical connections, consult with a licensed and qualified engineer or electrician.

## General

- Prior to performing site or installation work, obtain required approvals and permits. Comply with all governing structure-height regulations, such as those of the FAA in the USA.
- Use only qualified personnel for installation, use, and maintenance of tripods and towers, and any attachments to tripods and towers. The use of licensed and qualified contractors is highly recommended.
- Read all applicable instructions carefully and understand procedures thoroughly before beginning work.
- Wear a **hardhat** and **eye protection**, and take **other appropriate safety precautions** while working on or around tripods and towers.
- **Do not climb** tripods or towers at any time, and prohibit climbing by other persons. Take reasonable precautions to secure tripod and tower sites from trespassers.
- Use only manufacturer recommended parts, materials, and tools.

## Utility and Electrical

- **You can be killed** or sustain serious bodily injury if the tripod, tower, or attachments you are installing, constructing, using, or maintaining, or a tool, stake, or anchor, come in **contact with overhead or underground utility lines.**
- Maintain a distance of at least one-and-one-half times structure height, or 20 feet, or the distance required by applicable law, **whichever is greater**, between overhead utility lines and the structure (tripod, tower, attachments, or tools).
- Prior to performing site or installation work, inform all utility companies and have all underground utilities marked.
- Comply with all electrical codes. Electrical equipment and related grounding devices should be installed by a licensed and qualified electrician.

## Elevated Work and Weather

- Exercise extreme caution when performing elevated work.
- Use appropriate equipment and safety practices.
- During installation and maintenance, keep tower and tripod sites clear of un-trained or non-essential personnel. Take precautions to prevent elevated tools and objects from dropping.
- Do not perform any work in inclement weather, including wind, rain, snow, lightning, etc.

## Maintenance

- Periodically (at least yearly) check for wear and damage, including corrosion, stress cracks, frayed cables, loose cable clamps, cable tightness, etc. and take necessary corrective actions.
- Periodically (at least yearly) check electrical ground connections.

WHILE EVERY ATTEMPT IS MADE TO EMBODY THE HIGHEST DEGREE OF SAFETY IN ALL CAMPBELL SCIENTIFIC PRODUCTS, THE CUSTOMER ASSUMES ALL RISK FROM ANY INJURY RESULTING FROM IMPROPER INSTALLATION, USE, OR MAINTENANCE OF TRIPODS, TOWERS, OR ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC.





# Table of Contents

---

*PDF viewers: These page numbers refer to the printed version of this document. Use the PDF reader bookmarks tab for links to specific sections.*

<b>1. Introduction .....</b>	<b>1</b>
1.1 General Description .....	1
1.2 Computer Requirements .....	3
<b>2. Specifications.....</b>	<b>3</b>
<b>3. Installation.....</b>	<b>3</b>
3.1 Connecting to Datalogger .....	3
3.2 Connecting to Earth Ground .....	5
3.3 LoggerNet Setup .....	6
3.4 Telephone to MD485 or Telephone to RF Systems .....	7
3.5 Telephone Service.....	7
3.6 Connecting to a Surge Protector .....	8
<b>4. Modem Settings .....</b>	<b>9</b>
<b>5. Troubleshooting.....</b>	<b>10</b>
<b>Appendices</b>	
<b>A. Changing COM220 Settings .....</b>	<b>A-1</b>
A.1 DIP Switch Settings .....	A-1
A.2 Hayes AT Commands .....	A-2
A.3 Downloading a New Operating System to the COM220 .....	A-6
A.4 Program Examples .....	A-7
A.4.1 ModemCallback Example (for CR1000) .....	A-7
A.4.2 DialModem Example (for CR1000) .....	A-8
A.4.3 P97 Instruction (for CR10X) .....	A-9
A.4.4 Example Programs for Data Callbacks via a CR1000 Datalogger Router .....	A-11
<b>B. CS I/O Connection.....</b>	<b>B-1</b>
B.1 CS I/O 9-Pin Connection .....	B-1
<b>C. Theory of Operation.....</b>	<b>C-1</b>
C.1 Theory of Operation.....	C-1
<b>D. FCC Warning to Users of Class B Computing     Devices .....</b>	<b>D-1</b>
<b>E. IC Information.....</b>	<b>E-1</b>

## **Figures**

1-1.	COM220 DIP switches. Five screws and outer cover must be removed for access to DIP switches. ....	1
1-2.	COM220.....	2
3-1.	CR1000 and COM220 using remote telephone line.....	4
3-2.	CR10X with CR10 wiring panel and COM220 using RJ11C telephone jack .....	5
3-3.	Top view of surge-suppressor wiring .....	8
3-4.	Side view of surge-suppressor wiring .....	9
A-1.	COM220 to computer connection .....	A-3
A-2.	Device Configuration screen .....	A-4
A-3.	Terminal Emulator screen in Device Configuration.....	A-5
A-4.	Send OS screen in Device Configuration .....	A-7
B-1.	CS I/O pinout .....	B-1

## **Tables**

1-1.	Default DIP Switch Settings.....	2
3-1.	Dataloggers that Require Direct 12-Vdc Connection to COM220.....	4
A-1.	Selecting ME Baud Rates via DIP Switches 3 and 4.....	A-2
A-2.	Maximum Datalogger ME Baud Rates .....	A-2

# COM220 Telephone Modem

## 1. Introduction

### 1.1 General Description

The COM220 modem is a selectable-baud-rate modem employing the Hayes AT command set. Its primary use is as a remote-site phone modem connected to a CSI datalogger. The modem is powered and enabled by the battery-powered datalogger. When not active, the COM220 draws 100 to 120  $\mu$ A from the datalogger's 12-Vdc output. During a call, it draws about 30 mA.

The COM220 is a replacement for the COM210. However, the COM220 supports both synchronous device communication (SDC) and modem enable (ME) communication, as well as various ME baud rates (9600 to 115200). The default setting for the COM220 at shipping is SDC7 (see Appendix A, *Changing COM220 Settings* (p. A-1), for details).

#### IMPORTANT

The default settings ARE NOT compatible with dataloggers that have non-PakBus operating systems (for example, CR510, CR10X, CR23X, CR7, CR5000). However, compatibility with non-PakBus dataloggers is easily achieved by changing DIP switch settings (FIGURE 1-1). If you want to use the COM220 as a drop-in replacement for the COM210, the COM220 settings should be changed to modem enable (DIP switch 1 open) and 9600 baud (DIP switches 3 and 4 open). Instructions for configuring the COM220 are described in Appendix A, *Changing COM220 Settings* (p. A-1).

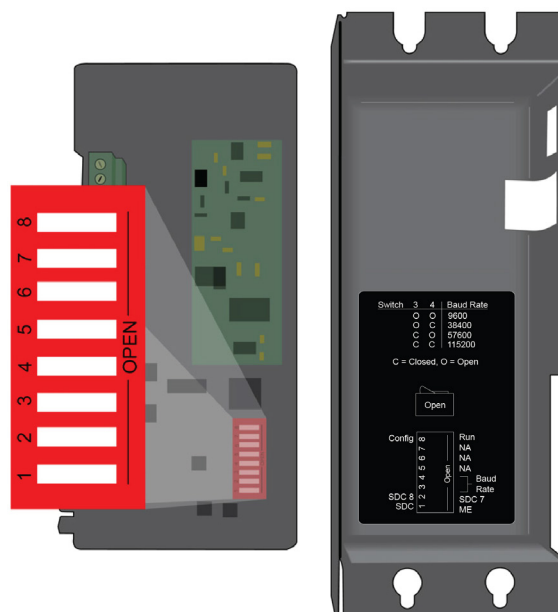


FIGURE 1-1. COM220 DIP switches. Five screws and outer cover must be removed for access to DIP switches.

<b>DIP Switch</b>	<b>Default Setting</b>
1	Closed
2	Open
3	Closed
4	Closed
5	Open
6	Open
7	Open
8	Open

The COM220 is connected to a CSI datalogger by a 9-pin subminiature D cable. This is the same 9-pin CS I/O interface common to all Campbell Scientific dataloggers (except the CR200 series). This is **not** an RS-232 connection. Appendix B, *CS I/O Connection (p. B-1)*, describes the CS I/O interface.

The COM220 can be used as an originate modem at the datalogger site. For newer PakBus dataloggers (for example, CR800, CR1000, CR3000), use the ModemCallback instruction or the DialSequence and DialModem instructions to program the datalogger to originate a call to the computer. For non-PakBus dataloggers (for example, CR510, CR10X, CR23X) and older PakBus dataloggers (for example, CR10XPB, CR23XPB, CR510PB) use Instruction 97 to program the datalogger to originate a call to the computer. Refer to your datalogger manual and LoggerNet Help files for detailed descriptions of these instructions. In addition, Appendix A.4, *Program Examples (p. A-7)*, includes sample programs for the ModemCallback, DialModem, and P97 instructions.

The COM220 features a built-in speaker to allow monitoring of calling and connection. See Appendix A.2, *Hayes AT Commands (p. A-2)*, for the Hayes AT commands that affect the speaker on/off and volume settings.



FIGURE 1-2. COM220

## 1.2 Computer Requirements

A Hayes-compatible modem is used at the computer site with Campbell Scientific computer software to call the datalogger attached to the COM220. The computer's modem must be configured to the proper settings using a set of modem-initialization strings in the software program's pick list.

## 2. Specifications

<b>Standards:</b>	V.92, K56Flex, V.90, V.34, V.32bis, V32, V23, V22bis, V22, V.21, B212, B103
<b>Registration:</b>	FCC US: 3A4M508BSM2-T-W IC 2377 A-SM2TW
<b>Compliance:</b>	View the EU Declaration of Conformity at: <a href="http://www.campbellsci.com/com220">www.campbellsci.com/com220</a>
<b>Operating voltage:</b>	12 Vdc
<b>Current drain:</b>	100 to 120 $\mu$ A quiescent; 30 mA active
<b>Communication rate between datalogger and COM220:</b>	9600, 38400, 57600, 115200 bps (selected by user)
<b>Operation:</b>	Full-duplex over standard, analog phone lines
<b>Operating temperature:</b>	-25 to +50 °C std, -55 to +85 °C optional
<b>Dimensions:</b>	16.5 x 2.5 x 6.6 cm (6.5 x 1.0 x 2.6 in)
<b>Weight:</b>	0.16 kg (0.35 lb)

## 3. Installation

The COM220 is designed to be used with standard, analog telephone lines. It will not work with a digital telephone line. Connection to telephone company-provided coin service (central office implemented systems) is prohibited. Connection to party-line service is subject to state tariffs.

### 3.1 Connecting to Datalogger

Connect the cable from the telephone RJ11C jack to the modem as shown in FIGURE 3-2. If the telephone company has not installed surge protection in the telephone line (no RJ11C jack), one must install surge protection (pn 6362 or 4330) and connect both the ring and tip terminal blocks as shown in FIGURE 3-1.

Current Campbell Scientific dataloggers provide 12 Vdc to the COM220 from the CS I/O port via the SC12 cable (FIGURE 3-1). Older dataloggers do not provide 12 Vdc on their CS I/O port. When used with the older dataloggers listed in TABLE 3-1, 12 Vdc and ground need to be connected via the green power connector on the side of the COM220 (see FIGURE 3-2).

TABLE 3-1. Dataloggers that Require Direct 12-Vdc Connection to COM220
CR10(X) with silver wiring panel
CR10(X) with black CR10 wiring panel (pn 8032)
21X(L) — serial number 13,442 or lower
CR500 — serial number 1764 or lower
CR7, CR700X — serial number 2778 or lower

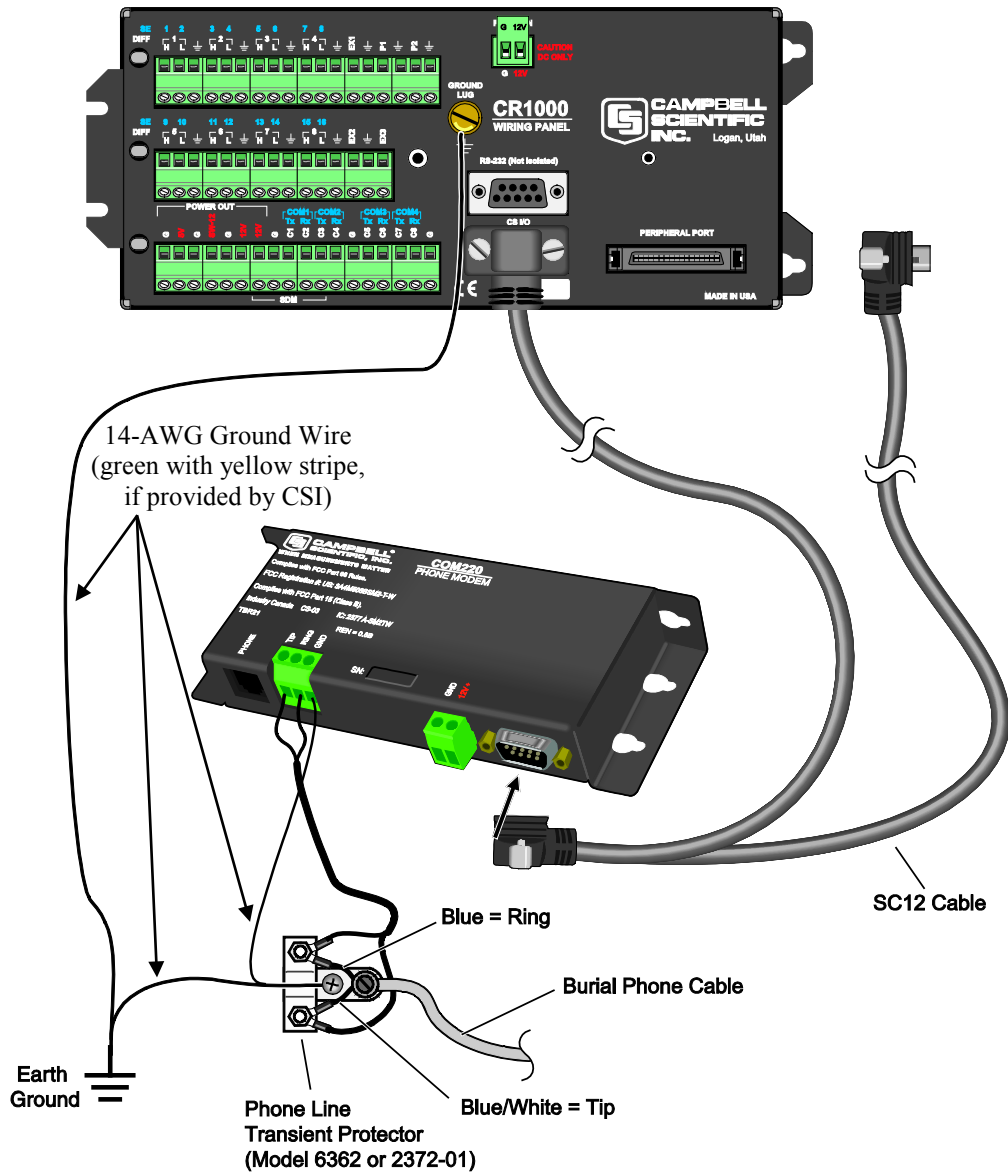


FIGURE 3-1. CR1000 and COM220 using remote telephone line

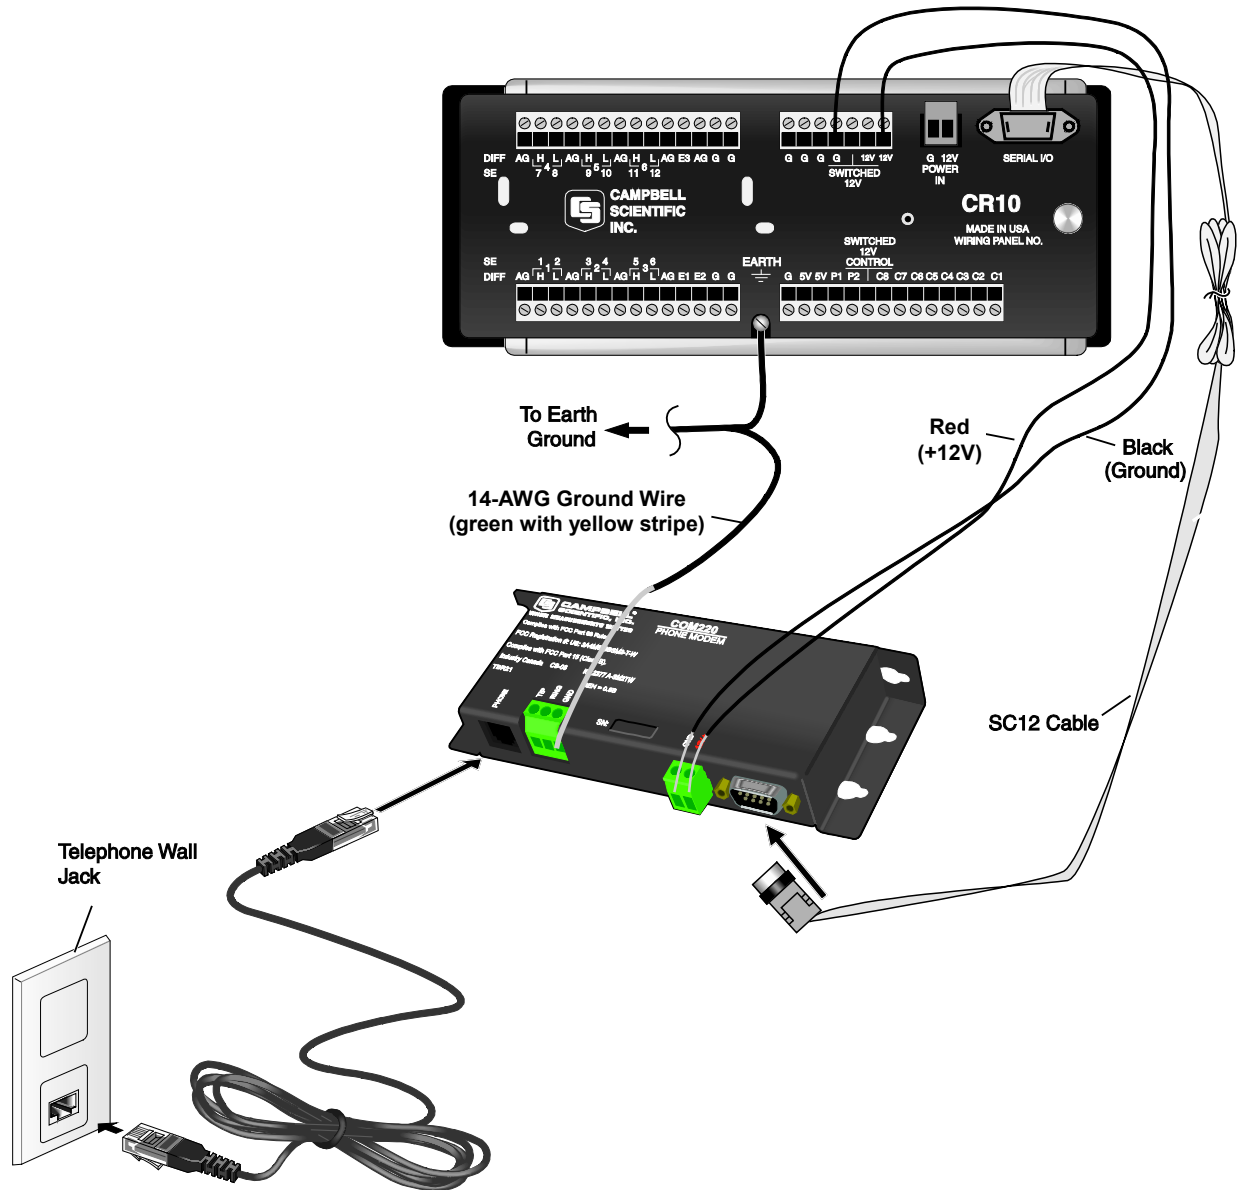


FIGURE 3-2. CR10X with CR10 wiring panel and COM220 using RJ11C telephone jack

### 3.2 Connecting to Earth Ground


Connect the 14-AWG grounding wire (green with yellow stripe, provided with the COM220) to the ground terminal (GND) on the COM220 and to the enclosure's earth ground connection. If the site does not have a grounded enclosure, connect the ground wire directly to an earth ground connection. The datalogger ground should also be tied to the earth ground (see FIGURE 3-1 and FIGURE 3-2).

#### CAUTION

The modem must be grounded for its transient protection to work.


### 3.3 LoggerNet Setup

- In the *LoggerNet Setup Screen*, press **Add Root** and choose **ComPort**. From the **ComPort**, select **Communications**, and Add a **PhoneBase**, a **PhoneRemote**, a **PakBusPort** (if your datalogger is a PakBus datalogger), and your datalogger.
- Click on the **ComPort** in your network map, and select the correct **ComPort Connection** for your modem.
- Click on the **PhoneBase** in your network map. Select your PC modem from the drop-down list or add it using the **Edit Modem Database** dialog box. Set the **Maximum Baud Rate** appropriate for your modem and datalogger.
- Click on the **PhoneModem** in your network map. Enter the COM220's analog phone number.

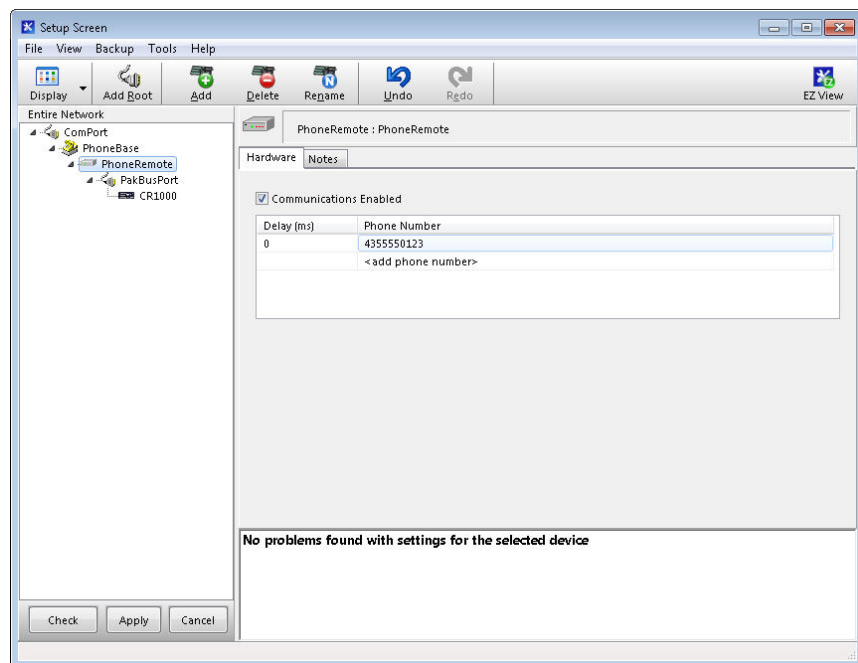

- If your datalogger is a PakBus datalogger, click on the datalogger in your network map. Enter the **PakBus Address** of your datalogger.



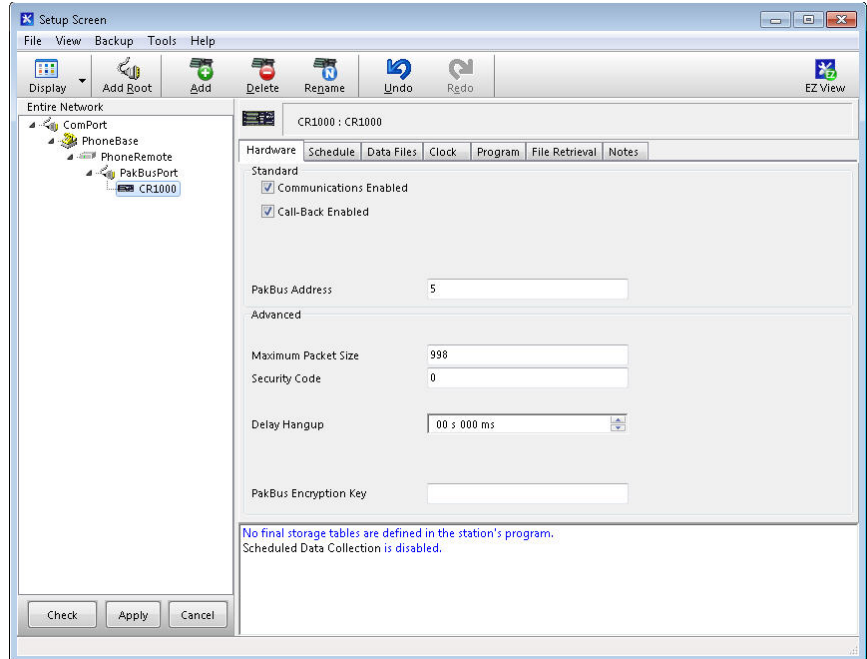

- Press **Apply** to save your changes.

### 3.4 Telephone to MD485 or Telephone to RF Systems

Telephone-to-MD485 or telephone-to-radio configurations can be utilized for communicating with multiple dataloggers through one telephone line. For telephone-to-MD485 or telephone-to-radio communications (with no datalogger router), the COM220 should be set for ME mode. The COM220 and MD485 should be set to the same baud rate. When using a PakBus network with a datalogger configured as a router, the COM220 can be set for SDC7 and the radio for SDC8, or vice versa. Contact Campbell Scientific for more information. In addition, Appendix A.4.4, *Example Programs for Data-Callbacks via a CR1000 Datalogger Router* (p. A-11), includes example programs for both a router datalogger and a remote datalogger communicating by telephone to MD485 or telephone to radio.

### 3.5 Telephone Service

If you have any questions about your telephone line, such as how many pieces of equipment you can connect to it, the telephone company will provide this information upon request. If the telephone company requests information concerning the equipment which you have connected to your telephone line, the FCC registration number and the ringer equivalence number (REN) of the COM220 are listed on its label. Additional technical information from the FCC and IC on the COM220 is available in Appendix D, *FCC Warning to Users of Class B Computing Devices* (p. D-1), and Appendix E, *IC Information* (p. E-1), respectively.

---

#### NOTE

If the telephone company does not provide phone-line surge protection, a Campbell Scientific surge suppressor should be used. Refer to Section 3.6, *Connecting to a Surge Protector* (p. 8), for more information.

---

### 3.6 Connecting to a Surge Protector

Campbell Scientific offers two surge protectors (pn 4330 and 6362). The 4330 and 6362 are essentially the same, except that the 6362 has hardware for mounting to an enclosure backplate.

---

**NOTE** The 4330 is also known as the 2374-01.

---

The 4330 and 6362 have a protector element for each line that consists of a heavy-duty rated, two-element gas tube, an external, backup gap assembly, and a switch-grade shorting mechanism. The gas tubes (tip and ring) are sealed in a fire-resistant plastic body. DC breakdown at 100 V/sec is 300 to 500 V; DC extinguishing at 52 V, 135 V, and 150 V is less than 150 ms.

FIGURE 3-3 and FIGURE 3-4 show the wiring for connecting the surge suppressor. Color coding of wires may vary. The important consideration is to follow tip all the way through and ring all the way through. Getting wires crossed typically does not damage anything. The phone line just will not work until the wires are straightened out.

---

**CAUTION** Phone wires are live, typically with low voltage (24 Vdc). While not harmful in most situations, Campbell Scientific recommends installing the surge protector in dry weather only by technicians with a healthy heart.

---

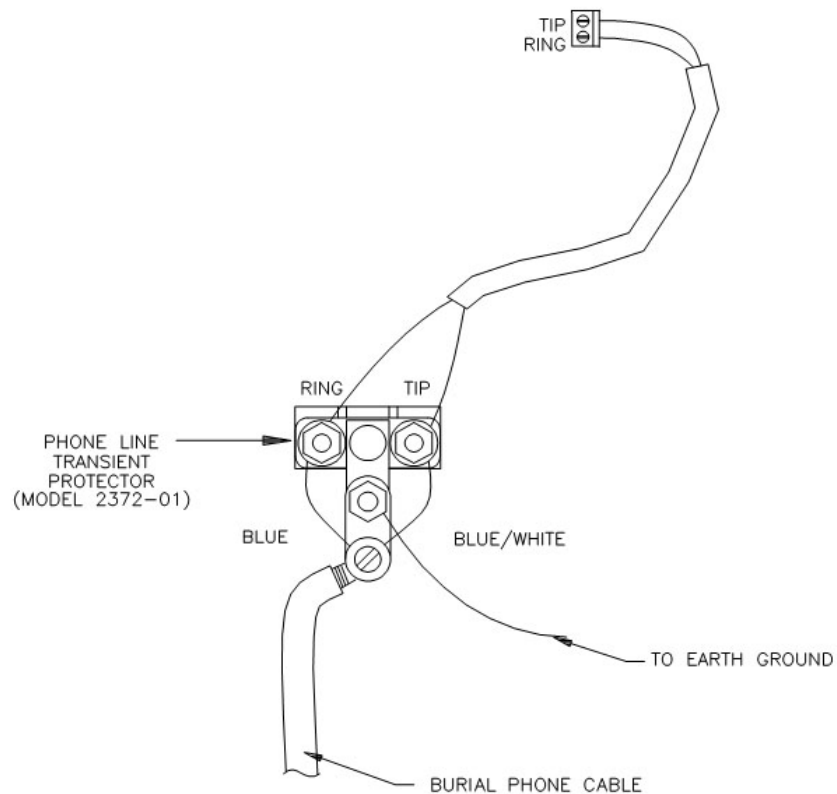


FIGURE 3-3. Top view of surge-suppressor wiring

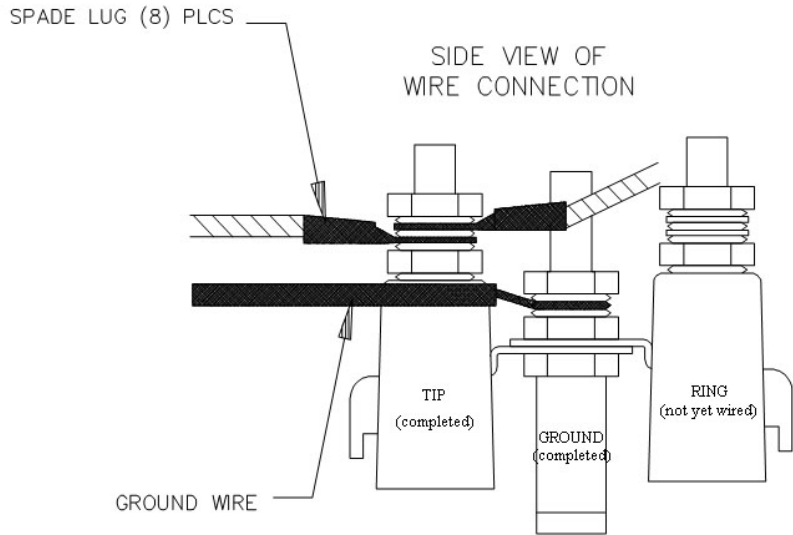


FIGURE 3-4. Side view of surge-suppressor wiring

## 4. Modem Settings

The COM220 is shipped from the factory with default settings that support PakBus dataloggers (such as the CR800, CR1000, CR3000, and CR10XPB). The modem comes configured for synchronous device communication (SDC7), and, if using a PakBus datalogger, can answer a call as soon as a call is detected.

Default settings must be changed if using a non-PakBus datalogger.

### IMPORTANT

The default settings ARE NOT compatible with dataloggers that have non-PakBus operating systems (such as the CR510, CR10X, CR23X, CR7, and CR5000). However, compatibility with non-PakBus dataloggers is easily achieved by changing DIP-switch settings (FIGURE 1-1). If you want to use the COM220 as a drop-in replacement for the COM210, the COM220 settings should be changed to modem enable (DIP switch 1 open) and 9600 baud (DIP switches 3 and 4 open). Instructions for configuring the COM220 are described in Appendix A, *Changing COM220 Settings* (p. A-1).

You can modify the following COM220 settings with DIP switches:

- 1) Communication mode (SDC or ME)
- 2) ME baud rate

Additional changes (see examples below) may be modified with Hayes AT commands. Appendix A.2, *Hayes AT Commands* (p. A-2), describes the procedures and commands required to effect the changes described in this section.

Some of the AT command settings that may be changed are:

**Disable auto-answer:** This option is used only when the modem is not to answer a call. For example, the COM220 is connected to a telephone line that is to be used partly for voice communication. In this situation, it is best to have the datalogger call the computer.

**Speaker on/off and volume:** Default settings have the speaker on only during call establishment and set to a low volume. The speaker may be turned completely off in order to limit the current drain during the connection or so you cannot/do not hear the speaker. It is also possible to set the speaker volume higher if you want to hear the speaker better than the default, low-volume setting.

**Answer on X<sup>th</sup> ring:** This option is used when the modem is sharing a line and you only want it to answer after a specified number of rings. For example, the COM220 is sharing a line with people at an office. It can be programmed to only answer after the third ring. If the PC calls when the office is closed and no one answers the phone after three rings, the datalogger will pick it up.

**Change telephone system types:** Change from the Bell 212A (U.S. and Canada) system to a CCITT V.32 (foreign, 9600 baud) or CCITT V.22 (foreign, 1200 baud) system. This does not mean that the COM220 is tested and approved for all foreign countries.

CCITT is an international consultative committee that sets international communications-usage standards. V.32 and V.22 are CCITT standards that the COM220 meets.

## 5. Troubleshooting

When the Campbell Scientific software cannot establish a link to a remote datalogger that is connected to a COM220, check the following:

- 1) Verify that the modem initialization settings on your computer are correct for your specific calling modem (that is, the modem attached to your computer). See the calling modem's software manual and/or help screens for more information.
- 2) If using a non-PakBus datalogger (such as the CR510, CR10X, CR23X, CR7, and CR5000), verify that DIP switch 1 on the COM220 is in the open (modem enable) position. For PakBus dataloggers (such as the CR800, CR850, CR1000, CR3000, CR10XPB, 23XPB, etc.), DIP switch 1 can be in either position, but closed (SDC7) is preferred. See Appendix A.1, *DIP Switch Settings* (p. A-1), for details.
- 3) If the COM220 is set for modem enable (DIP switch 1 open), verify that the ME baud rate selected (DIP switches 3 and 4) agrees with related communication instructions in the datalogger program. Instructions for setting the COM220's ME baud rate are found in Appendix A.1, *DIP Switch Settings* (p. A-1).
- 4) If the COM220 is set for modem enable (DIP switch 1 open) and you are unable to connect to the datalogger, try setting the datalogger ME baud rate, BaudrateME, to a negative number (for example, -9600) in order to

enable auto-bauding in the datalogger. If the datalogger BaudrateME is positive (due to an earlier program instruction or Status table configuration), the datalogger will be unable to communicate with the COM220 unless baud rates happen to match. **A good rule of thumb is to keep baud rates negative (–) in programs and when configuring the Status table to allow datalogger auto-bauding.**

- 5) If unable to connect to a datalogger via the COM220, make sure that the datalogger is not beaconing to the same port for which the COM220 is configured (that is, if the COM220 is configured for SDC7 and the datalogger's BeaconSDC7 is set to something other than 0, a connection cannot be established).
- 6) If the COM220 is in modem enable mode, verify that the COM220 is the only modem-enable device connected to the datalogger. Other common Campbell Scientific modem-enable devices are the SC32B, some RF modems, the MD485, the RF401, the SC932A, and the PDA-to-CS I/O connector.
- 7) If the COM220 is in SDC mode (the default is SDC7, with DIP switch 1 closed and DIP switch 2 open), verify that any other SDC devices attached to the datalogger are using a different SDC address (that is, if the COM220 is configured for SDC7, another SDC device attached to the datalogger must use SDC8).
- 8) Verify that no other software application is currently using the same COM port on the computer. Even if a program is minimized in windows, it may put a lock on a COM port. Some notebook computers do not automatically activate the COM ports. Verify that the COM port you are using is activated.
- 9) Use the Low Level Log in the Campbell Scientific software, LoggerNet, [Status Monitor | Tools | Log Tool | View | View I/O (Low Level Log)] to see connection progress while a link is being established. Assuming the above items are OK, the Low-Level Log will display "ATDT#####", where ##### is the phone number entered in LoggerNet Setup's Phone Remote device for the datalogger you are trying to call. The modem attached to the computer will respond back to the computer with result codes showing how the call is progressing. These responses should include "RING" and "CONNECT #####" where ##### is the negotiated modem-to-modem connection baud rate. The maximum baud rate setting in Setup's PakBusPort [LoggerNet | Setup | PakBusPort (in the device map)] device may limit the baud rate selected by the modems since it defaults to 9600. You can sometimes achieve a higher connection baud rate by raising the PakBusPort's maximum baud rate.
- 10) Can you attach an analog telephone to the line and make a call out? If not, contact your local telephone company. If you can make a call out but the connection is poor or faint, contact your local telephone company.
- 11) Verify the COM220 is receiving 12 Vdc. If the COM220 is receiving 12 Vdc from a separate power supply instead of the datalogger, verify that the ground of the separate power supply is connected to the datalogger's ground.
- 12) Verify the datalogger is turned on.

To comply with FCC rules and regulations, all repairs on the COM220 modem **must** be performed by Campbell Scientific, Inc. or an authorized agent of Campbell Scientific, Inc. For assistance in installation or troubleshooting or for repairs, contact Campbell Scientific:

Campbell Scientific, Inc.  
815 West 1800 North  
Logan, Utah 84321-1784  
Telephone: (435) 227-9000  
Fax: (435) 227-9001  
Website: [www.campbellsci.com](http://www.campbellsci.com)

# Appendix A. Changing COM220 Settings

---

## CAUTION

Changing any of the modem's settings may result in communication problems. After changing the settings, try the modem locally before installing it at a remote location. To speed problem resolution when contacting Campbell Scientific for support, please inform us of any modem-settings changes that have been made.

---

## A.1 DIP Switch Settings

The following COM220 settings are changed by opening or closing DIP switches:

- 1) Communication mode, either synchronous device communication (SDC) or modem enable (ME)
- 2) ME baud rate

To change DIP switch settings, the outer cover must first be removed by unscrewing and removing the five Philips head screws on the cover.

## IMPORTANT

It is necessary to cycle power to the COM220 for changes to the DIP switch settings to take effect. This is done by removing the 9-pin connector for about 5 s. As with other devices, if you leave the power off for too short a time, you may get unexpected results.

---

### DIP Switches 1 and 2: SDC or ME

The COM220 supports synchronous device communication (SDC) and modem enable (ME) communication. Switch 1 selects between SDC and ME. If switch 1 is open, ME mode is selected. If switch 1 is closed and switch 2 is open (default), SDC7 is selected. If both switch 1 and 2 are closed, SDC8 is selected. SDC is not supported by non-PakBus operating systems (such as the CR10X, CR23X, CR7, and CR510). Hence, to connect with these older dataloggers, switch 1 must be open (that is, modem enable selected).

### DIP Switches 3 and 4: ME Baud Rates

DIP switches 3 and 4 only have effect when the COM220 is in modem enable mode. If the COM220 is in ME mode, switches 3 and 4 select the baud-rate setting between the COM220 and the datalogger as follows:

<b>ME Baud Rate</b>	<b>Switch 3</b>	<b>Switch 4</b>
9600	Open	Open
38400	Open	Closed
57600	Closed	Open
115200	Closed	Closed

Please note that older dataloggers (such as the CR10X, CR23X, and CR510) cannot support the highest COM220 ME baud rates. TABLE A-2 lists maximum datalogger baud rates.

<b>Datalogger</b>	<b>Max Baud Rate</b>
CR10X, CR510, CR7, CR21X	9600
CR23X	38400
CR5000	57600
CR800, CR1000, CR3000	115200

**DIP Switches 5, 6, and 7: Not used**

**DIP Switch 8: Configuration Mode**

Closing DIP switch 8 (and cycling power to the COM220) places the COM220 in configuration mode. The COM220 can be configured using an SC532 or SC532A with a 12-Vac adapter (pn 15966) and Device Configuration Utility version 1.6 or newer and Hayes AT commands (see below).

## A.2 Hayes AT Commands

To configure the COM220 with Hayes AT commands, you will need the Campbell Scientific Device Configuration Utility version 1.6 or newer and an SC532 or SC532A device. An SC12 cable must be connected to the peripheral port on the SC532 or SC532A and the CS I/O port on the COM220. Another cable should connect the RS232 port (if using an SC532 device) or the PC port (if using an SC532A device) to one of your computer's serial ports. If using an SC532A device, power will be provided to the modem by the SC532A with a 12-Vac adapter (FIGURE A-1). However, if using the older SC532, you must apply 12 V to the COM220 via the green connector.



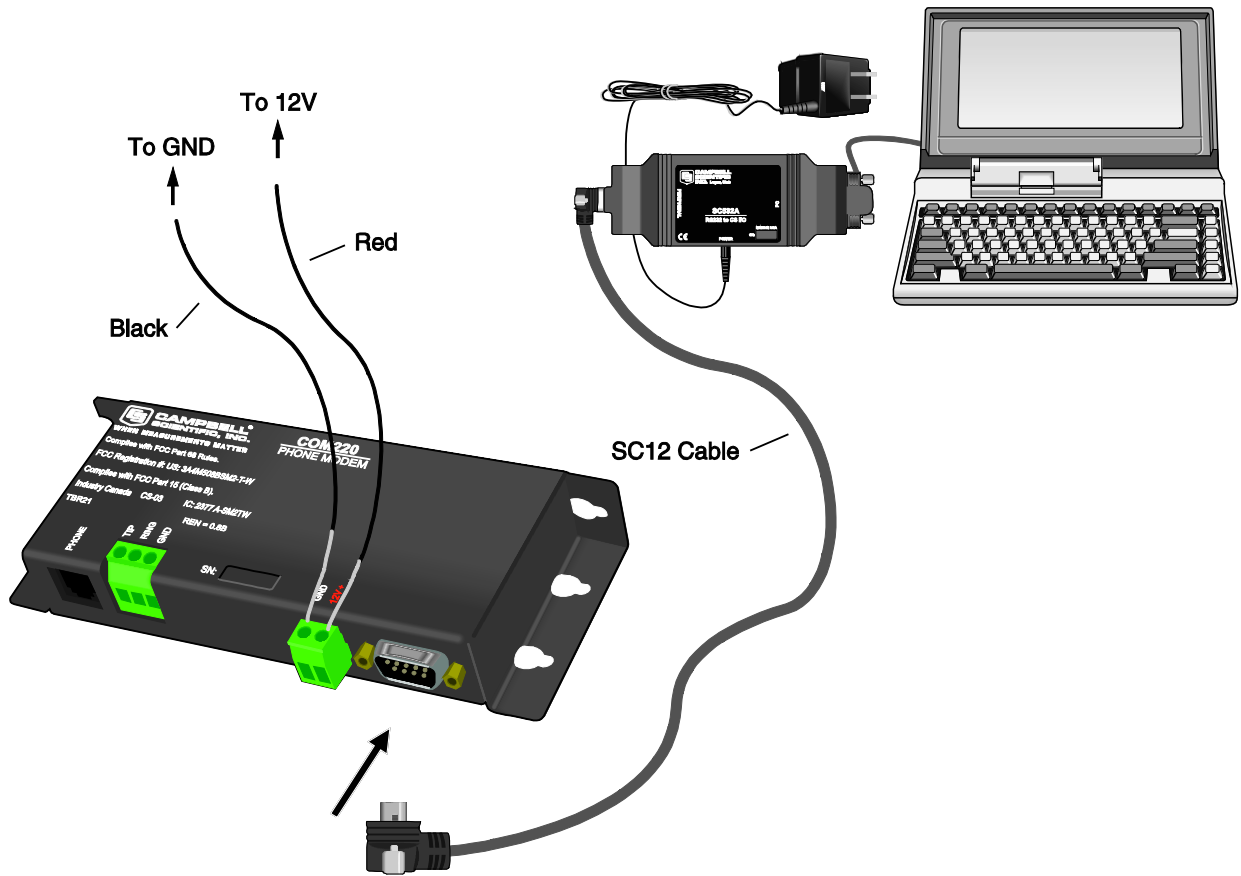


FIGURE A-1. COM220 to computer connection

To configure the COM220 with Hayes AT commands, follow these steps:

- 1) Close DIP switch 8 on the COM220 (power to the COM220 must be cycled for about 5 sec before changes to DIP-switch settings are effective).
- 2) You must use an SC532A with a 12-Vac adapter or an SC532 interface to communicate with the modem. Connect the PC port (called RS232 on the SC532) to a serial port on your computer via an RS232 cable. Leave the COM220 modem disconnected for now.
- 3) Run Device Configuration Utility version 1.6 or newer.
- 4) Select COM220 from the Device Configuration Utility menu (FIGURE A-2).
- 5) Make sure the appropriate serial port is selected on the left panel of the Device Configuration Utility window and click on the connect button.
- 6) Once you have clicked on the connect button, connect the peripheral port on the SC532 or SC532A to the CS I/O port on the modem with an SC12 cable. If using an SC532, you will also have to apply 12 V to the COM220 via a green connector attached to a power supply. If using an SC532A device, power will be provided to the modem by the SC532A.

---

**NOTE** You must click on the connect button BEFORE applying power to the COM220.

---

- 7) Follow the instructions that appear in the terminal emulator screen (FIGURE A-3).
- 8) Be sure to save all new commands before exiting (by entering 5 and pressing Enter).
- 9) When finished, return DIP switch 8 on the COM220 to its open position.



FIGURE A-2. Device Configuration screen

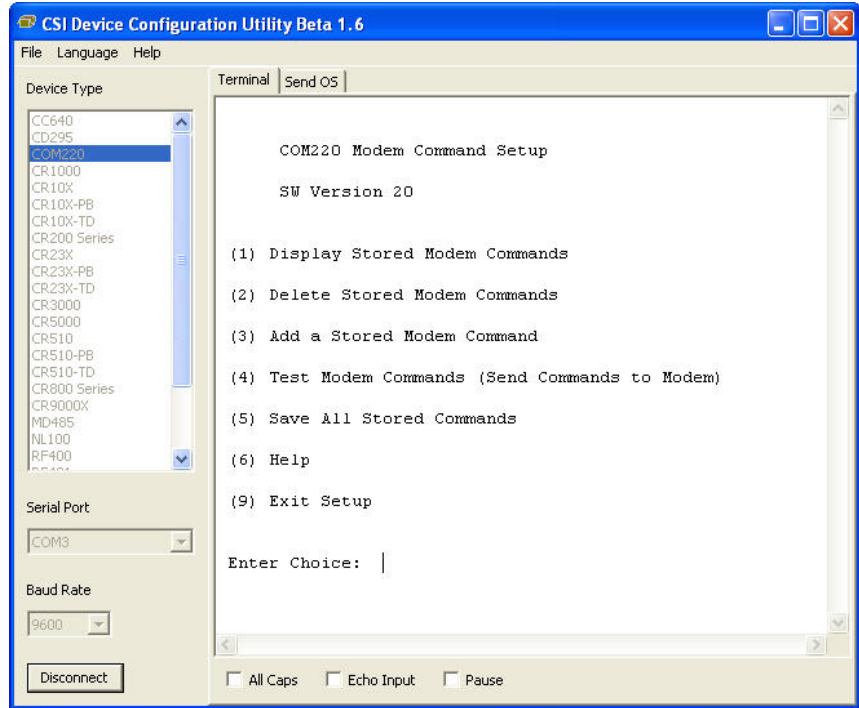


FIGURE A-3. Terminal Emulator screen in Device Configuration

**HAYES AT COMMAND SUMMARY:**

This manual does not attempt to be a primer on the Hayes AT command set. The commands are, therefore, only summarized below. For most applications, these commands will not need to be used. Except as noted, all commands should begin with an “AT” and end with a carriage return (press the Enter key). There are no “O” as in Oscar commands, only “0” as in Zero commands. For example, to change the default number of rings from 1 to 3, the command is: AT $S0=2$  (the default is 1 ring as the MPU sends AT $S0=1$  by default to the modem module).

To turn the speaker off, the command is ATM0.

**NOTE**

For command changes to be effective, you MUST press Enter after typing the command and you MUST press 5 to save the new command before disconnecting or exiting set up.

**COMMANDS TO CHANGE DEFAULT MODES:**

- B1 (default) CCITT V.32 (9600 baud), Bell 212A (1200 baud), and Bell 103 (300 baud)
- B0 CCITT V.32 (9600 baud), CCITT V.22 (1200 baud), and CCITT V.21 (300 baud)
- L0 Lowest speaker volume
- L1 (default) Low speaker volume
- L2 Medium speaker volume
- L3 High speaker volume

M0	Speaker always off
M1 (default)	Speaker on during call establishment
M2	Speak on during entire call session
<hr/>	
S0=0	Disable Auto Answer
S0=1 (default)	Answer on second ring
S0=2	Answer on third ring
S0=n	Answer on (n + 1) ring.

**CAUTION**

When doing datalogger-to-datalogger communications with the COM220, if more than six rings are specified, the datalogger may time out before the modem answers; communication will never be established! Be sure to try the setup locally before installing at a remote location.

---

## A.3 Downloading a New Operating System to the COM220

To download a new operating system to the COM220, follow these steps:

- 1) You must use an SC532 or an SC532A interface to communicate with the modem. Connect the PC port (called RS232 on the SC532) to a serial port on your computer via an RS232 cable. Leave the modem disconnected for now.
- 2) Make sure that you have the appropriate serial port selected in the left panel of the Device Configuration Utility window.
- 3) Click the Start button.
- 4) In the resulting file-open dialogue box that appears, select the file that should be sent as the modem's operating system. **Do not attempt to load any operating system other than that designed for the COM220 modem.**
- 5) Once you have pressed OK in the file-open dialogue box, connect the peripheral port on the SC532 or SC532A to the CS I/O port on the modem with an SC12 cable. If using an SC532, you will also have to apply 12 V to the COM220 via a green connector attached to a power supply. If using an SC532A device, power will be provided to the modem by the 12-V adapter connected to the SC532A.

**NOTE**

You must highlight/select the operating system file to be sent BEFORE applying power to the COM220.

---

- 6) The program should now send the operating system to the modem. **Interrupting this process may corrupt the modem operating system.**

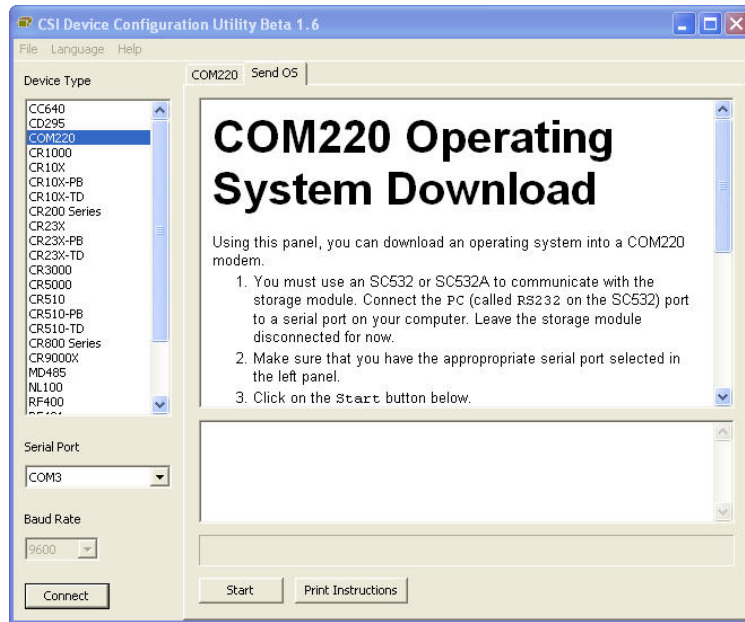


FIGURE A-4. Send OS screen in Device Configuration

## A.4 Program Examples

### A.4.1 ModemCallback Example (for CR1000)

The ModemCallback instruction is available in the CR1000 with operating system std.12 or greater, in the CR3000 with operating system std.05 or greater, and in the CR800 or CR850 with operating system std.03 or greater. The following program uses the ModemCallback instruction to call LoggerNet every 2 minutes. The ModemCallback instruction assumes that LoggerNet resides at the phone number and that **callback is enabled in LoggerNet Setup, both for the comport and for the datalogger.**

```
Public PTemp, batt_volt, Count, Result as Long
Const Abort = 0      ' False

DataTable (Test5,1,-1)
  DataInterval (0,0,Sec,10)
  Sample (1,batt_volt,FP2)
  Minimum (1,batt_volt,FP2,0,False)
  Maximum (1,batt_volt,FP2,False,False)
  Sample (1,PTemp,FP2)
  Minimum (1,PTemp,FP2,0,False)
  Maximum (1,PTemp,FP2,False,False)
  Sample (1,Count,FP2)
EndTable

BeginProg
  Scan (2,Min,3,0)
  Count = Count + 1
  PanelTemp (PTemp,250)
  Battery (Batt_volt)

  ModemCallback(Result,ComSDC7,9600,0,"5551212","",40,60,Abort)
  CallTable Test5
  NextScan
End Program
```

## A.4.2 DialModem Example (for CR1000)

The program below does 2-min callbacks via the COM220 configured for SDC7. DialModem is set equal to a variable, so that the success/failure result can be used by the EndDialSequence instruction. If the call fails, the link will be terminated at the EndDialSequence instruction. If the call is successful, the device will be kept online until the SendVariables command is completed.

---

**NOTE** For data callbacks to occur, **Callback Enable must be selected in LoggerNet Setup both for the comport and for the datalogger.**

---

```
'Replace DialModem phone number with your PC's phone number

Public batt_volt, Result
Public PTemp, TCvalue_F, dummy
Public RespStrng, DialSuccess, AccumDialFails as LONG

DataTable (DC1,1,1000)
DataInterval (0,0,Sec,10)
Sample (1,PTemp,FP2)
Sample (1,TCvalue_F,FP2)
Sample (1,DialSuccess,FP2)
EndTable

DialSequence (4094) 'Establishes a phone connection if there isn't one already.
DialSuccess =DialModem (ComSDC7,-115200,"5551212","") ' " Param 2 baud rate setting
'affects sdc bit rate." Param 4 allows OS to accept any listed modem response.
If DialSuccess = 0 then AccumDialFails = AccumDialFails + 1
EndDialSequence (DialSuccess) ' -1 = success, 0 = failure of response to match Param 4

BeginProg
Scan (2,Min,3,0)
PanelTemp (PTemp,250)
Battery (Batt_volt)
dummy = 0
TCdiff (TCvalue_F,1,mV2_5C,1,TypeT,PTemp,True ,0,250,1.8,32)
SendVariables (Result,ComSDC7,4094,4094,0000,3500,"Public","Callback",dummy,1)
'Establishes static route to LN
'35 sec timeout allows time to dial/train

    CallTable DC1

NextScan
EndProg
```

**CAUTION**

The COM220 can return several possible responses once connected (each terminating in a carriage return):

“1” CONNECT

“5” CONNECT1200

“10” CONNECT2400

“13” CONNECT9600

“18” CONNECT4800

“20” CONNECT7200

“21” CONNECT12000

“25” CONNECT14400

Hence, to work with the COM220, the user must put in a NULL string, or else the DialModem will fail unless, by chance, it returns the specific string the user entered. Therefore, it is highly recommended to use the “” string for the connect string, unless the user is using some other modem that he knows has a different response string than those listed above.

### A.4.3 P97 Instruction (for CR10X)

Instruction 97 is a Program Control instruction that makes the following types of calls:

- Datalogger calls a computer to send data.
- Datalogger calls a voice phone using our voice-synthesized modem.
- Datalogger calls a remote datalogger to retrieve its input locations.

**Instruction 97 has the following parameters:**

- Parameter 1 — Modem/Baud Rate Codes
- Parameter 2 — Flag No. to Disable P97
- Parameter 3 — Call Time Limit (seconds)
- Parameter 4 — Seconds Before Fast Attempts
- Parameter 5 — Fast Attempts
- Parameter 6 — Minutes Before Slow Attempts
- Parameter 7 — Failure Location
- Parameter 8 — Callback ID

**IMPORTANT**

Do not put Instruction 97 inside a loop or conditional statement; it must be executed each time the table is run.

In the example below, the program does two minute data callbacks via the COM220 phone modem. Edit instruction 13 with your PC's (LoggerNet's) phone number. Remember to set switch 1 open for modem enable mode, and switches 3 and 4 open for 9600 baud. The callback ID in this example is 222. The callback ID is a user-specified number and must also be entered in LoggerNet Setup for callbacks to work.

```
*Table 1 Program
01: 5      Execution Interval (seconds)

; Prevent callback when program Compiled
1:  If Flag/Port (P91)
  1:  28      Do if Flag 8 is Low
  2:  30      Then Do

      2:  Do (P86)
        1:  15      Set Flag 5 High

      3:  Do (P86)
        1:  18      Set Flag 8 High
4:  End (P95)

5:  Batt Voltage (P10)
  1:  1      Loc [ BatVolt ]      ;measure battery voltage

6:  Internal Temperature (P17)
  1:  2      Loc [ TEMP_PANL ]    ;measure panel temperature

7:  If time is (P92)              ;final storage every 10 seconds
  1:  0      -- Minutes (Seconds --) into a
  2:  10     Interval (same units as above)
  3:  10     Set Output Flag High (Flag 0)

8:  Real Time (P77)
  1:  111    Day,Hour/Minute,Seconds (midnight = 0000) ;place a time stamp

9:  Sample (P70)
  1:  1      Reps
  2:  1      Loc [ BatVolt ]      ;sample battery voltage

10: Sample (P70)
  1:  1      Reps
  2:  2      Loc [ Temp_PANL]     ;sample panel temperature

11: If time is (P92)
  1:  0      Minutes (Seconds --) into a
  2:  2      Interval (same units as above)
  3:  25     Set Flag 5 Low

12: Initiate Telecommunications (P97)
  1:  22     Phone Modem/9600 Baud ;set baud rate/modem
  2:  5      Disabled when User Flag 5 is High
  3:  45     Seconds Call Time Limit
  4:  0      Seconds Before Fast Retry
  5:  0      Fast Retries
  6:  0      Minutes Before Slow Retry
  7:  3      Failures Loc [ Failures ]
  8:  222    Callback ID          ;must also enter callback ID in LoggerNet Setup
```



```

13: Extended Parameters (P63)           ;7-digit phone number
1: 5      Option
2: 5      Option
3: 5      Option
4: 1      Option
5: 2      Option
6: 1      Option
7: 2      Option
8: 13     Option ;13 is the termination character; always place after phone number

End Program

```

#### A.4.4 Example Programs for Data Callbacks via a CR1000 Datalogger Router

To do data callbacks via a datalogger router with COM220 and RF401s or MD485s, they must all be configured to communicate with one another. In addition, two programs are necessary: one for the datalogger router and one for the remote datalogger. Below are example programs for a datalogger router and a remote datalogger. For these examples, the COM220 is configured for SDC7 and the router datalogger has the following settings (you can enter these settings via the datalogger keypad or from the LoggerNet status table): PakBusAddress = 2, IsRouter = 1 or True, and BeaconSDC8 = 30, enabling the router to discover the remote. The remote datalogger's PakBusAddress = 1. In addition, the RF401s or MD485s are set for CSDC8 (see the RF401 or MD485 manual for directions on configuring these devices).

##### Program for CR1000 Router:

```

'Router program for data callback via router w/ phone link to LoggerNet
'Phone to MD485 or RF401 w/ DL at Base
'Router PakBus Address = 2, IsRouter = 1, BeaconSDC8 = 30 to discover Remote DL which has PBA = 1
'Router COM220 = SDC7; Base RF401 CSDC8; Remote RF401 CSDC8.
'LoggerNet PakBusPort has PBA = 4094

' PC-pcMODEM -----COM220sdc7-CR1000(2)-RF401sdc8~~~~~RF401sdc8-CR1000(1)

Public PanelTemperature, BatteryVoltage, DialSuccess
Public Flag(10) AS BOOLEAN

SequentialMode
DataTable (TestA,1,-1)
  DataInterval (0,2,Sec,10)
  Minimum (1,BatteryVoltage,FP2,0,False)
  Sample (1,PanelTemperature,FP2)
EndTable

DialSequence (4094)
  StaticRoute(ComSDC8,4094,4094)           ' So router discovers LoggerNet server
  DialSuccess = DialModem (ComSDC8,9600,"5551212","")
  ' Param 4 = "" allows CR1000 to accept all possible COM220 responses
  ' DialSuccess: -1 means successful, 0 means failure.
EndDialSequence (DialSuccess)

BeginProg
  Scan (2,Sec,0,0)
  PanelTemp (PanelTemperature,250)
  Battery (BatteryVoltage)
  CallTable TestA
  NextScan
EndProg

```

**Remote datalogger program for CR1000:**

```
'Remote program for 2-min data callbacks via DL router with RF401 or MD485 link and COM220 link
'DataLogger router PakBusAddress = 2
'LoggerNet server PakBusAddress = 4094
'Replace DialModem phone number with your PC's phone number

Public batt_volt, Result
Public PTemp, TCvalue_F, dummy
Public RespStrng, DialSuccess

DataTable (DC1,1,1000)
  DataInterval (0,0,Sec,10)
  Sample (1,PTemp,FP2)
  Sample (1,TCvalue_F,FP2)
  Sample (1,DialSuccess,FP2)
EndTable

BeginProg
  Scan (2,Min,3,0)
  PanelTemp (PTemp,250)
  Battery (Batt_volt)
  dummy = 0
  TCDiff (TCvalue_F,1,mV2_5C,1,TypeT,PTemp,True ,0,250,1.8,32)

  SendVariables(Result,ComSDC7,2,4094,0000,3500,"Public","Callback",dummy,1)
  '35-s timeout allows time for phone modems to dial/train

  CallTable DC1

  NextScan
EndProg
```

# Appendix B. CS I/O Connection

---

## B.1 CS I/O 9-Pin Connection

The pinout of the connector is shown in FIGURE B-1. The direction of the signal relative to the modem is shown in parentheses. Unless specified otherwise, all levels are 0 V for logic low, 5 V for logic high.

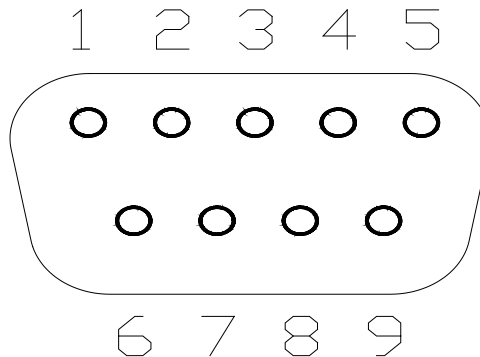


FIGURE B-1. CS I/O pinout

1. (input) +5 Vdc supply. Used to power internal line drivers for 'Ring' and 'RX Data' output signals.
2. (input) Ground
3. (output) Ring — A logic high signifies a ring signal has been detected.
4. (output) RX Data — Serial data from COM220
5. (input) Modem Enable — A logic high internally switches power to the modem. A logic low internally shuts off power to the modem.
6. (input) Serial Device Enable — A logic high disables communication with the modem without removing power or changing the modem's mode.
7. (input) SDC clock
8. (input) +12 Vdc supply
9. (input) TX Data — Serial data to COM220



# ***Appendix C. Theory of Operation***

---

## **C.1 Theory of Operation**

The COM220 modem is used to transmit data over bandwidth-limited channels such as telephone lines by modulating audio tones. The COM220 uses various modulation schemes including FSK (Frequency Shift Keying), TCM (Trellis Coded Modulation), QAM (Quadrature Amplitude Modulation), and DPSK (Differential Phase Shift Keying).

The telephone company gives a 40- to 150-VRMS, 20-Hz signal on the telephone lines to signify a ring, which is typically on for two seconds and off for four seconds. The COM220 is supplied with 12 V from the datalogger's CS I/O connector or from the COM220's external power connector. The 12 V is then regulated to +5 V to give power to the ring detect circuitry. The ring detection circuitry is continuously powered but draws less than 2  $\mu$ A. The ring signal is passed on to the datalogger through an opto-coupler. The datalogger responds to a "ring" by raising the modem-enable line, which internally switches the regulated +5 V supply to the rest of the modem's circuitry.

The modem then answers and remains off-hook until it loses the carrier or the datalogger lowers the modem-enable line. The datalogger lowers the modem-enable line by remote command or after 40 s in the absence of a command. When the modem-enable line goes low, the COM220 internally removes the +5 V from the modem circuitry, dropping power to the off-hook relay and thus placing the telephone line on-hook. The COM220's ring detect circuitry is still powered at this time.

To reject noise common to telephone lines and to satisfy registration requirements, the modem circuitry is electrically isolated from the telephone lines by using an opto-isolator and a coupling transformer.



# ***Appendix D. FCC Warning to Users of Class B Computing Devices***

---

**WARNING**

---

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class B computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a **COMMERCIAL ENVIRONMENT**. Operation of this equipment in a residential area may cause interference to radio and television reception. The operator must take whatever measures are necessary to correct the interference.

---





# Appendix E. IC Information

---

**NOTE** Industry Canada (IC) was formerly known as DOC.

---

## CP-01, Issue 8, Part I

### Section 14.1

“NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user’s satisfaction.

“Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

“Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

“Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

“CAUTION: Users should not attempt to make such connections themselves, but should contact the appropriate electric-inspection authority, or electrician, as appropriate.”

## CP-01, Issue 8, Part I

### Section 14.2

“NOTICE: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.”





## Campbell Scientific Companies

---

**Campbell Scientific, Inc.**

815 West 1800 North  
Logan, Utah 84321  
UNITED STATES

[www.campbellsci.com](http://www.campbellsci.com) • [info@campbellsci.com](mailto:info@campbellsci.com)

**Campbell Scientific Canada Corp.**

14532 – 131 Avenue NW  
Edmonton AB T5L 4X4  
CANADA

[www.campbellsci.ca](http://www.campbellsci.ca) • [dataloggers@campbellsci.ca](mailto:dataloggers@campbellsci.ca)

**Campbell Scientific Africa Pty. Ltd.**

PO Box 2450  
Somerset West 7129  
SOUTH AFRICA

[www.campbellsci.co.za](http://www.campbellsci.co.za) • [cleroux@csafrica.co.za](mailto:cleroux@csafrica.co.za)

**Campbell Scientific Centro Caribe S.A.**

300 N Cementerio, Edificio Breller  
Santo Domingo, Heredia 40305  
COSTA RICA

[www.campbellsci.cc](http://www.campbellsci.cc) • [info@campbellsci.cc](mailto:info@campbellsci.cc)

**Campbell Scientific Southeast Asia Co., Ltd.**

877/22 Nirvana@Work, Rama 9 Road  
Suan Luang Subdistrict, Suan Luang District  
Bangkok 10250  
THAILAND

[www.campbellsci.asia](http://www.campbellsci.asia) • [info@campbellsci.asia](mailto:info@campbellsci.asia)

**Campbell Scientific Ltd.**

Campbell Park  
80 Hathern Road  
Shepshed, Loughborough LE12 9GX  
UNITED KINGDOM

[www.campbellsci.co.uk](http://www.campbellsci.co.uk) • [sales@campbellsci.co.uk](mailto:sales@campbellsci.co.uk)

**Campbell Scientific Australia Pty. Ltd.**

PO Box 8108  
Garbutt Post Shop QLD 4814  
AUSTRALIA

[www.campbellsci.com.au](http://www.campbellsci.com.au) • [info@campbellsci.com.au](mailto:info@campbellsci.com.au)

**Campbell Scientific Ltd.**

3 Avenue de la Division Leclerc  
92160 ANTONY  
FRANCE

[www.campbellsci.fr](http://www.campbellsci.fr) • [info@campbellsci.fr](mailto:info@campbellsci.fr)

**Campbell Scientific (Beijing) Co., Ltd.**

8B16, Floor 8 Tower B, Hanwei Plaza  
7 Guanghua Road  
Chaoyang, Beijing 100004  
P.R. CHINA

[www.campbellsci.com](http://www.campbellsci.com) • [info@campbellsci.com.cn](mailto:info@campbellsci.com.cn)

**Campbell Scientific Ltd.**

Fahrenheitstraße 13  
28359 Bremen  
GERMANY

[www.campbellsci.de](http://www.campbellsci.de) • [info@campbellsci.de](mailto:info@campbellsci.de)

**Campbell Scientific do Brasil Ltda.**

Rua Apinagés, nbr. 2018 – Perdizes  
CEP: 01258-00 – São Paulo – SP  
BRASIL

[www.campbellsci.com.br](http://www.campbellsci.com.br) • [vendas@campbellsci.com.br](mailto:vendas@campbellsci.com.br)

**Campbell Scientific Spain, S. L.**

Avda. Pompeu Fabra 7-9, local 1  
08024 Barcelona  
SPAIN

[www.campbellsci.es](http://www.campbellsci.es) • [info@campbellsci.es](mailto:info@campbellsci.es)

Please visit [www.campbellsci.com](http://www.campbellsci.com) to obtain contact information for your local US or international representative.