



CELL200 series

4G LTE Cellular Module



Please read first

About this manual

Please note that this manual was produced by Campbell Scientific Inc. primarily for the North American market. Some spellings, weights and measures may reflect this. In addition, while most of the information in the manual is correct for all countries, certain information is specific to the North American market and so may not be applicable to European users. Differences include the U.S. standard external power supply details where some information (for example the AC transformer input voltage) will not be applicable for British/European use. Please note, however, *that when a power supply adapter is ordered from Campbell Scientific it will be suitable for use in your country.*

Reference to some radio transmitters, digital cell phones and aerials (antennas) may also not be applicable according to your locality. Some brackets, shields and enclosure options, including wiring, are not sold as standard items in the European market; in some cases alternatives are offered.

Recycling information for countries subject to WEEE regulations 2012/19/EU



At the end of this product's life it should not be put in commercial or domestic refuse but sent for recycling. Any batteries contained within the product or used during the products life should be removed from the product and also be sent to an appropriate recycling facility, per [The Waste Electrical and Electronic Equipment \(WEEE\) Regulations 2012/19/EU](#). Campbell Scientific can advise on the recycling of the equipment and in some cases arrange collection and the correct disposal of it, although charges may apply for some items or territories. For further support, please contact Campbell Scientific, or your local agent.

Table of contents

1. Cellular communications	1
2. Precautions	2
3. Initial inspection	2
4. Pre-installation	2
4.1 Establish cellular service	3
4.1.1 Campbell Scientific cellular data service	3
4.1.2 Other service providers	3
4.2 Install the SIM card	4
4.3 Konect PakBus Router setup	5
4.3.1 Get started	5
4.3.2 Set up Konect PakBus Router	6
5. Overview	8
6. QuickStart (integrated mode)	10
6.1 Modules using Konect PakBus Router (private dynamic IP)	11
6.1.1 Set up hardware	11
6.1.2 Configure data logger	12
6.1.3 Set up LoggerNet	14
6.1.4 Test the connection	18
6.2 Modules using a public static IP	18
6.2.1 Set up hardware	18
6.2.2 Configure data logger	19
6.2.3 Set up LoggerNet	21
6.2.4 Test the connection	23
7. Specifications	24
8. Installation	26
8.1 Base station requirements	26
8.2 Data logger site equipment	27
8.3 Wiring and connections	29
8.3.1 Module communications connections	29

8.3.2 Module power connections	31
8.3.3 Antenna connections	32
8.4 CELL200 series and data logger configuration	34
8.4.1 Integrated mode option	34
8.4.2 Non-integrated mode option	34
8.4.2.1 Configure CELL200 series	35
8.4.2.2 Configure data logger	35
8.4.2.3 Set up hardware	36
8.4.2.4 Set up LoggerNet	36
8.4.2.5 Test the connection	39
8.4.3 Serial server mode option	40
8.4.3.1 Configure CELL200 series	41
8.4.3.2 Configure data logger	43
8.4.3.3 Set up hardware	43
8.4.3.4 Set up LoggerNet	44
8.4.3.5 Test the connection	45
8.4.4 Serial client mode option	46
8.4.4.1 Configure CELL200 series	47
8.4.4.2 Configure data logger (optional)	49
8.4.4.3 Set up hardware	50
8.4.4.4 Set up LoggerNet	50
8.4.4.5 Test the connection	51
8.4.5 Serial server/client mode option	52
8.4.5.1 Configure CELL200 series	53
8.4.5.2 Configure data logger	56
8.4.5.3 Set up hardware	56
8.4.5.4 Set up LoggerNet	56
8.4.5.5 Test the connection	57
8.5 Troubleshooting	58
9. Operation and maintenance	58
9.1 Ports	58
9.2 LED indicator lights	59
9.3 Signal strength and quality	59
9.3.1 Signal strength	60
9.3.2 Signal quality	60

Appendix A. Network examples	62
A.1 CELL200-series to RF	62
A.1.1 CELL200-series physical setup	62
A.1.2 Configure the CELL200-series as a serial server	62
A.1.3 Configure radio connected to the CELL200-series	63
A.1.3.1 RF407-series	63
A.1.3.2 RF451/452	64
A.1.4 Configure radio connected to the data logger	64
A.1.4.1 RF407-series	64
A.1.4.2 RF451/452	64
A.1.5 Configure the data logger	65
A.1.6 Setup LoggerNet	65
A.2 CELL200-series to Ethernet	66
A.2.1 CELL200-series physical setup	66
A.2.2 Configure the CELL200-series as a serial server	66
A.2.3 NL200/NL201 physical setup	67
A.2.4 Configure the NL200/NL201	67
A.2.5 Configure the data logger	68
A.2.6 Setup LoggerNet	68
Appendix B. Controlling power to the CELL200 series	70
Appendix C. Configure cellular settings and retrieve status information with SetSetting()	72
Appendix D. Updating the operating system and firmware	73
D.1 Using the web interface (cell.linktodevice.com)	73
D.2 Using Device Configuration Utility	76
Appendix E. Cellular module terminal functionality	78
E.1 Using cell modem terminal functionality	79
E.2 Status commands	79
E.3 Set commands	84
E.4 Action commands	86
Appendix F. Verizon Wireless and AT&T	88
F.1 Verizon Wireless	88
F.2 AT&T	89

Appendix G. Cellular module regulatory information	90
G.1 Important information for North American users	90
G.2 RF exposure	90
G.3 EU	91
G.4 UK	91
Appendix H. Troubleshooting external CELL200 series cellular module connection issues	93
H.1 Check power to module and data logger	93
H.2 Verify correct cable type and ports	96
H.3 Ensure 4G antenna compatibility	99
H.4 Verify module APN	100
H.5 Verify module mode	101
H.6 Check the module operating system	102
H.7 Verify the data logger OS is compatible with the module	104
H.8 Verify PPP settings in your data logger	105
H.9 Verify PakBus router connection	106
H.10 Verify SIM card insertion	107
H.11 Verify module signal strength and quality	108
H.12 LoggerNet settings	110
H.13 Contact Campbell Scientific Support Department	111
Appendix I. Troubleshooting integrated CELL200 series cellular module connection issues	114
I.1 Check power to data logger/module	114
I.2 Ensure 4G antenna compatibility to data logger/module	115
I.3 Verify data logger APN	117
I.4 Verify cellular network connectivity status	118
I.5 Verify data logger operating system	119
I.6 Verify PakBus router connection for data logger	120
I.7 Verify SIM card insertion in data logger	121
I.8 Verify signal strength and quality	123
I.9 TX/RX LED lights	124
I.10 Verify settings in LoggerNet	124
I.11 Capturing a diagnostic sniff	125
I.12 Contact Campbell Scientific Support Department	126

1. Cellular communications

This manual provides information for interfacing CELL200 Series 4G LTE Cellular Modules to Campbell Scientific data loggers.

Use of the CELL200 series requires a cellular line of service. The products compatible with Verizon, AT&T, T-Mobile, Vodafone, and Telstra are shown in the following table.

Product	Cellular technology	Market	Verizon	AT&T	T-Mobile	Vodafone	Telstra	Other ¹
CELL205	4G LTE with automatic 3G fallback ²	North America		✓	✓			✓
CELL210	4G LTE CAT-1	United States	✓					
CELL215	4G LTE with automatic 3G and 2G fallback	EMEA				✓		✓
CELL220	4G LTE with automatic 3G fallback	Australia and New Zealand					✓	✓
CELL225	4G LTE	Japan						✓

¹ More than 600 other providers are available worldwide through Campbell Scientific. See [Establish cellular service](#) (p. 3) for more information.

² AT&T ended support of their 3G network service on February 22, 2022. To continue operation the CELL200 series requires operating system 2.030 or newer. Use the web interface to find the CELL200 series OS version on the OS Date field of the Status Tab. See [Updating the operating system and firmware](#) (p. 73) for more information.

Before using the CELL200 series, please review:

- [Safety](#)
- [Pre-installation](#) (p. 2)

2. Precautions


- READ AND UNDERSTAND the [Safety](#) section at the back of this manual.
- An authorized technician shall verify that the installation and use of this product is in accordance with the manufacturer's instructions, recommendations and intended use.
- Although the CELL200 series is rugged, it should be handled as a precision instrument.
- Follow local regulations (see Compliance in [Specifications](#) [p. 24]).
- Protect from over-voltage.
- Protect from water.
- Protect from ESD (electrostatic discharge).


3. Initial inspection

- Upon receipt of the CELL200 series, inspect the packaging and contents for damage. File any damage claims with the shipping company.
- Immediately check package contents. Thoroughly check all packaging material for product that may be concealed. Check model numbers, part numbers, and product descriptions against the shipping documents. Model or part numbers are found on each product. Report any discrepancies to Campbell Scientific.

4. Pre-installation

TIP:

Check www.campbellsci.com  to ensure you are using the latest data logger support software and data logger operating system (OS).

Updating the OS during system setup and testing, or onsite is recommended. Sending an OS to a remote data logger will interrupt the data logger program. If you have questions, contact Campbell Scientific for assistance (<https://www.campbellsci.com/support> .

4.1 Establish cellular service

For better security, we recommend using Konect PakBus® Router with a private dynamic IP address. This method allows only incoming PakBus communications. No other incoming communications are supported. However, all forms of outbound communications from the data logger are supported, including but not limited to PakBus, email, and FTP.

NOTE:

When the data logger is connected to both Ethernet and a cellular modem, `IPRoute()` may be used to specify which interface to use for the outbound communications, such as email, FTP, and HTTP.

A public static IP address can also be used. This provides more incoming communications functionality, but is less secure and more vulnerable to unsolicited traffic.

NOTE:

A public static IP account must be used when the module is set up in serial server mode. Private dynamic IP accounts do not support the serial server mode.

4.1.1 Campbell Scientific cellular data service

Campbell Scientific can provide subscriptions to cellular service through Verizon, AT&T, T-Mobile, Vodafone, Telstra, and over 600 other providers worldwide. When this cellular service is purchased with the module, the module will come pre-provisioned with the required SIM card and APN. If you have already purchased the CELL200 series, call Campbell Scientific to set up service.

4.1.2 Other service providers

While using Campbell Scientific is the simplest way to obtain cellular data service for your module, you can go directly to a provider. For more information on obtaining service directly from Verizon and AT&T, see [Verizon Wireless and AT&T](#) (p. 88).

TIP:

Prepaid cellular data plans may experience service slow downs when data limits are reached. If file transfer from a cellular-connected data logger works initially, but later has problems, check for data overage on the cellular plan.

This does not apply to Campbell Scientific cellular data services.

4.2 Install the SIM card

NOTE:

If you purchased cellular service from Campbell Scientific with the module, it will come with the SIM (Subscriber Identity Module) card already installed. Proceed to [Konect PakBus Router setup](#) (p. 5).


NOTE:

Some SIM cards, particularly those purchased in Germany, come with an active personal identification number (PIN). The PIN must be deactivated before proceeding. Often, an easy way to deactivate the PIN is to install the SIM card in a mobile phone and use the device settings.

The CELL200 series requires a Micro-SIM (3FF) (6 position / contacts); a smartcard that securely stores the key identifying a mobile subscriber. You should only need to install the SIM card once in the life of the module.

To install the SIM card:

1. Remove the SIM card cover.
2. Note the location of the notched corner for correct alignment. The gold contact points of the SIM face down when inserting the SIM card as shown in the following figure. **Gently** slide the card into the slot until it stops and locks into place. To eject the SIM card, press it in slightly and release.
3. Replace the SIM card cover.

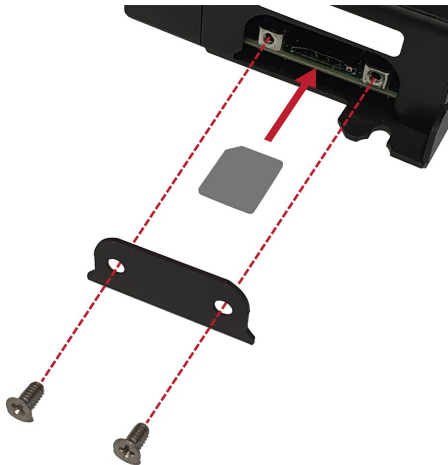



4.3 Konect PakBus Router setup

For better security, we recommend using Konect PakBus® Router with a private dynamic IP address. This method allows only incoming PakBus communications. No other incoming communications are supported. However, all forms of outbound communications from the data logger are supported, including but not limited to PakBus, email, and FTP.

4.3.1 Get started

You will need the Konect PakBus Router redemption code that came on a card with the CELL200 series.

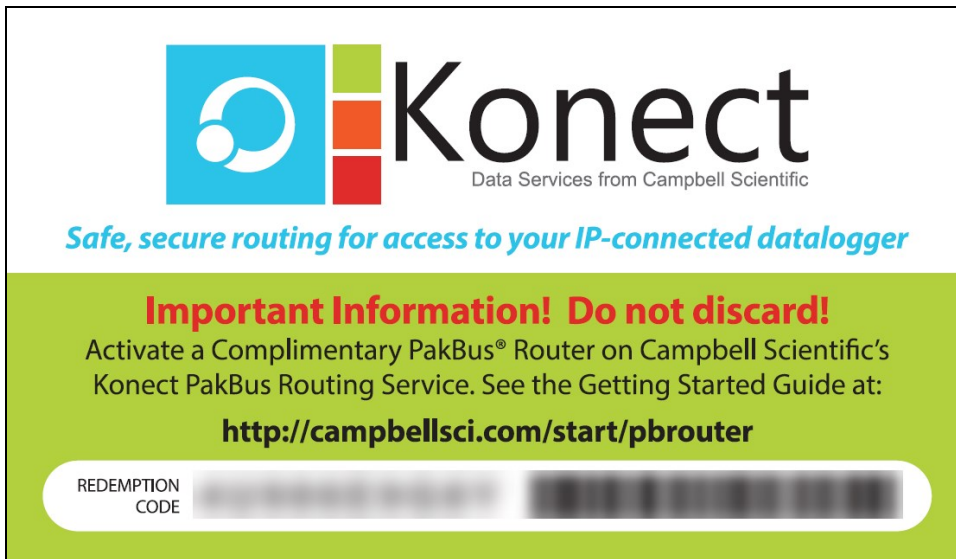


Open a web browser and go to www.konectgds.com .


First-time users need to create a **free account**. After you submit your information, you will receive two emails up to five minutes apart. One email will contain a Passport ID and the other your Password. If emails are not received, check your email junk folder.





4.3.2 Set up KonecT PakBus Router

1. Sign in to www.konectgds.com using your Passport ID and Password found in the two received emails. Once logged in, you will be at the Welcome page.

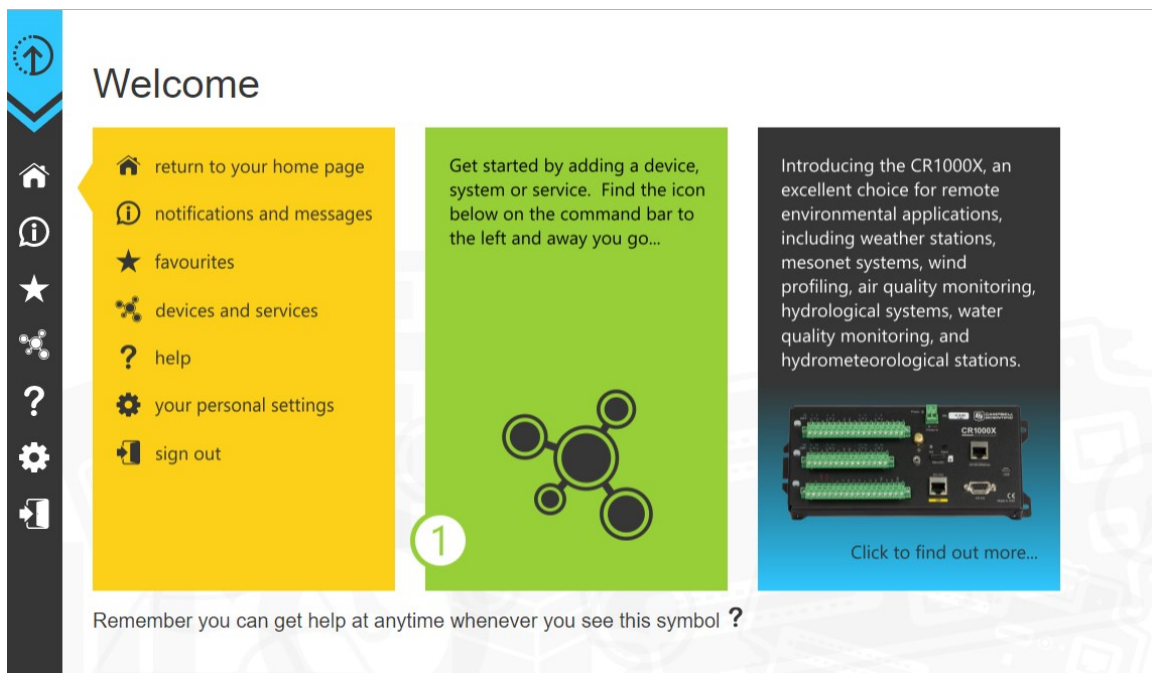


- Click **Devices and services**  on the command bar to the left and select **Redeem PakBus Router Code**. Enter your complimentary Router Code found on the included card with your cellular-enabled device and click **Submit**.

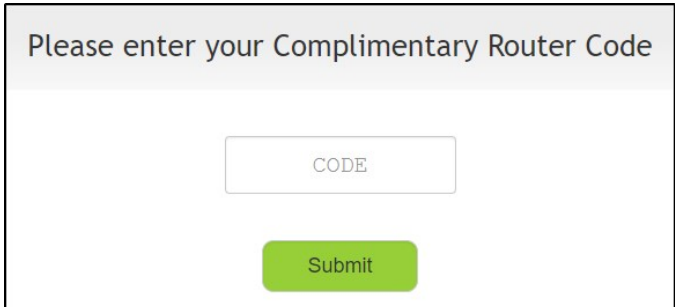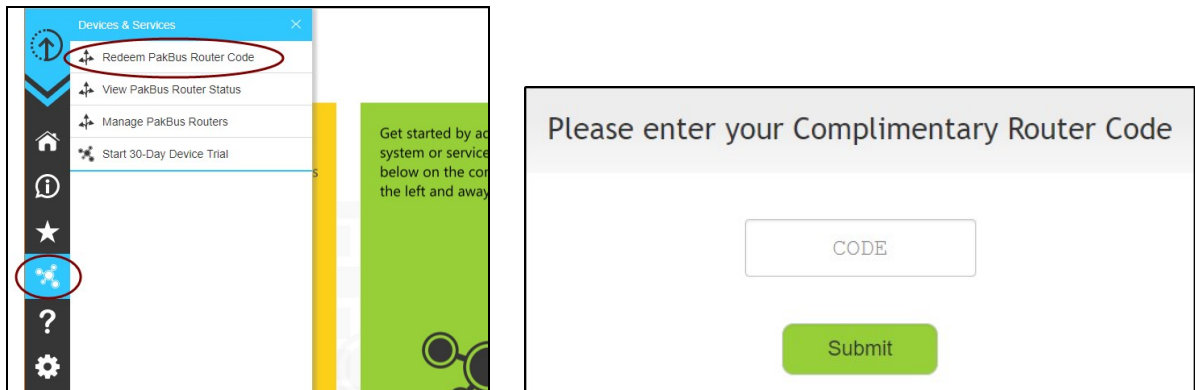


- The next screen shows the assigned **DNS** address and **Port** for the router. Enter a **TCP Password** and select a unique **PakBus Address** for your data logger.


TIP:

Make note of this information; it will be required for data logger configuration as well as *LoggerNet* setup. Please note your **DNS**, **Port**, **TCP Password** and **PakBus address**; you will need them later.

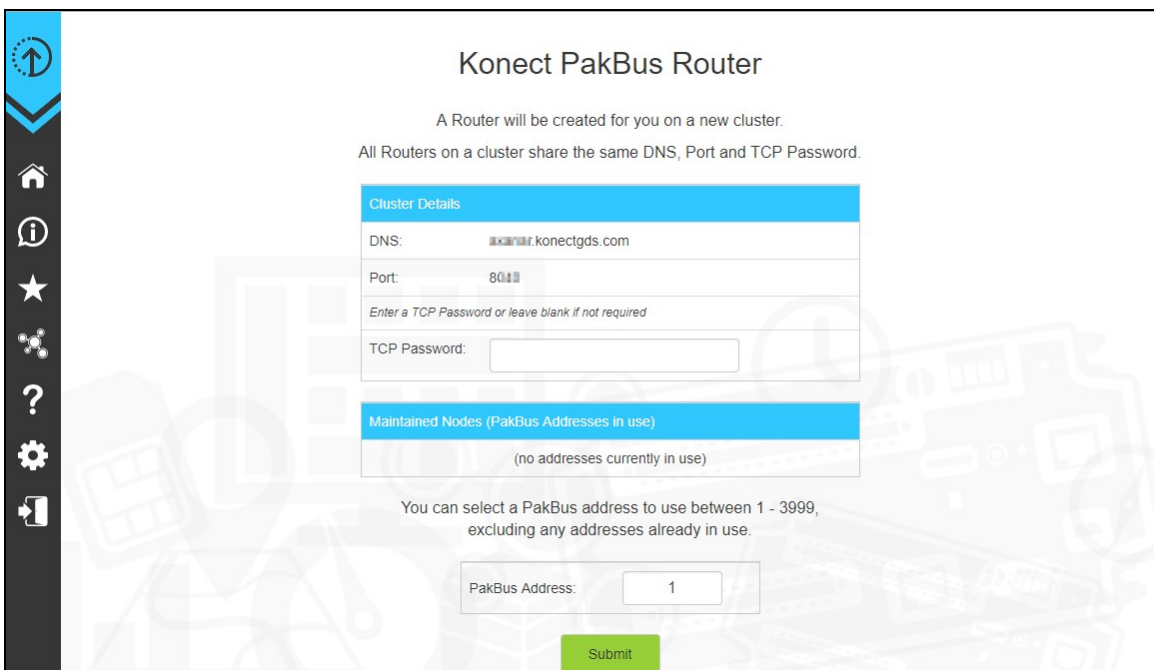

- Click **Submit**.

5. To edit settings at a later date, click **devices and services**  on the command bar and select **Manage PakBus Routers**.

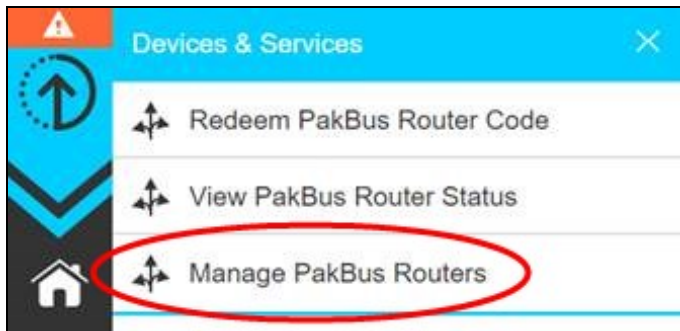

NOTE:

The DNS address and Port number, assigned when your account was setup, cannot be edited.

5. Overview

The CELL200-series modules may be configured in one of five ways, depending on the data logger, communications type, and needs of the user.

- Integrated: The module mimics the behavior of our integrated cell modems. No settings are configured directly in the module. All settings are configured in the attached data logger.
- Non-integrated: The module mimics the behavior of our older cellular modems. Settings must be configured in both the module and the data logger.
- Serial Server: In this mode, the module receives IP communications over the cellular network and converts those to serial communications to pass on to the data logger. From the perspective of the data logger, this is no different than a serial cable connecting it to a computer.

NOTE:

A public static IP account must be used when the module is set up in serial server mode. Private dynamic IP accounts do not support the serial server mode.

- Serial Client: Use this mode when the module is behind a cellular provider firewall and it has a private dynamic IP address. In serial client mode the module will connect to the cellular network and initiate a TCP client socket connection.
- Serial Server/Client: In serial server/client mode the module connects to the cellular network and opens a listening port. When a client connects to the listening port, the CELL200 series will be in "**Serial Server**" mode, as described earlier. When no client is connected to the listening port, the CELL200 series will be in "**Serial Client**" mode, as described earlier, and all data on the active port will be sent and received through the initiated TCP client socket connection.

Data loggers compatible with each mode are shown in the following table.

	Integrated PPP	Non-integrated PPP	Serial server ²	Serial client ³	Serial server/client ³
GRANITE series/CR6 series/CR1000X/CR300 series ¹	✓		✓	✓	✓
CR1000/CR3000/CR800 series		✓	✓	✓	✓
CR200(X) series			✓	✓	✓
Array-based (Edlog) data loggers			✓	✓	✓
¹ Integrated PPP mode requires operating system 03.00 or later for the CR1000X, 09.00 or greater for the CR6 series, and 08.00 or later for the CR300 series. ² Serial server mode requires a public static IP account. ³ Requires CELL200 series OS 2.00 or later.					

NOTE:

PakBus data loggers include the following models: GRANITE-series, CR6, CR3000, CR1000X, CR800-series, CR300-series, CR1000, and CR200(X)-series.


6. QuickStart (integrated mode)

NOTE:

This QuickStart describes configuring the CELL200 series in integrated mode (mimicking our internal cell modems) with its default settings. It can also be configured in non integrated or serial server mode.

This QuickStart section does not apply to CR3000, CR1000 and CR800-series users. See [Overview](#) (p. 8) for more information on the different modes. See [CELL200 series and data logger configuration](#) (p. 34) for more information on configuring the module in the different modes.

The Provisioning Report received with your Cellular Data Service shows whether the module was configured with a private dynamic or public static IP address. See the following figure for an example of a Campbell Scientific Provisioning Report. Other cellular providers should provide similar information.



**Cellular Data Service
Provisioning Report**

The following device has been provisioned for Campbell Scientific Cellular Data Service.

Sales Order #	12/31/1969	Sales Order Due Date	12/31/1969
Sales Order Date	12/31/1969	Date Provisioned	11/05/2018
Company	Campbell Scientific Inc Marketing	Customer ID	10000
Address	8001 10th St NE	Contact	
City	Grand Rapids	Phone	616 235 9400
State	MI	Email	marketing@campbellsci.com
Country	United States		
Postal Code	49503-1734		
Hardware			
Model #	CR300-CELL210-VS		Datalogger (-40 to +70C) -CELL210 w/4G LTE CAT1 VZ-VS Verizon
Serial #	10000		US Static IP
Provision Code	10000-01		CR300-CELL210-VS Datalogger (-40 to +70C) -CELL210 w/4G LTE CAT1 VZ-VS Verizon US Static IP
Data Plan	10000-01		CELLDATA-VS-A250 Campbell Scientific Cellular Data Service Subscription -VS Verizon US Static IP - A250 250MB/Mon for 1 Yr
Data Limit	250 MB		Network: Verizon
ICCID	89012345678901234567		IP Address: 166.167.1.1
MSISDN	810 456 7890		Konect Plus
IMEI	35698765432109876543		Redemption Code
Renewal Due Date	2019-09-22	Service Period	11/15/2018 to 12/14/2019

Additionally, Campbell Scientific cellular modules configured with a public static IP address will have two stickers on the module, as shown in the following image. One sticker will show the module phone number and data plan. The second sticker will show the static IP address.

Campbell Scientific cellular modules configured with a private dynamic IP address will have one sticker on the module. It will show the module phone number and data plan.

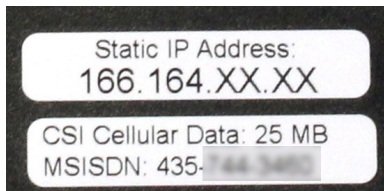


Figure 6-1. Module with public static IP address

6.1 Modules using Konect PakBus Router (private dynamic IP)

6.1.1 Set up hardware

1. Connect the cellular antenna if it is not already connected. When using a MIMO antenna with multiple cellular connections, connect the primary cable to **Primary**, **Primary Antenna**, or **Antenna** and the secondary to **Diversity** or **Diversity Antenna** (depending on the label). If the cables are not marked in this way, they can be connected to either antenna port. See [Antenna connections](#) (p. 32).
2. Connect your data logger RS-232 or CS I/O port to the CELL200-series module RS-232 or CS I/O port. Ensure the same port is used for each device, for example RS-232 to RS-232. See [Wiring and connections](#) (p. 29).
3. If not connecting through CS I/O, provide power to the CELL200 series. The data logger provides power through the CS I/O port. USB power is not sufficient to power the CELL200 series; 12 V is required.

6.1.2 Configure data logger

1. Connect to your data logger by using *Device Configuration Utility*.
2. On the **Datalogger** tab, change the data logger **PakBus Address** and **PakBus/TCP Password** to match the values entered in the Konect PakBus Router setup. The **PakBus/TCP Password** will make the data logger authenticate any incoming or outgoing PakBus/TCP connection.

The screenshot shows the 'Datalogger' tab in the 'Deployment' window. The 'Serial Number' is 1001, 'OS Version' is CR1000X.Std., and 'Station Name' is 1001. The 'PakBus Address' is set to 1. The 'PakBus Security' section has 'Security Code 1', 'Security Code 2', and 'Security Code 3' all set to 0. The 'PakBus Encryption Key' and 'PakBus Encryption Key Confirm' fields are empty. The 'PakBus/TCP Password' and 'Confirm PakBus/TCP Password' fields are both masked with dots.

3. On the **Network Services** tab in the **PakBus/TCP Client** field, enter the DNS address and Port number noted during the Konect PakBus Router setup.
4. On the **PPP** tab, set **Config/Port Used** to **CS I/O SDC8** or **RS-232**, depending on how you are connected to the data logger.
5. (Optional) On the **PPP** tab, set **User Name** and **Password** if required by your cellular carrier (usually outside of the United States).
6. Verify the **Modem Dial String** setting is blank.
7. If connecting through RS-232, on the **Comport Settings** tab, set **RS232 BaudRate** to **115200 Fixed**.
8. Click **Apply** to save the changes. Verify the settings in the summary window. (Recommended) **Save** a copy of the settings to a file on the computer. Click **OK**.
9. Shut down *Device Configuration Utility* and start it again. This will activate the **Cellular** tab needed for the next step.

10. On the **Cellular** tab, enter the **APN** provided by your cellular provider.

Deployment Settings Editor

Datalogger Com Ports Settings **Cellular** Network Services TLS Advanced

Cell Modem Enable: Enabled

APN:

Automated Power Schedule

Start (power-on) Time: Always On

On Duration: 1 Hour

Repeat Cycle: Disabled

Status

State:

Signal Strength:

Signal Quality:

Cellular Network S

IP: 0.0.0.0
mask: 0.0.0.0

11. Click **Apply** to save the changes. Verify the settings in the summary window.
(Recommended) **Save** a copy of the settings to a file on the computer. Click **OK**.
12. Click **Connect** to reconnect in the *Device Configuration Utility*.
13. (Optional) By default, the CELL200 series will accept incoming communications from any IP address. This can be a security risk. You may specify up to four IP addresses, with wild cards, to limit connections to only those trusted sources. Use an asterisk (*) as a wild card. For example, a setting of 166.22.*.* would allow connections from devices that have IP addresses starting with 166.22. Both IPv4 and IPv6 addresses are supported.


CAUTION:

Only set a Trusted IP address if you are familiar with their use. Consult your IT department or Campbell Scientific for assistance.

NOTE:

This setting does not affect outbound connections, only incoming connections.

In the **Settings Editor > Network Services** tab, next to the **Trusted Hosts** field, click **Edit** and **Add** your trusted IP addresses, one at a time.

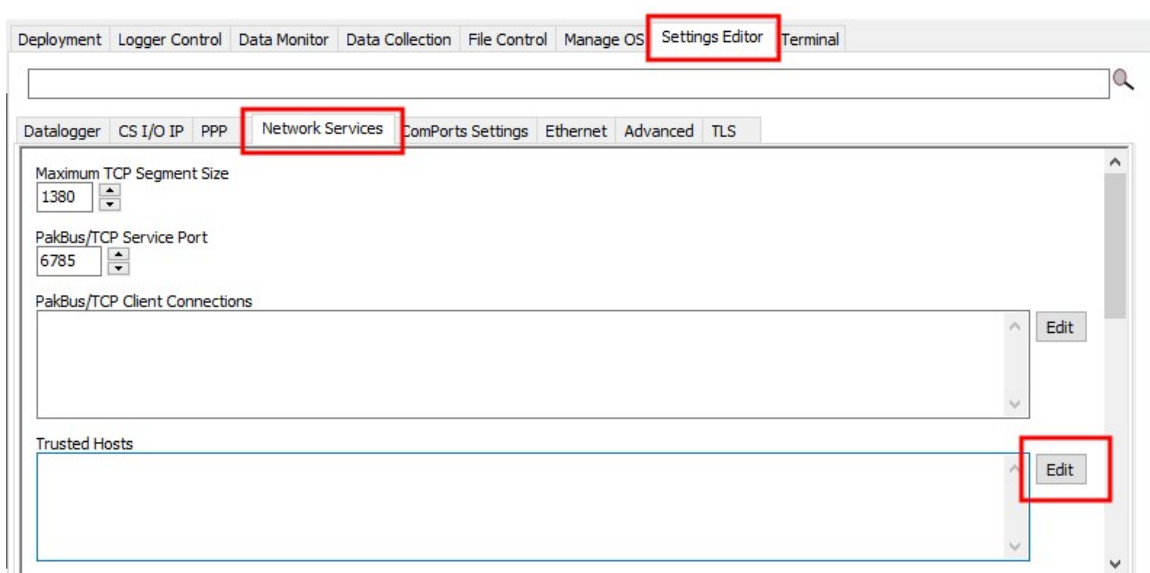

14. Click **Apply** to save the changes. Verify the settings in the summary window.
(Recommended) **Save** a copy of the settings to a file on the computer. Click **OK**.
15. Click **Disconnect** and close *Device Configuration Utility*.

6.1.3 Set up *LoggerNet*


The *LoggerNet* Network Map is configured from the **LoggerNet Setup** screen.

NOTE:

Setup has two options, EZ (simplified) and Standard. Click on the **View** menu at the top of the **Setup** screen, and select **Standard** view.

From the *LoggerNet* toolbar, click **Main > Setup** and configure the Network Map as described in the following steps:


1. Select **Add Root > IPPort**.
2. Select **PakBusPort** and **pbRouter** for PakBus data loggers such as the CR6 or CR1000X.




NOTE:

PakBus data loggers include the following models: GRANITE-series, CR6, CR3000, CR1000X, CR800-series, CR300-series, CR1000, and CR200(X)-series.


3. Add a data logger to the **pbRouter**.
4. From the Entire Network, on the left side, select the **IPPort**. Enter the Konect PakBus Router DNS address and port number as noted in the Konect PakBus Router setup ([Set up Konect PakBus Router](#) [p. 6]). Enter them into the **Internet IP Address** field in the format DNS:Port with a colon separating DNS and Port. For example, axanar.konectgds.com:pppp where pppp is the port number.

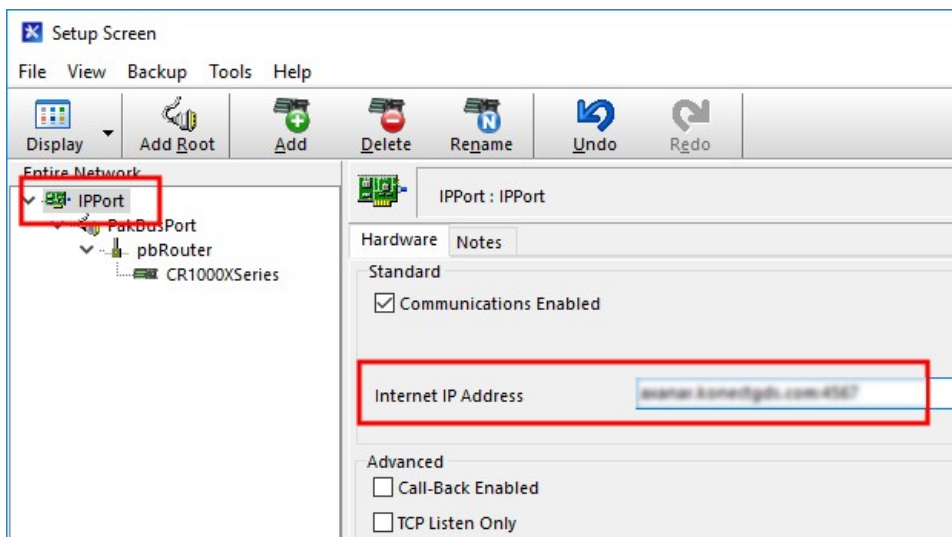


5. Leave the default settings for the **PakBusPort**. **PakBus Port Always Open** should **not** be checked. In the **TCP Password** field enter the TCP Password; this must match the value entered in the Konect PakBus Router setup and *LoggerNet* setup.

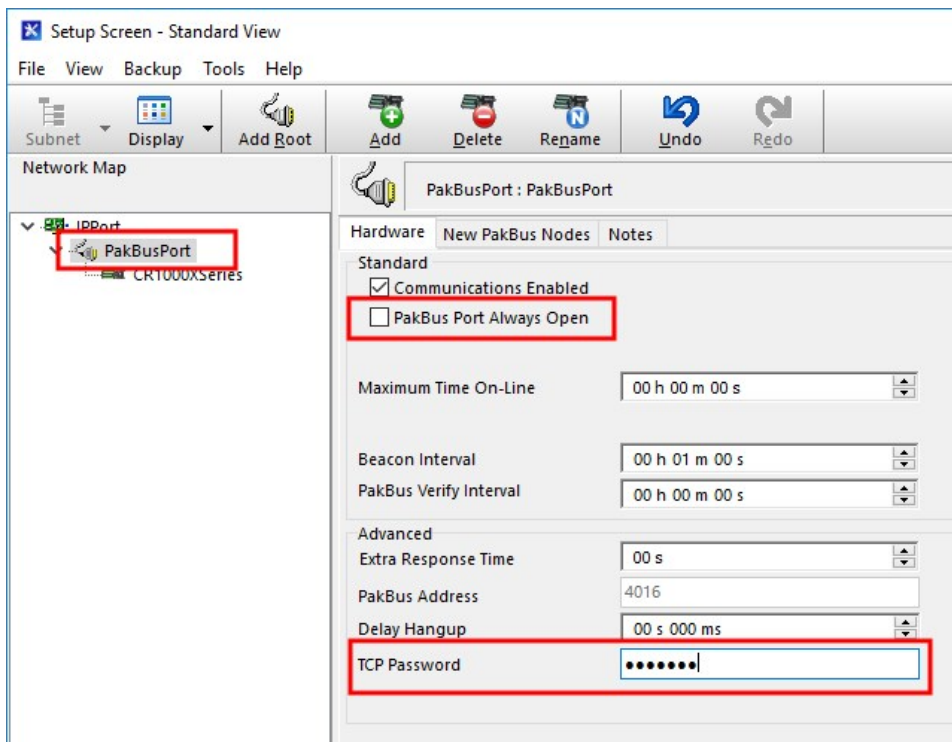

- For PakBus data loggers, select the pbRouter in the Network Map and set the **PakBus Address** to 4070.

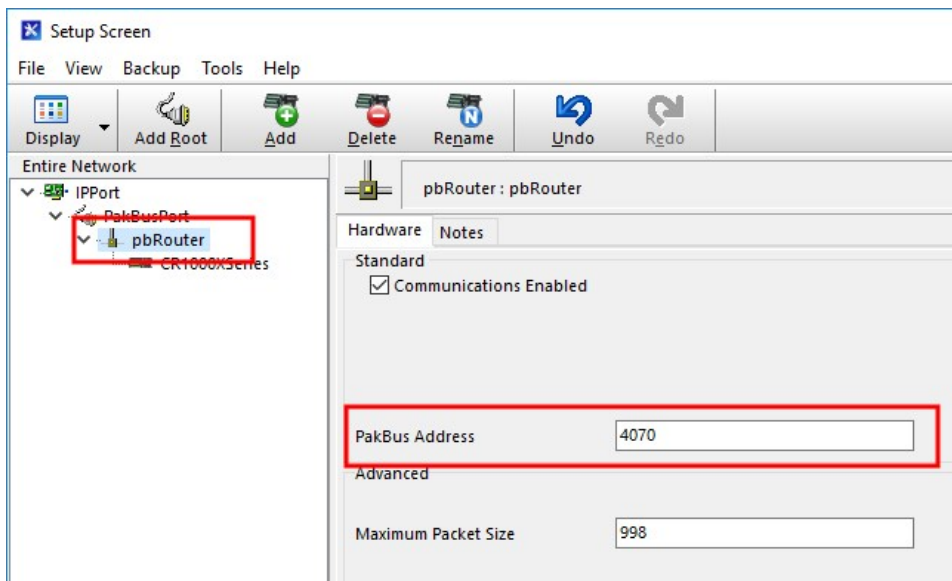

- For PakBus data loggers, select the data logger in the Network Map and set the **PakBus Address** to match that of the data logger (default address in the data logger is 1). If a **PakBus Encryption Key** was entered during data logger setup, also enter it here. Click **Apply** to save the changes.

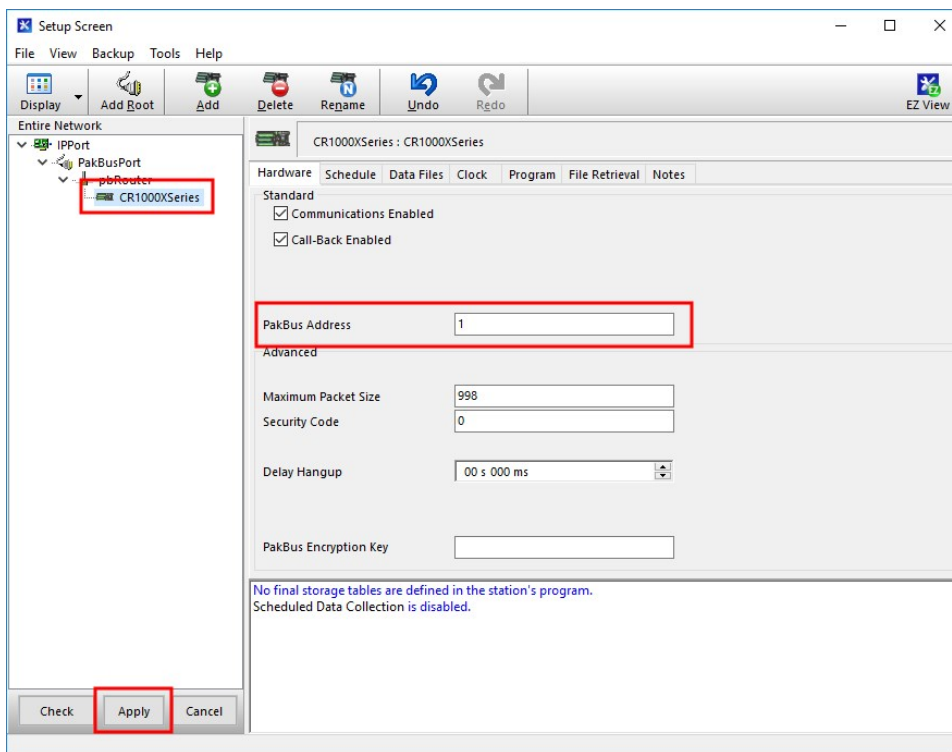


6.1.4 Test the connection

After the Network Map has been configured, test the cellular connection by using the **Connect** screen as shown in the following image. Click on the appropriate station and click **Connect** to initiate a call to the data logger.

TIP:

The connection time is subject to many external factors. It is often less than 30 seconds but could be up to 15 minutes. Be patient.

If the connection is successful, the connectors icon at the bottom of the screen will come together and clock information from the data logger will be displayed in the **Station Date/Time** field. If the connection fails, a **Communications Failure** message will be displayed.

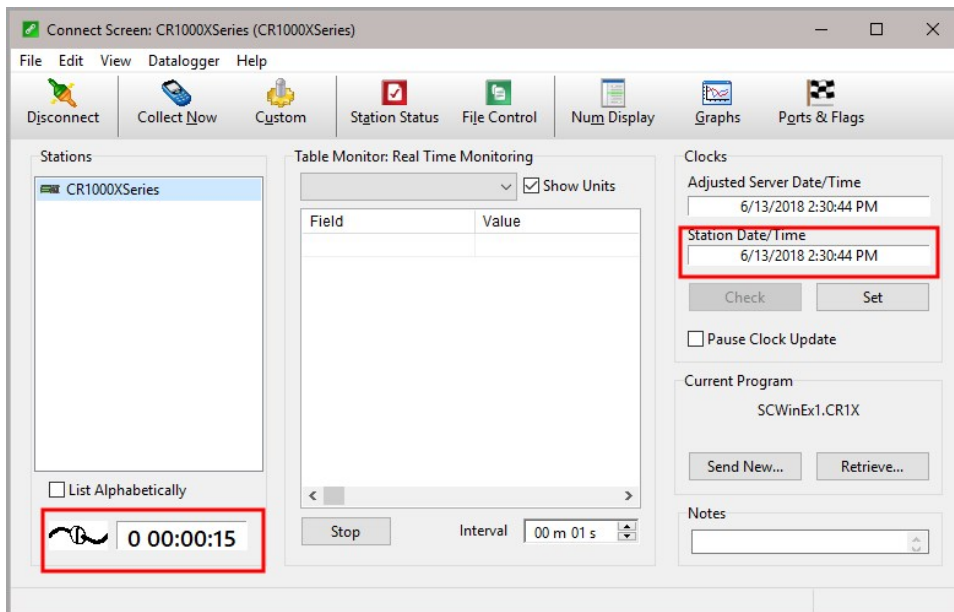

6.2 Modules using a public static IP

6.2.1 Set up hardware

1. Connect the cellular antenna if it is not already connected. When using a MIMO antenna with multiple cellular connections, connect the primary cable to **Primary**, **Primary Antenna**, or **Antenna** and the secondary to **Diversity** or **Diversity Antenna** (depending on the label). If the cables are not marked in this way, they can be connected to either antenna port. See [Antenna connections](#) (p. 32).

2. Connect your data logger RS-232 or CS I/O port to the CELL200-series module RS-232 or CS I/O port. Ensure the same port is used for each device, for example RS-232 to RS-232. See [Wiring and connections](#) (p. 29).
3. If not connecting through CS I/O, provide power to the CELL200 series. The data logger provides power through the CS I/O port. USB power is not sufficient to power the CELL200 series; 12 V is required.

6.2.2 Configure data logger

1. Connect to your data logger by using *Device Configuration Utility*.
2. On the **PPP** tab, set **Config/Port Used** to **CS I/O SDC8** or **RS-232**, depending on how you are connected to the data logger.
3. (Optional) On the **PPP** tab, set **User Name** and **Password** if required by your cellular carrier (usually outside of the United States).
4. Verify the **Modem Dial String** setting is blank.
5. If connecting through RS-232, on the **Comport Settings** tab, set **RS232 BaudRate** to **115200 Fixed**.

6. On the **Cellular** tab, enter the **APN** provided by your cellular provider.

The screenshot shows the 'Device Configuration Utility 2.19 Beta' window. The 'Cellular' tab is selected in the top navigation bar. On the left, the 'Device Type' list includes 'Cellular Modem' (with 'CR1000X Series' selected), 'Datalogger (Other)', and 'Network Peripheral'. The 'Communication Port' is set to 'COM7'. The 'Cellular' configuration panel on the right includes: 'Cell Modem Enable' (dropdown), 'APN' (text field with 'IREDL42W5TATC' entered and highlighted by a red box), 'PDP User Name' (text field), 'PDP Password' (text field with a 'Show' checkbox), 'Automated Power Schedule' (with 'Start (power-on) Time' set to 'Always On', 'On Duration' set to '1 Hour', and 'Repeat Cycle' set to 'Disabled'), 'Ping Keep Alive' (with 'URL' and 'Timeout' fields), 'Status' (showing 'State: Network ready, Datalogger ready.', 'Signal Strength: -85', and 'Signal Quality: -13'), and 'Cellular Network Status' (showing 'Cellular is the default network.', 'PPP State: IP Opened', 'IP: 198.224.173.135', 'gw: 10.64.64.64', 'dns: 198.224.173.135', and 'dns: 208.67.222.222'). At the bottom, the 'APN' section explains that it specifies the APN (Access Point Name) and is required, and that the setting is stored in the CELL2xx. Buttons for 'Apply', 'Cancel', 'Factory Defaults', 'Read File', and 'Summary' are at the bottom right.

7. (Optional) By default, the CELL200 series will accept incoming communications from any IP address. This can be a security risk. You may specify up to four IP addresses, with wild cards, to limit connections to only those trusted sources. Use an asterisk (*) as a wild card. For example, a setting of 166.22.*.* would allow connections from devices that have IP addresses starting with 166.22. Both IPv4 and IPv6 addresses are supported.


CAUTION:

Only set a Trusted IP address if you are familiar with their use. Consult your IT department or Campbell Scientific for assistance.

NOTE:

This setting does not affect outbound connections, only incoming connections.

In the *Device Configuration Utility* go to the **Settings Editor** then **Network Services**. Next to the **Trusted Hosts** field, click **Edit** and **Add** your trusted IP addresses, one at a time.

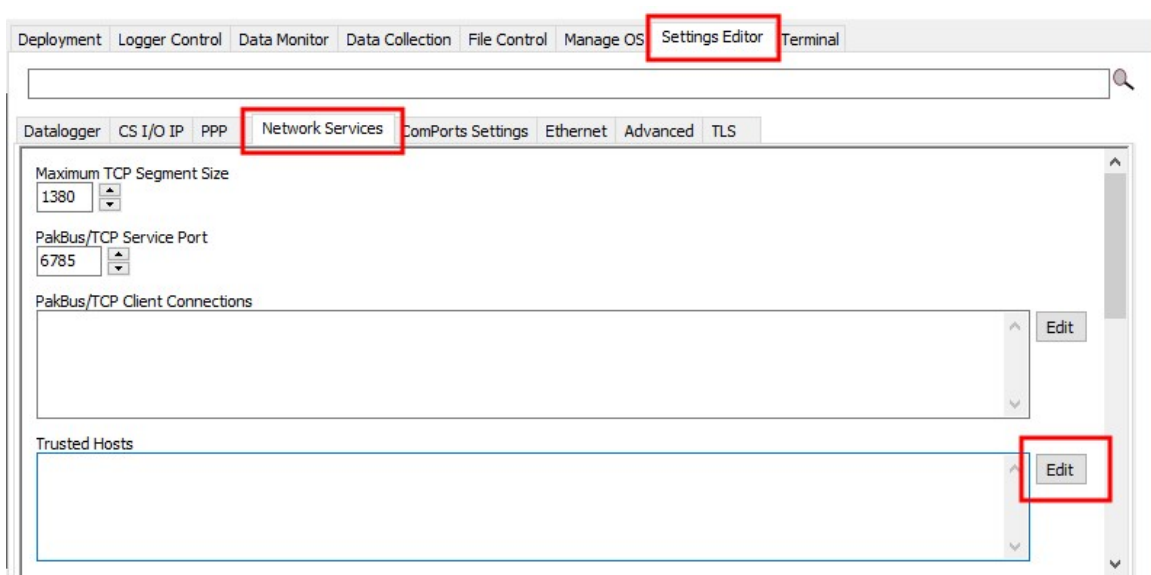

8. Click **Apply** to save the changes.

6.2.3 Set up *LoggerNet*

The *LoggerNet* Network Map is configured from the **LoggerNet Setup** screen.


NOTE:

Setup has two options, EZ (simplified) and Standard. Click on the **View** menu at the top of the **Setup** screen, and select **Standard** view.


From the *LoggerNet* toolbar, click **Main > Setup** and configure the Network Map as described in the following steps:

1. Select **Add Root > IPPort**.
2. Select **PakBusPort**.
3. Add a data logger to the **PakBusPort**.


4. Select the **IPPort** in the Network Map. Enter the CELL200 series IP address and port number. The IP address and port number are input in the **Internet IP Address** field separated by a colon. Preceding zeros are not entered in the **Internet IP Address** (for example, 070.218.074.247 is entered as 70.218.74.247). The default port number is 6785.

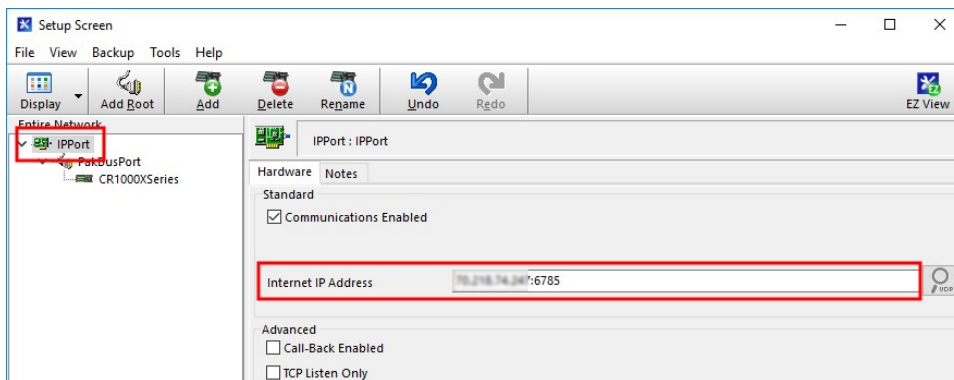

5. For PakBus data loggers, leave the default settings for the **PakBusPort**. **PakBus Port Always Open** should **not** be checked. If a **TCP Password** is used, enter it.

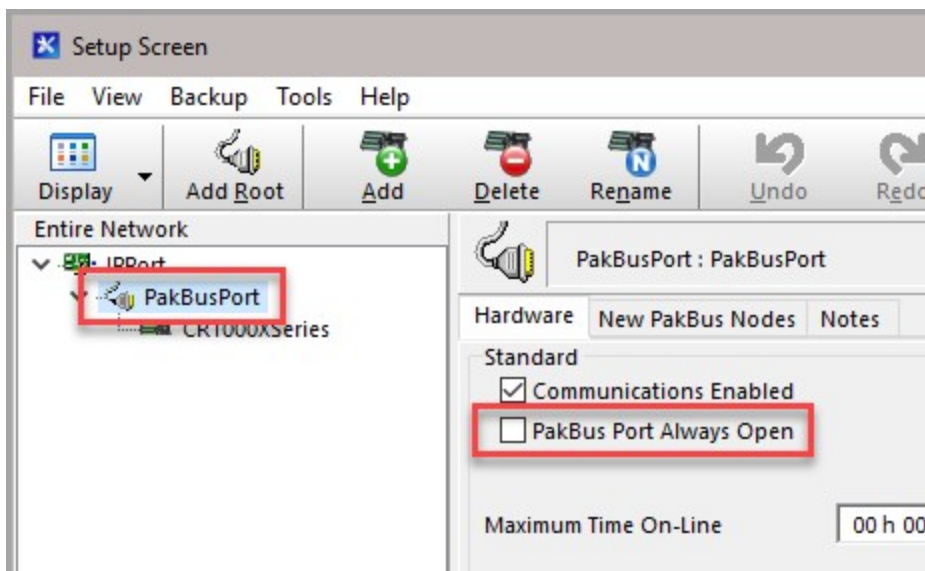

- For PakBus data loggers, select the data logger in the Network Map and set the **PakBus Address** to match that of the data logger (default address in the data logger is 1). If a **PakBus Encryption Key** was entered during data logger setup, also enter it here. Click **Apply** to save the changes.

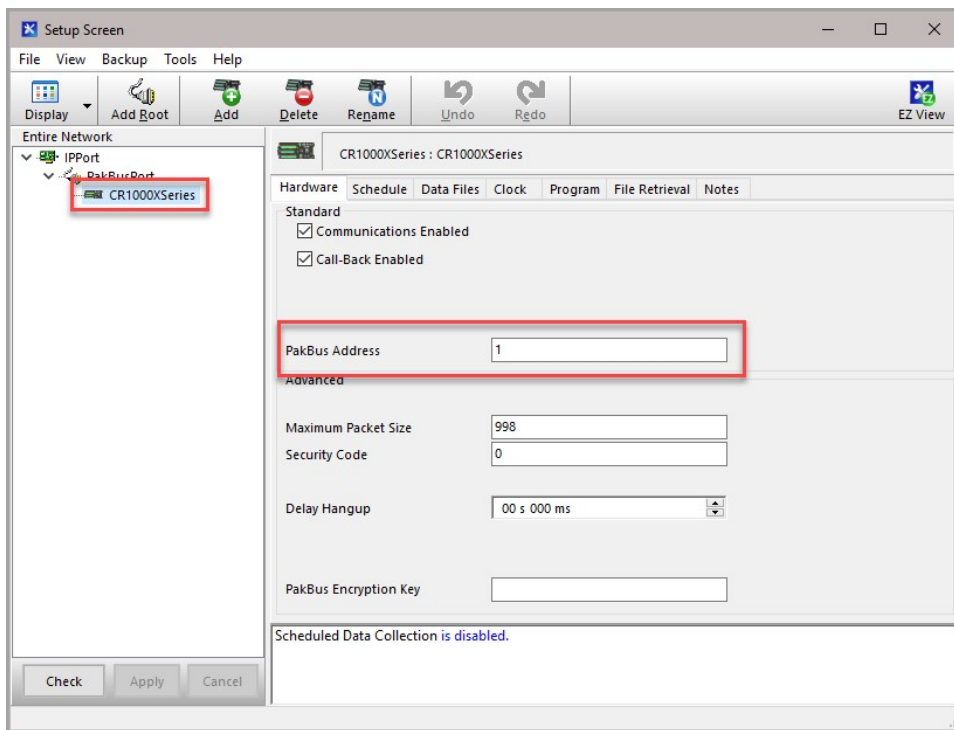


6.2.4 Test the connection

After the Network Map has been configured, test the cellular connection by using the **Connect** screen as shown in the following image. Click on the appropriate station and click **Connect** to initiate a call to the data logger.

TIP:

The connection time is subject to many external factors. It is often less than 30 seconds but could be up to 15 minutes. Be patient.

If the connection is successful, the connectors icon at the bottom of the screen will come together and clock information from the data logger will be displayed in the **Station Date/Time** field. If the connection fails, a **Communications Failure** message will be displayed.

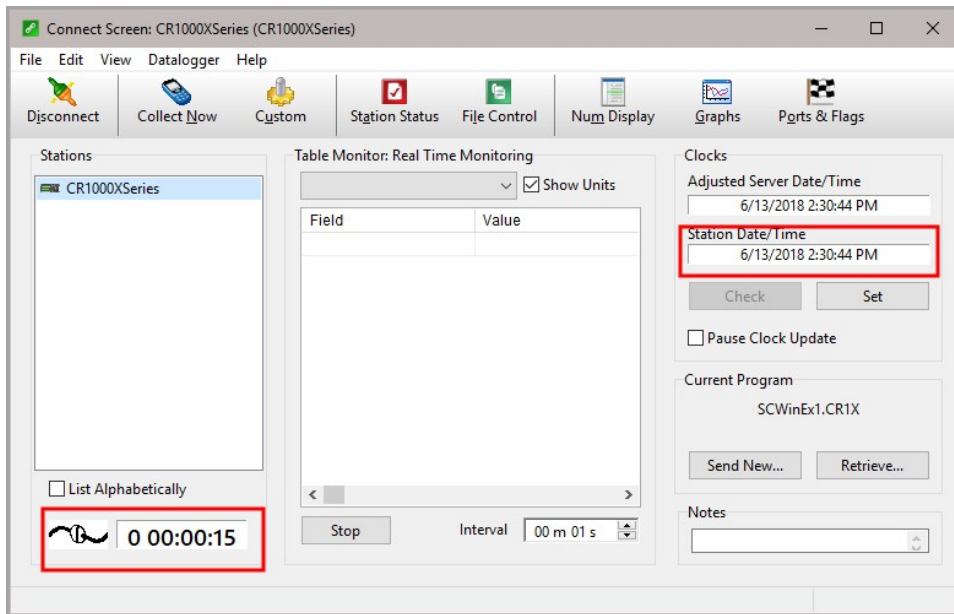

7. Specifications

Data Logger Compatibility

The CELL200 series is compatible with the GRANITE-series, CR6, CR3000, CR1000X, CR800-series, CR300-series, CR1000, CR200(X) series, CR5000, CR10X, CR10X-PB, CR510, CR510-PB, CR23X, and CR23X-PB. See [Module communications connections](#) (p. 29) for information on communications options with each data logger model.

Cellular WAN

See [https://s.campbellsci.com/documents/us/miscellaneous/Cellular Modem Frequency Bands.pdf](https://s.campbellsci.com/documents/us/miscellaneous/Cellular%20Modem%20Frequency%20Bands.pdf) for a complete list of supported frequency bands.

Host Interfaces

- CS I/O communications port, DB9 male
- RS-232 serial port, DB9 female
- USB version 2.0 with micro-B connector

RF Connectors

- 2 SMA socket (female) antenna connectors (primary and diversity)

Power

- Operating Voltage: 10 to 30 VDC
- Low Power Mode: 300 μ A
- Typical Idle: 14 mA @ 12 VDC
- Typical Active: 39 mA @ 12 VDC (CELL205, CELL215, CELL220, CELL225)
25 mA @ 12 VDC (CELL210)

Size

- Dimensions: 13.46 X 8.1 X 2.86 cm (5.3 X 3.19 X 1.13 in)
- Weight: 215.5 g (7.6 oz)

Environmental

- Operating Temperature Range: -40 to 80 °C
- Storage Temperature: -45 to 80 °C
- Humidity: 5 to 95% non-condensing

Industry Certifications

- Environmental: RoHS

SIM (Subscriber Identity Module) card interface

- Micro-SIM (3FF) (6 position / contacts)
- Supports SIMs that require 1.8 or 3 VDC

Data Speeds

- LTE: Max 10 Mbps (download) / Max 5 Mbps (upload)
- WCDMA: Max 384 Kbps (download) / Max 384 Kbps (upload)
- GSM
 - EDGE: Max 296 Kbps (download) / Max 236.8 Kbps (upload)
 - GPRS: Max 107 Kbps (download) / Max 85.6 Kbps (upload)

Compliance

- Industry Canada (IC): 10224A-201611EC21A
- View Declaration of Conformity at:

www.campbellsci.com/cell205 

www.campbellsci.com/cell210 

www.campbellsci.com/cell215 

www.campbellsci.com/cell220 

www.campbellsci.com/cell225 

8. Installation

8.1 Base station requirements	26
8.2 Data logger site equipment	27
8.3 Wiring and connections	29
8.3.1 Module communications connections	29
8.3.2 Module power connections	31
8.3.3 Antenna connections	32
8.4 CELL200 series and data logger configuration	34
8.4.1 Integrated mode option	34
8.4.2 Non-integrated mode option	34
8.4.3 Serial server mode option	40
8.4.4 Serial client mode option	46
8.4.5 Serial server/client mode option	52
8.5 Troubleshooting	58

8.1 Base station requirements

A computer running Campbell Scientific *LoggerNet* software with access to the Internet is needed.

8.2 Data logger site equipment

- CELL200-series module with power cable (included with module)
- Data logger — GRANITE series, CR6 series, CR3000, CR1000X series, CR300 series, CR1000, CR800 series, and CR5000
- Module Interface, see [Module communications connections](#) (p. 29)
- Environmental Enclosure — ENC10/12, ENC12/14, ENC14/16 or ENC16/18

If connecting to CS I/O port:

SC12 cable (preferred for GRANITE series, CR6 series, CR3000, CR1000X series, CR1000, CR800 series, and CR5000 data loggers) — connects the module to current data logger with a **CS I/O** port. See [Module communications connections](#) (p. 29)

SC105 Interface — connects the module to any data logger with a **CS I/O** port. It must be configured using *Device Configuration Utility*. Settings should be:

- CS I/O Mode: SDC Address 8
- CS I/O ME Baud Rate: 115.2k
- RS-232 Mode: Modem (default)
- Baud Rate:
 - 115.2k fixed for GRANITE series, CR6 series, CR3000, CR1000X series, CR1000, CR800 series, and CR5000 data loggers
 - 9600 for CR10X, CR10X-PB, CR510, CR510-PB, CR23X, and CR23X-PB data loggers
- 8 data bits, 1 stop bit, no parity

If connecting to RS-232 port:

Null Modem Cable (9 pin, male-to-male) — connects the module to the CR300 series, CR1000, CR3000, CR800 series, and CR200(X) series **RS-232** port.

CPI/RS-232 RJ45 to DB9 Cable — connects the module to the CR6 series or CR1000X series **CPI/RS-232** port.

- Antenna — the following antennas are available from Campbell Scientific. Contact Campbell Scientific for help in determining the best antennas for your application.
 - 2 dBd 4G/3G Omnidirectional Antenna: An omnidirectional antenna with mounting bracket that is ideally suited for use with 4G and 3G cellular gateways. The mounting bracket attaches to a mast or crossarm, and it serves as the antenna ground plane. The antenna has an N type (female) threaded permanent stud for easy mounting to the included bracket or through an enclosure wall. A coaxial cable, sold separately, is required to connect this antenna to the inline surge suppression or module antenna

jack. The antenna includes a mount/U-bolt assembly for attaching the antenna to a mast, post, or crossarm up to 3.8 cm (1.5 in) in diameter.



- The 38485 antenna is a wideband, dual-port, directional-panel antenna with slant 45 polarization that covers US LTE700/Cellular/PCS/AWS/MDS and global GSM900/GSM1800/UMTS/LTE2600 bands. The antenna is designed for fixed installations and is ideal for both indoor and outdoor applications. It includes a UV-stable enclosure that provides years of use without degradation to either mechanical properties or aesthetics. It also includes a mount assembly that secures the antenna to a mast or pole using hose clamps and mast mount adapter. The antenna can also be directly mounted on a wall.



- 4G/3G Cellular Whip Antenna with SMA Connector: A wideband termination antenna with SMA connector and articulating base. This antenna is intended for short-term testing use only. It is not intended for long-term use. Campbell Scientific recommends that customers use external antennas for the best reception and transmission of cellular signals.



NOTE:

When antennas are located away from the CELL200 series, keep the cables as short as possible to prevent the loss of antenna gain. Route the cables to protect them from damage and so they will not be snagged or pulled on. Avoid binding or sharp corners in the cable routing. Bundle and tie off excess cable. Make sure the cables are secured so their weight will not loosen the connector from the CELL200 series over time.

TIP:

Cellular phone apps, such as OpenSignal (<https://opensignal.com/>), show the direction to point an antenna to get the best signal strength.

8.3 Wiring and connections

This section explains how to connect the module for different communications methods. It also describes how to power the module and connect an antenna.

8.3.1 Module communications connections


The following table shows communications options for each Campbell Scientific data logger model.

Table 8-1: CELL200 series data logger compatibility chart		
Data logger model	Connecting to CELL200 series via its CS I/O port	Connecting to CELL200 series via its RS- 232 port
CR300	N/A	RS-232 null modem cable, or C-port to RS-232 cable (PPP or serial server)
CR310	N/A	RS-232 null modem cable, or C-port to RS-232 cable (PPP or serial server)
GRANITE 6 CR6	SC12 CS I/O cable (PPP and serial server)	CPI/RS-232 cable, or C- or U-port to RS-232 cable, or SC105 CS I/O to RS-232 interface
GRANITE 10/9 CR1000X	SC12 CS I/O cable (PPP and serial server)	CPI/RS-232 cable, or C-port to RS-232 cable, or SC105 CS I/O to RS-232 interface

Table 8-1: CELL200 series data logger compatibility chart		
Data logger model	Connecting to CELL200 series via its CS I/O port	Connecting to CELL200 series via its RS- 232 port
CR200(X)	N/A	RS-232 null modem cable (serial server only)
CR800	SC12 CS I/O cable (PPP and serial server)	RS-232 null modem cable (PPP or serial server), or C-port to RS-232 cable, or SC105 CS I/O to RS-232 interface
CR1000	SC12 CS I/O cable (PPP and serial server)	RS-232 null modem cable (PPP or serial server), or C-port to RS-232 cable, or SC105 CS I/O to RS-232 interface
CR3000	SC12 CS I/O cable (PPP and serial server)	RS-232 null modem cable (PPP or serial server), or C-port to RS-232 cable, or SC105 CS I/O to RS-232 interface
CR5000	N/A	RS-232 null modem cable (serial server only)
CR510 and CR10X	N/A	SC105 CS I/O to RS-232 interface
CR510-PB and CR10X-PB	SC12 CS I/O cable (serial server only) (SDC7 and SDC8 only)	SC105 CS I/O to RS-232 interface
CR23X	N/A	RS-232 null modem cable (serial server only), or SC105 CS I/O to RS-232 interface
CR23X-PB	SC12 CS I/O cable (serial server only) (SDC7 and SDC8 only)	RS-232 null modem cable (serial server only), or SC105 CS I/O to RS-232 interface


The following figures illustrate the most common communications connections between a data logger and a CELL200 series.

CS I/O connection using an SC12 cable

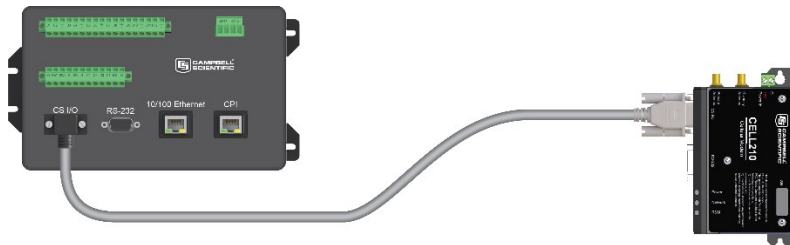

The SC12 is used to connect the module to a data logger **CS I/O** port.

RS-232 connection using a null modem cable

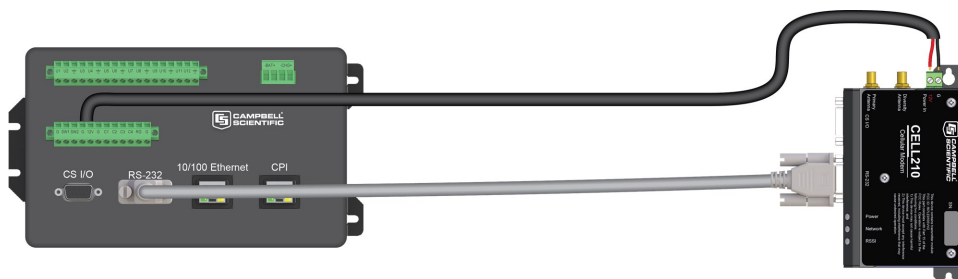

Null Modem Cable is used to connect the module to the CR3000, CR800, CR2XX, CR300 series, or CR1000 **RS-232** port. Power is provided from the **12V** or **SW12V** port of the data logger.

CR1000X or CR6 RS-232 connection using a CPI/RS-232 cable

RS-232/CPI RJ45 to DB9 Male DTE is used to connect the module to the CR6 or CR1000X. Power is provided from the **12V** or **SW12V** port of the data logger.

8.3.2 Module power connections

When connecting through the **CS I/O port**, power for the module is provided by the data logger. When connecting through the **RS-232** port, power must be supplied through the **Power In** connector.

[Controlling power to the CELL200 series](#) (p. 70) provides an example CRBasic program using the **IPNetPower()** instruction to control power to the CELL200 series. This functionality is available in the CR300 series (all operating systems), the CR6 series with operating system 09.00 or greater, and the CR1000X with operating system 03.00 or greater. To control power in these data loggers with older operating systems or any CR1000, CR800 series, or CR3000, you will need to use a **SW12V** port on the data logger and communicate over RS-232.

Alternatively, GRANITE series, CR6 series, CR3000, CR1000X series, CR300 series, CR1000, CR800 series, and CR5000 can use terminal commands to control power. Downloadable example

programs are available at www.campbellsci.com/downloads/cell200-example-programs. Search for "**deep sleep**" and "**wakeup**" in the **CELL2XX-Settings** program.

CR1000, CR800 series, and CR3000 CRBasic programs require **PPPClose** before the "**deep sleep**" command and **PPPOpen** before the "**wakeup**" command.

The **USB** port provides power for module configuration, but is not sufficient for normal operation.

8.3.3 Antenna connections

Use of a diversity antenna can improve system performance. It is required in 4G networks, but not 2G or 3G.

The following figure shows the SMA socket (female) antenna-connector locations.



1. Connect the cellular antenna to the **Primary, Primary Antenna, or Antenna** connector. Mount the cellular antenna so there is at least 20 cm between the antenna and the user or any bystander.
2. Connect a second antenna, if used, to the **Diversity or Diversity Antenna** connector.

Antenna diversity, also called space diversity, is a scheme that uses two or more antennas to improve the quality and reliability of a wireless link. Often, especially in urban and indoor environments, there is no clear line of sight between transmitter and receiver. Instead, the signal is reflected along multiple paths before finally being received. Each bounce can introduce phase shifts, time delays, attenuations, and distortions that can destructively interfere with one another

at the aperture of the receiving antenna. Diversity-antenna-capable devices support multiple antennas (usually two) in order to combat this phenomenon and minimize its effects.

Diversity antennas are not required for 2G/3G connections; however, they are highly recommended in order to get the most reliable connection, especially in areas of low coverage. Identical or very similar antennas should also be used for the best results.

For 4G networks, the second antenna operates as a MISO (multiple-input, single-output) antenna, providing a second receive path. This connection is required for operation on 4G/LTE networks.

Table 8-2: Recommended antenna separation

Service	Frequency (MHz)	Wavelength (λ) (mm)	Best antenna separation (mm) ($1/2 \lambda$)	Good antenna separation (mm) ($1/4 \lambda$)
LTE	700	428	214	107
LTE	800	375	187	94
LTE	900	333	167	83
LTE	1800	167	83	42
LTE	2100	143	71	36
LTE	2600	115	58	29
WCDMA	850	353	176	88
WCDMA	900	333	167	83
WCDMA	1900	158	79	39
WCDMA	2100	143	71	36
CDMA/EV-DO	800	375	187	94
CDMA/EV-DO	1900	158	79	39
GSM/GPRS/EDGE	850	353	176	88
GSM/GPRS/EDGE	900	333	167	83
GSM/GPRS/EDGE	1800	167	83	42
GSM/GPRS/EDGE	1900	158	79	39


WARNING:

Antenna may not exceed the maximum gain specified in [RF exposure](#) (p. 90).

In more complex installations, such as those requiring long cable lengths or multiple connections, you must follow the maximum dBi gain guidelines specified by the radio communications regulations of the Federal Communications Commission (FCC), Industry Canada, ACMA in Australia, or your country's regulatory body.

8.4 CELL200 series and data logger configuration

NOTE:

Instructions in this section assume that the steps in [Pre-installation](#) (p. 2) have been completed. Cellular service must be setup before web access using cell.linktodevice.com  is available.

Select the installation option that best suits your application. The [Overview](#) (p. 8) section describes the differences.

8.4.1 Integrated mode option	34
8.4.2 Non-integrated mode option	34
8.4.3 Serial server mode option	40
8.4.4 Serial client mode option	46
8.4.5 Serial server/client mode option	52

8.4.1 Integrated mode option

[QuickStart \(integrated mode\)](#) (p. 10) describes setting up the CELL200 series in integrated mode with its default settings.

If the module is not in its default settings, the settings in the CELL200 series must match those in the data logger for integrated mode to work. This includes the **SDC Address** for CS I/O communications or the **RS-232 Baud Rate** for RS 232 communications. Once these settings match, all other configuration changes can be done in the data logger as described in [QuickStart \(integrated mode\)](#) (p. 10).

See [Non-integrated mode option](#) (p. 34) for information on changing these settings in the CELL200 series and data logger.


8.4.2 Non-integrated mode option

In non-integrated mode, the module mimics the behavior of our older cellular modems. This mode should be used when doing a direct replacement of a Raven or an RV50 modem.

NOTE:

This section only applies to CR3000, CR1000 and CR800-series users.

8.4.2.1 Configure CELL200 series

1. Connect a USB cable between your module and computer.
2. Connect the cellular antenna if it is not already connected. When using a MIMO antenna with multiple cellular connections, connect the primary cable to **Primary**, **Primary Antenna**, or **Antenna** and the secondary to **Diversity** or **Diversity Antenna** (depending on the label). If the cables are not marked in this way, they can be connected to either antenna port. See [Antenna connections](#) (p. 32).
3. Open a web browser and go to: cell.linktodevice.com .

TIP:

If this doesn't work browse to 192.168.86.1.

4. On the **Settings** tab, enter the **APN** provided by your cellular provider.
5. If you will be connecting through CS I/O, select the desired **SDC Address**.
6. If you will be connecting through RS-232, select the desired **RS232 Baud Rate**.

8.4.2.2 Configure data logger

1. Connect to your data logger using *Device Configuration Utility*.
2. If using the Konect PakBus Router:
 - a. On the **Datalogger** tab, change the data logger **PakBus Address** and optional **PakBus/TCP Password** to match the values entered in the Konect PakBus Router setup.
 - b. On the **Network Services** tab in the **PakBus/TCP Client** field, enter the DNS address and Port number noted during the Konect PakBus Router setup.
3. On the **PPP** tab, set **Config/Port Used** to the CS I/O SDC address selected in the module or RS-232 depending on how you will be connected to the data logger.
4. Verify the **Modem Dial String** setting is blank.
5. (Optional) If using CS I/O communications, the throughput can be enhanced by changing the SDC Baud Rate from 115200 to 460800. On the **Advanced** tab, set the **SDC Baud Rate** to

460800. Note that if there are other devices on the **CS I/O** port, they all must be able to support this higher baud rate.

8.4.2.3 Set up hardware

1. Connect the cellular antenna if it is not already connected. When using a MIMO antenna with multiple cellular connections, connect the primary cable to **Primary**, **Primary Antenna**, or **Antenna** and the secondary to **Diversity** or **Diversity Antenna** (depending on the label). If the cables are not marked in this way, they can be connected to either antenna port. See [Antenna connections](#) (p. 32).
2. Connect your data logger RS-232 or CS I/O port to the CELL200-series module RS-232 or CS I/O port. Ensure the same port is used for each device, for example RS-232 to RS-232. See [Wiring and connections](#) (p. 29).
3. If not connecting through CS I/O, provide power to the CELL200 series. The data logger provides power through the CS I/O port. USB power is not sufficient to power the CELL200 series; 12 V is required.

8.4.2.4 Set up *LoggerNet*

The *LoggerNet* Network Map is configured from the **LoggerNet Setup** screen.

NOTE:

Setup has two options, EZ (simplified) and Standard. Click on the **View** menu at the top of the **Setup** screen, and select **Standard** view.


From the *LoggerNet* toolbar, click **Main > Setup** and configure the Network Map as described in the following steps:

1. Select **Add Root > IPPort**.
2. Select **PakBusPort** and **pbRouter**.




3. Add a data logger to the **pbRouter**.


4. Select the **IPPort** in the Network Map. Enter the CELL200 series IP address (public static IP) or the Konect PakBus Router DNS address (private dynamic IP), along with the port number. The address and port number are input in the **Internet IP Address** field separated by a colon. Preceding zeros are not entered (for example, 070.218.074.247 is entered as 70.218.74.247). When not using Konect, the default port number is 6785.

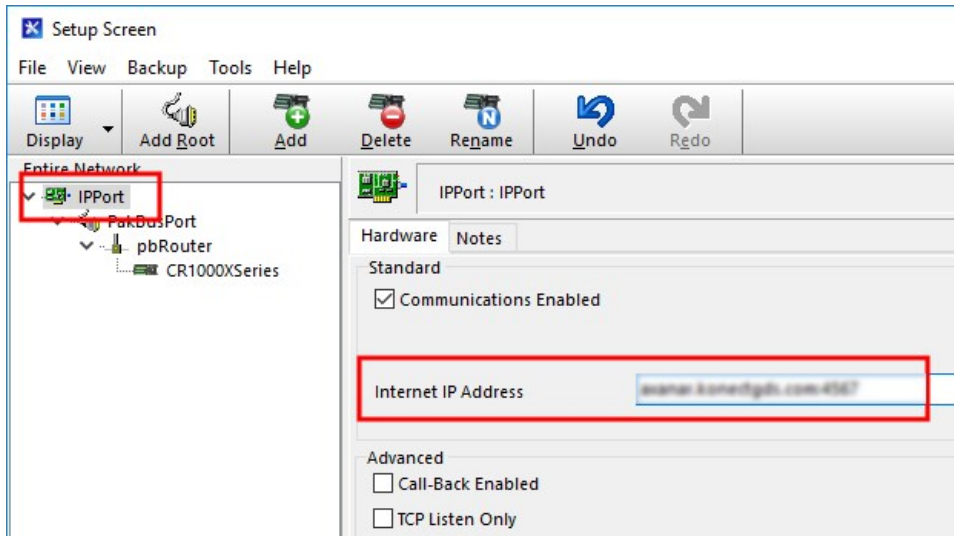


5. Leave the default settings for the **PakBusPort**. **PakBus Port Always Open** should **not** be checked. Enter the **TCP Password**; this must match the value entered in the Konect PakBus Router setup and *LoggerNet* setup.

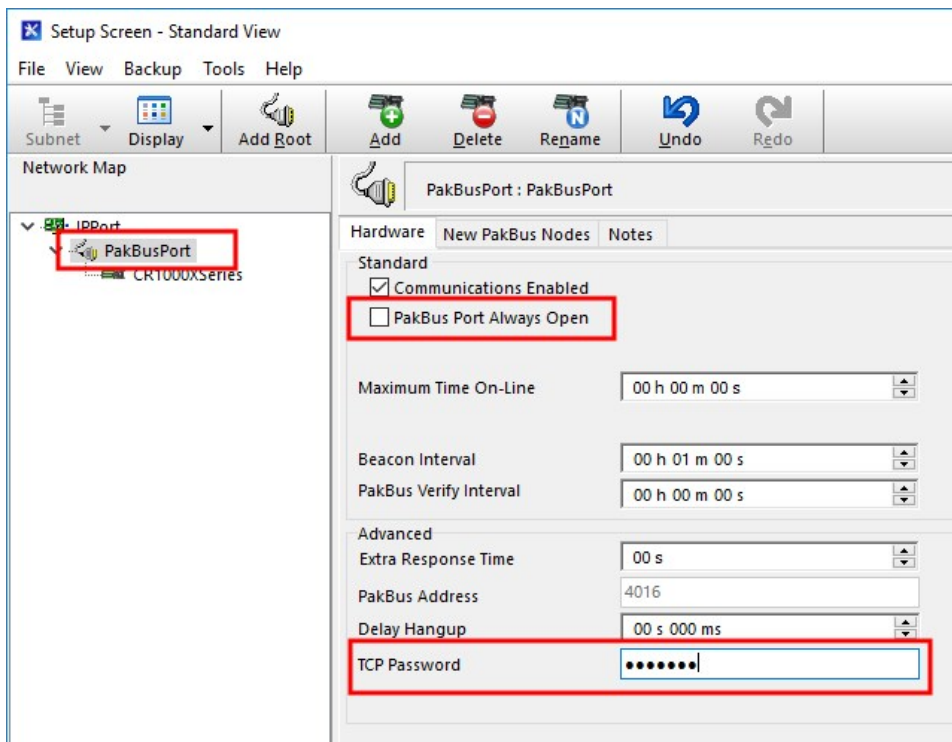

6. Select the pbRouter in the Network Map and set the **PakBus Address** to 4070.

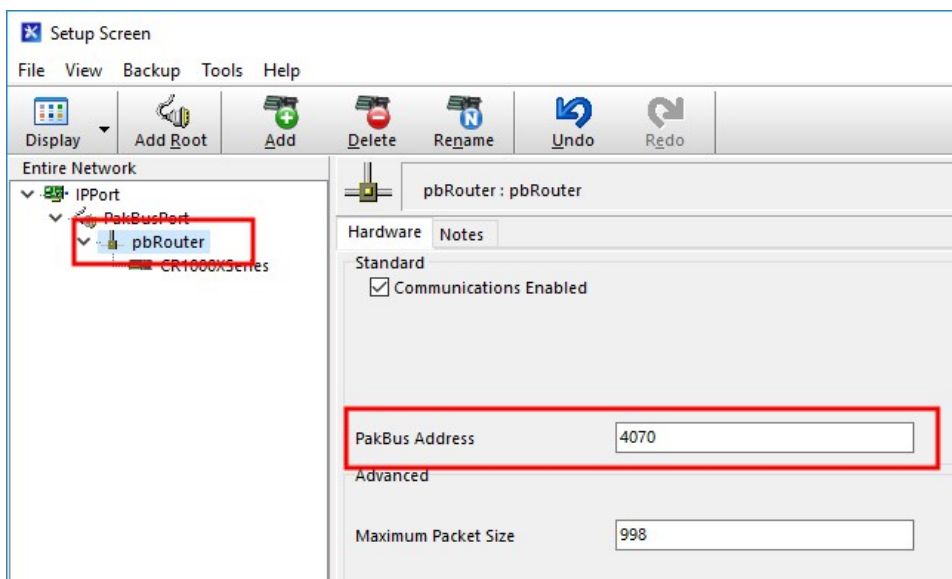

7. Select the data logger in the Network Map and set the **PakBus Address** to match that of the data logger (default address in the data logger is 1). If a **PakBus Encryption Key** was entered during data logger setup, also enter it here. Click **Apply** to save the changes.

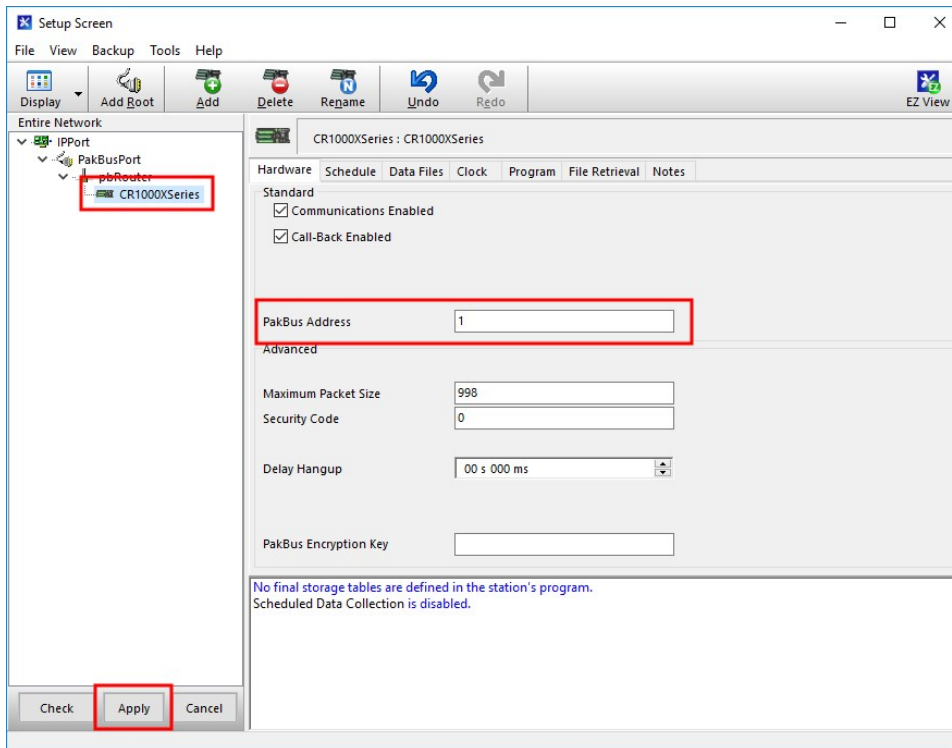


8.4.2.5 Test the connection

After the Network Map has been configured, test the cellular connection by using the **Connect** screen as shown in the following image. Click on the appropriate station and click **Connect** to initiate a call to the data logger.

TIP:

The connection time is subject to many external factors. It is often less than 30 seconds but could be up to 15 minutes. Be patient.

If the connection is successful, the connectors icon at the bottom of the screen will come together and clock information from the data logger will be displayed in the **Station Date/Time** field. If the connection fails, a **Communications Failure** message will be displayed.

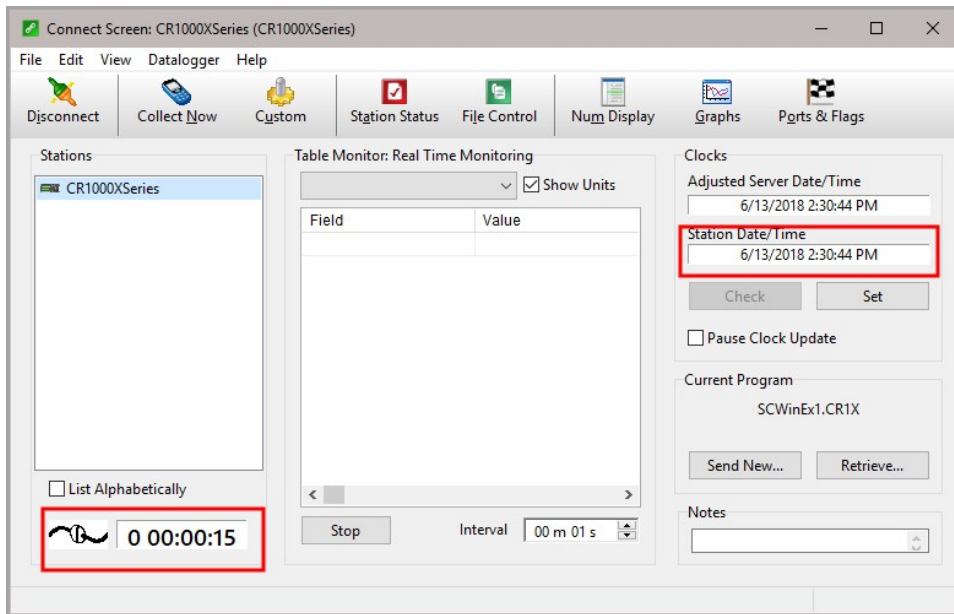

8.4.3 Serial server mode option

In serial server mode, the module receives IP communications over the cellular network and converts those to serial communications to pass on to the data logger. From the perspective of the data logger, this is no different than a serial cable connecting it to a computer.

This is the mode used with CR200-Series and Edlog (CR23X, CR10X, and CR510) data loggers, and cellular-to-RF networks. Only one IP connection at a time is supported.

NOTE:


A public static IP account must be used when the module is set up in serial server mode. Private dynamic IP accounts do not support the serial server mode.

NOTE:

Instructions in this section assume that you have established cellular service and the SIM card has been installed as described in [QuickStart \(integrated mode\)](#) (p. 10).

8.4.3.1 Configure CELL200 series

To set up the CELL200 series in serial server mode:

1. Connect a USB cable between your module and computer.
2. Connect the cellular antenna if it is not already connected. When using a MIMO antenna with multiple cellular connections, connect the primary cable to **Primary**, **Primary Antenna**, or **Antenna** and the secondary to **Diversity** or **Diversity Antenna** (depending on the label). If the cables are not marked in this way, they can be connected to either antenna port. See [Antenna connections](#) (p. 32).
3. Open a web browser and go to: cell.linktodevice.com .

TIP:

If this doesn't work browse to 192.168.86.1.

4. On the **Settings** > **General** tab, enter the **APN** provided by your cellular provider.
5. Set **Mode** to **Serial Server**.
6. On the **Settings** > **Serial Mode Setup** tab, set **Serial Server Listen Port Number**. Default is 3001. This is entered along with the IP address as part of the *LoggerNet* configuration.
7. When using a CR200(X), set **RS-232 baud rate** to **9600** baud.

8. (Optional) In this mode, an **Automated Power Schedule** can be setup to save on battery life or on cellular charges. Go to the **Settings** then **Serial Mode Setup** tab. Enter a **Start (power-on) Time**, **On duration**, and **Repeat cycle**.

The modem automatically turns off at midnight. It turns on at the **Start (power-on) Time** for the **On duration**. It then turns on again every **Repeat cycle** until midnight, at which point it will turn off.

The screenshot shows the 'Settings' page of the Campbell Scientific web interface. The 'Settings' tab is selected, and within it, the 'Serial Mode Setup' sub-tab is active. The 'Automated Power Schedule' section is highlighted with a red box. It contains three dropdown menus: 'Start (power-on) Time' set to '22:00', 'On duration' set to '10 Minutes', and 'Repeat cycle' set to 'Every Hour'. Below this, the 'Trusted IP Host' section is visible, showing a list of addresses.

For example: With the following settings of **Start (power-on) Time** of 22:00, **On Duration** of 10 minutes, and **Repeat Cycle** of Every Hour the cellular module will turn on for ten minutes only twice each day. It will turn on at 10:00 pm and 11:00 pm. It will not turn on at midnight since it is powered off at the start of the next day.

9. (Optional) By default, the CELL200 series will accept incoming communications from any IP address. This can be a security risk. You may specify up to four IP addresses, with wild cards, to limit connections to only those trusted sources. Use an asterisk (*) as a wild card. For example, a setting of 166.22.*.* would allow connections from devices that have IP addresses starting with 166.22. Both IPv4 and IPv6 addresses are supported.

CAUTION:

Only set a Trusted IP address if you are familiar with their use. Consult your IT department or Campbell Scientific for assistance.

NOTE:

This setting does not affect outbound connections, only incoming connections.

Staying on the **Settings > Serial Mode Setup** tab, enter your trusted IP addresses, one per line, in the **Trusted IP Host Addresses** box.

10. (Optional, for modules with static IP addresses.) To get remote access to the module you must first set up a **User Account**. For security purposes there is no default account. Select **Settings > User Accounts > Logon > Create a new Account**. Provide **Name**, **Password**, and select the **Permission Level**. Close then **Apply Changes**.

Once the module has an account it can be accessed remotely using its static IP address. Type the IP address into a web browser to be prompted for the user name and password.

8.4.3.2 Configure data logger

1. Connect to your data logger by using *Device Configuration Utility*.
2. On the **PPP** tab, set **Config/Port Used** to **Inactive**.
3. When using RS-232 serial server mode, it is recommended that you use a fixed baud rate on the data logger RS-232 port. On the **Com Ports Settings** tab, select the RS-232 port and set the **Baud Rate** to the fixed option to match the RS 232 baud rate set in the CELL200-series module.
4. If using CS I/O communication, the throughput can be enhanced by changing the SDC Baud Rate from 115200 to 460800. On the **Advanced** tab, set the **SDC Baud Rate** to 460800. Note that if there are other devices on the **CS I/O** port, they all must be able to support this higher baud rate.

8.4.3.3 Set up hardware

1. Connect the cellular antenna if it is not already connected. When using a MIMO antenna with multiple cellular connections, connect the primary cable to **Primary**, **Primary Antenna**, or **Antenna** and the secondary to **Diversity** or **Diversity Antenna** (depending on the label). If the cables are not marked in this way, they can be connected to either antenna port. See [Antenna connections](#) (p. 32).
2. Connect your data logger RS-232 or CS I/O port to the CELL200-series module RS-232 or CS I/O port. Ensure the same port is used for each device, for example RS-232 to RS-232. See [Wiring and connections](#) (p. 29).

3. If not connecting through CS I/O, provide power to the CELL200 series. The data logger provides power through the CS I/O port. USB power is not sufficient to power the CELL200 series; 12 V is required.

8.4.3.4 Set up *LoggerNet*

The *LoggerNet* Network Map is configured from the **LoggerNet Setup** screen.

NOTE:

Setup has two options, EZ (simplified) and Standard. Click on the **View** menu at the top of the **Setup** screen, and select **Standard** view.


From the *LoggerNet* toolbar, click **Main > Setup** and configure the Network Map as described in the following steps:

1. Select **Add Root > IPPort**.
2. For PakBus data loggers select **PakBusPort**.


NOTE:

PakBus data loggers include the following models: GRANITE-series, CR6, CR3000, CR1000X, CR800-series, CR300-series, CR1000, and CR200(X)-series.


3. Add a data logger.
4. Select the **IPPort** in the Network Map. Enter the CELL200 series IP address (public static IP), along with the port number. The address and port number are input in the **Internet IP Address** field separated by a colon. Preceding zeros are not entered (for example, 070.218.074.247 is entered as 70.218.74.247). For serial server mode, the default port number is 3001.

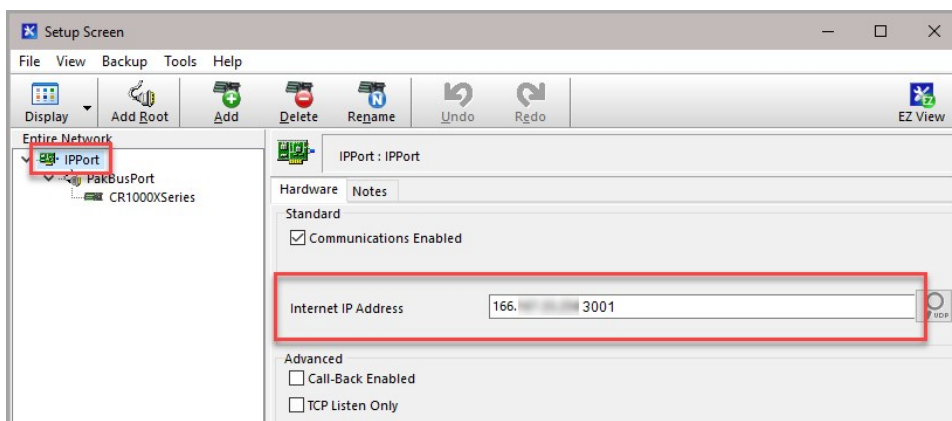

- For PakBus data loggers, leave the default settings for the **PakBusPort**. **PakBus Port Always Open** should not be checked. If used, enter the **TCP Password**.

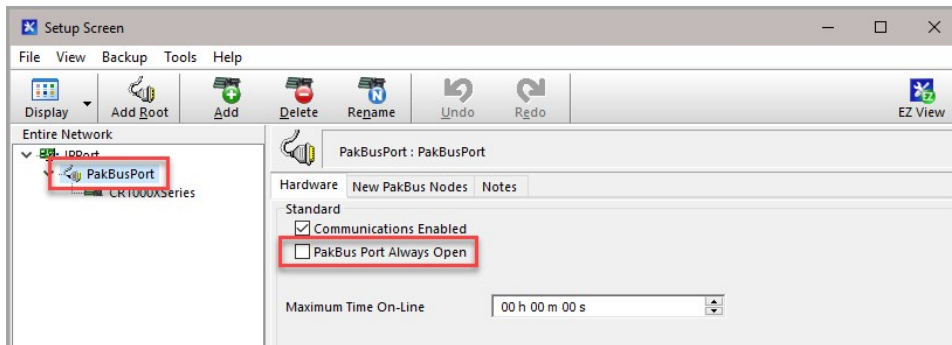

- For PakBus data loggers, select the data logger in the Network Map and set the **PakBus Address** to match that of the data logger (default address in the data logger is 1). Click **Apply** to save the changes.

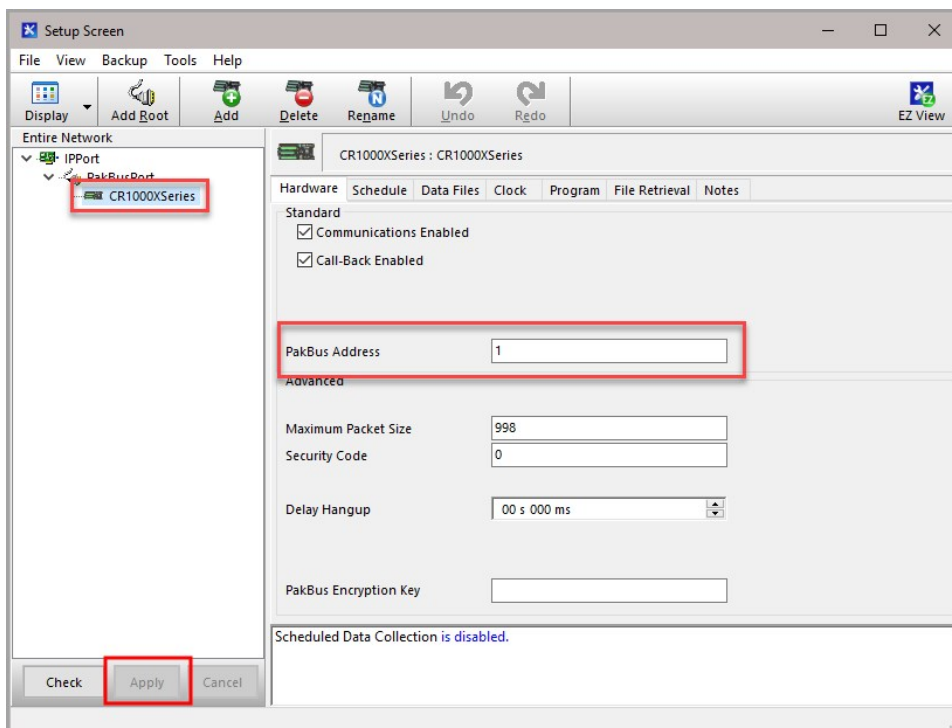


8.4.3.5 Test the connection

After the Network Map has been configured, test the cellular connection by using the **Connect** screen as shown in the following image. Click on the appropriate station and click **Connect** to initiate a call to the data logger.

TIP:


The connection time is subject to many external factors. It is often less than 30 seconds but could be up to 15 minutes. Be patient.

If the connection is successful, the connectors icon at the bottom of the screen will come together and clock information from the data logger will be displayed in the **Station Date/Time** field. If the connection fails, a **Communications Failure** message will be displayed.

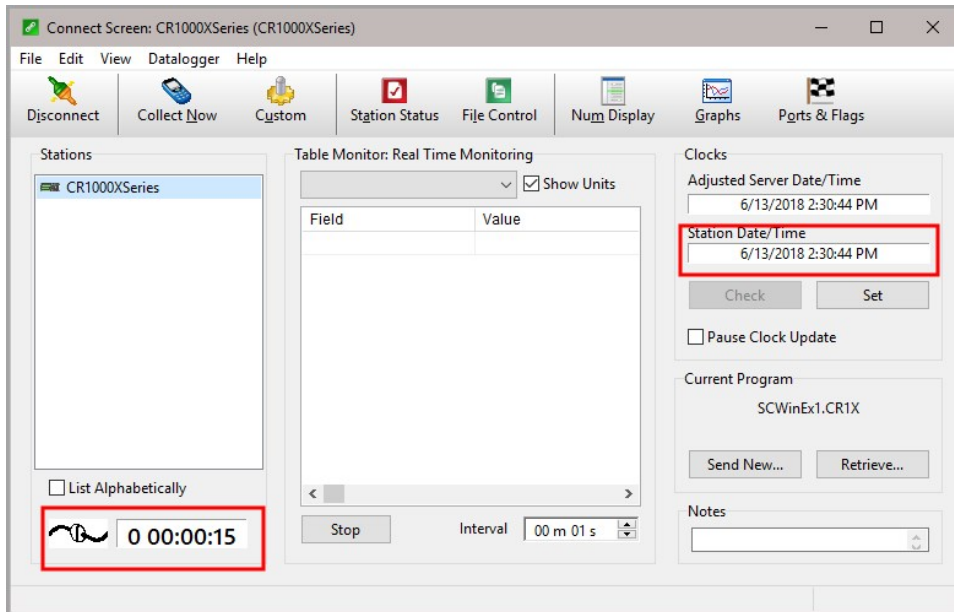

8.4.4 Serial client mode option

This mode requires CELL200 series operating system 2.00 or newer. Find the CELL200 series OS version in the **OS Date** field of the **Status** Tab. For more information, see [Updating the operating system and firmware](#) (p. 73).

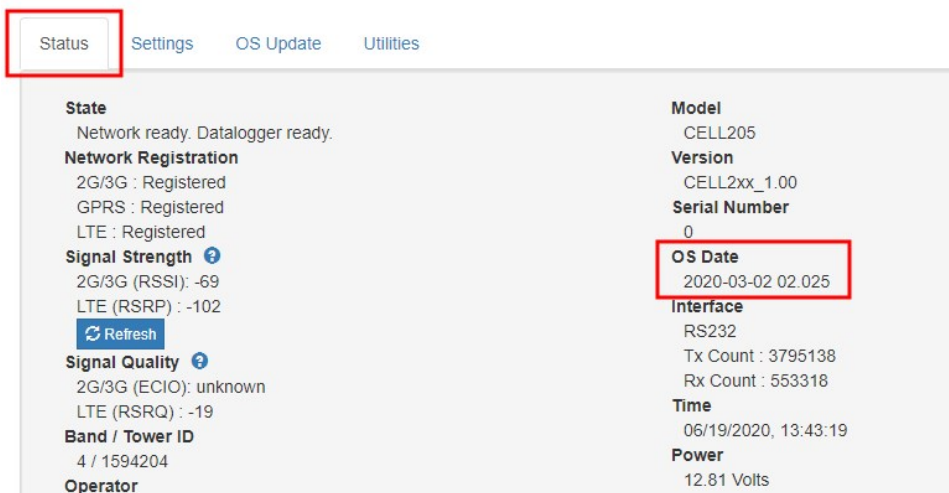

In serial client mode the module will connect to the cellular network and initiate a TCP client socket connection. When data is sent to the active port (RS-232 or CS I/O) it will be sent out on the TCP client connection. When data is received on the TCP client socket connection, it is passed to the active port (RS-232 or CS I/O).

Use this mode when the module is behind a cellular provider firewall and it has a private dynamic IP address. This mode requires the receiving TCP/IP connection be on a public static IP address, on the same private cellular network, DNS name or there be a hole in the firewall. For connections involving firewalls, such as office networks, contact your IT department to ensure all relevant settings are configured correctly.


When the same server IP and port are used for multiple data logger connections, each data logger must have a unique PakBus address.

NOTE:

Instructions in this section assume that you have established cellular service and the SIM card has been installed as described in [QuickStart \(integrated mode\)](#) (p. 10).

8.4.4.1 Configure CELL200 series

To set up the CELL200 series in serial client mode:


1. Connect a USB cable between your module and computer.
2. Connect the cellular antenna if it is not already connected. When using a MIMO antenna with multiple cellular connections, connect the primary cable to **Primary**, **Primary Antenna**, or **Antenna** and the secondary to **Diversity** or **Diversity Antenna** (depending on the label). If the cables are not marked in this way, they can be connected to either antenna port. See [Antenna connections](#) (p. 32).
3. Open a web browser and go to: cell.linktodevice.com .

TIP:

If this doesn't work browse to 192.168.86.1.

4. On the **Settings** tab, enter the **APN** provided by your cellular provider.
5. On the **General** tab, set **Mode** to **Serial Client**.
6. When using a CR200(X), set **RS-232 baud rate** to **9600** baud.


7. Select the **Serial Mode Setup** tab.

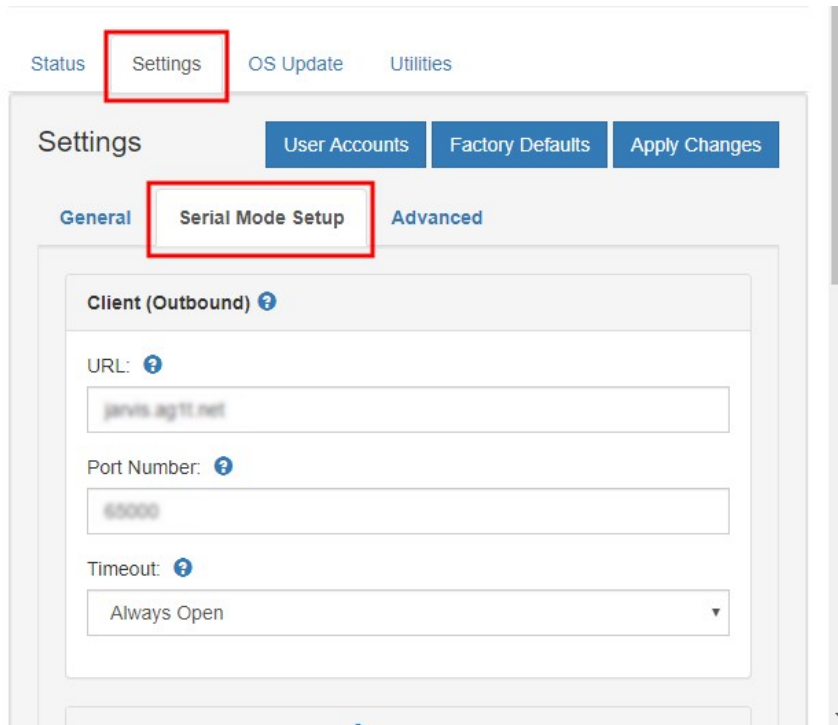

8. Enter the **URL** and **Port Number** of the server/device that the module will connect to.
9. (Optional) Select **Always Open** for the **Timeout**.

- (Optional) In this mode, an **Automated Power Schedule** can be setup to save on battery life or on cellular charges. Go to the **Settings** then **Serial Mode Setup** tab. Enter a **Start (power-on) Time**, **On duration**, and **Repeat cycle**.

The modem automatically turns off at midnight. It turns on at the **Start (power-on) Time** for the **On duration**. It then turns on again every **Repeat cycle** until midnight, at which point it will turn off.

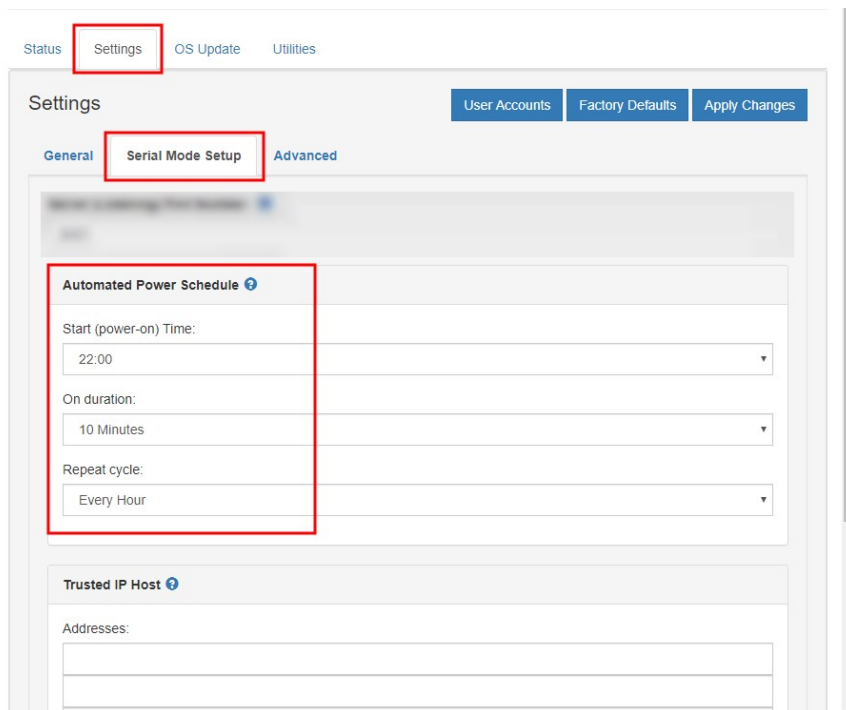

For example: With the following settings of **Start (power-on) Time** of 22:00, **On Duration** of 10 minutes, and **Repeat Cycle** of Every Hour the cellular module will turn on for ten minutes only twice each day. It will turn on at 10:00 pm and 11:00 pm. It will not turn on at midnight since it is powered off at the start of the next day.

8.4.4.2 Configure data logger (optional)

`SendVariables()` is used to initiate a data logger call-back attempt to a computer running *LoggerNet*. It has the following syntax:

```
SendVariables (ResultCode, ComPort, NeighborAddr, PakBusAddr, Security, Timeout, "TableName", "FieldName", Variable, Swath )
```

The **ComPort** needs to be set to **ComRS232** or **ComSDC8** depending on how you have the module connected to the data logger. Set the **TableName** to **"Public"** and the **FieldName** to **"Callback"**. The remaining parameters in the instruction are ignored. The resulting instruction will look similar to:

```
SendVariables (SendResult, COMRS232, 0, 4094, 0000, 0, "Public", "Callback", Scratch, 1)
```

After *LoggerNet* receives the variable "Callback" it will begin collecting data from the data logger and store it to a file based on the data collection settings in the Setup window. See the CRBasic help for more information.

8.4.4.3 Set up hardware

1. Connect the cellular antenna if it is not already connected. When using a MIMO antenna with multiple cellular connections, connect the primary cable to **Primary**, **Primary Antenna**, or **Antenna** and the secondary to **Diversity** or **Diversity Antenna** (depending on the label). If the cables are not marked in this way, they can be connected to either antenna port. See [Antenna connections](#) (p. 32).
2. Connect your data logger RS-232 or CS I/O port to the CELL200-series module RS-232 or CS I/O port. Ensure the same port is used for each device, for example RS-232 to RS-232. See [Wiring and connections](#) (p. 29).
3. If not connecting through CS I/O, provide power to the CELL200 series. The data logger provides power through the CS I/O port. USB power is not sufficient to power the CELL200 series; 12 V is required.

8.4.4.4 Set up *LoggerNet*

The *LoggerNet* Network Map is configured from the **LoggerNet Setup** screen.


NOTE:

Setup has two options, EZ (simplified) and Standard. Click on the **View** menu at the top of the **Setup** screen, and select **Standard** view.


From the *LoggerNet* toolbar, click **Main > Setup** and configure the Network Map as described in the following steps:

1. Select **Add Root > PakBusTcpServer**.
2. Add a data logger to the **PakBusTcpServer**.

3. Select the **PakBusTcpServer** in the Network Map. **PakBus Port Always Open** should be checked.

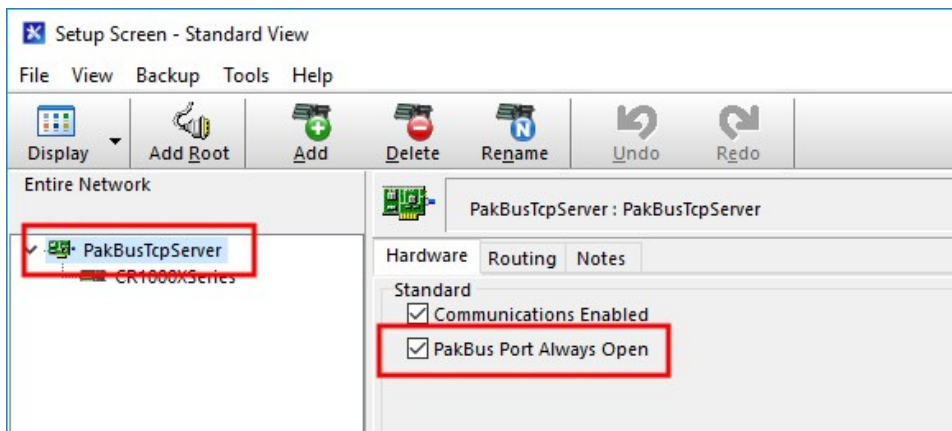

4. Select the data logger in the Network Map. Select **Call-Back Enabled**; the box should have a check.

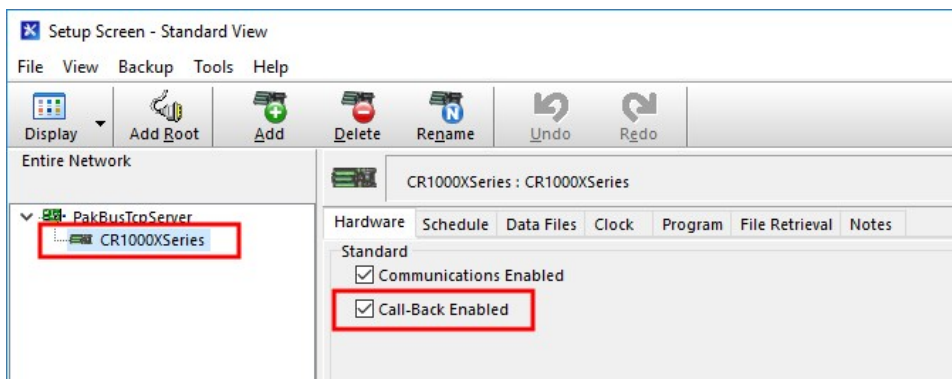


8.4.4.5 Test the connection

After the Network Map has been configured, test the cellular connection by using the **Connect** screen as shown in the following image. Click on the appropriate station and click **Connect** to initiate a call to the data logger.

TIP:


The connection time is subject to many external factors. It is often less than 30 seconds but could be up to 15 minutes. Be patient.

If the connection is successful, the connectors icon at the bottom of the screen will come together and clock information from the data logger will be displayed in the **Station Date/Time** field. If the connection fails, a **Communications Failure** message will be displayed.

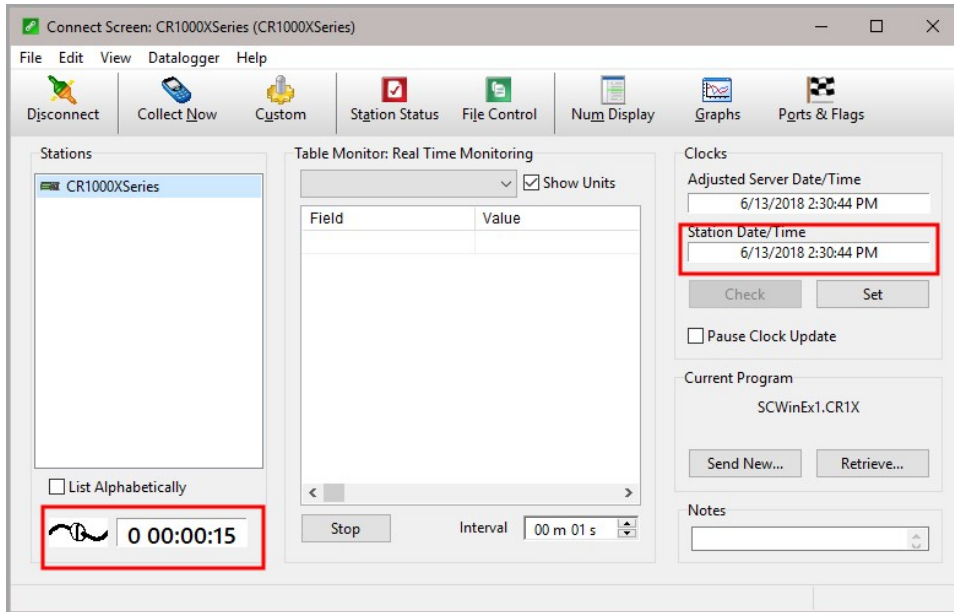

8.4.5 Serial server/client mode option

This mode requires CELL200 series operating system 2.00 or newer. Find the CELL200 series OS version in the **OS Date** field of the **Status** Tab. For more information, see [Updating the operating system and firmware](#) (p. 73).

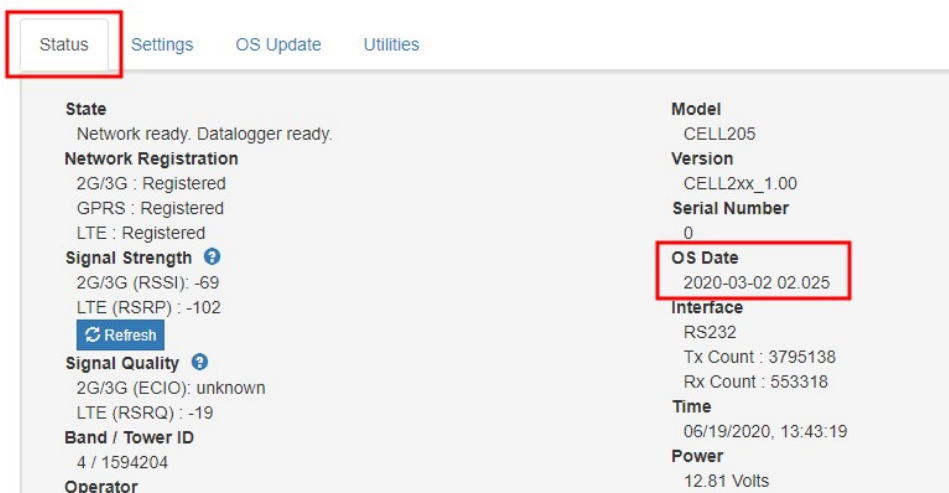

In serial server/client mode the module connects to the cellular network and opens a listening port. When a client connects to the listening port, the CELL200 series will be in "serial server" mode. In serial server mode, all data on the active port (RS-232 or CS I/O) will be routed through

the listening port. When no client is connected to the listening port, the CELL200 series will be in "serial client" mode and all data on the active port will be sent and received through the initiated TCP client socket connection.


The incoming connection, or serial server mode, takes precedence. An outbound, or client, connection will be interrupted if a connection is made on the incoming, or server, listening port.

NOTE:

Instructions in this section assume that you have established cellular service and the SIM card has been installed as described in [QuickStart \(integrated mode\)](#) (p. 10).

8.4.5.1 Configure CELL200 series

To set up the CELL200 series in serial server/client mode:

1. Connect a USB cable between your module and computer.
2. Connect the cellular antenna if it is not already connected. When using a MIMO antenna with multiple cellular connections, connect the primary cable to **Primary**, **Primary Antenna**, or **Antenna** and the secondary to **Diversity** or **Diversity Antenna** (depending on the label). If the cables are not marked in this way, they can be connected to either antenna port. See [Antenna connections](#) (p. 32).
3. Open a web browser and go to: cell.linktodevice.com .

TIP:

If this doesn't work browse to 192.168.86.1.

4. On the **Settings** tab, enter the **APN** provided by your cellular provider.
5. On the **General** tab, set **Mode** to **Serial Server/Client**.

6. Select the **Serial Mode Setup** tab.


The screenshot shows a web interface for configuring a device. At the top, there are four tabs: 'Status', 'Settings', 'OS Update', and 'Utilities'. The 'Settings' tab is selected and highlighted with a red box. Below this, there are three sub-tabs: 'General', 'Serial Mode Setup', and 'Advanced'. The 'Serial Mode Setup' sub-tab is also selected and highlighted with a red box. The main content area is titled 'Settings' and contains three buttons: 'User Accounts', 'Factory Defaults', and 'Apply Changes'. The 'Serial Mode Setup' section includes the following fields:

- Server (Listening) Port Number:** A text input field containing the value '3001'.
- Client (Outbound):** A section containing three fields:
 - URL:** A text input field containing the value 'javis.agtt.net'.
 - Port Number:** A text input field containing the value '65000'.
 - Timeout:** A dropdown menu with the value 'Always Open' selected.

7. Set **Server (Listening) Port Number**. Default is 3001. This is entered along with the IP address as part of the *LoggerNet* configuration.
8. Enter the **URL** and **Port Number** that the module will connect with.
9. (Optional) Select **Always Open** for the **Timeout**.

10. (Optional) In this mode, an **Automated Power Schedule** can be setup to save on battery life or on cellular charges. Go to the **Settings** then **Serial Mode Setup** tab. Enter a **Start (power-on) Time**, **On duration**, and **Repeat cycle**.

The modem automatically turns off at midnight. It turns on at the **Start (power-on) Time** for the **On duration**. It then turns on again every **Repeat cycle** until midnight, at which point it will turn off.

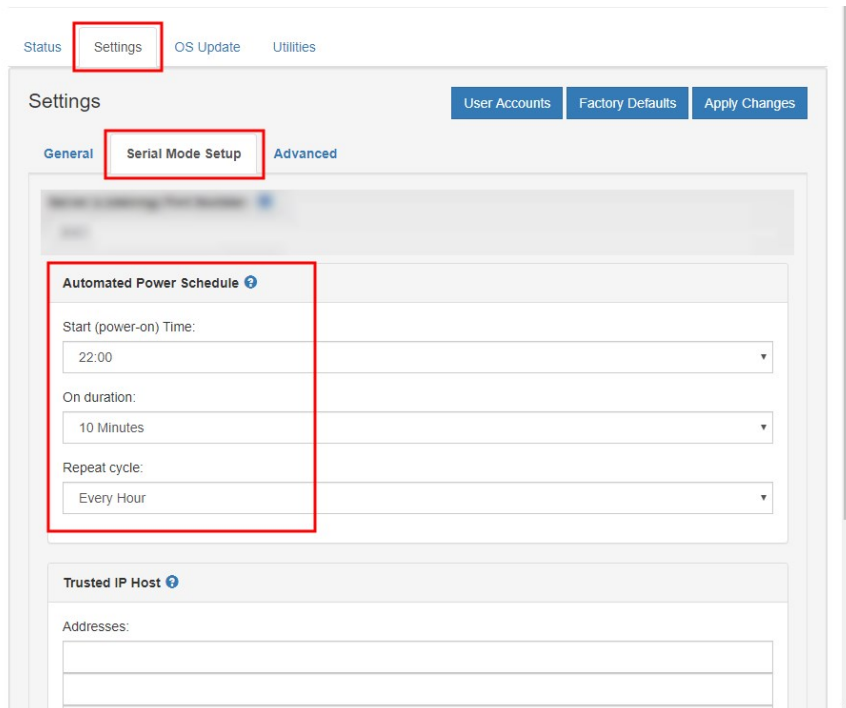

The screenshot shows the 'Settings' page of the Campbell Scientific web interface. The 'Settings' tab is selected, and the 'Serial Mode Setup' sub-tab is active. Within the 'Serial Mode Setup' section, the 'Automated Power Schedule' is configured. The settings are as follows:

Setting	Value
Start (power-on) Time:	22:00
On duration:	10 Minutes
Repeat cycle:	Every Hour

Below the 'Automated Power Schedule' section, there is a 'Trusted IP Host' section with an 'Addresses:' field, which is currently empty.

For example: With the following settings of **Start (power-on) Time** of 22:00, **On Duration** of 10 minutes, and **Repeat Cycle** of Every Hour the cellular module will turn on for ten minutes only twice each day. It will turn on at 10:00 pm and 11:00 pm. It will not turn on at midnight since it is powered off at the start of the next day.

11. (Optional) By default, the CELL200 series will accept incoming communications from any IP address. This can be a security risk. You may specify up to four IP addresses, with wild cards, to limit connections to only those trusted sources. Use an asterisk (*) as a wild card. For example, a setting of 166.22.*.* would allow connections from devices that have IP addresses starting with 166.22. Both IPv4 and IPv6 addresses are supported.

CAUTION:

Only set a Trusted IP address if you are familiar with their use. Consult your IT department or Campbell Scientific for assistance.

NOTE:

This setting does not affect outbound connections, only incoming connections.

Staying on the **Settings > Serial Mode Setup** tab, enter your trusted IP addresses, one per line, in the **Trusted IP Host Addresses** box.

8.4.5.2 Configure data logger

1. Connect to your data logger by using *Device Configuration Utility*.
2. On the **PPP** tab, set **Config/Port Used** to **Inactive**.
3. When using RS-232 serial server mode, it is recommended that you use a fixed baud rate on the data logger RS-232 port. On the **Com Ports Settings** tab, select the RS-232 port and set the **Baud Rate** to the fixed option to match the RS 232 baud rate set in the CELL200-series module.
4. If using CS I/O communication, the throughput can be enhanced by changing the SDC Baud Rate from 115200 to 460800. On the **Advanced** tab, set the **SDC Baud Rate** to 460800. Note that if there are other devices on the **CS I/O** port, they all must be able to support this higher baud rate.

8.4.5.3 Set up hardware

1. Connect the cellular antenna if it is not already connected. When using a MIMO antenna with multiple cellular connections, connect the primary cable to **Primary**, **Primary Antenna**, or **Antenna** and the secondary to **Diversity** or **Diversity Antenna** (depending on the label). If the cables are not marked in this way, they can be connected to either antenna port. See [Antenna connections](#) (p. 32).
2. Connect your data logger RS-232 or CS I/O port to the CELL200-series module RS-232 or CS I/O port. Ensure the same port is used for each device, for example RS-232 to RS-232. See [Wiring and connections](#) (p. 29).
3. If not connecting through CS I/O, provide power to the CELL200 series. The data logger provides power through the CS I/O port. USB power is not sufficient to power the CELL200 series; 12 V is required.

8.4.5.4 Set up *LoggerNet*


The *LoggerNet* Network Map is configured from the **LoggerNet Setup** screen.

NOTE:


Setup has two options, EZ (simplified) and Standard. Click on the **View** menu at the top of the **Setup** screen, and select **Standard** view.

From the **LoggerNet** toolbar, click **Main > Setup** and configure the Network Map as described in the following steps:

1. Select **Add Root > PakBusTcpServer**.
2. Add a data logger to the **PakBusTcpServer**.
3. Select the **PakBusTcpServer** in the Network Map. **PakBus Port Always Open** should be checked.

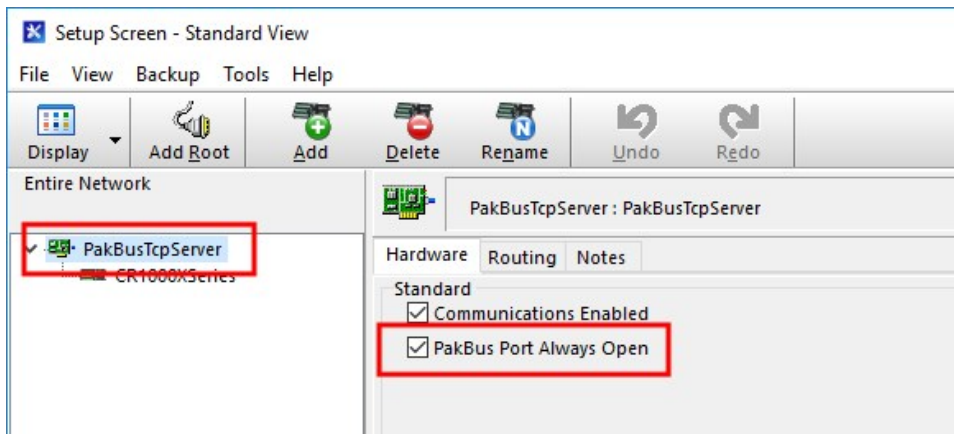

4. Select the data logger in the Network Map. Select **Call-Back Enabled**; the box should have a check.

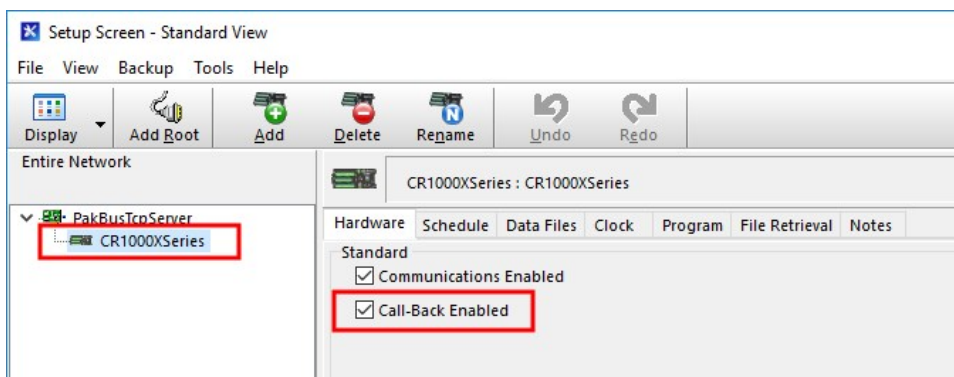


8.4.5.5 Test the connection

After the Network Map has been configured, test the cellular connection by using the **Connect** screen as shown in the following image. Click on the appropriate station and click **Connect** to initiate a call to the data logger.

TIP:

The connection time is subject to many external factors. It is often less than 30 seconds but could be up to 15 minutes. Be patient.

If the connection is successful, the connectors icon at the bottom of the screen will come together and clock information from the data logger will be displayed in the **Station Date/Time** field. If the connection fails, a **Communications Failure** message will be displayed.

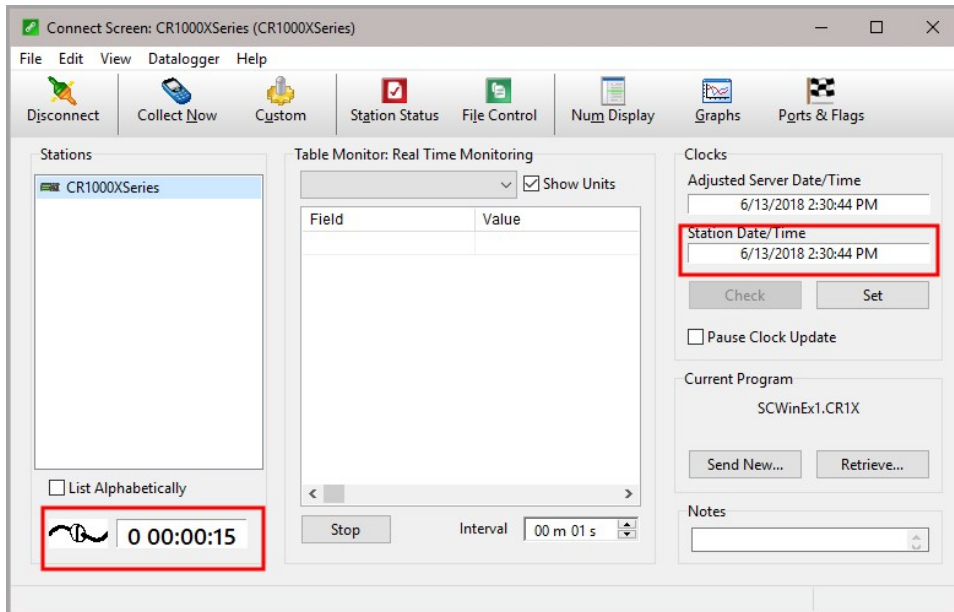

8.5 Troubleshooting

For troubleshooting tips see:


- [Troubleshooting external CELL200 series cellular module connection issues](#) (p. 93)
- [Troubleshooting integrated CELL200 series cellular module connection issues](#) (p. 114)
- <https://www.campbellsci.com/blog/easily-diagnose-cell2xx-connection-issues>

9. Operation and maintenance

9.1 Ports

The **CS I/O** port is the main port used with Campbell Scientific data loggers. Its function is described throughout this manual.

The **RS-232** port can also be used with Campbell Scientific data loggers through a null modem cable (or CPI/RS-232 RJ45 to DB9 cable for the CR1000X and CR6 series).

The **USB** port is used to check the module status, configure the module, send a new operating system, or watch low-level communications. This is done by opening a web browser and using the following URL: cell.linktodevice.com .

TIP:

If your computer does not have access to a DNS server, browse to 192.168.86.1.

9.2 LED indicator lights

When your CELL200-series module is connected to power and an antenna, there is a specific pattern to the lights to indicate its operation mode as described in the following table.

Table 9-1: LED Indicator Lights			
	Green	Blue	Red
Network	Flashes every 8 seconds when authenticated with cellular network	Flashes with traffic to/from internal cell modem	Flashes every 8 seconds when issue with network/settings
Signal	Flashes every 8 seconds to indicate good signal strength	Flashes every 8 seconds to indicate fair signal strength	Flashes every 8 seconds to indicate marginal or no signal strength
Power/Traffic	Flashes every 8 seconds to indicate all is good in network	Flashes with traffic on RS-232 or CS I/O	Used to let user know it is in low power state (only LED flashing)

9.3 Signal strength and quality

Both signal strength and quality contribute to successful cellular data communications. The factors that influence signal strength and quality include but are not limited to:

- proximity to the cellular tower
- tower load
- competing signals
- physical barriers (mountains, buildings, vegetation)
- weather

Because signal strength and quality can vary due to many factors, they may not give a true indication of communications performance or range. However, they can be useful for activities such as:

- determining the optimal direction to aim a Yagi antenna
- determining the effects of antenna height and location
- trying alternate Yagi antenna (reflective) paths
- seeing the effect of vegetation and weather over time

9.3.1 Signal strength

Signal strength is how strong the received signal is. The closer your CELL200 series is to the cellular tower, the more signal the antenna will pick up. Signal strengths are lower the farther away from the tower the CELL200 series is.

For 3G networks, signal strength is reported as RSSI (Received Signal Strength Indicator). For 4G, it is RSRP (Reference Signal Received Power).

Signal strength units are $-dBm$; -70 is a stronger signal than -100 .

Table 9-2: Signal strength		
Strength estimate	RSSI (3G) dBm	RSRP (4G) dBm
Excellent	-70 or greater	-90 or greater
Good	-71 to -85	-91 to -105
Fair	-86 to -100	-106 to -115
Poor	less than -100	less than -115

9.3.2 Signal quality

Signal quality shows how much interference there is between the cellular tower and CELL200 series, or how noisy a band is. Cellular signal noise comes from reflections, ghosting and other interference. Better signal quality is an indicator of more successful communications during precipitation events such as rain and snow.

For 3G networks, signal quality is ECIO (Energy to Interference Ratio). For 4G, this is RSRQ (Reference Signal Received Quality).

Signal quality units are $-dBm$; 0 is a better signal than -10 .

Table 9-3: Signal quality		
Quality estimate	ECIO (3G) dBm	RSRQ (4G) dBm
Excellent	0 to -6	>-9
Good	-7 to -10	-9 to -12
Fair to poor	-11 to -20	-13 or less


Appendix A. Network examples

The following sections describe frequently used configurations with the CELL200-series.

A.1 CELL200-series to RF	62
A.2 CELL200-series to Ethernet	66

A.1 CELL200-series to RF

This type of network is useful when a single data logger is not located close enough to a reliable cellular signal. To overcome this distance, use radios to establish connectivity with the cellular network.

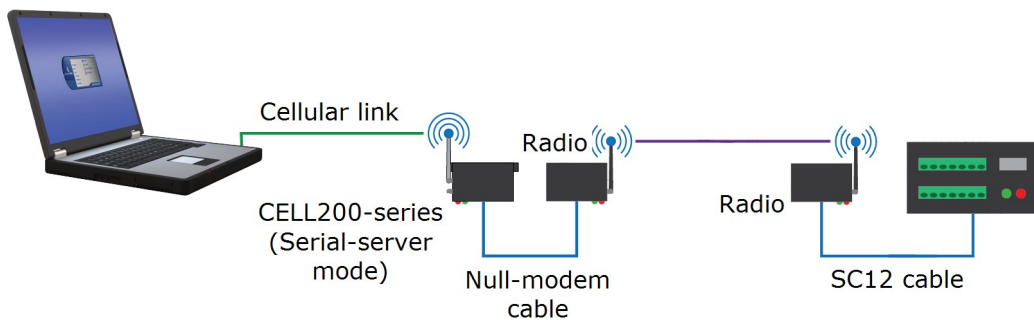

A.1.1 CELL200-series physical setup

1. Connect the CELL200-series and radio RS-232 ports using an RS-232 pin-to-pin null-modem cable.
2. Connect the cellular and radio antennas, if they are not already connected.
3. Apply DC power to the CELL200-series and radio.

A.1.2 Configure the CELL200-series as a serial server

1. Connect a USB cable between a USB port on your computer and the **USB** port on the CELL200 series.
2. Starting with the default settings, open a web browser and go to: cell.linktodevice.com.

NOTE:

Cellular service must be setup before configuring the CELL200-series. See [Pre-installation](#) (p. 2) for more information.

3. If the data logger has been assigned a **public static IP address**, on the **Settings > General** tab:
 - a. Enter the **APN** as assigned by your service provider.
 - b. Change **Mode** from PPP to **Serial Server**.
 - c. Click **Apply** to save the changes and then close the browser tab.
4. If the data logger has been assigned a **private dynamic IP address** and you are using the **Konect PakBus Router** service, on the **Settings** tab:
 - a. **General** tab > Enter the **APN** as assigned by your service provider.
 - b. **General** tab > Change **Mode** from PPP to **Serial Server/Client**.
 - c. **Serial Mode Setup > URL** > Enter the Konect PakBus Router address.
 - d. **Serial Mode Setup > Port Number** > Enter the Konect PakBus Router port number.

NOTE:

Konect PakBus Router connections through a CELL200 series modem do not support a TCP Password. Contact Campbell Scientific support for more information.

A.1.3 Configure radio connected to the CELL200-series

Connect a USB cable between a USB port on your computer and the **USB** port on the radio that will be connected to the CELL200 series. Either RF407-series or RF451/452 radios can be used. See those product manuals for additional details.

A.1.3.1 RF407-series

1. Connect to the radio in *Device Configuration Utility*.
2. Click the **Factory Defaults** button at the bottom of the Deployment window.
3. On the **Main** tab set **Active Interface** to **RS-232**.
4. Click **Apply** to save the changes.

A.1.3.2 RF451/452

1. Connect to the radio in *Device Configuration Utility*.
2. Click the **Factory Defaults** button at the bottom of the Deployment window.
3. On the **Deployment** tab set:
 - a. **Active Interface** to RS-232
 - b. **Radio Operation Mode** to **Gateway** (previously called Master)

NOTE:

There can only be one Gateway in an RF451/452 network.

4. Click **Apply** to save the changes.

A.1.4 Configure radio connected to the data logger

1. Using an SC12 cable connect the data logger **CS I/O** port to the radio **CS I/O** port.
2. Connect a USB cable between a USB port on your computer and the radio **USB** port.

A.1.4.1 RF407-series

1. Connect to the radio in *Device Configuration Utility*.
2. Click the **Factory Defaults** button at the bottom of the Deployment window.
3. Click **Apply** to save the changes.

A.1.4.2 RF451/452

1. Connect to the radio in *Device Configuration Utility*.
2. Click the **Factory Defaults** button at the bottom of the Deployment window.
3. On the **Deployment** tab keep the defaults and confirm:
 - a. **Active Interface** is CS I/O SDC
 - b. **SDC Address** is 7
 - c. **Radio Operation Mode** is **Endpoint** (previously called Slave)
4. Click **Apply** to save the changes.

A.1.5 Configure the data logger

1. Connect a USB cable between a USB port on your computer and the data logger **USB** port.
2. Connect to the data logger in *Device Configuration Utility*.
3. Click the **Factory Defaults** button at the bottom of the Deployment window.
4. On the **Datalogger** tab verify or change the PakBus address.
 - Default address is 1.
 - If using *Konect PakBus Router*, verify the address assigned here matches the address you setup for the data logger in *Konect PakBus Router*.
5. On the **Com Ports Settings** tab set:
 - a. **ComPort** to CS I/O SDC7
 - b. **Beacon Interval** to 60 (seconds)
6. Click **Apply** to save the changes and then close *Device Configuration Utility*.

A.1.6 Setup *LoggerNet*

1. In the *LoggerNet* Setup screen, click **Add Root** and select **IPPort**. Enter the CELL200-series IP address and port number. The IP address and port number are input on the same line separated by a colon. IPv6 addresses will need to be enclosed in square brackets when specifying a port number. An IPv4 address may look like 192.168.1.100:3001. An IPv6 address may look like [2001:db8::1234:5678]:3001. A fully qualified host name entry may look like yourlogger.com:3001. In serial server mode, the default port number is **3001**.


If you are using a *Konect PakBus Router* use the address of the *Konect PakBus Router* followed by a colon and the port number of the PakBus router.

2. Add **PakBusPort (PakBus Loggers)**.
3. Add a PakBus Router (**pbRouter**). The default PakBus address for the *Konect PakBus Router* is **4070**. Click **Close**.
4. Add the data logger and enter its PakBus address. If using a *Konect PakBus Router* ensure that the PakBus address matches both that of the data logger and the configuration you setup with your *Konect PakBus Router*.
5. Click **Apply** to save the changes.

6. You are now ready to connect to your data logger using **LoggerNet**. Select **Main** and **Connect** on the **LoggerNet** toolbar, select the data logger from the **Stations** list, then **Connect**. From there, you can view and collect data, or manage data logger settings.

A.2 CELL200-series to Ethernet

This type of network is useful when there is no cellular signal at the data logger but a cellular signal can be reached using a run of Ethernet cable.

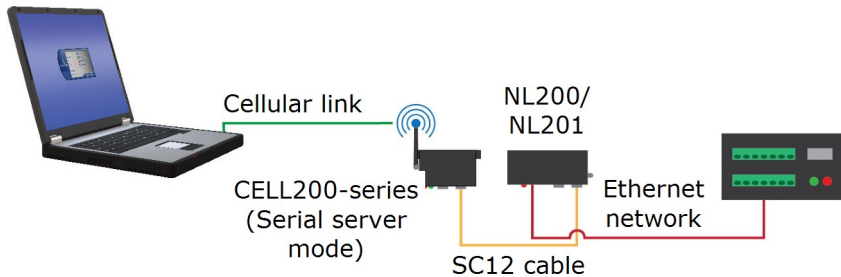

A.2.1 CELL200-series physical setup

1. Connect the CELL200-series and NL200/NL201 RS-232 ports using a straight-through RS-232 pin to socket cable such as an SC12.
2. Connect the cellular antenna, if it is not already connected.
3. Apply DC power to the CELL200-series and NL200/NL201.

A.2.2 Configure the CELL200-series as a serial server

1. Connect a USB cable between a USB port on your computer and the USB port on the CELL200-series.
2. Starting with the default settings, open a web browser and go to: cell.linktodevice.com.

NOTE:

Cellular service must be setup before configuring the CELL200-series. See [Pre-installation](#) (p. 2) for more information.

3. If the data logger has been assigned a **public static IP address**, on the **Settings > General** tab:
 - a. Enter the **APN** as assigned by your service provider.
 - b. Change **Mode** from PPP to **Serial Server**.
 - c. Click **Apply** to save the changes and then close the browser tab..
4. If the data logger has been assigned a **private dynamic IP address** and you are using the *Konect PakBus Router* service, on the **Settings** tab:
 - a. **General** tab > Enter the **APN** as assigned by your service provider.
 - b. **General** tab > Change **Mode** from PPP to **Serial Server/Client**
 - c. **Serial Mode Setup** > **URL** > Enter the Konect PakBus Router address.
 - d. **Serial Mode Setup** > **Port Number** > Enter the Konect PakBus Router port number.

NOTE:

Konect PakBus Router connections through a CELL200-series modem do not support a TCP Password. Contact Campbell Scientific support for more information.

A.2.3 NL200/NL201 physical setup

1. Connect the data logger and NL200/NL201 using an Ethernet cable.
2. Apply 12 VDC power to the data logger and NL200/NL201..

A.2.4 Configure the NL200/NL201

1. Connect a USB cable between a USB port on your computer and the NL200/NL201 **USB** port.
2. Connect to the NL200/NL201 in *Device Configuration Utility*.
3. Click the **Factory Defaults** button at the bottom of the Deployment window.
4. On the **NL200 Series** tab, set **Bridge Mode** to **disable**.
5. If a dynamic address is to be used, the network information acquired via DHCP can be seen on the NL200 Series tab under **Status**. The **Status** box also displays the MAC address of the NL200/NL201.
6. To enter a static IP address, select **disable** in the **Use DHCP** field. Then input the **IP Address**, **Network Mask**, and **Default Gateway**. These values can be provided by your network

administrator. For the purposes of this example assume that both the NL200/NL201 and data logger are directly connected with an Ethernet cable. Use the following IP info: 192.168.1.2 with a subnet mask of 255.255.255.0.

7. On the **RS-232** tab:
 - a. Set **Configuration** to **PakBus**.
 - b. Set **Baud Rate** to baud rate of attached device, generally this is **115200** (default).
 - c. Set **Beacon Interval** to **60** (seconds) and **Verify Interval** to **0**. If you want to restrict communications paths, use the **PakBus Neighbors Allowed** setting to specify allowed neighbor addresses.
8. On the **Network Services** tab, make note of the **PakBus/TCP Service Port**. The default **PakBus/TCP Service Port** is **6785**. Unless firewall issues exist, it is not necessary to change the port from its default value. This port number must match the port number entered in LoggerNet Setup after the IP address. See [Setup LoggerNet](#) (p. 68).

A.2.5 Configure the data logger

1. Connect to the data logger in *Device Configuration Utility*.
2. Click the **Factory Defaults** button at the bottom of the Deployment window.
3. On the **Datalogger** tab verify the **PakBus Address**.
4. On the **Ethernet** tab set:
 - a. **Ethernet Power** to **Always On**
 - b. **IP Address** to **192.168.1.1**
 - c. **Subnet Mask** to **255.255.255.0**

NOTE:

The **IP Gateway** does not need to be set.


5. On the **Network Services** tab set the **PakBus/TCP Clients Address** to **192.168.1.2**. This will cause the data logger to call the NL200/NL201 over PakBus.
6. Click **Apply** to save the changes and then close *Device Configuration Utility*.

A.2.6 Setup LoggerNet

1. In the *LoggerNet* Setup screen, click **Add Root** and select **IPPort**. Enter the CELL200-series IP address and port number. The IP address and port number are input on the same line

separated by a colon. IPv6 addresses will need to be enclosed in square brackets when specifying a port number. An IPv4 address may look like 192.168.1.100:6785. An IPv6 address may look like [2001:db8::1234:5678]:6785. A fully qualified host name entry may look like yourlogger.com:6785.

2. Add **PakBusPort (PakBus Loggers)**.
3. Add a PakBus Router (**pbRouter**). Enter the PakBus address of the NL200/NL201. The NL200/NL201 default PakBus address is **678**. Click **Close**.
4. Add the data logger and enter its PakBus address.
5. Click **Apply** to save the changes.

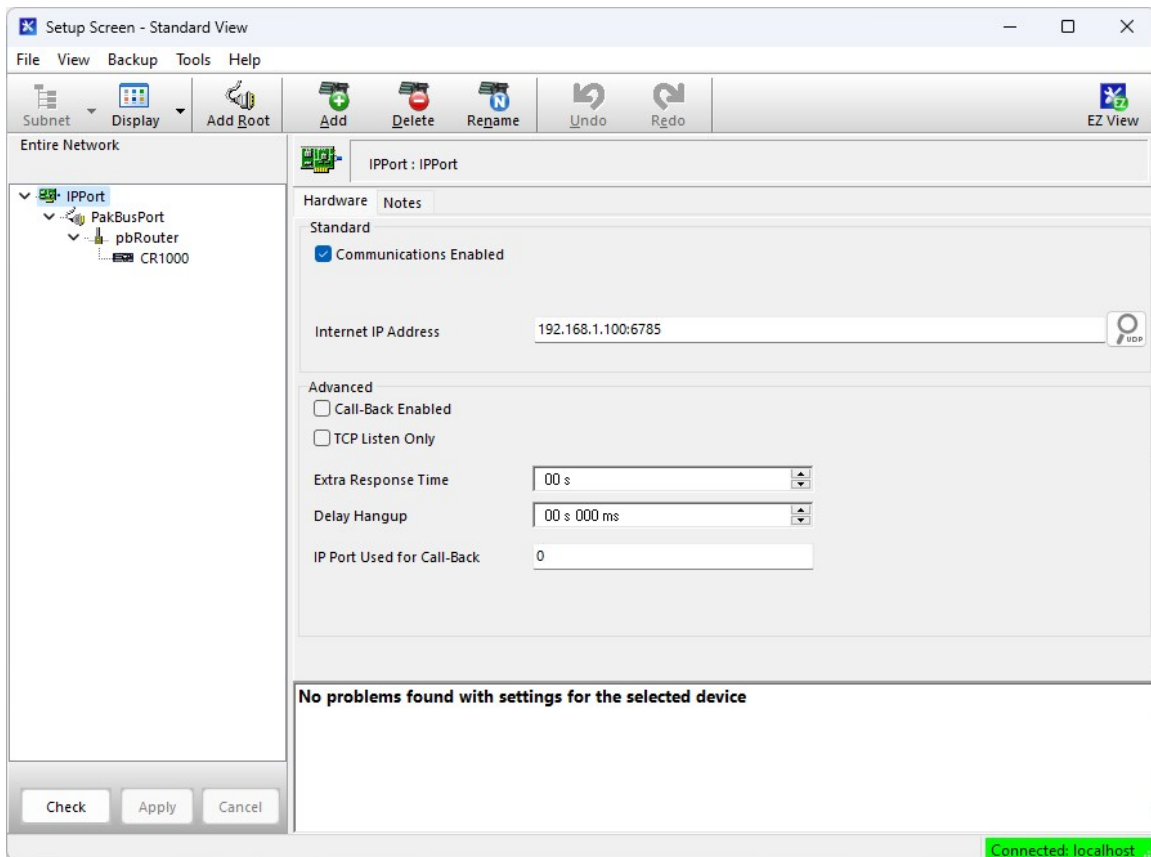

6. Ensure that your computer has a connection to the internet.
7. You are now ready to connect to your data logger using **LoggerNet**. Select **Main** and **Connect** on the **LoggerNet** toolbar, select the data logger from the **Stations** list, then **Connect**. From there, you can view and collect data, or manage data logger settings.

Appendix B. Controlling power to the CELL200 series

This example shows how to control power to the CELL200 series by using the CRBasic `IPNetPower()` instruction. The program uses the `TimeIsBetween()` instruction to power the CELL200 series for 15 minutes every 60 minutes between 9:00 a.m. and 5:00 p.m.

Downloadable example programs are available at www.campbellsci.com/downloads/cell200-example-programs. See the **CELL2XX-Power** program.

NOTE:

The `IPNetPower()` functionality shown in this example is available in the CR300 series with operating system 08.00 or greater, the CR6 series with operating system 09.00 or greater, and the CR1000X with operating system 03.00 or greater. To control power in these data loggers with older operating systems or any CR1000, CR800 series, or CR3000, you will need to use a **SW12V** port on the data logger and communicate over RS-232. When using a **SW12V** port, we recommend using a `PPPClose()` instruction to shut down the network prior to powering down the CELL200 series.

NOTE:

`TimeIsBetween()` requires operating system version 28.00 or greater in the CR1000, CR3000, or CR800. It is supported in all CR1000X, CR6, and CR300 operating systems.

CRBasic Example 1: Turn CELL200 series ON and OFF under data logger control

```
'Declare Variables and Units
Public BattV
Public PTemp_C
Public ModuleState As Boolean

Units BattV=Volts
Units PTemp_C=Deg C

'Define Data Tables
DataTable(Daily,True,-1)
  DataInterval(0,1440,Min,10)
  Minimum(1,BattV,FP2,False,False)
EndTable
```


CRBasic Example 1: Turn CELL200 series ON and OFF under data logger control

```
'Main Program
BeginProg
  'Main Scan
  Scan(5,Sec,1,0)
  'Default Data Logger Battery Voltage measurement 'BattV'
  Battery(BattV)
  'Default Wiring Panel Temperature measurement 'PTemp_C'
  PanelTemp(PTemp_C,60)
  'Between the hours of 9:00 and 17:00, turn the CELL200 series
  'on for 15 minutes at the start of every hour
  If TimeIsBetween(9,17,24,Hr) AND TimeIsBetween(0,15,60,Min) Then
    ModuleState=True
    IPNETPower(5,1)
  Else
    ModuleState=False
    IPNETPower(5,0)
  EndIf
  'Always turn OFF CELL200 series if battery drops below 11.5 volts
  If BattV<11.5 Then
    'Set CELL200 series power to the state of 'ModuleState' variable
    IPNETPower(5,0)
  EndIf
  'Call Data Tables and Store Data
  CallTable Daily
NextScan
EndProg
```

Appendix C. Configure cellular settings and retrieve status information with SetSetting()

NOTE:

This functionality is available in the CR1000X, CR300-series, and CR6 dataloggers only.

Downloadable example programs are available at www.campbellsci.com/downloads/cell200-example-programs[↗]. The **CELL2XX-SetSettings** example shows how to set up the cellular module using the **SetSetting()** instruction. It also illustrates how to retrieve status information from the module in the CRBasic program.

Appendix D. Updating the operating system and firmware

Campbell Scientific updates data logger and CELL200 series operating systems (OS) as new features are developed and bugs fixed. It is recommended that before deploying instruments, you check operating system versions and update them as needed. This section applies to updating the CELL200 series module operating system. Refer to your data logger manual for information on updating its OS.

The CELL200 series itself uses two operating systems. The first is the Campbell Scientific CELL200 series operating system. We will refer to that as the **CELL200 series OS**. The second is contained in the cellular radio module; we will refer to that one as the **module firmware**. One or both may need to be updated from time to time.


CAUTION:

To prevent data loss, collect all data from the data logger before proceeding to update the data logger operating system and cellular module firmware.

Updating the module firmware is done over the air (OTA), even with a direct USB connection to the data logger. Therefore, it can take from 5 minutes to several hours depending on signal strength between the cell tower and the CELL200 series, cellular network congestion, and OTA server availability. OTA updates use some of the cellular device data plan for each attempt. Care should be taken to plan accordingly to avoid cellular data plan overages.

D.1 Using the web interface (cell.linktodevice.com)


NOTE:

Instructions in this section assume that the steps in [Pre-installation](#) (p. 2) have been completed. Cellular service must be setup before web access using cell.linktodevice.com  is available.

NOTE:

This section applies to modules set up in serial server mode with a public static IP account when connecting over the Internet using the cellular interface.


This section also applies to all modules when connecting via USB.

1. Connect the cellular antenna if it is not already connected. When using a MIMO antenna with multiple cellular connections, connect the primary cable to **Primary**, **Primary Antenna**, or **Antenna** and the secondary to **Diversity** or **Diversity Antenna** (depending on the label). If the cables are not marked in this way, they can be connected to either antenna port. See [Antenna connections](#) (p. 32).
2. (Option 1, local connection) Connect a USB cable between your module and computer.
 - a. Open a web browser and go to: cell.linktodevice.com .


TIP:

If your computer does not respond to the DNS server correctly, browse to 192.168.86.1.


3. (Option 2, remote connection) No additional setup for modules connecting remotely.
 - a. Open a web browser and enter the module static IP address.
4. Every 14 days, the module automatically checks for a CELL200 series OS update. When a new OS is available you will see a red notification in the **Version** field of the **Status** Tab.

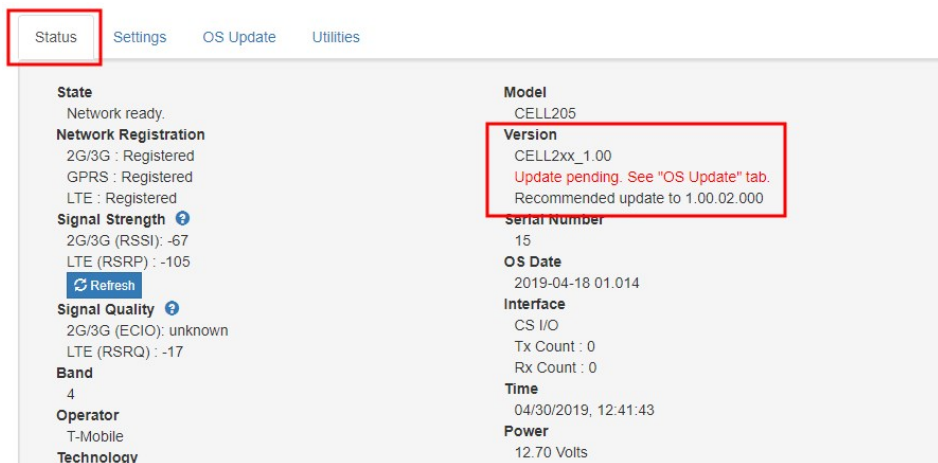

5. Select the **OS Update** Tab. Clicking the **Apply Update** button will retrieve the CELL200 series OS from the Campbell Scientific website and begin the update process. If you already downloaded the OS from the Campbell Scientific website to your computer you can click the **Send File** button and follow the prompts.

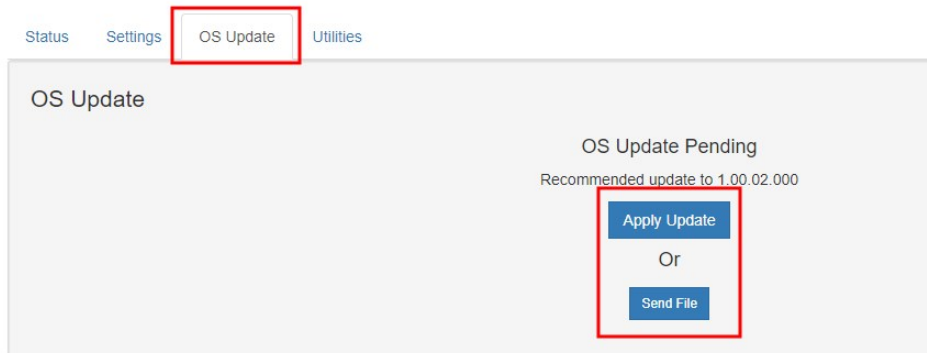

6. When new module firmware is available you will see a red notification in the **Cellar Modem** field of the **Status** Tab. To begin the update process, click the red **Start Cellular Module OTA Update** button.

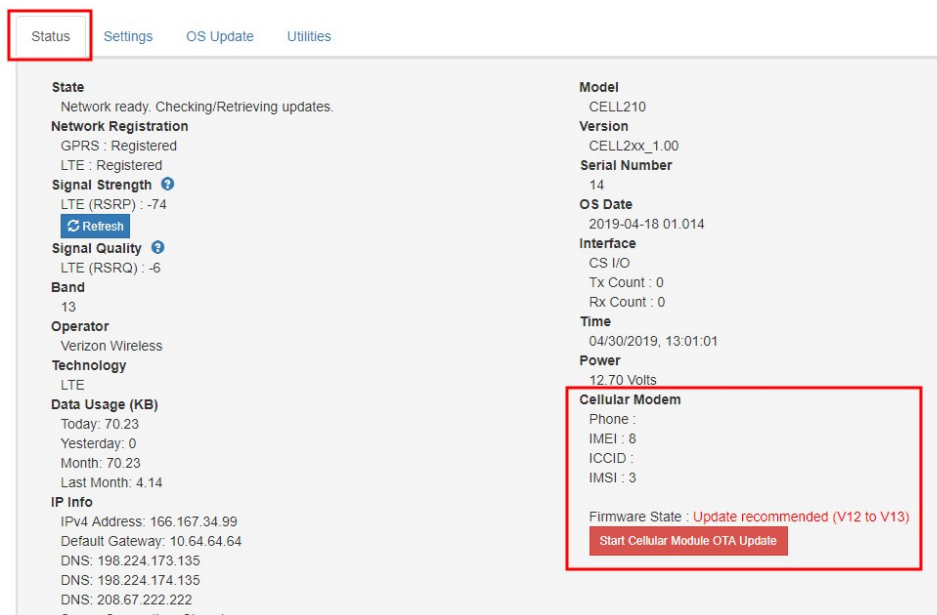


D.2 Using *Device Configuration Utility*

NOTE:


This section applies to modules set up in integrated PPP mode which requires data logger operating system 03.00 or later for the CR1000X, 09.00 or greater for the CR6 series, and 08.00 or later for the CR300 series.

1. Connect the cellular antenna if it is not already connected. When using a MIMO antenna with multiple cellular connections, connect the primary cable to **Primary**, **Primary Antenna**, or **Antenna** and the secondary to **Diversity** or **Diversity Antenna** (depending on the label). If the cables are not marked in this way, they can be connected to either antenna port. See [Antenna connections](#) (p. 32).
2. Connect your data logger to the CELL200-series module RS-232 or CS I/O port. See [Wiring and connections](#) (p. 29).
3. If not connecting through CS I/O, provide power to the CELL200 series.
4. Connect a USB cable between your data logger and computer.
5. Connect to your data logger by using *Device Configuration Utility*.
6. When a new CELL200 series OS is available, in the **Settings Editor** on the **Cellular** Tab you will see a field called **Cellular OS Update Pending**. This field does not appear unless an update is available. Select **Apply Update** to begin the process, or **Ignore** to update at another time.
7. **Apply** to save your changes.

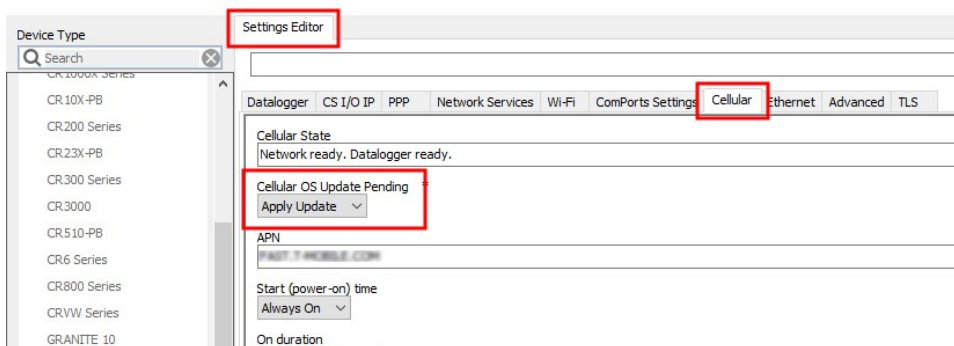

8. When new module firmware is available, in the **Settings Editor** on the **Cellular** Tab you will see a field called **Cellular Module OTA Update Pending**. This field does not appear unless an update is available. Select **Start Update** to begin the process, or **Ignore** to update at another time.


9. **Apply** to save your changes.

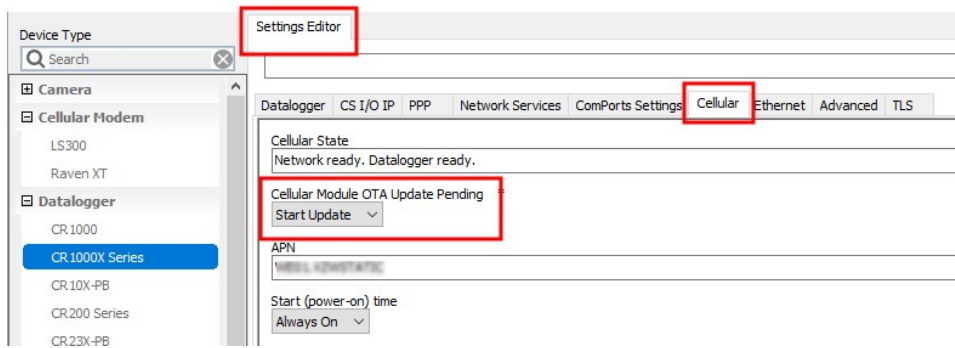

Appendix E. Cellular module terminal functionality

This appendix discusses the terminal functionality of the CELL200-series modules. This functionality requires a data logger with a CS I/O port.

To use the terminal functionality of the module, you must enable the terminal port. To do this:

1. Connect a USB cable between your module and computer.
2. Connect the cellular antenna if it is not already connected. When using a MIMO antenna with multiple cellular connections, connect the primary cable to **Primary**, **Primary Antenna**, or **Antenna** and the secondary to **Diversity** or **Diversity Antenna** (depending on the label). If the cables are not marked in this way, they can be connected to either antenna port. See [Antenna connections](#) (p. 32).
3. Open a web browser and go to: cell.linktodevice.com .

TIP:

If this doesn't work browse to 192.168.86.1.

4. On the **Settings** > **Advanced** tab, set the **Terminal Port CS I/O SDC Address**. (It must be set to a different address than the one used for the **CS I/O Port SDC Address**.)
5. Click **Apply Changes**.

[Configure cellular settings and retrieve status information with SetSetting\(\)](#) (p. 72) illustrates how to use this functionality in a CRBasic program.

The functionality can also be accessed directly using the terminal emulator of the data logger in serial talk through mode. The data logger terminal emulator can be accessed by connecting to the data logger in **Device Configuration Utility** and selecting the **Terminal** tab. (It can also be accessed from the **Connect** screen by selecting **Datalogger | Terminal Emulator** and then clicking **Open Terminal**.) With the terminal window open, press return a few times until you receive the data logger prompt (for example, CR1000X>). Type P. Then type the number corresponding to the **Terminal Port CS I/O SDC Address** set in the CELL200-series module. You should receive a **CELL2xx>** prompt. The commands in this appendix can be used from this prompt to interact with the CELL200-series module.

help

Displays all the commands that are available in the cellular module terminal.

E.1 Using cell modem terminal functionality

NOTE:

This functionality is available in all CRBasic data loggers with a CS I/O port.

Downloadable example programs are available at www.campbellsci.com/downloads/cell200-example-programs. See the **CELL2XX-Settings** program for details on setting up an attached CELL200-series module using the terminal functionality in the module. The program examples also illustrates how to use the same functionality to retrieve status information from the CELL200 series and put the module into low power mode.

To use the terminal functionality of the module, you must enable the terminal port. To do this:

1. Connect a USB cable between your module and computer.
2. Connect the cellular antenna if it is not already connected. When using a MIMO antenna with multiple cellular connections, connect the primary cable to **Primary**, **Primary Antenna**, or **Antenna** and the secondary to **Diversity** or **Diversity Antenna** (depending on the label). If the cables are not marked in this way, they can be connected to either antenna port. See [Antenna connections](#) (p. 32).
3. Open a web browser and go to: cell.linktodevice.com.

TIP:

If this doesn't work browse to 192.168.86.1.

4. On the **Settings | Advanced** tab, set the **Terminal Port CS I/O SDC Address**. (It must be set to a different address than the one used for the **CS I/O Port SDC Address**.)
5. Click **Apply Changes**.


E.2 Status commands

Status commands show current values of the information being requested. Some correspond to settings and others are tied to diagnostic information. All values returned are strings. Not all modems return all values. Values returned are also dependent on the network the device is connected to.

show acc tech	Returns the access technology of the network that the modem is connected to.
show apn	Displays the APN (Access Point Name) currently used by the cellular module. Corresponds with the APN setting in the cellular module web interface.
show arev	Returns the alternate or subversion revision of the CELL200 series OS.
show band	Returns the band number the modem is using to connect to the cellular network.
show bat	Returns the current modem battery voltage.
show baud	Displays the current baud rate of the cellular module RS-232 port. Corresponds with the RS232 Baud Rate setting in the cellular module web interface.
show billing	Displays the current value for the billing cycle day. Values can range from 1 to 31. Corresponds to the Billing Cycle Day field in the cellular module web interface.
show cell id	Returns the hexadecimal number of the cellular tower the modem is connected to.
show cellular errors	Returns an error information summary for troubleshooting.
show cellular Info	Returns the modem cellular information. Information returned is extensive and includes information from other terminal commands.
show cellular log	Returns a log of events for the device. Useful for troubleshooting.
show client port	Returns the port number in the modem when used in Serial Client Mode.
show client timeout	Returns the time, in seconds, used in Serial Client Mode.
show client url	Returns the cellular module Client (Outbound) URL setting (used in Serial Client Mode).
show device info	Returns the modem device information. Information returned is extensive and includes many values returned from other terminal commands.
show diagnostic report	Returns a diagnostic report that is useful for troubleshooting. Combines the output of many other terminal troubleshooting commands.

<code>show diversity</code>	Displays the current setting of cellular module antenna configuration. Results are Disabled or Enabled . Corresponds with the Diversity Antenna field in the cellular module web interface.
<code>show ecio</code>	Returns the modem 3G network signal quality (ECIO).
<code>show euiccid</code>	Returns the modem EUICCID (Embedded SIM identification) number.
<code>show iccid</code>	Returns the modem ICCID (SIM identification) number.
<code>show imei</code>	Returns the modem IMEI (International Mobile Equipment Identity) number.
<code>show imsi</code>	Returns the modem IMSI (International Mobile Subscriber Identity) number.
<code>show ip info #net</code>	Returns the modem TCP/IP information for each network. When using this command, replace #net with 1 for the PPP connection, or 2 for the Ethernet over USB (RNDIS) connection.
<code>show ipprotocol</code>	Displays the current value of the cellular module IP protocol configuration. Results are IPv4 , IPv6 , or IPv4/IPv6 . Corresponds with the IP Protocol field in the cellular module web interface.
<code>show listen port</code>	Displays the current setting for the cellular module TCP/IP listening port (used in Serial Server mode). Values can range from 1 to 65535. Corresponds with the Serial Server Listen Port Number setting in the cellular module web interface.
<code>show mod arev</code>	Returns the alternate or sub revision of the modem radio chipset.
<code>show mod manu</code>	Returns the manufacturer of the modem radio chipset.
<code>show mod model</code>	Returns the model number of the modem radio chipset.
<code>show mod rev</code>	Returns the model revision of the modem radio chipset.
<code>show mode</code>	Displays the current operating mode of the cellular module. Results are PPP , Serial Server , Serial Client , or Serial Server/Client . Corresponds with the Mode setting in the cellular module web interface.
<code>show model</code>	Returns the model information of the modem. Returned values are CELL205 , CELL210 , CELL215 , or CELL220 , CELL225 .
<code>show modupdate description</code>	Returns the description or revision history of the firmware update.

show modupdate description	Returns a description of the module firmware update for user review.
show modupdate pending	Returns information regarding the module firmware. Informs the user that an update is available.
show modupdate priority	Returns the priority of the module firmware update, whether it is required or recommended.
show modupdate progress	Returns the progress of the module firmware update.
show operator	Returns the name of the cellular provider or network operator the modem is connected to.
show osdate	Returns the build date and alternate version of the CELL200 series OS.
show osupdate description	Returns a description of the newer operating system for the user to review before installing.
show osupdate pending	Returns information indicating if a newer modem operating system is available.
show osupdate priority	Returns the priority of the operating system update.
show osupdate progress	Returns the progress of the CELL200 series OS update.
show pdp pass	Returns the modem PDP password.
show pdp user	Returns the modem PDP username.
show phone	Returns the modem phone number.
show ping	Returns the status of the cellular module ping setting.
show power duration	Returns the modem on-duration time, in minutes.
show power repeat	Returns the modem Repeat cycle setting.
show power start	Returns the modem Start (power-on) Time.
show ppp pass	Returns the modem PPP password.
show ppp user	Returns the modem PPP username.
show reg 3g	Returns information on whether or not the modem is registered on the 3G network.
show reg gprs	Returns information on whether or not the modem is registered on the GPRS network.
show reg lte	Returns information on whether or not the modem is registered on the LTE network.

<code>show rev</code>	Returns the revision of the CELL200 series OS.
<code>show roaming</code>	Displays the current setting for the modem roaming capabilities. Returned values are Auto and Disabled . Corresponds to the Roaming setting in the cellular module web interface
<code>show rsrp</code>	Returns the modem LTE network signal strength (RSRP).
<code>show rsrq</code>	Returns the modem LTE network signal quality (RSRQ).
<code>show rssi</code>	Returns the modem 3G signal strength information (RSSI).
<code>show sdc</code>	Displays the current setting for the modem SDC address. Values are 7 , 8 , 10 , or 11 . This value corresponds with the CS I/O Port SDC Address setting in the cellular module web interface.
<code>show sdc term</code>	Returns the current value for the SDC terminal interface in the modem. Returned values are 7 , 8 , 10 , and 11 . Corresponds to the Terminal Port CS I/O SDC Address setting in the cellular module web interface
<code>show serial</code>	Returns the serial number of the modem.
<code>show settings</code>	Returns all the settings of the cellular modem.
<code>show sms log</code>	Returns a log of SMS messaging logs.
<code>show smssca</code>	Returns the modem SMSSCA (SMS Service Center Address) number.
<code>show sms rx</code>	Returns the SMS receive queue.
<code>show sms send (id)</code>	Returns the status of an SMS message. The message ID is contained in the results of the sms send command. Result codes are the same as those returned by SMSSend() . A result code of -1 means the message was successfully sent to the network. See the CRBasic help  for more information.
<code>show sms tx</code>	Returns the SMS transmit queue.

show state	Returns the modem state in English. Values returned could include (but not limited to) "Power off.", "Powering up.", "Powered up.", "SIM authorized.", "Setting baud rate.", "Waiting for baud rate.", "Baud rate set.", "Baud rate failure.", "Power off. Waiting for retry.", "Powered up. SIM auth failure.", "Querying modem.", "Waiting for network registration.", "Configuring modem.", "Dialing.", "Dialing (retry).", "Dialed.", "PPP negotiation.", "Network ready.", "PPP closing.", "PPP paused.", "PPP dropped.", "Terminal AT command mode.", "Firmware update mode.", "Shutting down."
show state num	Returns the state number associated with show state values.
show time	Returns the modem current time. Time returned by the modem is set by the cellular network.
show trusted 1	Returns the address or DNS Name in the 1st field of the cellular module Trusted IP Host setting.
show trusted 2	Returns the address or DNS Name in the 2nd field of the cellular module Trusted IP Host setting.
show trusted 3	Returns the address or DNS Name in the 3rd field of the cellular module Trusted IP Host setting.
show trusted 4	Returns the address or DNS Name in the 4th field of the cellular module Trusted IP Host setting.
show update check	Returns information concerning the last update check.
show update results	Returns the results of a modem operating system update.
show usage lastmonth	Returns the number of bytes used across the cellular network in the previous month.
show usage month	Returns the number of bytes used across the cellular network in the current month.
show usage today	Returns the number of bytes used across the cellular network since midnight.
show usage yesterday	Returns the number of bytes used across the cellular network during the previous day.

E.3 Set commands

Set commands are used to set specific settings in the device. Most settings will not take effect until the module is rebooted.

set apn ###	Sets the APN (Access Point Name) in the device. Corresponds to the APN setting in the modem web configuration interface. ### is a string the corresponds to the APN issued by the cellular provider when the cellular account was created.
set baud ###	Sets the modem baud rate for the RS-232 port. ### is a number corresponding to the desired baud rate. Accepted values are 460800, 230400, 115200, 76800, 57600, 38400, 19200, 14400, 9600, 4800, and 2400.
set billing ###	Sets the billing day that will be used to roll over the data usage statistics in the modem. ### is a number. Accepted values are 1 through 31 .
set client port ###	Sets the client port number used in serial client and serial client/server modes. ### is a number. The accepted range is 1 through 65535 .
set client timeout ###	Sets the timeout, in seconds, used by serial client and serial client/server modes. ### is a number. The accepted range is 1 through 120 .
set client url ###	Sets the client URL or TCP/IP address used in serial client and serial client/server modes. ### is a string.
set comms watch	This command is interactive and allows the user to watch or do a trace on a specific modem interface. The user selects a number corresponding with the interface they wish to view.
set div ###	Sets the modem antenna configuration. ### is a string. Disabled and Enabled are the only two values that are accepted.
set ipprotocol ###	Sets the TCP/IP protocol used by the modem when communicating with the cellular network. ### is a string. Accepted values are IPv4, IPv6, and IPv4/IPv6.
set listen port ###	Sets the listening TCP/IP port of the modem for use in serial server and serial client/server modes. ### is a number. The accepted range is 1 through 65535 .
set mode ###	Sets the modem operating mode. ### is a string. Accepted values are PPP and Serial Server .
set pdp pass ###	Sets the PDP password. ### is a string.
set pdp user ###	Sets the PDP username. ### is a string.

set power duration ###	Sets the on duration, in minutes. ### is a number. Accepted values are: 5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 120, 180, 240, 300, 360, 420, 480, 540, 600, 660, 720, 780, 840, 900, 960, 1020, 1080, 1140, 1200, 1260, 1320, 1380, and 1439.
set power repeat ###	Sets the modem repeat cycle. ### is a number. Accepted values are: 1441, 15, 20, 30, 40, 50, 60, 120, 180, 240, 300, 360, 420, 480, 540, 600, 660, and 720. A value of 1441 or greater will disable the repeat cycle.
set power start ###	Sets the modem Start (power-on) Time, in minutes. ### is a number. Only 15 min increments are accepted (0, 15, 30 to 1440). A value of 1440 will set the modem to "Always On".
set ppp pass ###	Sets the PPP protocol password. ### is a string.
set ppp user ###	Sets the PPP protocol username. ### is a string.
set roaming ###	Sets the roaming capabilities of the cellular modem. ### is a string. Accepted values are Auto and Disabled .
set sdc ###	Sets the modem SDC address for the CS I/O port. ### is a number. Accepted values are 7, 8, 10, and 11.
set trusted 1 ###	Sets the address or DNS Names in the 1st Trusted IP Host field. ### is a string.
set trusted 2 ###	Sets the address or DNS Names in the 2nd Trusted IP Host field. ### is a string.
set trusted 3 ###	Sets the address or DNS Names in the 3rd Trusted IP Host field. ### is a string.
set trusted 4 ###	Sets the address or DNS Names in the 4th Trusted IP Host field. ### is a string.
set ping ###	Enables or disables ping in the modem. ### is a string. Disabled and Enabled are the only two values that are accepted.

E.4 Action commands

Action commands are used to perform actions on the modem such as entering low power mode, rebooting, checking for updates, clearing usage, and more.

check update	Starts the process that checks for both a new CELL200-series operating system, and module firmware.
clear logs	Resets all the logs in the modem.
clear usage	Resets the usage counts in the modem.
deep sleep	Puts the modem into low power mode. Modem will not respond across the cellular network.
ping ###	Used to ping a specific TCP/IP address or DNS name via the terminal. ### is a string. For example: ping 8.8.8.8 or ping jarvis.ag1t.net.
reboot	Forces the modem to reboot.
refresh network	Forces the modem to refresh its connection to the cellular network. Useful for when the network goes stale (long periods of inactivity).
reset module	Resets the cellular chipset only.
sms receive	Receives an SMS message. Example: <pre> sms receive 03/14/21 00:57:57 5557654321 Hi, SMS test </pre>
sms send <i>phone number message</i>	Sends an SMS message to a phone number. Result includes a message ID. Example: <pre> sms send 5551234567 Hi, SMS test SMS queued. ID:65536 </pre>
start modupdate	Starts the over-the-air module firmware update.
start osupdate	Starts the over the air (OTA) CELL200-series operating system update process. Not for use with a direct connection.
wakeup	Brings the modem fully back online. Usually done on a schedule after a deep sleep command has been issued.


Appendix F. Verizon Wireless and AT&T

NOTE:

Campbell Scientific can provide Verizon Wireless or AT&T service. This is the simplest way to set up your module on the Verizon Wireless or AT&T network. See [Campbell Scientific cellular data service](#) (p. 3).

F.1 Verizon Wireless

What you need:

- Verizon Wireless 4G LTE CAT-1 coverage at the data logger site. For a coverage map, refer to: <https://www.verizon.com/> .
- Verizon Wireless 4G LTE private dynamic IP account in conjunction with Campbell Scientific Konect PakBus Router Service. (A Verizon Wireless 4G LTE static unrestricted IP account can also be used. However, Verizon generally requires new users to have 50 lines of service to obtain the static unrestricted IP account. Also, there is generally a \$500 one-time-per-customer charge to activate static IP on the account.)

To set up an account, you will need the IMEI number of the module. The IMEI number is listed on a label on the module. To set up an account with Verizon Wireless, call:

800-526-3178 for Business Sales


800-256-4646 for Personal Sales

Verizon Wireless will provide a SIM (Subscriber Identity Module) card for each module. The Micro-SIM (3FF) (6 position / contacts) card must be installed inside of the module as described in . In addition to the SIM card, you should receive:

- 10-digit MSISDN number (telephone number associated with the SIM, used for billing)
- An APN (Access Point Name) for 4G LTE CAT-1 service. A common APN used for this application is: VZWINTERNET. The user must program the APN into the module.
- For static IP accounts only, an IP Address will be included.

F.2 AT&T

What you need:

- AT&T 4G LTE CAT-1 coverage at the data logger site. For a coverage map refer to: www.att.com/maps/wireless-coverage.html .
- AT&T 4G LTE private dynamic IP account in conjunction with Campbell Scientific's Konect Router Service. (An AT&T 4G LTE static unrestricted IP account can also be used. However, AT&T charges \$3/month/device for the static IP account.)

To set up an AT&T account, contact your AT&T Business Account Representative.

An APN (Access Point Name) must be added onto the account to make the module accessible through the Internet. For networks with fewer than 30 modules, the standard 'I2Gold APN' can be used; networks with more than 30 modules will require a 'Custom APN'. A Custom APN has a setup fee starting at \$500 and takes a minimum of 7 to 14 business days to complete. The user must program the APN into the module.

AT&T will provide a Subscriber Identity Module (SIM) card for each module. The Micro-SIM (3FF) (6 position / contacts) card must be installed inside of the module as described in . In addition to the SIM card, you should receive:

- 10-digit MSISDN number (telephone number associated with the SIM, used for billing)
- An APN (Access Point Name) for 4G LTE CAT-1 service. A common APN used for this application is: BROADBAND. The user must program the APN into the module.
- For static IP accounts only, an IP Address will be included.

Appendix G. Cellular module regulatory information

G.1 Important information for North American users

NOTE:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

WARNING:

Changes or modifications to this device not expressly approved by Campbell Scientific could void the user's authority to operate this equipment.

G.2 RF exposure

In accordance with FCC/IC requirements of human exposure to radio frequency fields, the radiating element shall be installed such that a minimum separation distance of 20 cm should be maintained from the antenna and the user's body.

WARNING:

This product is only to be installed by qualified personnel.

To comply with FCC/IC regulations limiting both maximum RF output power and human exposure to RF radiation, the maximum antenna gain must not exceed the specifications listed in the following tables for the device used.

Device	Frequency Band	FCC ID XMR201606EC21A
CELL205	WCDMA Band 2	9.5 dBi
	WCDMA Band 4	6.5 dBi
	WCDMA Band 5	14.9 dBi
	LTE Band 2	9.0 dBi
	LTE Band 4	6.0 dBi
	LTE Band 12	10.7 dBi
CELL210	LTE Band 4	6.5 dBi
	LTE Band 13	10.6 dBi

G.3 EU

Campbell Scientific hereby declares the CELL200-series devices are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU" (RED Directive).

The CELL215 displays the CE mark.




WARNING:

Changes or modifications to this device not expressly approved by Campbell Scientific could void the user's authority to operate this equipment.

WARNING:

This product is only to be installed by qualified personnel.

The Declaration of Conformity made under Directive 2014/53/EU" (RED Directive) is available for viewing at: www.campbellsci.com/cell215 .

G.4 UK

Campbell Scientific hereby declares the CELL200-series devices are in compliance with the essential requirements and other relevant provisions of Regulation 2017 No. 1206 (The Radio Equipment Regulations 2017).



WARNING:

Changes or modifications to this device not expressly approved by Campbell Scientific could void the user's authority to operate this equipment.

WARNING:

This product is only to be installed by qualified personnel.

The Declaration of Conformity made under Regulation 2017 No. 1206 is available for viewing at: www.campbellsci.com/cell215 .

Appendix H. Troubleshooting external CELL200 series cellular module connection issues

The following guide discusses how to diagnose CELL200 series connection issues.

H.1 Check power to module and data logger	93
H.2 Verify correct cable type and ports	96
H.3 Ensure 4G antenna compatibility	99
H.4 Verify module APN	100
H.5 Verify module mode	101
H.6 Check the module operating system	102
H.7 Verify the data logger OS is compatible with the module	104
H.8 Verify PPP settings in your data logger	105
H.9 Verify PakBus router connection	106
H.10 Verify SIM card insertion	107
H.11 Verify module signal strength and quality	108
H.12 LoggerNet settings	110
H.13 Contact Campbell Scientific Support Department	111

H.1 Check power to module and data logger


Verify that both the module and data logger are receiving sufficient power by checking the input voltage with a voltmeter or multimeter. Alternatively, use the web interface to check the module power status or the *Device Configuration Utility* to check the data logger power status.

Check power to the module:

1. Connect a USB cable between the module and computer.
2. Open a web browser and go to: <http://cell.linktodevice.com>.

TIP: If the link doesn't work, browse to 192.168.86.1.


3. Once connected, check the **State** field on the **Status** tab for a power failure message.
4. Check the **Power** field on the **Status** tab to verify the voltage level. The voltage should be about 12 volts.

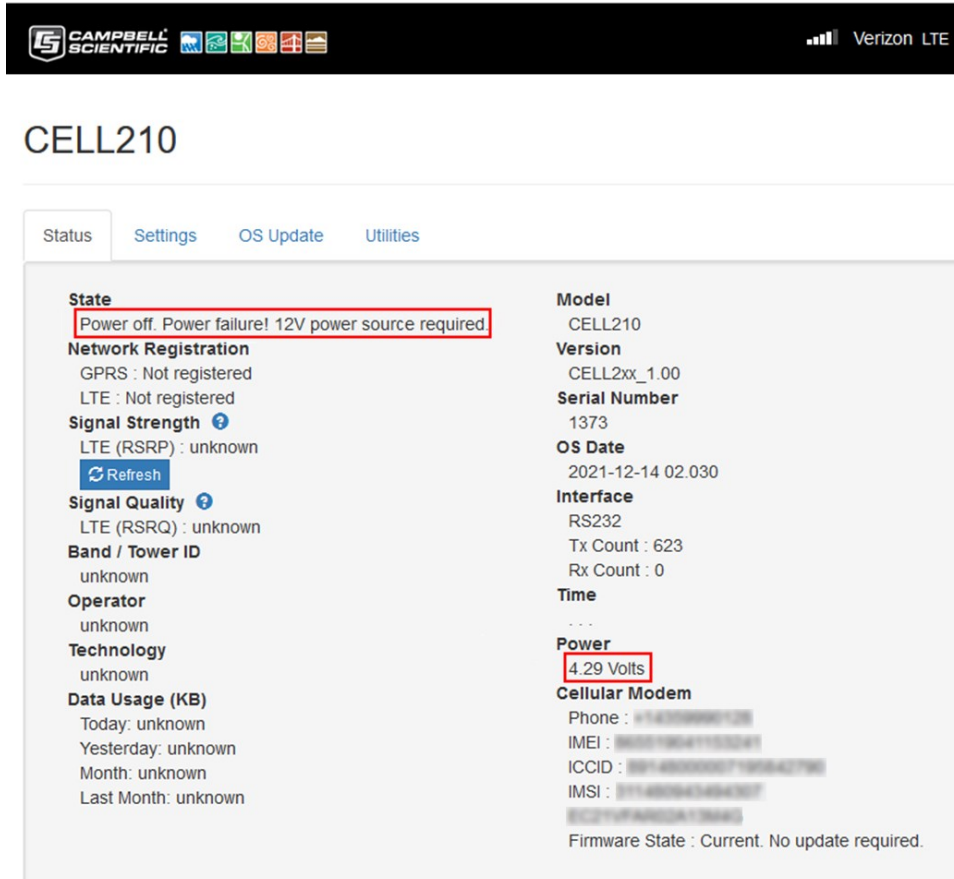

Check power to the data logger:

1. Connect the data logger to the *Device Configuration Utility* over USB or RS-232.
2. Open the **Data Monitor** tab. Select **Status** and check the **Battery** voltage.


In the following screenshot of *Device Configuration Utility*, the CR1000X has 0 **Battery** voltage, indicating the data logger is not receiving power.

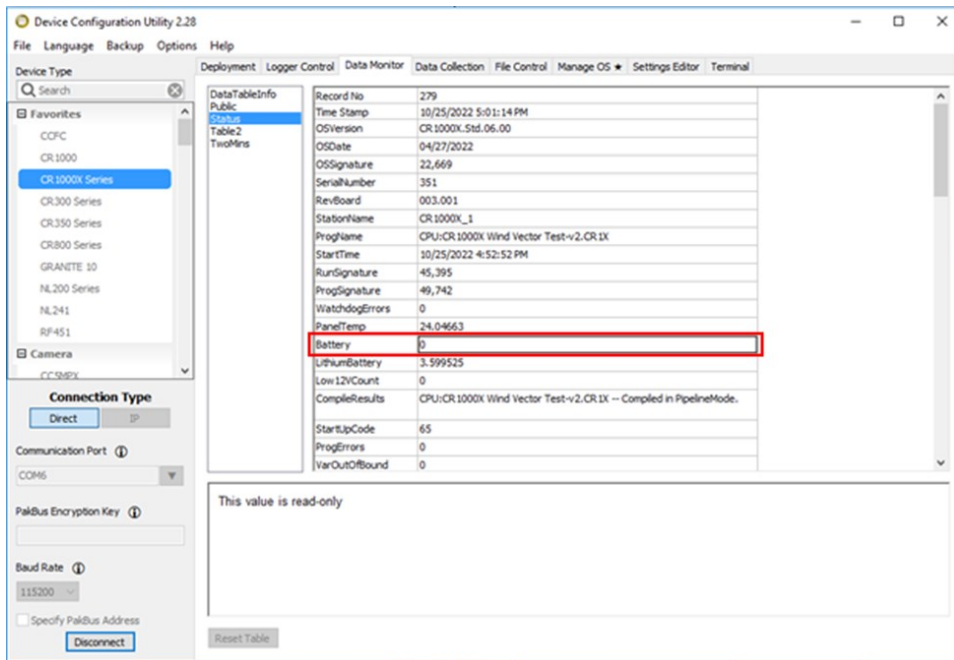

If power is not connected, connect power to the module and/or data logger.

NOTE:


When using a CS I/O connection, the modem receives power over CS I/O. When using an RS-232 connection, the module must be connected to power using its green 9 – 30 Vdc power connector.

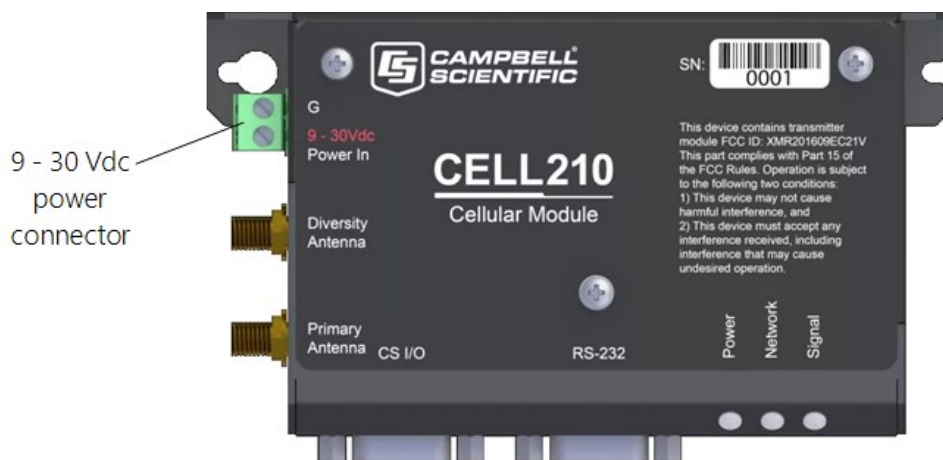


H.2 Verify correct cable type and ports

Data loggers are connected to the CELL-200 series module using either CS I/O ports or RS-232 ports.


The following images show the location of the CS I/O and RS-232 ports on the CELL200 series module, CR1000, CR1000X, and CR6 data logger models.

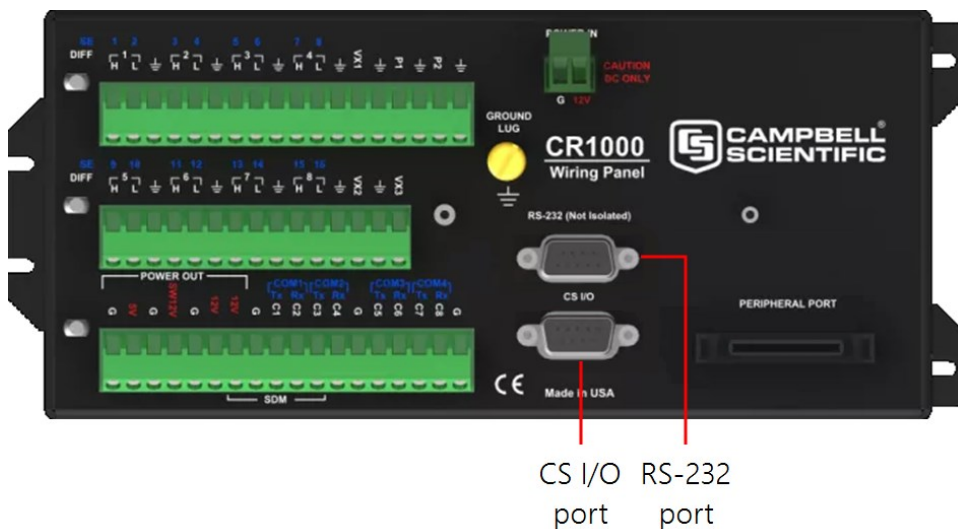

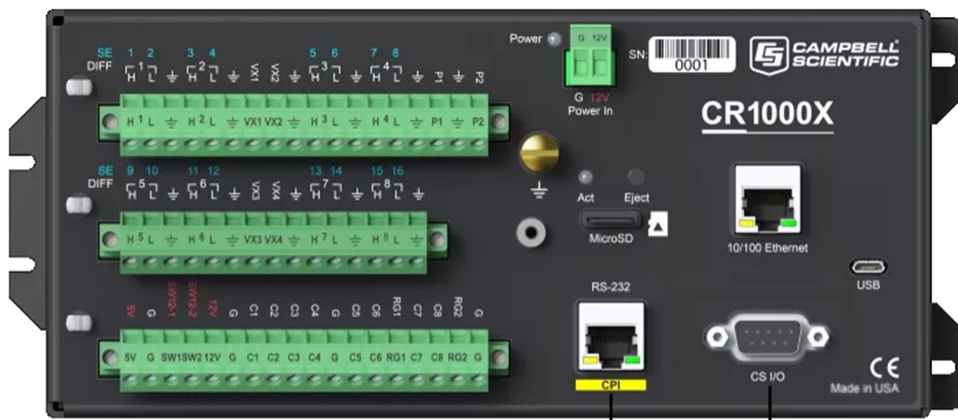

RS-232
port

CS I/O
port

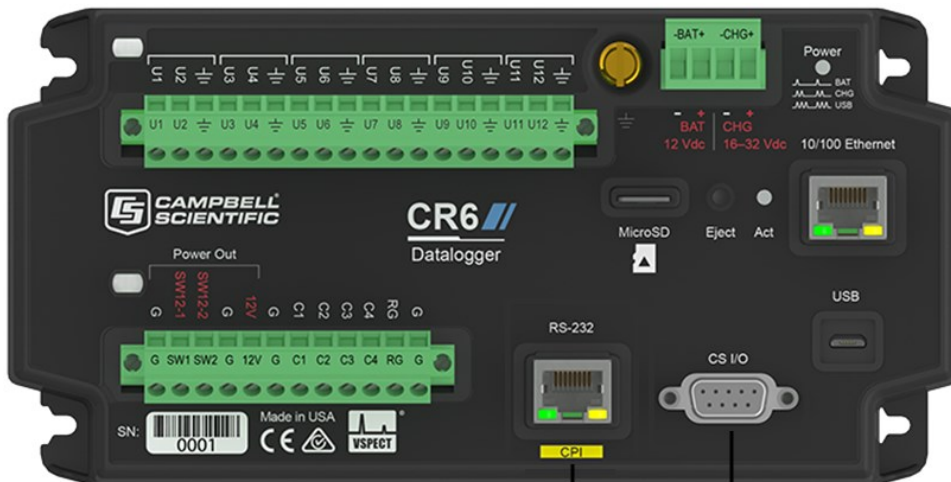

RS-232
port

CS I/O
port

For communications between the CELL200 series module and the data logger to occur, the correct ports must be connected between the devices using the correct cable type.

1. When the **CS I/O** port is used, the SC12 cable included with your CELL200 series module is connected between the **CS I/O** port on the module and the **CS I/O** port on the data logger.



Figure H-1. CS I/O (SC12 cable)

2. For GRANITE-series, CR6, and CR1000X data loggers, the 9-pin **RS-232** port on the CELL200 series module is connected to the **RS-232/CPI** port on the data logger port using a **CPI/RS-232** data cable.



Figure H-2. RS-232 (CR1000X, CR6, GRANITE)

3. For CR1000, CR3000, CR800-series, and CR300-series data loggers, a 9-pin (male to male) RS-232 null module cable is connected between the RS-232 port on the CELL210 to the 9-pin RS-232 port on the data logger.



Figure H-3. RS-232 (CR1000, CR800, CR3000, CR300 Series)

H.3 Ensure 4G antenna compatibility

If your antenna is over 10 years old, it may not support 4G frequencies and should be replaced.

Campbell Scientific offers the following compatible antennas:

- 2 dBd 4G/3G Multiband Omnidirectional Antenna with Mounting Hardware
- 4G/3G 9 dBi MIMO Cellular Antenna with 2 Type N Socket (Female) Connectors
- 4G/3G Cellular Whip Antenna with SMA Connector



Figure H-4. **Diversity** and **Primary** antenna connectors on a CELL210

If you are also using a Diversity antenna or a MIMO (multiple-input multiple-output) antenna, ensure the **Diversity** port is enabled.

To enable the Diversity antenna:

1. Connect a USB cable between your module and computer.
2. Open a web browser and go to: <http://cell.linktodevice.com>.

TIP: If the link doesn't work, browse to 192.168.86.1.

3. On the **Settings** tab, **Diversity Antenna** is listed under **General**.

The screenshot shows the 'Settings' page of the cellular module's web interface. The 'Settings' tab is selected at the top. Below it, the 'General' sub-tab is active. The 'Diversity Antenna' dropdown menu is highlighted with a red box and is currently set to 'Disabled'. Other visible settings include APN (we01.vzwstatic), Mode (Serial Server), CS I/O Port SDC Address (8), RS-232 Baud Rate (115200), and Billing Cycle Day (1). Buttons for 'User Accounts', 'Factory Defaults', and 'Apply Changes' are at the top right of the settings area.

When MIMO functionality is available, it offers improved reliability, reduced signal reflections, and sometimes increased throughput.


H.4 Verify module APN

Follow these steps to verify the access point name (APN) corresponds to your module.

1. Connect a USB cable between your module and computer.
2. Open a web browser and go to: <http://cell.linktodevice.com>.

TIP: If the link doesn't work, browse to 192.168.86.1.

3. On the **Settings** tab, the **APN** is listed under **General**.

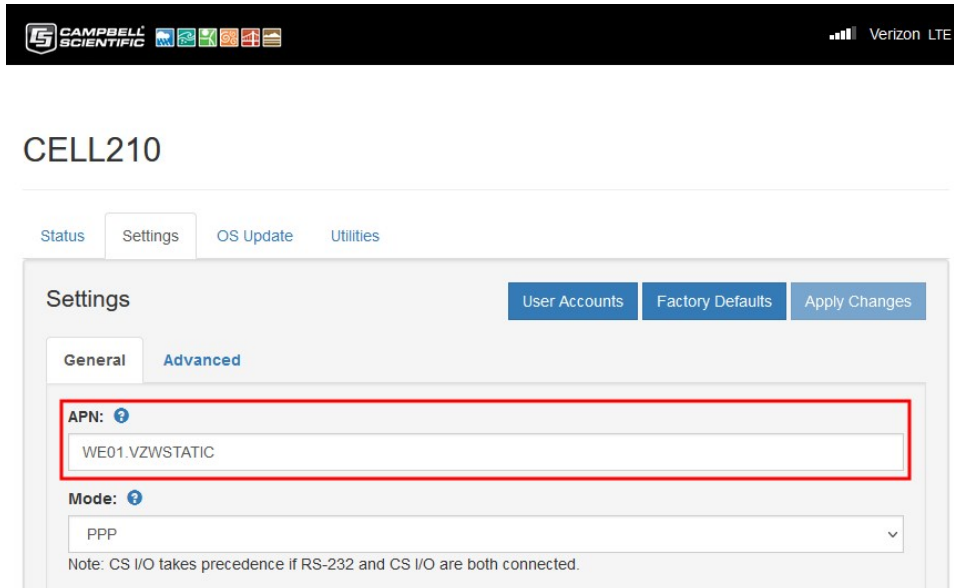

4. If you are unsure which APN your module should be using, check with your cellular service provider. If Campbell Scientific provides your cellular service, the APN is listed on your provisioning report.
5. If the APN field is blank or incorrect, enter the correct APN and click **Apply Changes**. The module will restart automatically. Verify the APN is now displaying correctly.

H.5 Verify module mode


Verify your module is operating in the correct mode.

1. Connect a USB cable between your module and computer.
2. Open a web browser and go to: <http://cell.linktodevice.com>.

TIP: If the link doesn't work, browse to 192.168.86.1.

3. On the **Settings** tab, the **Mode** is listed under **General**.

4. Select **PPP** (Point-to-Point Protocol) mode unless you are using a custom mode.

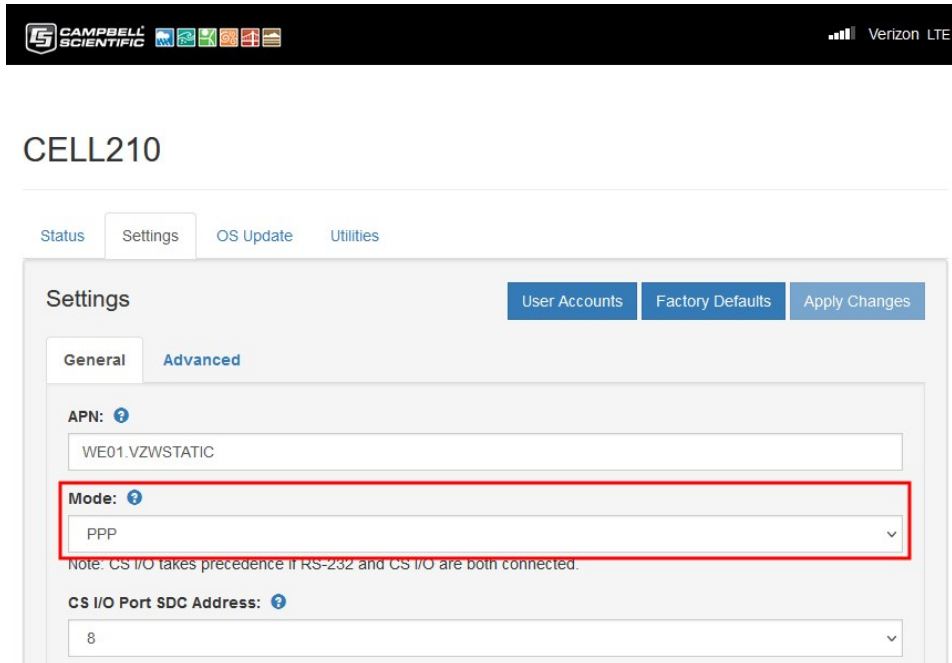

The screenshot shows the Campbell Scientific CELL210 web interface. At the top, there's a header with the Campbell Scientific logo and a Verizon LTE signal indicator. Below the header, the title 'CELL210' is displayed. A navigation bar includes 'Status', 'Settings', 'OS Update', and 'Utilities'. The 'Settings' section is active, with sub-tabs for 'General' and 'Advanced'. The 'Advanced' tab is selected, showing fields for 'APN' (WE01.VZWSTATIC), 'Mode' (PPP), and 'CS I/O Port SDC Address' (8). The 'Mode' dropdown is highlighted with a red box. Buttons for 'User Accounts', 'Factory Defaults', and 'Apply Changes' are visible at the top right of the settings area.

H.6 Check the module operating system


Verify the operating system (OS) of the module is current. Not having a current OS can result in dropped Point-to-Point Protocol (PPP) sessions and disconnects.

To check the OS version:

1. Connect a USB cable between your module and computer.
2. Open a web browser and go to: <http://cell.linktodevice.com/>.

TIP: If the link doesn't work, browse to 192.168.86.1.

3. The **OS Date** is listed on the **Status** tab.

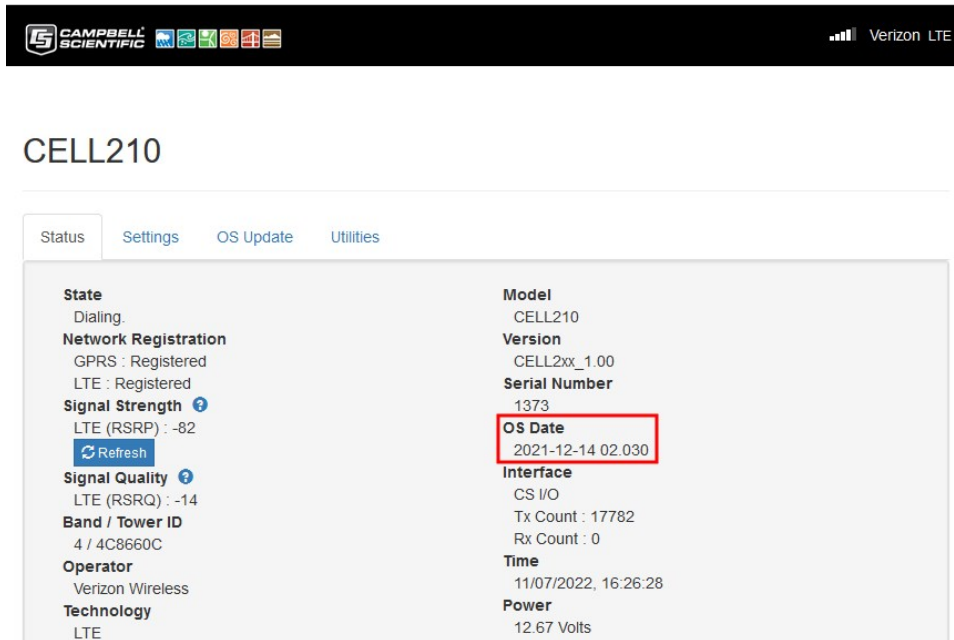


If your module firmware version is 2021-12-14 02.030 or newer, it should work in PPP mode with a data logger.

If your module is using an older OS version, the current OS file can be downloaded from www.campbellsci.com/downloads/cellular-modems.

To install the new OS file:

1. Temporarily disconnect your module from its power source, leaving the micro-USB cable attached to the module.
2. Select the **OS Update** tab.
3. Click **Send File** and select the file you downloaded. The update will take several minutes.


4. The module will restart after the OS update is complete.

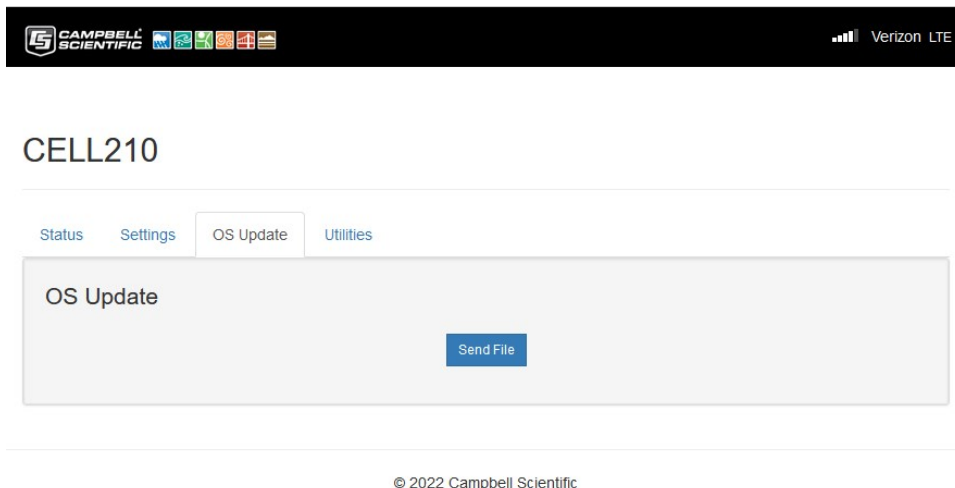

H.7 Verify the data logger OS is compatible with the module

Verify the operating system (OS) on your data logger is current. An outdated OS can cause incompatibility or unstable Point-to-Point Protocol (PPP) connections.

1. Connect to the data logger with the *Device Configuration Utility*.
2. Under the **Deployment** tab, on the **Datalogger** sub tab, the **OS Version** will be listed.

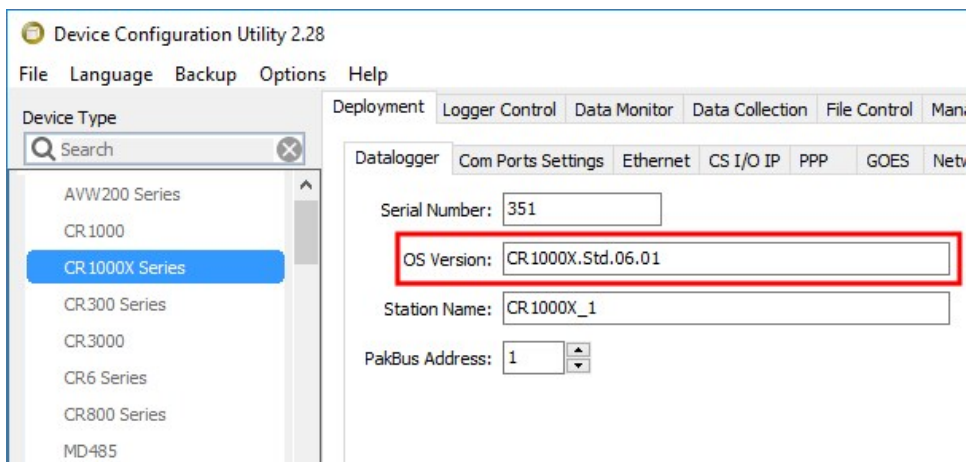

For older data loggers, such as the CR3000, CR1000, and CR800-series, the OS must be at least version 32.03 to be compatible.

For newer data loggers, such as the GRANITE-series, CR6, CR1000X, CR350-series, and CR300-series, the OS should be the version listed in the table or newer.

Table H-1: Compatible data logger operating system versions	
Device	OS Version
CR1000X	OS 4.00
CR6	OS 10.00
CR300 and CR310	OS 10.05 for most, but OS 10.07 if using the CELL220
CR350	OS 1.06
GRANITE 6/9/10	Typically, you should be running the newest OS.


H.8 Verify PPP settings in your data logger

1. To check the Point-to-Point Protocol (PPP) settings, connect to your data logger using the *Device Configuration Utility*.
2. Under the **Deployment** tab, navigate to the **PPP** sub tab. The PPP settings of the data logger need to match the port connecting to the module (see [Verify correct cable type and ports](#)).

The settings on the **PPP** sub tab need to be set to the following:

- Config/Port Used: CS I/O, SDC8, or RS-232*
- IP Address: 0.0.0.0
- User Name: [leave this field blank]
- Password: [leave this field blank]
- Modem Dial String: [leave this field blank]
- Modem Dial Response: CONNECT


NOTE: *In rare circumstances other port configurations can be used.

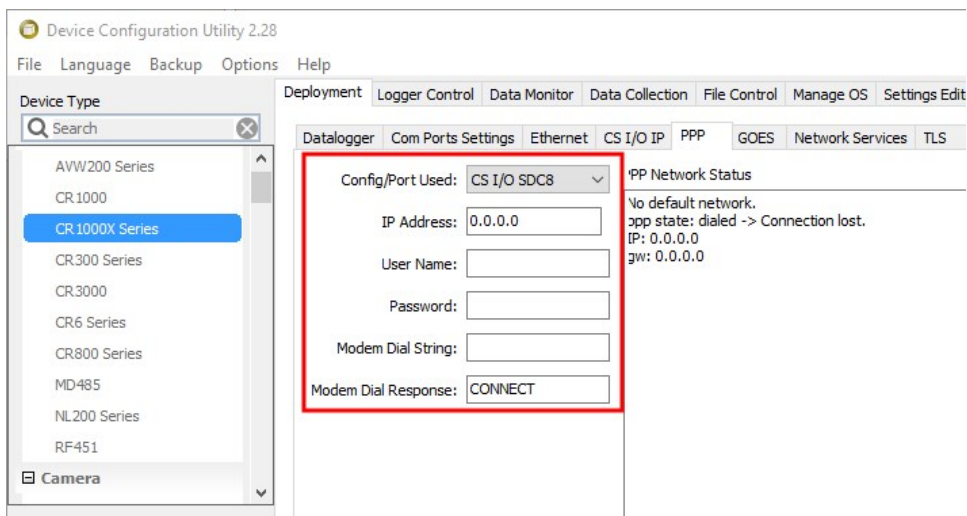

H.9 Verify PakBus router connection

If you set up a Konect PakBus® Router with your module, verify the settings are correctly entered into your data logger.

1. Connect to your data logger using the *Device Configuration Utility*.
2. Under the **Deployment** tab, navigate to the **Datalogger** sub tab.
3. Verify the data logger **PakBus Address** matches the address configured in PakBus Router. Also ensure the **PakBus/TCP Password** and **Confirm PakBus/TCP Password** settings have been entered.

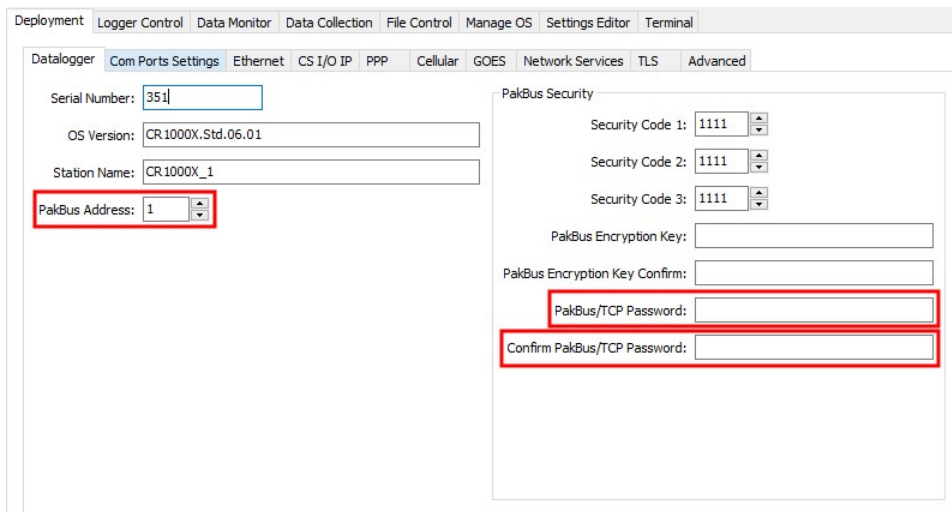

4. Under the **Deployment** tab, navigate to the **Network Services** sub tab.

5. Verify the **PakBus/TCP Clients Address** and **Port** have been entered.

Deployment

Datalogger Com Ports Settings Ethernet CS I/O IP PPP Cellular GOES Network Services TLS Advanced

☒ HTTP Enabled Edit .cspasswd File

☐ HTTPS Enabled

☐ FTP Enabled

FTP User Name:

FTP Password:

Confirm FTP Password:

☐ Telnet Enabled

☐ Ping (ICMP) Enabled

PakBus/TCP Port:

PakBus/TCP Clients

Address	Port
axanar.konectgds.com	19060
<input type="text"/>	6785
<input type="text"/>	6785
<input type="text"/>	6785

H.10 Verify SIM card insertion

Verify the SIM card is properly inserted in the CELL200 series module.

1. Remove the two screws and small panel on the right side of the module.
2. Remove the metal cover to expose the SIM card slot.



3. Press in on the SIM card and release to remove the card.



4. Note the location of the notched corner for correct alignment. The gold contact points of the SIM face down when inserting the SIM card. Gently slide the card into the slot until it stops and locks into place.

If another module is available, you can verify whether the SIM card in the module you are troubleshooting is functioning properly by inserting it into a known good module and assigning it the access point name (APN) associated with your account. If the SIM card works in the other module, this confirms that your cellular account is set up correctly with your provider.

H.11 Verify module signal strength and quality

If your module appears to be connecting to the network but you are unable to reach it, check the signal strength and quality.

1. Connect a USB cable between your module and computer.
2. Open a web browser and go to: <http://cell.linktodevice.com>.

TIP: If the link doesn't work, browse to 192.168.86.1.

- Under the **Status** tab check the values in the **Signal Strength** and **Signal Quality** fields. Compare these values to the following tables.

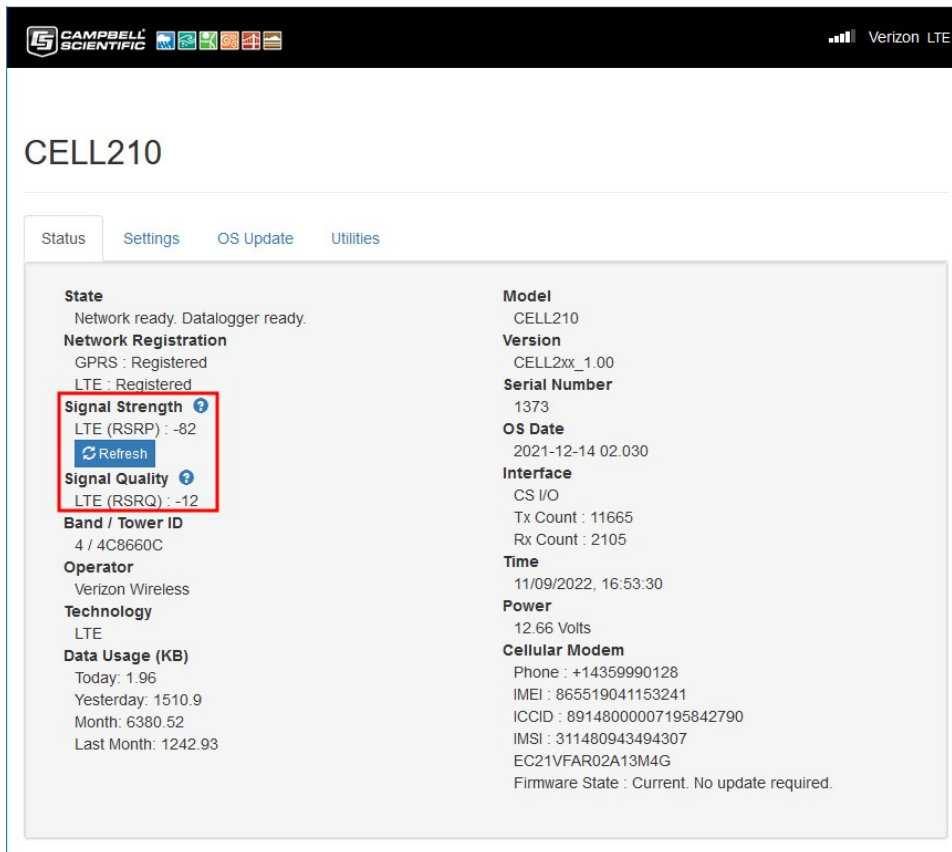


Table H-2: CELL200 series signal strength

Signal Strength	RSSI (3G)	RSRP (4G)
Excellent	-70 dBm or greater	-90 dBm or greater
Good	-70 dBm to -85 dBm	-90 dBm to -105 dBm
Fair	-86 dBm to -100 dBm	-106 dBm to -115 dBm
Poor	< -100 dBm	< -115 dBm


Table H-3: CELL200 series signal quality

Signal Quality	ECIO (3G)	RSRQ (4G)
Excellent	0 to -6	> -9
Good	-7 to -10	-9 to -12
Fair to Poor	-11 to -20	-13 or less

NOTE:

These tables can also be viewed in the module web interface by clicking the blue question mark next to the **Signal Strength** and **Signal Quality** fields. Signal strength values within the **Poor** range cannot be relied upon to provide stable connections.

If the **Signal Strength** and/or **Signal Quality** is **Poor**, you may have to redirect or relocate the cellular module antenna to a place with a better cellular signal. Upgrading the antenna or adding a diversity antenna can offer better performance.


TIP: Cellular phone apps, like OpenSignal (<https://opensignal.com/> ) can help determine the best direction to point an antenna for optimal signal strength.

H.12 *LoggerNet* settings

If your module and data logger are unable to connect to your computer running *LoggerNet*, check your *LoggerNet Setup*.

1. Verify that the data logger's PakBus address is correct in *LoggerNetSetup*.
2. Verify you are using the correct address and port number.
Example: 166.43.222.26:6785 or axanar.konectgds.com:19060
3. If you are using a Konect PakBus Router address similar to xxxxxx.konectgds.com, ensure that you have a pbRouter branching off of your PakBusPort in *LoggerNetSetup*.
4. If you are using a Konect PakBus Router, ensure that the PakBus address of the pbRouter in *LoggerNetSetup* has been entered. Typically, this value is 4070.

5. Ensure that your data logger branches off of the pbRouter as shown in the following image:

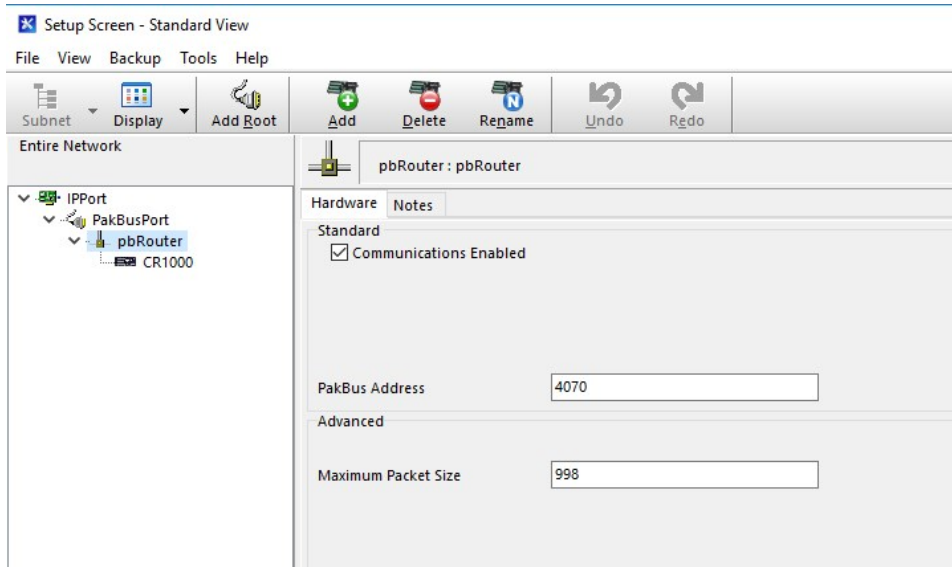

H.13 Contact Campbell Scientific Support Department

If you have followed all the above steps and you are unable to make a connection to your data logger through your CELL2XX modem, call our Support Department for assistance. Before you call, save a copy of your data logger's .xml configuration file, making note of your access point name (APN), the data logger's operating system (OS) version, the modem's OS version (OS Date), and the signal strength and quality values.

For efficient service, save a copy of the .xml configuration file, making note of your access point name (APN), data logger operating system (OS), module OS version (OS Date), and the signal strength and quality values. Additionally, generate a diagnostic report for your CELL200 series module.


Here's how to generate a diagnostic report for your CELL200 series module.

1. Connect a USB cable between your module and computer.
2. Open a web browser and go to: <http://cell.linktodevice.com>.


TIP: If the link doesn't work, browse to 192.168.86.1.

3. Put the module into **Serial Server** mode by clicking the **Settings** tab and changing the **Mode** setting to **Serial Server**. Click **Apply Changes**.


4. Once the setting has been applied and the module has restarted, reload the page and click the **Utilities** tab. Click **Create Diagnostic Report**.
5. Select the **Utilities** tab and click **Create Diagnostic Report**.

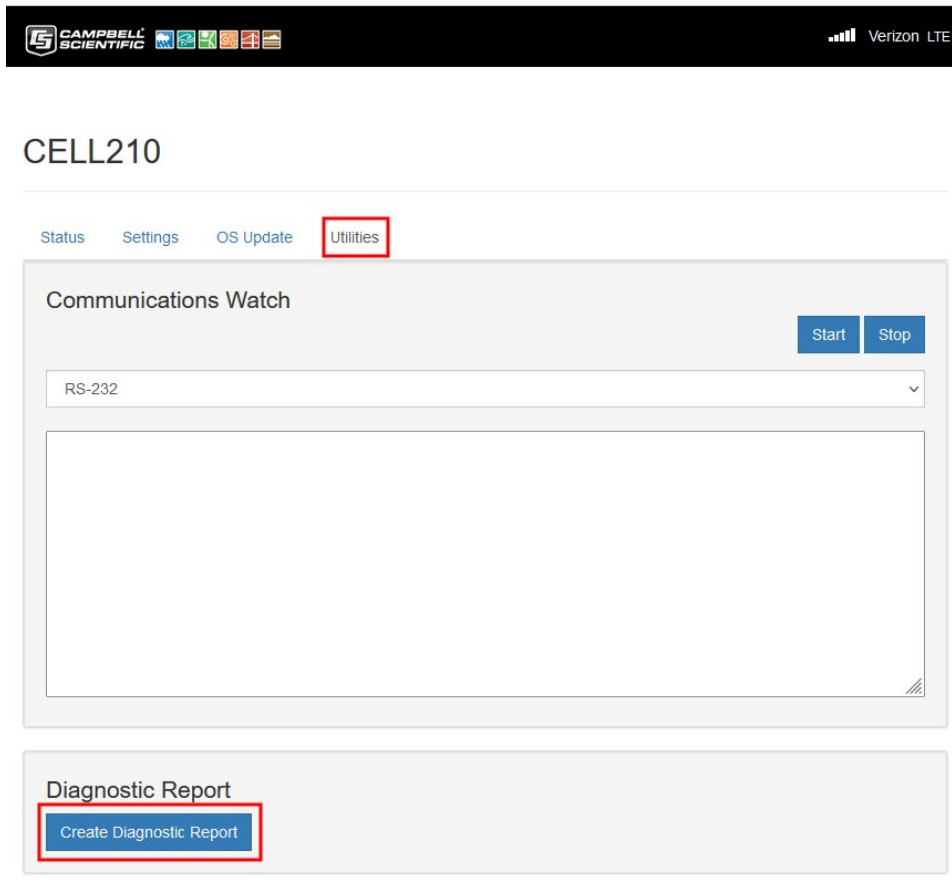

6. After the report has generated, click the **View Report** to open the report.

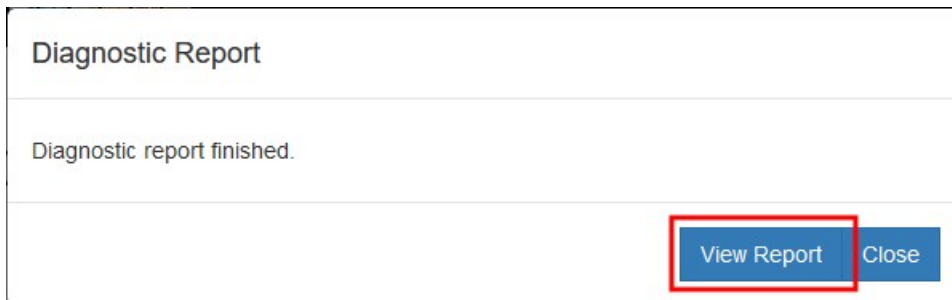

7. Click **Copy** to copy the text. Save the report as a .txt file or Word document.

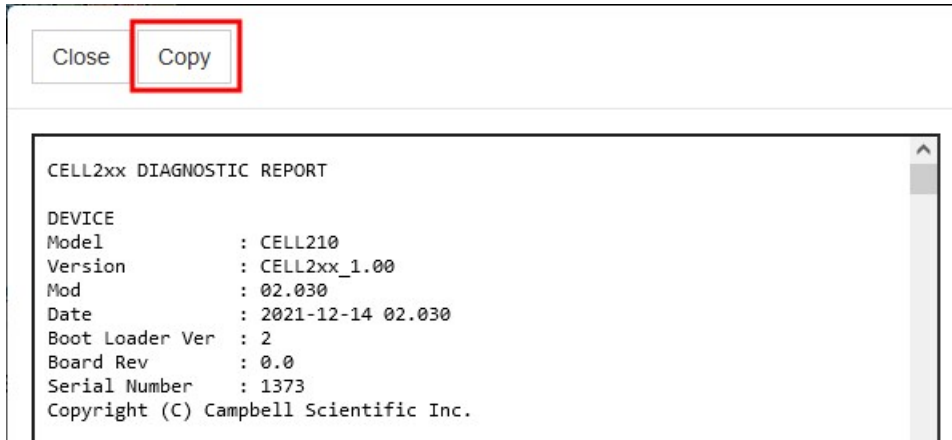

For assistance from the Campbell Scientific Support Department, please use these telephone numbers:

- United States: (435) 227-9100
- Canada Toll Free: 1 (844) 454-2505
- Edmonton Local: (780) 454-2505
- United Kingdom: +44(0)1509 828900

Please leave a message, and a representative will return your call.


Appendix I. Troubleshooting integrated CELL200 series cellular module connection issues

I.1 Check power to data logger/module	114
I.2 Ensure 4G antenna compatibility to data logger/module	115
I.3 Verify data logger APN	117
I.4 Verify cellular network connectivity status	118
I.5 Verify data logger operating system	119
I.6 Verify PakBus router connection for data logger	120
I.7 Verify SIM card insertion in data logger	121
I.8 Verify signal strength and quality	123
I.9 TX/RX LED lights	124
I.10 Verify settings in LoggerNet	124
I.11 Capturing a diagnostic sniff	125
I.12 Contact Campbell Scientific Support Department	126

I.1 Check power to data logger/module


1. Connect your data logger to the *Device Configuration Utility* using a USB or RS-232 cable.
2. Navigate to the **Data Monitor** tab.
3. Select the **Status** table and locate the **Battery** value.

In the following image, the CR300-CELL200 series module has 0 **Battery** voltage, indicating the data logger is not receiving power.

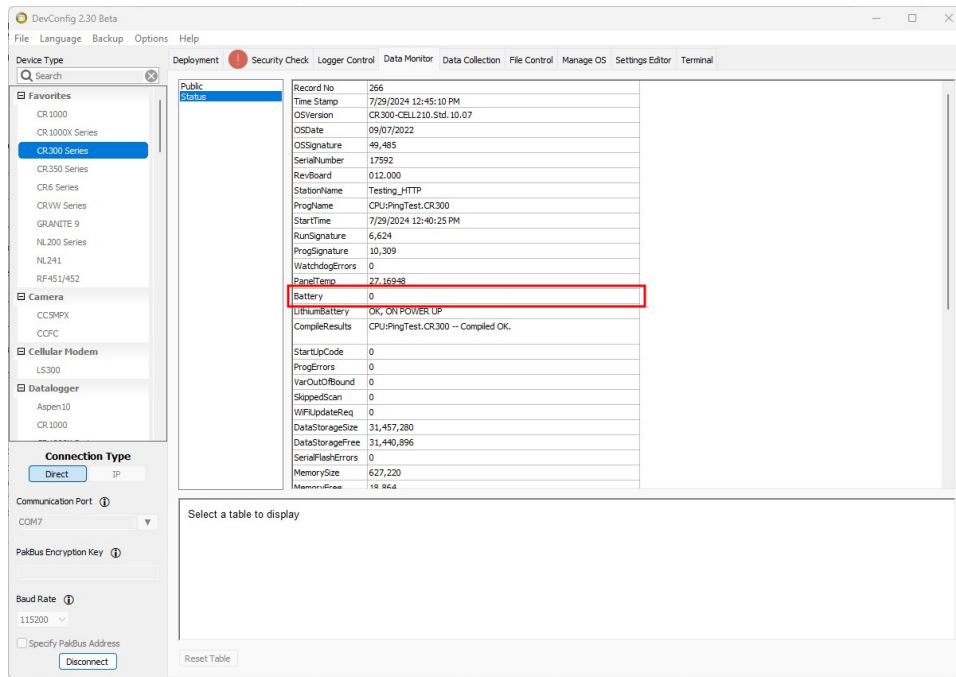

NOTE:

Low power can prevent the Cellular interface from coming online. This is often indicated on the **Cellular** tab of the data logger within the *Device Configuration Utility*, where the **State** field displays **Power off. Power failure! 12V power source required.**

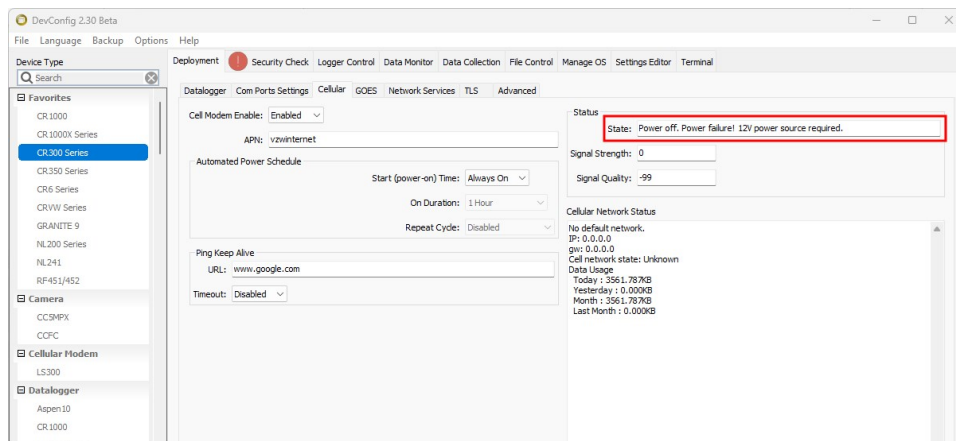

I.2 Ensure 4G antenna compatibility to data logger/module

If your antenna is over 10 years old, it may not support 4G frequencies and should be replaced.

Campbell Scientific offers the following compatible antennas:

- 2 dBd 4G/3G Multiband Omnidirectional Antenna with Mounting Hardware
- 4G/3G 9 dBi MIMO Cellular Antenna with 2 Type N Socket (Female) Connectors
- 4G/3G Cellular Whip Antenna with SMA Connector

If you are also using a Diversity antenna or a MIMO (multiple-input multiple-output) antenna, ensure the **Diversity** port is enabled. When MIMO functionality is available, it offers improved reliability, reduced signal reflections, and sometimes increased throughput.

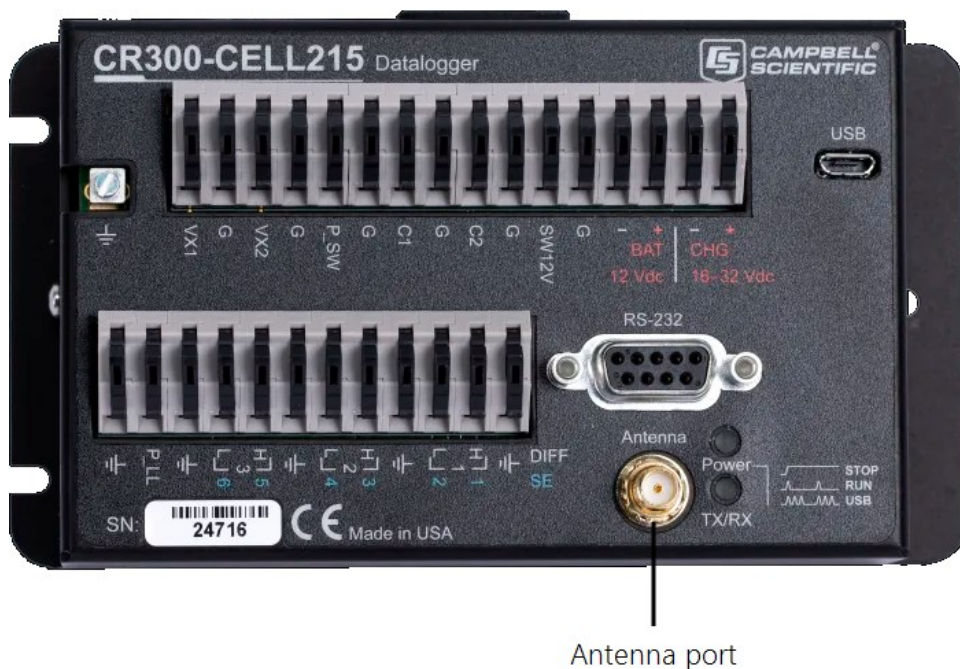


Figure I-1. Single antenna port example


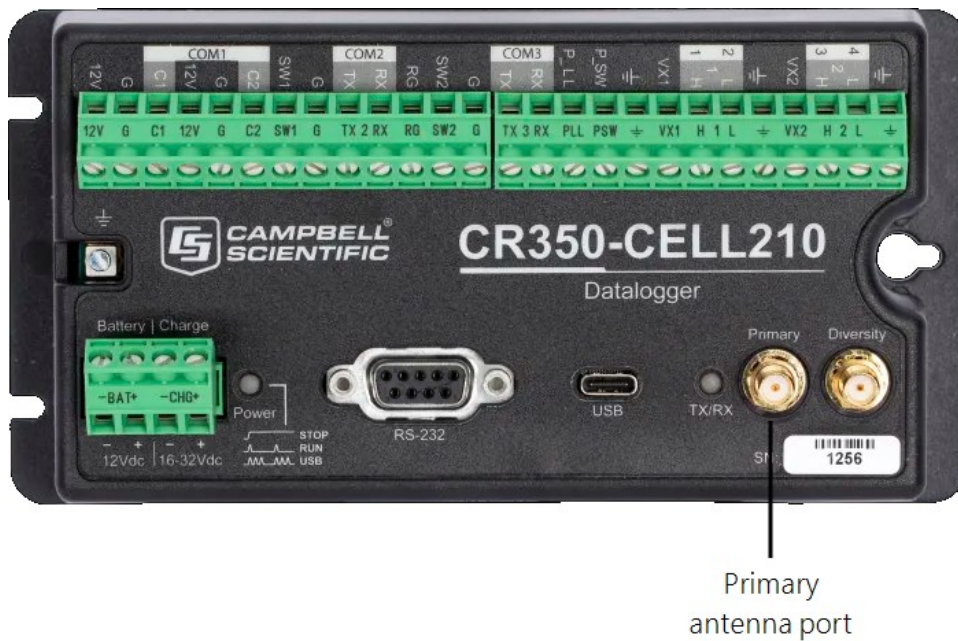


Figure I-2. Primary and diversity antenna port example with the primary highlighted

I.3 Verify data logger APN

Verify the access point name (APN) corresponds to your data logger.

1. Navigate to the **Deployment** tab in the *Device Configuration Utility*.
2. Verify the **APN** under the **Cellular** sub tab.

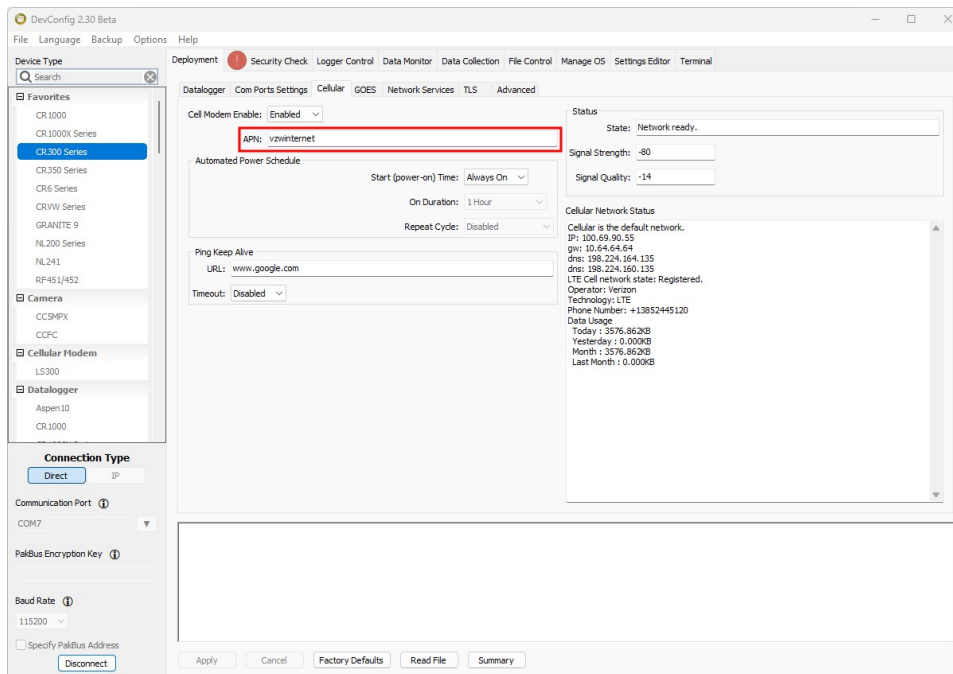


NOTE:

If you are unsure on the APN for your cellular account, call your cellular service provider. For cellular accounts handled by Campbell Scientific, your APN will be on your provisioning report.

I.4 Verify cellular network connectivity status

Verify the status of the cellular network.

1. Navigate to the **Deployment** tab in the *Device Configuration Utility*.
2. Verify the **Status** under the **Cellular** sub tab.

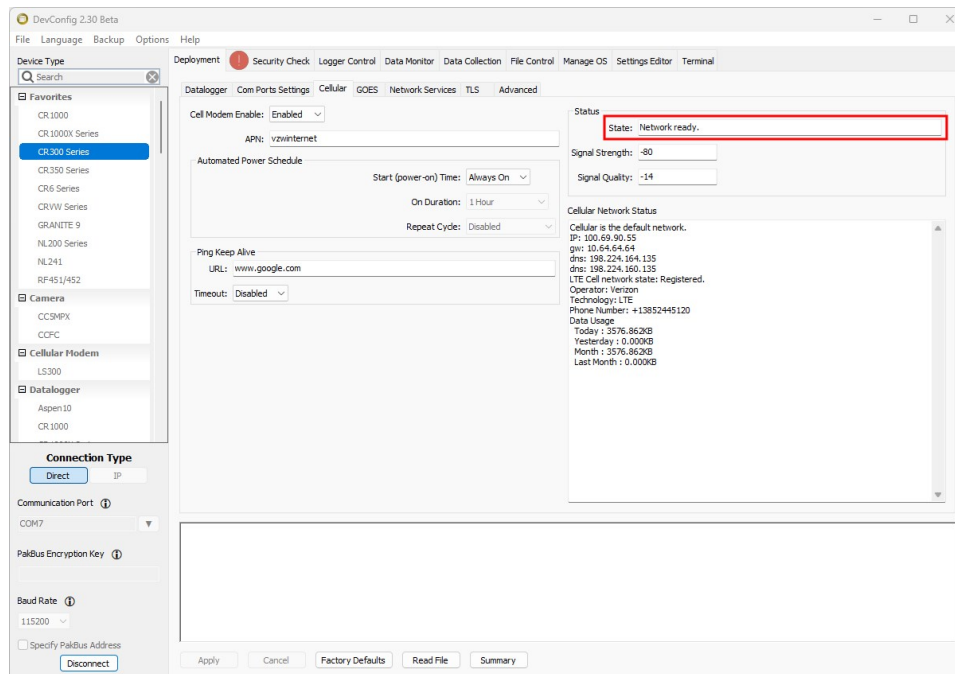

A **Status** of **Network Ready**. indicates the cellular module has negotiated with the cellular network and is now connected.

If the cellular module is unable to connect with the cellular network, it will power itself off and on again to attempt to reconnect. This process will continue endlessly and can be indicative of a settings problem like the wrong APN, an inactivated SIM card, or weak cellular service.

The following **Status** messages indicate an issue:

- PPP negotiation.
- PPP closing.
- Dialed.
- Shutting down.
- Power off.

I.5 Verify data logger operating system

Ensure the operating system (OS) on your data logger is current. An outdated OS can cause connectivity issues with Point-to-Point Protocol (PPP) on the cellular board or network.

To check the data logger OS version:

1. Connect to the data logger with the *Device Configuration Utility*.
2. Under the **Deployment** tab, on the **Datalogger** sub tab, the **OS Version** will be listed.

The screenshot shows the 'Device Configuration Utility' interface. At the top, there are tabs: 'Deployment' (selected), 'Security Check', 'Logger Control', 'Data Monitor', 'Data Collection', and 'File Control'. Under the 'Deployment' tab, there are sub-tabs: 'Datalogger' (selected), 'Com Ports Settings', 'Cellular', 'GOES', 'Network Services', 'TLS', and 'Advanced'. The 'Datalogger' sub-tab displays several fields: 'Serial Number' with the value '17592', 'OS Version' with the value 'CR300-CELL210.Std. 10.07' (highlighted with a red box), 'Station Name' with the value '17592', and 'PakBus Address' with a dropdown menu showing '1'.

Refer to the following table for compatible OS versions. The OS on your data logger should be the specified version or newer:

Table I-1: Data logger operating system version	
Device	OS Version
CR300 and CR310	OS 10.05 for most, but OS 10.07 if using the CELL220
CR350	OS 1.06

I.6 Verify PakBus router connection for data logger

If you set up a Konect PakBus Router with your modem, verify the settings for the Konect router are correctly entered into your data logger. Complete the following steps:

1. Connect to your data logger using the *Device Configuration Utility*.
2. Under the **Deployment** tab, navigate to the **Datalogger** sub tab.

3. Ensure the **PakBus Address** and the **PakBus/TCP Password** configured in the data logger are identical to the settings in Konect.

The screenshot shows the 'Advanced' tab in the 'Data Logger' section. The 'PakBus Address' is set to 1. The 'PakBus Security' section shows 'PakBus/TCP Password' as WEAK. The 'PakBus Encryption Key' is NOT SET.

4. Under the **Deployment** tab, navigate to the **Network Services** sub tab.
5. Verify the **PakBus/TCP Clients Address** and **Port** have been entered.

The screenshot shows the 'Network Services' sub tab under 'Deployment'. The 'PakBus/TCP Clients' section shows the 'Address' as axanar.konectgds.com and the 'Port' as 8040. The 'FTP User Name' is anonymous and the 'FTP Password' is WEAK.


I.7 Verify SIM card insertion in data logger

1. To check if the SIM card is properly inserted in a CR300-CELL200 series module, remove the small rubber panel or plug from the top to expose the SIM card slot.
2. Press the SIM card inward and release it to eject.
3. Note the location of the notched corner for correct alignment. The gold contact points of the SIM face down when inserting the SIM card. Gently slide the card into the slot until it stops and locks into place.



To check or reseal the SIM on a CR350 with an integrated cell module, the process must be done inside of the data logger.

1. Remove four screws from the base of the data logger using a Phillips-head screwdriver.

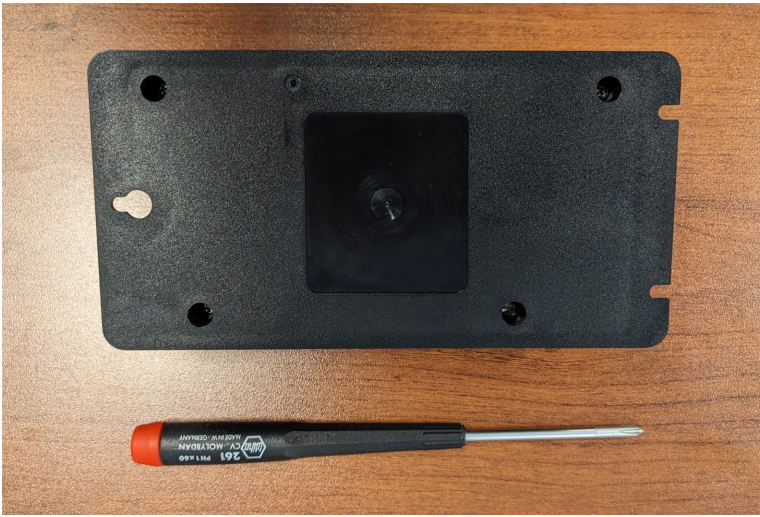

2. Remove the bottom. Inside you will see the data logger circuitry. Avoid touching the circuit boards unnecessarily to reduce the risk of damaging the electronics through static electricity.

NOTE:

It is good practice to wear an antistatic wristband or strap to ground out any static electricity. Alternatively, regularly touching a pole or a metal grounded source can temporarily give you the same benefit.

3. Press the SIM card inward and release it to eject.
4. Note the location of the notched corner for correct alignment. The gold contact points of the SIM face down when inserting the SIM card. Gently slide the card into the slot until it stops and locks into place.

5. After reseating the SIM card, replace the back of the data logger and tighten the screws.



Verify the SIM card is inserted and properly seated by pressing in on the SIM card and releasing it for the SIM to pop out. Press the SIM card inward again until it clicks back into place to reseal it.

I.8 Verify signal strength and quality

If your module appears to be connecting to the network but you are unable to reach it, check the signal strength and quality on the **Cellular** tab in the *Device Configuration Utility*, and compare them with the following tables.

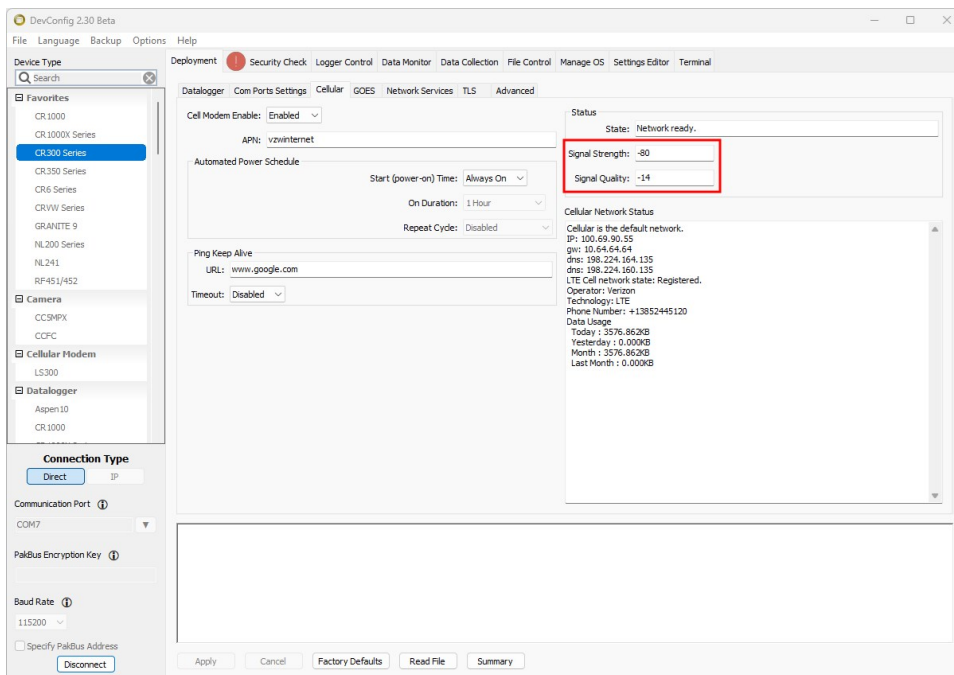



Table I-2: CELL200 series signal strength		
Signal Strength	RSSI (3G)	RSRP (4G)
Excellent	−70 dBm or greater	−90 dBm or greater
Good	−70 dBm to −85 dBm	−90 dBm to −105 dBm
Fair	−86 dBm to −100 dBm	−106 dBm to −115 dBm
Poor	< −100 dBm	< −115 dBm

Table I-3: CELL200 series signal quality		
Signal Quality	ECIO (3G)	RSRQ (4G)
Excellent	0 to -6	> -9
Good	-7 to -10	-9 to -12
Fair to Poor	-11 to -20	-13 or less

If the **Signal Strength** and/or **Signal Quality** is **Poor**, you may have to redirect or relocate the cellular module antenna to a place with a better cellular signal. Upgrading the antenna or adding a diversity antenna can offer better performance.

TIP: Cellular phone apps, like OpenSignal (<https://opensignal.com/> ) , can help determine the best direction to point an antenna for optimal signal strength.

I.9 TX/RX LED lights


The TX/RX light on the integrated module interface of the data logger indicates when the integrated module is sending or receiving data. Green flashes indicate data transmitted (TX) and red flashes indicate data received (RX).



I.10 Verify settings in *LoggerNet*

If your data logger with its integrated module is unable to connect to your computer running *LoggerNet*, check your *LoggerNet Setup*.

1. Verify that the data logger's PakBus address is correct in **LoggerNetSetup**.
2. Verify you are using the correct address and port number.
Example: 166.43.222.26:6785 or axanar.konectgds.com:19060
3. If you are using a Konect PakBus Router address similar to xxxxxx.konectgds.com, ensure that you have a pbRouter branching off of your PakBusPort in **LoggerNetSetup**.
4. If you are using a Konect PakBus Router, ensure that the PakBus address of the pbRouter in **LoggerNetSetup** has been entered. Typically, this value is 4070.
5. Ensure that your data logger branches off of the pbRouter as shown in the following image:

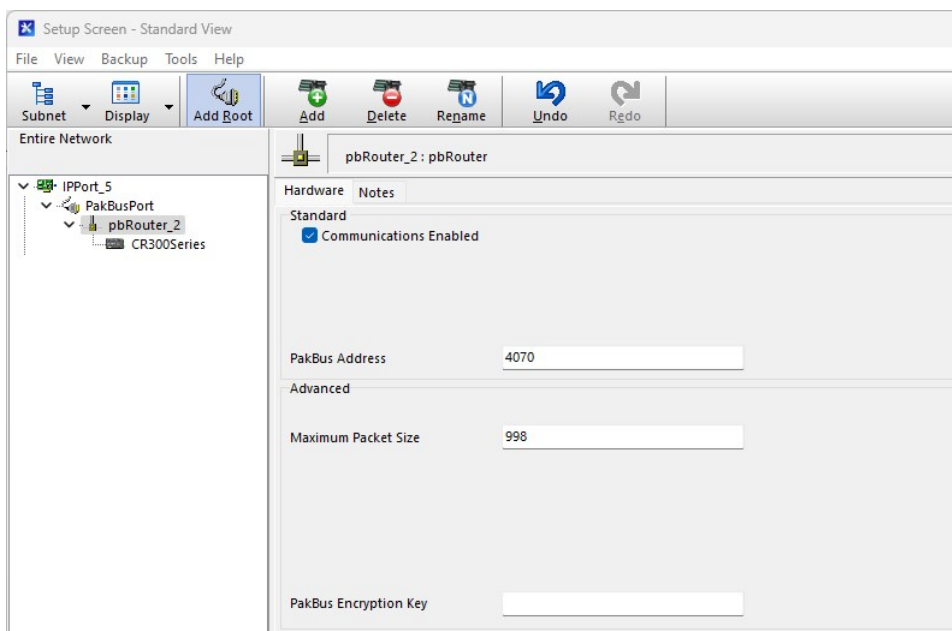

I.11 Capturing a diagnostic sniff

If you have followed all previous steps and your data logger with integrated cellular module continues to fail to connect to the network, collect a diagnostic sniff of the cellular interface.

To collect the diagnostic sniff, perform the following steps from the *Device Configuration Utility* while the module is attempting to connect to the network:


1. Click the **Terminal** tab.
2. Press **Enter** until you see the **CR300>** or **CR350>** prompt.
3. Type a capital letter **W** and press **Enter**.

4. Enter the number corresponding to the cell module interface on your data logger and press **Enter**.

NOTE:

On the CR350, the integrated cellular module interface is always referred to as COM_Rf.

5. Enter a large value over 5,000 for the **TimeOut** and press **Enter**.
6. When the message **Comms watch started. Hit ESC to exit, any other key to renew timeout.** displays, click **Start Export**.
7. Save and export the .txt file.
8. Let the Terminal sniff run for 3 to 5 minutes.
9. Click **End Export**.
10. Email the sniff file to a Campbell Scientific engineer or technician for further analysis.

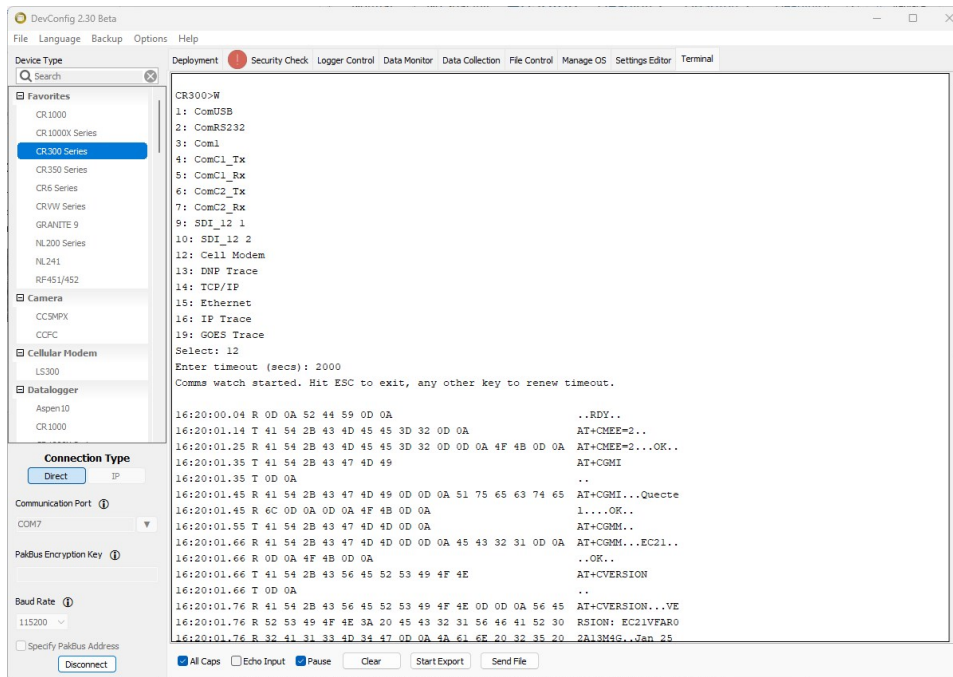

I.12 Contact Campbell Scientific Support Department

If you have tried all troubleshooting suggestions and are unable to connect to your data logger through your CELL200 series module, call the Campbell Scientific Support Department for assistance.

Save a copy of the .xml configuration file, making note of your access point name (APN), data logger operating system (OS), module OS version (OS Date), and the signal strength and quality values. Additionally, generate a copy of the diagnostic sniff of the cellular interface.

For assistance from the Campbell Scientific Support Department, please use these telephone numbers:

- United States: (435) 227-9100
- Canada Toll Free: 1 (844) 454-2505
- Edmonton Local: (780) 454-2505
- United Kingdom: +44(0)1509 828900

Please leave a message, and a representative will return your call.


Limited warranty

Covered equipment is warranted/guaranteed against defects in materials and workmanship under normal use and service for the period listed on your sales invoice or the product order information web page. The covered period begins on the date of shipment unless otherwise specified. For a repair to be covered under warranty, the following criteria must be met:

1. There must be a defect in materials or workmanship that affects form, fit, or function of the device.
2. The defect cannot be the result of misuse.
3. The defect must have occurred within a specified period of time; and
4. The determination must be made by a qualified technician at a Campbell Scientific Service Center/ repair facility.

The following is not covered:

1. Equipment which has been modified or altered in any way without the written permission of Campbell Scientific.
2. Batteries; and
3. Any equipment which has been subjected to misuse, neglect, acts of God or damage in transit.


Campbell Scientific regional offices handle repairs for customers within their territories. Please see the back page of the manual for a list of [regional offices](#) or visit www.campbellsci.com/contact  to determine which Campbell Scientific office serves your country. For directions on how to return equipment, see [Assistance](#).

Other manufacturer's products, that are resold by Campbell Scientific, are warranted only to the limits extended by the original manufacturer.

CAMPBELL SCIENTIFIC EXPRESSLY DISCLAIMS AND EXCLUDES ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Campbell Scientific hereby disclaims, to the fullest extent allowed by applicable law, any and all warranties and conditions with respect to the products, whether express, implied, or statutory, other than those expressly provided herein.


Campbell Scientific will, as a default, return warranted equipment by surface carrier prepaid. However, the method of return shipment is at Campbell Scientific's sole discretion. Campbell Scientific will not reimburse the claimant for costs incurred in removing and/or reinstalling equipment. This warranty and the Company's obligation thereunder is in lieu of all other

warranties, expressed or implied, including those of suitability and fitness for a particular purpose. Campbell Scientific is not liable for consequential damage.

In the event of any conflict or inconsistency between the provisions of this Warranty and the provisions of Campbell Scientific's Terms, the provisions of Campbell Scientific's Terms shall prevail. Furthermore, Campbell Scientific's Terms are hereby incorporated by reference into this Warranty. To view Terms and conditions that apply to Campbell Scientific, Logan, UT, USA, see [Terms and Conditions](#) . To view terms and conditions that apply to Campbell Scientific offices outside of the United States, contact the [regional office](#) that serves your country.

Assistance

Products may not be returned without prior authorization. Please inform us before returning equipment and obtain a **return material authorization (RMA) number** whether the repair is under warranty/guarantee or not. See [Limited warranty](#) for information on covered equipment.

Campbell Scientific regional offices handle repairs for customers within their territories. Please see the back page of the manual for a list of [regional offices](#) or visit www.campbellsci.com/contact  to determine which Campbell Scientific office serves your country.

When returning equipment, a RMA number must be clearly marked on the outside of the package. Please state the faults as clearly as possible. Quotations for repairs can be given on request.

It is the policy of Campbell Scientific to protect the health of its employees and provide a safe working environment. In support of this policy, when equipment is returned to Campbell Scientific, Logan, UT, USA, it is mandatory that a “[Declaration of Hazardous Material and Decontamination](#)” form be received before the return can be processed. If the form is not received within 5 working days of product receipt or is incomplete, the product will be returned to the customer at the customer’s expense. For details on decontamination standards specific to your country, please reach out to your [regional Campbell Scientific](#) office.

NOTE:

All goods that cross trade boundaries may be subject to some form of fee (customs clearance, duties or import tax). Also, some regional offices require a purchase order upfront if a product is out of the warranty period. Please contact your [regional Campbell Scientific](#) office for details.

Safety

DANGER — MANY HAZARDS ARE ASSOCIATED WITH INSTALLING, USING, MAINTAINING, AND WORKING ON OR AROUND TRIPODS, TOWERS, AND ANY ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC. FAILURE TO PROPERLY AND COMPLETELY ASSEMBLE, INSTALL, OPERATE, USE, AND MAINTAIN TRIPODS, TOWERS, AND ATTACHMENTS, AND FAILURE TO HEED WARNINGS, INCREASES THE RISK OF DEATH, ACCIDENT, SERIOUS INJURY, PROPERTY DAMAGE, AND PRODUCT FAILURE. TAKE ALL REASONABLE PRECAUTIONS TO AVOID THESE HAZARDS. CHECK WITH YOUR ORGANIZATION'S SAFETY COORDINATOR (OR POLICY) FOR PROCEDURES AND REQUIRED PROTECTIVE EQUIPMENT PRIOR TO PERFORMING ANY WORK.

Use tripods, towers, and attachments to tripods and towers only for purposes for which they are designed. Do not exceed design limits. Be familiar and comply with all instructions provided in product manuals. Manuals are available at www.campbellsci.com You are responsible for conformance with governing codes and regulations, including safety regulations, and the integrity and location of structures or land to which towers, tripods, and any attachments are attached. Installation sites should be evaluated and approved by a qualified engineer. If questions or concerns arise regarding installation, use, or maintenance of tripods, towers, attachments, or electrical connections, consult with a licensed and qualified engineer or electrician.

General

- Protect from over-voltage.
- Protect electrical equipment from water.
- Protect from electrostatic discharge (ESD).
- Protect from lightning.
- Prior to performing site or installation work, obtain required approvals and permits. Comply with all governing structure-height regulations, such as those of the FAA in the USA.
- Use only qualified personnel for installation, use, and maintenance of tripods and towers, and any attachments to tripods and towers. The use of licensed and qualified contractors is highly recommended.
- Read all applicable instructions carefully and understand procedures thoroughly before beginning work.
- Wear a hardhat and eye protection, and take other appropriate safety precautions while working on or around tripods and towers.
- Do not climb tripods or towers at any time, and prohibit climbing by other persons. Take reasonable precautions to secure tripod and tower sites from trespassers.
- Use only manufacturer recommended parts, materials, and tools.

Utility and Electrical

- You can be killed or sustain serious bodily injury if the tripod, tower, or attachments you are installing, constructing, using, or maintaining, or a tool, stake, or anchor, come in contact with overhead or underground utility lines.
- Maintain a distance of at least one-and-one-half times structure height, 6 meters (20 feet), or the distance required by applicable law, whichever is greater, between overhead utility lines and the structure (tripod, tower, attachments, or tools).
- Prior to performing site or installation work, inform all utility companies and have all underground utilities marked.
- Comply with all electrical codes. Electrical equipment and related grounding devices should be installed by a licensed and qualified electrician.
- Only use power sources approved for use in the country of installation to power Campbell Scientific devices.

Elevated Work and Weather

- Exercise extreme caution when performing elevated work.
- Use appropriate equipment and safety practices.
- During installation and maintenance, keep tower and tripod sites clear of un-trained or non-essential personnel. Take precautions to prevent elevated tools and objects from dropping.
- Do not perform any work in inclement weather, including wind, rain, snow, lightning, etc.

Internal Battery

- Be aware of fire, explosion, and severe-burn hazards.
- Misuse or improper installation of the internal lithium battery can cause severe injury.

- Do not recharge, disassemble, heat above 100 °C (212 °F), solder directly to the cell, incinerate, or expose contents to water. Dispose of spent batteries properly.

Use and disposal of batteries

- Where batteries need to be transported to the installation site, ensure they are packed to prevent the battery terminals shorting which could cause a fire or explosion. Especially in the case of lithium batteries, ensure they are packed and transported in a way that complies with local shipping regulations and the safety requirements of the carriers involved.
- When installing the batteries follow the installation instructions very carefully. This is to avoid risk of damage to the equipment caused by installing the wrong type of battery or reverse connections.
- When disposing of used batteries, it is still important to avoid the risk of shorting. Do not dispose of the batteries in a fire as there is risk of explosion and leakage of harmful chemicals into the environment. Batteries should be disposed of at registered recycling facilities.

Avoiding unnecessary exposure to radio transmitter radiation

- Where the equipment includes a radio transmitter, precautions should be taken to avoid unnecessary exposure to radiation from the antenna. The degree of caution required varies with the power of the transmitter, but as a rule it is best to avoid getting closer to the antenna than 20 cm (8 inches) when the antenna is active. In particular keep your head away from the antenna. For higher power radios (in excess of 1 W ERP) turn the radio off when servicing the system, unless the antenna is installed away from the station, e.g. it is mounted above the system on an arm or pole.

Maintenance

- Periodically (at least yearly) check for wear and damage, including corrosion, stress cracks, frayed cables, loose cable clamps, cable tightness, etc. and take necessary corrective actions.
- Periodically (at least yearly) check electrical ground connections.

WHILE EVERY ATTEMPT IS MADE TO EMBODY THE HIGHEST DEGREE OF SAFETY IN ALL CAMPBELL SCIENTIFIC PRODUCTS, THE CUSTOMER ASSUMES ALL RISK FROM ANY INJURY RESULTING FROM IMPROPER INSTALLATION, USE, OR MAINTENANCE OF TRIPODS, TOWERS, OR ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC.

Global Sales and Support Network

A worldwide network to help meet your needs



Campbell Scientific Regional Offices

Australia

Location: Garbutt, QLD Australia
Phone: 61.7.4401.7700
Email: info@campbellsci.com.au
Website: www.campbellsci.com.au

Brazil

Location: São Paulo, SP Brazil
Phone: 11.3732.3399
Email: vendas@campbellsci.com.br
Website: www.campbellsci.com.br

Canada

Location: Edmonton, AB Canada
Phone: 780.454.2505
Email: dataloggers@campbellsci.ca
Website: www.campbellsci.ca

China

Location: Beijing, P. R. China
Phone: 86.10.6561.0080
Email: info@campbellsci.com.cn
Website: www.campbellsci.com.cn

Costa Rica

Location: San Pedro, Costa Rica
Phone: 506.2280.1564
Email: info@campbellsci.cc
Website: www.campbellsci.cc

France

Location: Montrouge, France
Phone: 0033.0.1.56.45.15.20
Email: info@campbellsci.fr
Website: www.campbellsci.fr

Germany

Location: Bremen, Germany
Phone: 49.0.421.460974.0
Email: info@campbellsci.de
Website: www.campbellsci.de

India

Location: New Delhi, DL India
Phone: 91.11.46500481.482
Email: info@campbellsci.in
Website: www.campbellsci.in

Japan

Location: Kawagishi, Toda City, Japan
Phone: 048.400.5001
Email: jp-info@campbellsci.com
Website: www.campbellsci.co.jp

South Africa

Location: Stellenbosch, South Africa
Phone: 27.21.8809960
Email: sales@campbellsci.co.za
Website: www.campbellsci.co.za

Spain

Location: Barcelona, Spain
Phone: 34.93.2323938
Email: info@campbellsci.es
Website: www.campbellsci.es

Thailand

Location: Bangkok, Thailand
Phone: 66.2.719.3399
Email: info@campbellsci.asia
Website: www.campbellsci.asia

UK

Location: Shephed, Loughborough, UK
Phone: 44.0.1509.601141
Email: sales@campbellsci.co.uk
Website: www.campbellsci.co.uk

USA

Location: Logan, UT USA
Phone: 435.227.9120
Email: info@campbellsci.com
Website: www.campbellsci.com