


INSTRUCTION MANUAL



Model 237 Leaf Wetness Sensor

Revision: 7/10

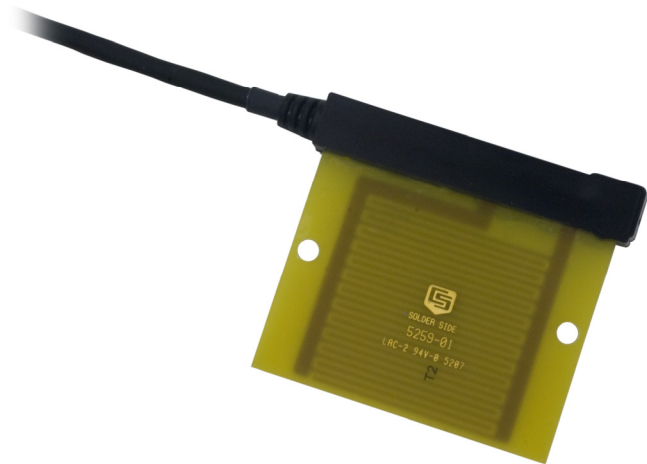

Copyright © 1988-2010
Campbell Scientific, Inc.

Warranty and Assistance

The **237 LEAF WETNESS SENSOR** is warranted by Campbell Scientific, Inc. to be free from defects in materials and workmanship under normal use and service for twelve (12) months from date of shipment unless specified otherwise. Batteries have no warranty. Campbell Scientific, Inc.'s obligation under this warranty is limited to repairing or replacing (at Campbell Scientific, Inc.'s option) defective products. The customer shall assume all costs of removing, reinstalling, and shipping defective products to Campbell Scientific, Inc. Campbell Scientific, Inc. will return such products by surface carrier prepaid. This warranty shall not apply to any Campbell Scientific, Inc. products which have been subjected to modification, misuse, neglect, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for a particular purpose. Campbell Scientific, Inc. is not liable for special, indirect, incidental, or consequential damages.

Products may not be returned without prior authorization. The following contact information is for US and International customers residing in countries served by Campbell Scientific, Inc. directly. Affiliate companies handle repairs for customers within their territories. Please visit www.campbellsci.com to determine which Campbell Scientific company serves your country.

To obtain a Returned Materials Authorization (RMA), contact Campbell Scientific, Inc., phone (435) 753-2342. After an applications engineer determines the nature of the problem, an RMA number will be issued. Please write this number clearly on the outside of the shipping container. Campbell Scientific's shipping address is:

CAMPBELL SCIENTIFIC, INC.

RMA# _____
815 West 1800 North
Logan, Utah 84321-1784

For all returns, the customer must fill out a "Declaration of Hazardous Material and Decontamination" form and comply with the requirements specified in it. The form is available from our website at www.campbellsci.com/repair. A completed form must be either emailed to repair@campbellsci.com or faxed to 435-750-9579. Campbell Scientific will not process any returns until we receive this form. If the form is not received within three days of product receipt or is incomplete, the product will be returned to the customer at the customer's expense. Campbell Scientific reserves the right to refuse service on products that were exposed to contaminants that may cause health or safety concerns for our employees.

237 Table of Contents

PDF viewers note: These page numbers refer to the printed version of this document. Use the Adobe Acrobat® bookmarks tab for links to specific sections.

1. Introduction	1
1.1 Specifications.....	1
2. Wiring	1
3. Programming	2
3.1 Measurement of Vs / Vx.....	2
3.2 Calculating Sensor Resistance.....	2
3.3 Interpreting Resistance Values	3
3.4 Calculating Wet Time Fraction.....	3
4. Programming Examples	4
4.1 CR1000 Program Example	4
4.2 CR200(X) Programming	4
4.3 CR10(X) Programming Example	5
5. Plant Pathology Application	6
5.1 Sensor Preparation.....	6
5.2 Plant Pathology Application Programming	7
5.3 Sensor Deployment.....	7
5.4 Calibration	7
6. References	8

Figures

1. 237 Sensor Schematic.....	1
2. Mounting the 237 Sensor.....	7

Tables

1. Connections to Campbell Scientific Dataloggers	1
2. Measurement Instructions, Parameters, Results	2
3. 237 Resistance Interpretations	3

Model 237 Leaf Wetness Sensor

1. Introduction

The 237 Leaf Wetness Sensor is a simple resistive grid configured in a 3-wire half-bridge. The circuit is completed when water bridges two inter-digitate electrodes. Response is non-linear with a rapid decrease in resistance relative to an increase in wetness. The simplicity of the sensor lends it to various applications, means of preparation, and data interpretations.

1.1 Specifications

Temperature Range: Operational 0° to 100°C; Survival -40° to 150°C
 Sensor may crack if temperature drops below -40°C

Dimensions: 2.75" W x 3.0" L x 0.25" D (7.1 x 7.6 x 0.64 cm)

Weight: 3 oz per 10' cable (91 g per 3.1 m cable)

2. Wiring

Figure 1 is a circuit schematic of the 237. Table 1 describes wiring to Campbell Scientific dataloggers.

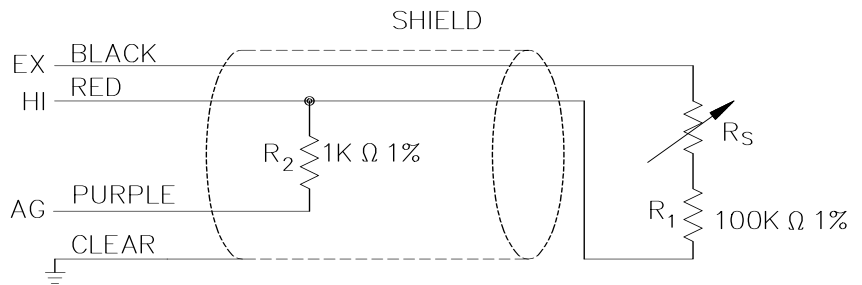


FIGURE 1. 237 Sensor Schematic

TABLE 1. Connections to Campbell Scientific Dataloggers				
Color	Description	CR200(X) CR800 CR5000 CR3000 CR1000	CR510 CR500 CR10X	21X CR7 CR23X
Black	Excitation	Switched Excitation	Switched Excitation	Switched Excitation
Red	Resistance Signal	Single-Ended Input	Single-Ended Input	Single-Ended Input
Purple	Signal Ground	≡	AG	≡
Clear	Shield	≡	G	≡

NOTE The black outer jacket of the cable is Santoprene® rubber. This compound was chosen for its resistance to temperature extremes, moisture, and UV degradation. However, this jacket will support combustion in air. It is rated as slow burning when tested according to U.L. 94 H.B. and will pass FMVSS302. Local fire codes may preclude its use inside buildings.

3. Programming

Refer to programming examples in Section 4 for suggested implementation of measurement and processing concepts.

3.1 Measurement of Vs / Vx

The base measurement of the 237 sensor is Vs/Vx where Vs is the voltage measured and Vx is the excitation voltage supplied by the datalogger. Vs/Vx is measured by the datalogger with the instructions and parameters listed in Table 2.

TABLE 2. Measurement Instructions, Parameters, Results

Datalogger	Measurement Instruction	Excitation (mV)	Input Range	Integration/Delay	Multiplier	Offset	Result
CR510, CR10(X)	P5 AC Half Bridge	2500	±25 mV	fast	1	0	Vs/Vx
CR7	P5 AC Half Bridge	5000	±50 mV	fast	1	0	Vs/Vx
CR200(X)	ExDelSE ()	2500	n/a	500 µs	0.0004	0	Vs/Vx
CR800, CR1000	BrHalf ()	2500	±25 mV	250 µs	1	0	Vs/Vx
CR3000, CR9000X	BrHalf ()	5000	±50 mV	250 µs	1	0	Vs/Vx

3.2 Calculating Sensor Resistance

With reference to Figure 1, sensor resistance (Rs), expressed in kΩ, is calculated as follows:

$$R_s = R_2 / (V_s/V_x) - R_2 - R_1.$$

Therefore,

$$R_s (k\Omega) = 1/(V_s/V_x) - 101.$$

3.3 Interpreting Resistance Values

Table 3 lists 237 sensor resistance ranges and their interpretation.

TABLE 3. 237 Resistance Interpretations (Wet / Dry Threshold Set at 150 kΩ)					
	CR1000		CR200(X)	CR10X	
Interpretation	IEEE4 ^a	FP2 ^b	IEEE4 ^{a,b}	Input Loc ^a	Low Res FS ^b
Wet	0 to 150				
Slightly Wet	150 to ≥ 99999	150 to 7999	150 to ≥ 9999	150 to ≥ 99999	150 to 6999
Dry ^c	INF, ≥ 99999, ≤ -99999	INF, ±7999	-INF, ≥ 9999, ≤ -9999	INF, ≥ 99999, ≤ -99999	±6999
Voltage Input Over-range ^d	NAN	NAN	-100, -INF	-101	-101
Bridge Over-range ^e	< 0				
Missing Sensor ^f	Any Value				

^a Input Memory

^b Final Storage Memory

^c The 1 kΩ bridge resistor holds the input channel at 0 mV when the sensor is completely dry. However, the measurement may intermittently deviate from zero slightly, but still be within the resolution specifications of the datalogger. When this occurs, Rs = either a very large or a very small number.

^d Voltage input over-range is a state wherein voltage from the sensor exceeds the recommended 25 mV input voltage range. This highly conductive state may occur if the sensor is very very wet with very ionic water.

^e If the measured voltage exceeds 24.75 mV, but does not exceed the input voltage range, the result of the bridge equation becomes negative.

^f When no sensor is connected, or a cable has been cleanly cut, a “floating” voltage can occur and falsely indicate the presence of a missing sensor. In the CR1000, this can be avoided by using the mv25c range code.

3.4 Calculating Wet Time Fraction

Fraction of time wet are common data derived from 237 measurements. Calculating time fraction requires a wetness threshold. Refer to Section 5.4 Calibration for more information on determining the threshold.

Fraction of time wet is calculated in all current Campbell Scientific dataloggers, except the CR200(X), by using the Histogram instruction (P75 in Edlog / Histogram () in CRBasic) with a single bin and closed form. The bin select value for the histogram is the Input Location / Variable containing sensor resistance (Rs). The lower limit of the histogram is zero, and the upper limit is the wet / dry threshold. This will give the fraction of the output interval that the sensor is wet. A fraction of time wet of .33 when the output interval is one hour means that the sensor was wet for 20 minutes during that hour.

Refer to programming example 4.3 for information on calculating fraction of time wet with the CR200(X).

4. Programming Examples

Each example program measures leaf wetness and outputs a sample resistance and a time fraction the sensor is wet. In these examples, the output interval is set to 60 minutes, so a time fraction wet of .33 is equivalent to 20 minutes during that hour. Wetness threshold is set at 150 kΩ.

4.1 CR1000 Program Example

```

Public Vs_Vx
Public Rs_kOhms

DataTable(Wetness,true,-1)
  OpenInterval
  DataInterval(0,60,Min,10)
  Sample(1, Rs_kOhms, FP2)
  Histogram(Rs_kOhms, FP2, 0, 1, 001, 1, 0, 150)   'Enter threshold in 8th parameter
EndTable

BeginProg
  Scan(60,Sec, 3, 0)
  BRHalf(Vs_Vx, 1, mV25, 1, VX1, 1, 2500, True, 0, 250, 1, 0)
  Rs_kOhms = (1 / Vs_Vx) - 101
  CallTable Wetness
  NextScan
EndProg
    
```

4.2 CR200(X) Programming

```

'CR200(X) Series Datalogger
Public Vs_Vx
Public Rs_kOhm
Public ScanIntervalWet
Public ScanIntervalSum
Public TimeFractionWet

DataTable (Wetness,1,-1)
  DataInterval (0,60,min)           'Interval must match IfTime interval (below)
  Sample (1,Rs_kohm)
  Sample (1,TimeFractionWet)
EndTable

BeginProg
  Scan (1,Min)

  'Measure Wetness
  ExDelSE(Vs_Vx,1,1,1,mV2500,500,.0004,0)

  'Zero measurement when measurement < 0
  If Vs_Vx < 0 Then Vs_Vx = 0
  Rs_kOhm = (1 / Vs_Vx) - 101

  'Sum Scan Intervals
  ScanIntervalSum = ScanIntervalSum + 1
    
```



```

'Check if Leaf wetness is below 150 kOhms transition and count as time dry
If Rs_kohm < 150 AND Rs_kohm > 0 Then
    ScanIntervalWet = ScanIntervalWet + 1
EndIf

'Calculate Time Fraction Wet at top of each hour
If IfTime (0,60,Min) Then          'Interval must match data table interval
    TimeFractionWet = ScanIntervalWet / ScanIntervalSum
    ScanIntervalWet = 0
    ScanIntervalSum = 0
EndIf

    CallTable (Wetness)
NextScan
EndProg

```

4.3 CR10(X) Programming Example

```

*Table 1 Program
01: 60          Execution Interval (seconds)

1: AC Half Bridge (P5)
1: 1           Reps
2: 13          25 mV Fast Range
3: 1           SE Channel
4: 1           Excite all reps w/Exchan 1
5: 2500        mV Excitation
6: 1           Loc [ Vs_Vx  ]
7: 1           Multiplier
8: 0           Offset

2: Z=1/X (P42)
1: 1           X Loc [ Vs_Vx  ]
2: 2           Z Loc [ Rs_kOhms ]

3: Z=X+F (P34)
1: 2           X Loc [ Rs_kOhms ]
2: -101        F
3: 2           Z Loc [ Rs_kOhms ]

4: If time is (P92)
1: 0           Minutes (Seconds --) into a
2: 60          Interval (same units as above)
3: 10          Set Output Flag High (Flag 0)

5: Real Time (P77)
1: 1220        Year,Day,Hour/Minute (midnight = 2400)

6: Sample (P70)
1: 1           Reps
2: 2           Loc [ Rs_kOhms ]

```


5.2 Plant Pathology Application Programming

An exact range of measurements is impossible to give since the 237 is field calibrated. The manufacture of the sensor is not precise and the quality of water bridging the electrodes varies. As demonstrated in program examples in Section 4, a common practice is to measure grid resistance in terms of kOhms using a 1 bin histogram to calculate at what fraction of the output interval the sensor is wet. If resistance is $\leq 150 \text{ k}\Omega$, the grid is considered wet. Since the output interval is 60 minutes, if the histogram fraction equals 0.33, the leaf was wet for 20 minutes during that hour.

5.3 Sensor Deployment

The sensor is not supplied with a mounting bracket. Gillespie and Kidd¹ found that sensor orientation affects performance. As with surface preparation, orientation varies across applications and users. A common practice is to mount the sensor such that it receives minimal direct sunlight at mid-day during the growing season. Gillespie and Kidd favor a 60 degree tilt on a north facing sensor such that water runs away from the cable connection to minimize puddling on the electrodes. Figure 2 shows a simple-to-construct mounting bracket.

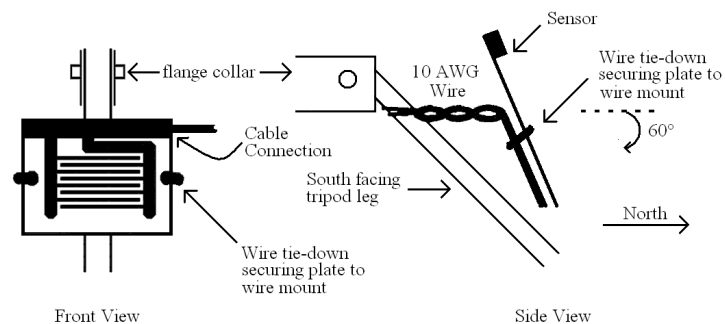


FIGURE 2. Mounting the 237 Sensor

5.4 Calibration

A wet / dry threshold of $150 \text{ k}\Omega$ is used in the programming examples in Section 4. While this threshold may work well, refining the threshold for a specific sensor and installation is recommended. A sharp change in resistance occurs at the threshold on uncoated sensors. A less defined threshold occurs with coated sensors. The threshold of uncoated sensors is normally between 50 and $200 \text{ k}\Omega$. The threshold of the coated sensor is normally between 20 and $1,000 \text{ k}\Omega$.

For best results, the sensor should be field calibrated. The transition point will vary for different areas, vegetation, and water quality. Place the sensor in vegetation, the wetness of which is to be monitored. Observe the vegetation until it reaches the desired wetness. When the vegetation is at the desired "wetness", the measured resistance can be used as a threshold. Sensitivity of the sensor is changed by contaminants such as fingerprints and smudges. Before painting and calibrating the sensor, clean it gently with alcohol.

6. References

¹Gillespie, T.J. and Kidd, G.E. 1978. Sensing duration of leaf moisture retention using electrical impedance grids. *Can. J. Plant Sci.* 58:179-187.

²East, David (Ohio State University) 1994 Field Testing of Phone Accessible Multi-Channel Datalogger for Tomato IPM Programs. Unpublished.

NOTE

The citation of researcher does not imply the endorsement of Campbell Scientific products by any researcher or institution.

Campbell Scientific Companies

Campbell Scientific, Inc. (CSI)

815 West 1800 North
Logan, Utah 84321
UNITED STATES
www.campbellsci.com • info@campbellsci.com

Campbell Scientific Africa Pty. Ltd. (CSAf)

PO Box 2450
Somerset West 7129
SOUTH AFRICA
www.csafrica.co.za • cleroux@csafrica.co.za

Campbell Scientific Australia Pty. Ltd. (CSA)

PO Box 444
Thuringowa Central
QLD 4812 AUSTRALIA
www.campbellsci.com.au • info@campbellsci.com.au

Campbell Scientific do Brazil Ltda. (CSB)

Rua Luisa Crapsi Orsi, 15 Butantã
CEP: 005543-000 São Paulo SP BRAZIL
www.campbellsci.com.br • suporte@campbellsci.com.br

Campbell Scientific Canada Corp. (CSC)

11564 - 149th Street NW
Edmonton, Alberta T5M 1W7
CANADA
www.campbellsci.ca • dataloggers@campbellsci.ca

Campbell Scientific Centro Caribe S.A. (CSCC)

300 N Cementerio, Edificio Breller
Santo Domingo, Heredia 40305
COSTA RICA
www.campbellsci.cc • info@campbellsci.cc

Campbell Scientific Ltd. (CSL)

Campbell Park
80 Hathern Road
Shepshed, Loughborough LE12 9GX
UNITED KINGDOM
www.campbellsci.co.uk • sales@campbellsci.co.uk

Campbell Scientific Ltd. (France)

Miniparc du Verger - Bat. H
1, rue de Terre Neuve - Les Ulis
91967 COURTABOEUF CEDEX
FRANCE
www.campbellsci.fr • info@campbellsci.fr

Campbell Scientific Spain, S. L.

Avda. Pompeu Fabra 7-9, local 1
08024 Barcelona
SPAIN
www.campbellsci.es • info@campbellsci.es

Please visit www.campbellsci.com to obtain contact information for your local US or International representative.