


# INSTRUCTION MANUAL



## A150 Desiccated Case

4/11

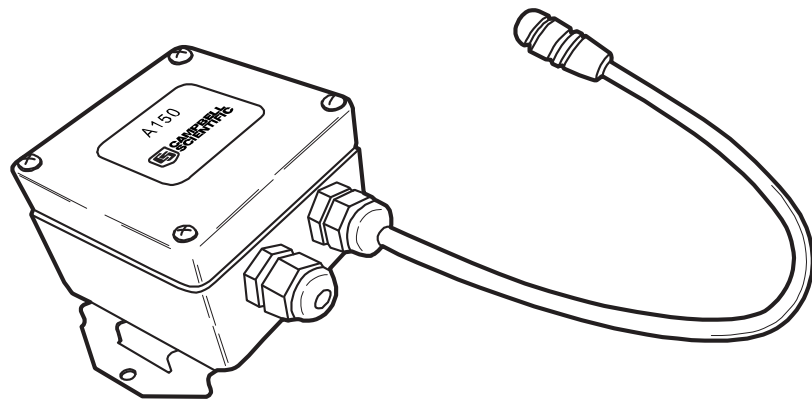

# **Warranty and Assistance**

---

**PRODUCTS MANUFACTURED BY CAMPBELL SCIENTIFIC, INC.** are warranted by Campbell Scientific, Inc. ("Campbell") to be free from defects in materials and workmanship under normal use and service for twelve (12) months from date of shipment unless otherwise specified on the corresponding Campbell invoice. Batteries, fine-wire thermocouples, desiccant, and other consumables have no warranty. Campbell's obligation under this warranty is limited to repairing or replacing (at Campbell's option) defective products, which shall be the sole and exclusive remedy under this warranty. The customer shall assume all costs of removing, reinstalling, and shipping defective products to Campbell. Campbell will return such products by surface carrier prepaid within the continental United States of America. To all other locations, Campbell will return such products best way CIP (Port of Entry) INCOTERM<sup>®</sup> 2010, prepaid. This warranty shall not apply to any Campbell products which have been subjected to modification, misuse, neglect, improper service, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied. The warranty for installation services performed by Campbell such as programming to customer specifications, electrical connections to products manufactured by Campbell, and product specific training, is part of Campbell's product warranty. **CAMPBELL EXPRESSLY DISCLAIMS AND EXCLUDES ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.** Campbell is not liable for any special, indirect, incidental, and/or consequential damages.

Products may not be returned without prior authorization. The following contact information is for US and International customers residing in countries served by Campbell Scientific, Inc. directly. Affiliate companies handle repairs for customers within their territories. Please visit [www.campbellsci.com](http://www.campbellsci.com) to determine which Campbell Scientific company serves your country.

To obtain a Returned Materials Authorization (RMA), contact Campbell Scientific, Inc., phone (435) 753-2342. After an applications engineer determines the nature of the problem, an RMA number will be issued. Please write this number clearly on the outside of the shipping container. Campbell Scientific's shipping address is:

**CAMPBELL SCIENTIFIC, INC.**

RMA# \_\_\_\_\_  
815 West 1800 North  
Logan, Utah 84321-1784

For all returns, the customer must fill out a "Declaration of Hazardous Material and Decontamination" form and comply with the requirements specified in it. The form is available from our website at [www.campbellsci.com/repair](http://www.campbellsci.com/repair). A completed form must be either emailed to [repair@campbellsci.com](mailto:repair@campbellsci.com) or faxed to 435-750-9579. Campbell Scientific will not process any returns until we receive this form. If the form is not received within three days of product receipt or is incomplete, the product will be returned to the customer at the customer's expense. Campbell Scientific reserves the right to refuse service on products that were exposed to contaminants that may cause health or safety concerns for our employees.

# A150 Table of Contents

---

*PDF viewers note: These page numbers refer to the printed version of this document. Use the Adobe Acrobat® bookmarks tab for links to specific sections.*

<b>1. Function</b> .....	<b>1</b>
1.1 Typical Applications.....	1
1.2 Compatibility.....	1
<b>2. Physical Description</b> .....	<b>2</b>
<b>3. Specifications</b> .....	<b>3</b>
<b>4. Sensor Hook-up and Example Diagrams</b> .....	<b>3</b>
4.1 #26972 with Stripped and Tinned Continuation Cable .....	4
4.2 #22018 PWENC Connector.....	4
4.3 #19520 CWS900 Connector.....	5
<b>5. Installation</b> .....	<b>6</b>
5.1 Mounting .....	6
5.2 Wiring.....	6

## **Figures**

1. A150 Desiccated Case .....	1
2. A150 Interior .....	2
3. CWS900 Connector Pin-Out .....	3
4. A150 with Continuation Cable .....	4
5. A150 with PWENC Connector.....	4
6. Anemometer Wired to an A150.....	5
7. A150 with CWS900 Connector.....	5
8. A150 Wired for CS450 Pressure Sensor and CWS900 Connector .....	5



# A150 Desiccated Case

---

## 1. Function

### 1.1 Typical Applications

The A150 desiccated case is a small, self-contained junction box that allows a sensor to be connected to a continuation cable, a PWENC connector, or a CWS900 wireless sensor connector. Utilizing the A150, a sensor may be incorporated into a wireless sensor network or may be attached to a prewired enclosure.

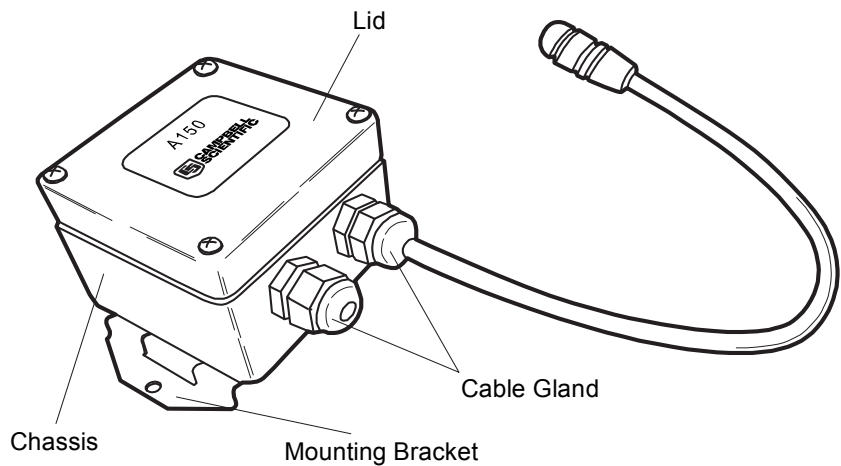


FIGURE 1. A150 Desiccated Case

The A150 allows the CS450 and CS455 pressure transducers to be used without the need to run a ventilation tube all the way to a datalogger enclosure. The sensor cable with a ventilation tube terminates at the A150, which contains a small vent and desiccant, while a second cable without a ventilation tube completes the connection to the datalogger.

The A150 provides a way for a sensor to be included in a wireless sensor network. The sensor is attached to the A150 junction box, and a second cable attaches the A150 to a CWS900 wireless sensor interface. This allows the sensor more flexibility and range than it would have if it were wired directly to a datalogger.

### 1.2 Compatibility

As a junction box, the A150 is compatible with most sensors using six wires or less. Sensors with multiple ground wires can use the included 5-position lever nut to combine the grounds into a single wire connection.

**NOTE**

It is not recommended to insert more than one wire into each connection on the terminal block. If it is necessary to combine wires, use the 5-position lever nut to combine the wires, and then insert the lead wire from the lever nut into the terminal block.

When used with a CWS900, the sensor can be used with sensors measuring analog voltages, frequency, and pulse. The CWS900 can also provide excitation voltage to a sensor through the A150.

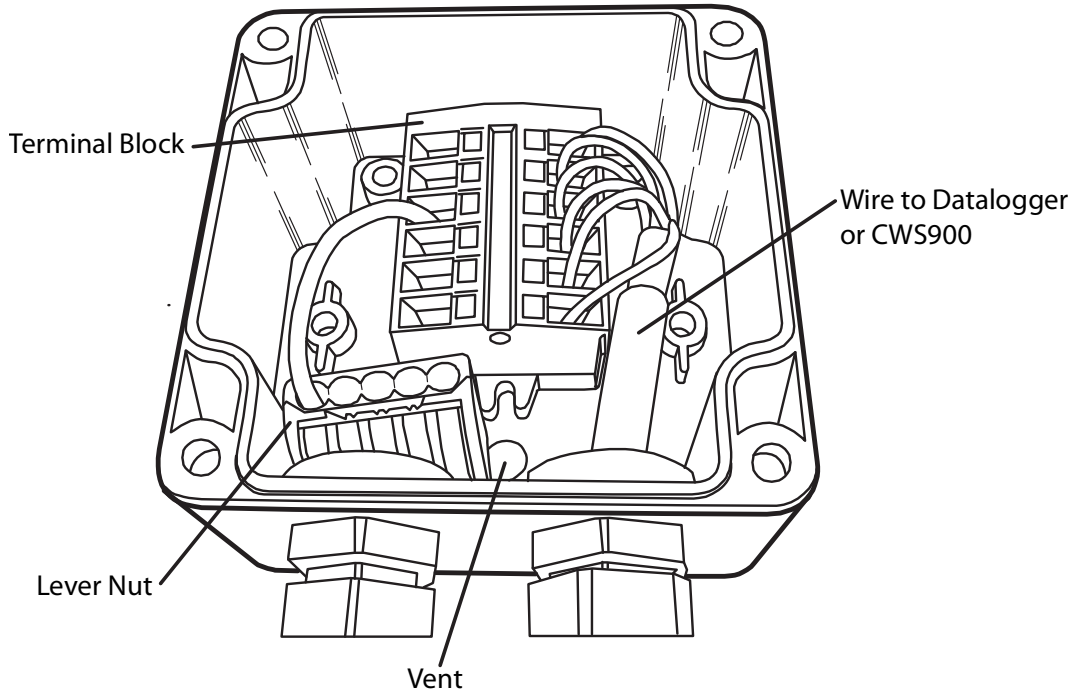


FIGURE 2. A150 Interior

## 2. Physical Description

The A150 has an 80 mm x 82 mm x 55 mm chassis. Four screws secure the lid to the rest of the unit. A terminal block is mounted inside the chassis. A small vent is located on the bottom of the chassis. The vent is protected by a GORE<sup>®</sup> filter, which prevents moisture and contaminants from entering the unit while equalizing the interior air pressure to the current atmospheric pressure.

A mounting bracket is attached to the bottom of the chassis. The bracket is used to fasten the A150 inside an enclosure or, with the included Velcro<sup>®</sup> strap, to another location of the user's choosing.

### 3. Specifications

Dimensions: 80 mm x 82 mm x 55 mm (3.15" x 3.228" x 2.171")

Temperature Range: -30°C to +65°C

Internal Protection Rating: IP 66 (International Standard IEC 60529)

Terminal Block Wire Gauges: 28–12

5-wire Lever Nut Wire Gauges: 28–12 (replacement part number 27373)

Cable Gland Min/Max Cable Diameter: 4.6 mm/7.9 mm (0.181"/0.312")

Desiccant Bag (1/2 Unit) Replacement Part Number: 905

Velcro® Strap Replacement Part Number: 5487

Humidity Indicator Card Replacement Part Number: 6571

### 4. Sensor Hook-up and Example Diagrams

There are three options available when ordering the A150. The first option includes a stripped and tinned continuation cable. The length of this cable is specified when ordering the A150.

The second option includes a PWENC connector, allowing the A150 to be attached to prewired enclosures.

The third option includes a connector to attach the A150 to the CWS900 wireless sensor interface. The CWS900 completes the connection to the datalogger through a wireless sensor network.

Figure 3 shows the pin-out of the CWS900 connector. Take care that the sensor wires attached to the A150 correspond to the correct pins as shown in the diagram.

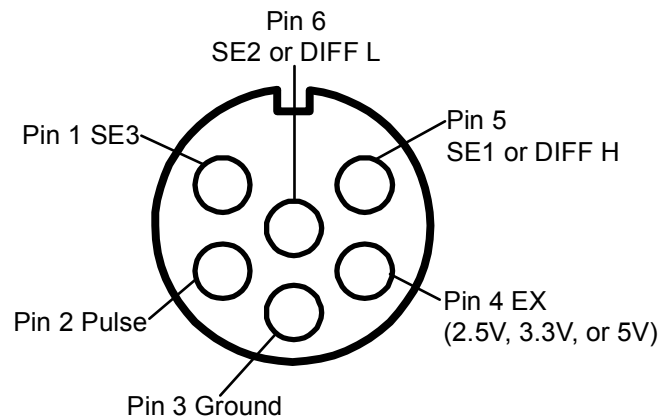


FIGURE 3. CWS900 Connector Pin-Out

### 4.1 #26972 with Stripped and Tinned Continuation Cable

Figure 4 shows the A150 terminal block with a 26972 continuation wire attached. This configuration allows a CS450 or other sensor to be attached to the A150 while the pigtail wire completes the connection to the datalogger.

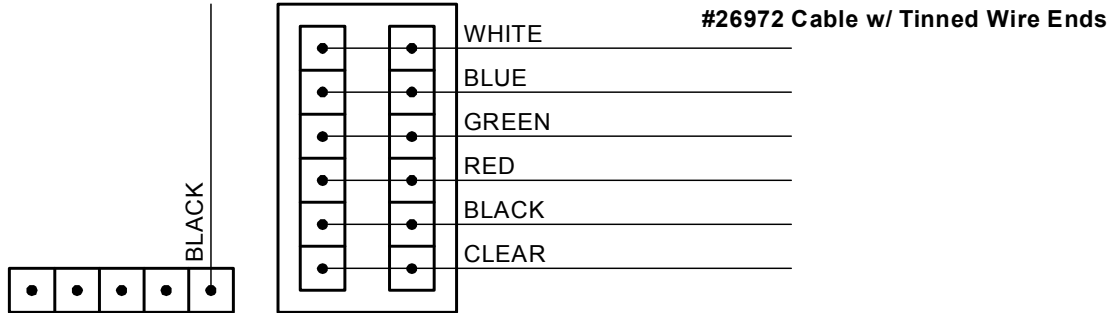


FIGURE 4. A150 with Continuation Cable

**NOTE** Wire colors may vary between different sensors. It is up to the installer to take into account any mismatched wire colors between the sensor and pigtail wire when connecting wires to the A150.

### 4.2 #22018 PWENC Connector

Figure 5 shows the A150 terminal block with a PWENC connector attached. This configuration allows a CS450 or other sensor to be attached to the A150 while the PWENC connector completes the connection to a pre-wired enclosure.

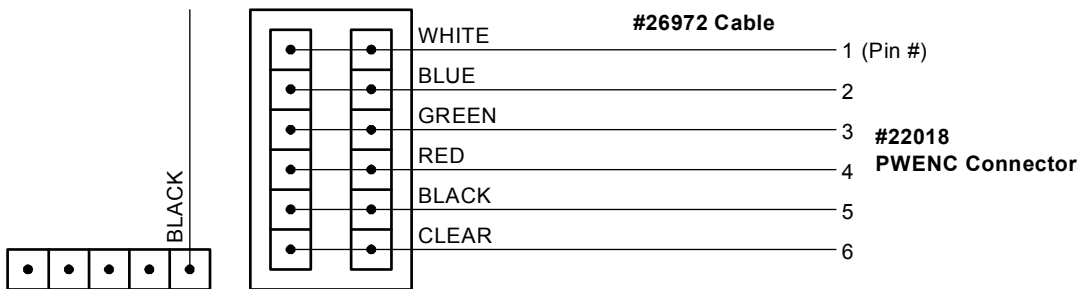


FIGURE 5. A150 with PWENC Connector

**NOTE** When using the A150 to wire a sensor to a PWENC connector, ensure the wiring inside the pre-wired enclosure corresponds with the wiring from the sensor.

Figure 6 gives an example of an anemometer wired to an A150. Note that the green wire in the PWENC connector must be connected to a datalogger’s pulse input inside the enclosure for the signal to be measured.

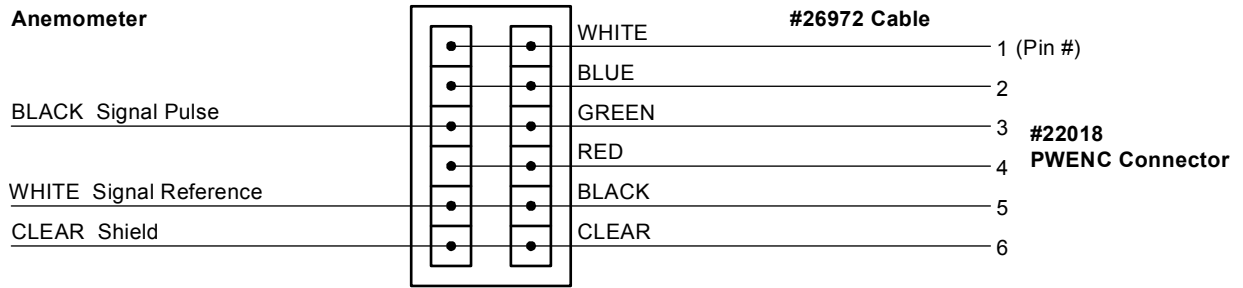


FIGURE 6. Anemometer Wired to an A150

### 4.3 #19520 CWS900 Connector

Figure 7 shows the A150 terminal block with a CWS900 attached. This configuration allows a CS450 or other sensor to be attached to the A150 while the CWS900 wireless sensor interface completes the connection to the wireless sensor network.

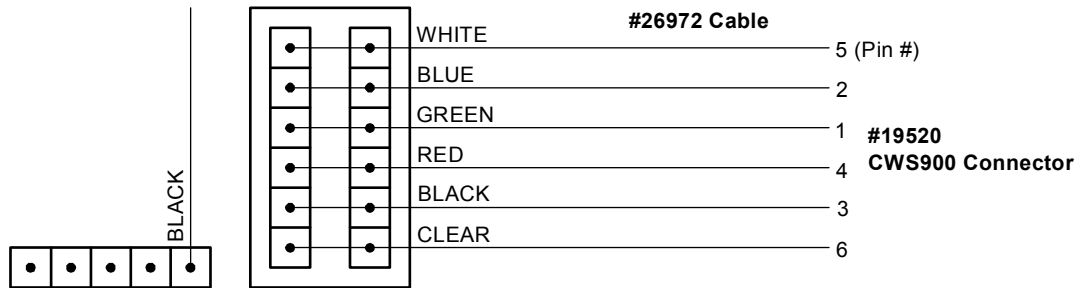


FIGURE 7. A150 with CWS900 Connector

Figure 8 shows a CS450 connected to an A150. Note how multiple grounds are combined into a single lead wire using the lever nut.

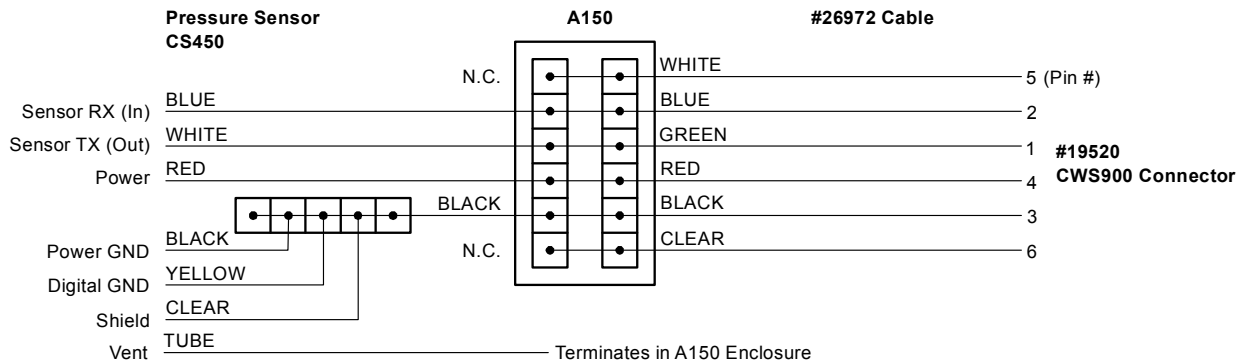


FIGURE 8. A150 Wired for CS450 Pressure Sensor and CWS900 Connector

## 5. Installation

### 5.1 Mounting

The A150 provides two options for mounting. The first is to use the Velcro<sup>®</sup> strap included with the A150. This allows the A150 to be secured to a small mast, fencepost or other location where it is not possible to use mounting screws.

The second option is to use the mounting bracket on the back of the A150. This bracket allows the A150 to be mounted inside an enclosure or to another flat surface, using two screws through the bracket to secure the A150.

### 5.2 Wiring

To wire a sensor to the A150, route the sensor cable through the cable gland and attach each wire to the terminal block adjacent to the corresponding wire to the datalogger or CWS900. Use the lever nut to combine multiple ground wires into a single wire connection. Consult the documentation included with the sensor, or contact a Campbell Scientific Applications Engineer, for the correct placement of each wire.

Once all wires are attached, tighten the wire gland to prevent water or contaminants from entering the A150. Place a desiccant pack, included with the A150, inside the chassis. Also place the humidity indicator card inside the A150, and then secure the lid in place with the four captured screws.



## **Campbell Scientific Companies**

---

### **Campbell Scientific, Inc. (CSI)**

815 West 1800 North  
Logan, Utah 84321  
UNITED STATES  
www.campbellsci.com • info@campbellsci.com

### **Campbell Scientific Africa Pty. Ltd. (CSAf)**

PO Box 2450  
Somerset West 7129  
SOUTH AFRICA  
www.csafrica.co.za • cleroux@csafrica.co.za

### **Campbell Scientific Australia Pty. Ltd. (CSA)**

PO Box 444  
Thuringowa Central  
QLD 4812 AUSTRALIA  
www.campbellsci.com.au • info@campbellsci.com.au

### **Campbell Scientific do Brazil Ltda. (CSB)**

Rua Luisa Crapsi Orsi, 15 Butantã  
CEP: 005543-000 São Paulo SP BRAZIL  
www.campbellsci.com.br • suporte@campbellsci.com.br

### **Campbell Scientific Canada Corp. (CSC)**

11564 - 149th Street NW  
Edmonton, Alberta T5M 1W7  
CANADA  
www.campbellsci.ca • dataloggers@campbellsci.ca

### **Campbell Scientific Centro Caribe S.A. (CSCC)**

300 N Cementerio, Edificio Breller  
Santo Domingo, Heredia 40305  
COSTA RICA  
www.campbellsci.cc • info@campbellsci.cc

### **Campbell Scientific Ltd. (CSL)**

Campbell Park  
80 Hathern Road  
Shepshed, Loughborough LE12 9GX  
UNITED KINGDOM  
www.campbellsci.co.uk • sales@campbellsci.co.uk

### **Campbell Scientific Ltd. (France)**

3 Avenue de la Division Leclerc  
92160 ANTONY  
FRANCE  
www.campbellsci.fr • info@campbellsci.fr

### **Campbell Scientific Spain, S. L.**

Avda. Pompeu Fabra 7-9, local 1  
08024 Barcelona  
SPAIN  
www.campbellsci.es • info@campbellsci.es

*Please visit [www.campbellsci.com](http://www.campbellsci.com) to obtain contact information for your local US or International representative.*