

INSTRUCTION MANUAL



SC532A 9-Pin Peripheral to RS232 Interface

Revision: 4/09



Copyright © 1998-2009
Campbell Scientific, Inc.

Warranty and Assistance

The **SC532A 9-PIN PERIPHERAL TO RS232 INTERFACE** is warranted by CAMPBELL SCIENTIFIC, INC. to be free from defects in materials and workmanship under normal use and service for twelve (12) months from date of shipment unless specified otherwise. Batteries have no warranty. CAMPBELL SCIENTIFIC, INC.'s obligation under this warranty is limited to repairing or replacing (at CAMPBELL SCIENTIFIC, INC.'s option) defective products. The customer shall assume all costs of removing, reinstalling, and shipping defective products to CAMPBELL SCIENTIFIC, INC. CAMPBELL SCIENTIFIC, INC. will return such products by surface carrier prepaid. This warranty shall not apply to any CAMPBELL SCIENTIFIC, INC. products which have been subjected to modification, misuse, neglect, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for a particular purpose. CAMPBELL SCIENTIFIC, INC. is not liable for special, indirect, incidental, or consequential damages.

Products may not be returned without prior authorization. The following contact information is for US and International customers residing in countries served by Campbell Scientific, Inc. directly. Affiliate companies handle repairs for customers within their territories. Please visit www.campbellsci.com to determine which Campbell Scientific company serves your country.

To obtain a Returned Materials Authorization (RMA), contact CAMPBELL SCIENTIFIC, INC., phone (435) 753-2342. After an applications engineer determines the nature of the problem, an RMA number will be issued. Please write this number clearly on the outside of the shipping container. CAMPBELL SCIENTIFIC's shipping address is:

CAMPBELL SCIENTIFIC, INC.

RMA# _____
815 West 1800 North
Logan, Utah 84321-1784

For all returns, the customer must fill out a "Declaration of Hazardous Material and Decontamination" form and comply with the requirements specified in it. The form is available from our website at www.campbellsci.com/repair. A completed form must be either emailed to shanna@campbellsci.com or faxed to 435-750-9579. Campbell Scientific will not process any returns until we receive this form. If the form is not received within three days of product receipt or is incomplete, the product will be returned to the customer at the customer's expense. Campbell Scientific reserves the right to refuse service on products that were exposed to contaminants that may cause health or safety concerns for our employees.

CAMPBELL SCIENTIFIC, INC. does not accept collect calls.

SC532A Table of Contents

PDF viewers note: These page numbers refer to the printed version of this document. Use the Adobe Acrobat® bookmarks tab for links to specific sections.

1. Function	1
2. Physical Description	1
3. Specifications	2
4. Hardware Connections	3
5. Operation	3
6. Portable Battery Power	4

Appendices

A. Pin Description	A-1
B. Schematic	B-1
C. Component Location	C-1

Figures

1. SC532A Case Top	1
2. Connection Block Diagram.....	3
3. DC Cable for 12 VDC Datalogger Connection.....	3

Tables

1. SC532A Power Supply Connector.....	5
2. CSI Peripherals and Their Maximum Operating Current Requirements	5
3. SC532A Jumper Guide	5
A-1. SC532A Pin Description.....	A-1
A-2. DTE 25 Pin Configuration.....	A-2
A-3. DTE 9 Pin Configuration.....	A-2

SC532A 9-Pin Peripheral to 9-Pin RS232 Interface

1. Function

The SC532A Peripheral Interface connects an IBM® PC compatible computer, with appropriate software, to certain Campbell Scientific datalogger peripherals including phone modems (COM200, COM210, COM220), storage modules (SM4M/16M, SM192/716), MD9 multi-drop interface, and Seimac SCD/Argos satellite transmitter.

Like the SC532, the SC532A supplies 5 VDC on the PERIPHERAL connector (pin 1) to power 5V peripherals like the SM16M. The SC532A also supplies 12 VDC (on pin 8) to power 12V peripherals such as the COM220, high-speed modems, and certain radios.

The SC532A has an internal jumper that selects either “SC532” or “PROG” mode. PROGRAM mode is for configuring the Seimac SCD/Argos satellite transmitter. The factory setting is “SC532” which is appropriate for most applications. The case can be opened by twisting a 1/8 inch (3 mm) standard screwdriver in the four seam slots.

2. Physical Description

An SC12 and a 10873 cable are shipped with the SC532A. The SC12 cable connects the SC532A 9-pin female D-Sub labeled “PERIPHERAL” to your CSI peripheral. The 10873 cable connects a PC COM port to the other 9-pin connector labeled “PC.”

The SC532A is typically powered by the 15966 wall charger (purchased separately). This wall charger supplies 12VDC @ 800 mA which is sufficient for any listed peripheral. The power jack on the SC532A allows convenient wall charger replacement. If only 5V peripherals are used, an AC adapter outputting just 6 VDC with enough current capability and having the correct barrel connector size and polarity will do (see Tables 1 and 2).

The 14020 and 14291 field cables are available (see Portable Battery Power section) for remote sites lacking 120 VAC. The 14020 and 14291 field cables are purchased separately.



FIGURE 1. SC532A Case Top

3. Specifications

Input voltage (to POWER jack)	A) 5 Volt Peripherals require 6 – 17 VDC B) 12 Volt Peripherals require 12 – 17 VDC Barrel connector: inner bore (+), outer sleeve (-) (factory 120 V AC adapter supplies 12 VDC unregulated @ 1A)
Output voltages	+5 VDC \pm 0.075 VDC on PERIPHERAL connector pin 1 and 6 – 17 VDC on PERIPHERAL connector pin 8, depending on AC adapter in use (12 VDC unregulated with factory AC adapter)
Current available to 5 V peripheral	+5 VDC @ 120 mA maximum at 25°C derate 12 mA for each AC adapter Volt above 9 VDC derate 1 mA for each °C above 25°C
Current available to 12 V peripheral	Factory provided AC adapter supplies unregulated 12 VDC @ 1 Amp
RS232 output levels	+10 VDC \pm 1 VDC -10 VDC \pm 1 VDC Maximum output impedance = 1100 Ω
RS232 input levels	\pm 30 V maximum Low threshold \leq 0.8 V High threshold \geq 3.5 V Input impedance at least 3000 Ω
9-pin inputs	Low \leq 1 V; High \geq 3.5 V
9-pin outputs	Low \leq 0.5 V; High \geq 3.5 V
Current drain	5 mA typical quiescent 10 mA maximum quiescent
Port Configuration	PC: 9-pin D-Subminiature Female configured as DCE. Peripheral: 9-pin D-Subminiature Female connects to peripheral through SC12 Two Peripheral Connector Cable supplied with the SC532A.
Dimensions	4 5/8 x 1 3/4 x 1 inches (allow up to 1 1/4 inches extra on 1 3/4 dimension for power connector strain relief)
Weight	1 1/4 pounds with AC adapter

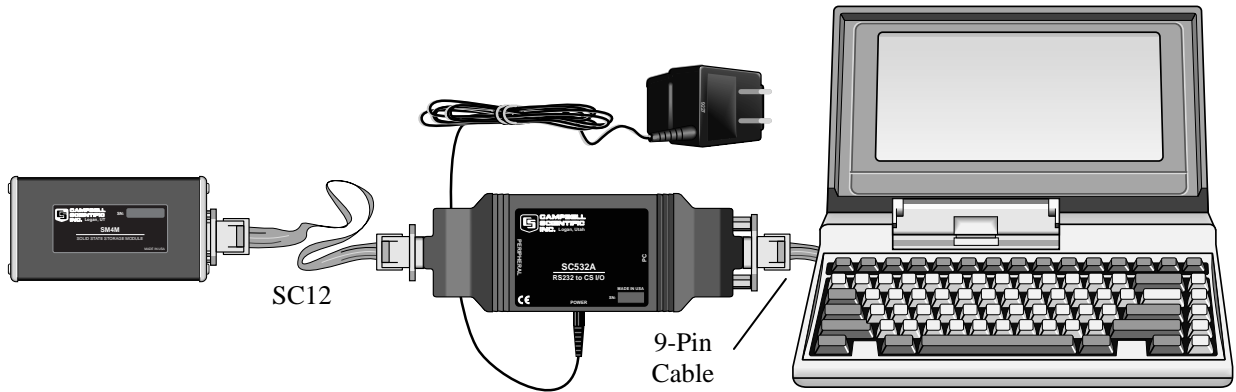


FIGURE 2. Connection Block Diagram (9-pin cable, side power jack)

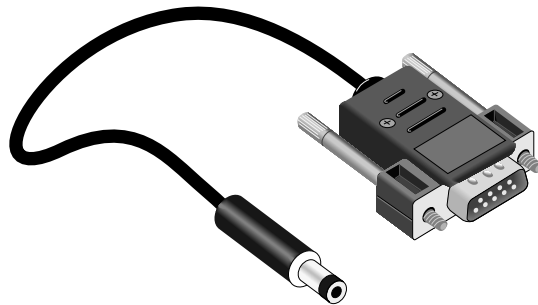


FIGURE 3. DC Cable for 12 VDC Datalogger Connection

4. Hardware Connections

Figure 2 shows the connection from a Campbell Scientific peripheral to a PC's 9-pin RS232 COM port via SC532A and data cables.

5. Operation

A CSI peripheral's logic levels (0V low, 5V high) are converted to RS232 levels (-10V and +10V respectively) by the SC532A.

The SC532A supplies regulated 5 VDC and unregulated 12 VDC power for peripherals. An AC adapter that plugs into a 120 VAC wall outlet is available as a common accessory.

You will need to write your own software if you are not using PC208 or PC208W Datalogger Support Software. Read the specific peripheral manual for the necessary control sequence.

Appendix A contains the SC532A and the DTE computer pin descriptions.

6. Portable Battery Power

The 14020 and 14291 field cables are available for remote sites lacking 120 VAC. The 14020 field cable is equipped with a DB9 for connection to the datalogger's CS I/O port.

The 14291 cable terminates in two wires for attachment to the 12 V and power ground terminals of the datalogger or 12 Vdc power supply. For earlier dataloggers lacking 12 V on CS I/O port (check voltage between pin 8 and power ground), the 14291 field cable needs to be used.

If using the 14291 cable, connect RED wire to the "12 V" terminal and BLACK wire to power ground terminal. The correct barrel connector polarity is (+) on the inner bore and (-) on the outer sleeve. If using a separate 12 Vdc power supply, a common ground must be shared with the datalogger's power source.

See Table 2 for the maximum operating currents required for selected CSI peripherals.

CAUTION

Before plugging power connector into SC532A, if you have 1) the 14291 field cable, 2) replaced the factory AC adapter, or 3) built your own dc power cable, make sure that the voltage polarity is correct on the coaxial (barrel) connector. Application of REVERSED POLARITY power to the SC532A can damage the SC532A, datalogger, and peripheral (not covered under warranty)!

Barrel connector inner bore (+)

Barrel connector outer sleeve (-)

The maximum POWER input voltage is 17 VDC!

TABLE 1. SC532A Power Supply Connector

Barrel Connector Polarity and Size

Inner Conductor (bore) (+) 6 to 17 VDC (see Section 2)
 Outer Conductor (sleeve) (-) GND

O.D is 5.5mm (0.216 in.)
 I.D. is 2.5mm (0.098 in.)
 Sleeve length = 11.5mm (0.453 in.) or more

TABLE 2. CSI Peripherals and Their Maximum Operating Current Requirements

<u>5 VDC Peripherals</u>	<u>Maximum Current</u>
MD9 Multidrop Interface	< 90 mA
SM4M/16M Storage Module	< 100 mA
SM192/716 Storage Module	< 20 mA
SM64 Storage Module	< 30 mA
CSM1 Card Storage Module	< 18 mA

<u>12 VDC Peripherals</u>	<u>Maximum Current</u>
COM220 Modem	< 30 mA
COM210 Modem	< 160 mA
COM200 Modem	< 140 mA
COM310 Voice Modem	< 160 mA
COM300 Voice Modem	< 180 mA
Seimac Argos SDC Transmitter	< 700 mA

TABLE 3. SC532A Jumper Guide

P4 Jumper

- A. **SC532** mode (factory default)
- B. **PROG**ram Seimac SCD/Argos satellite transmitter

Appendix A. Pin Description

The SC532A 9-pin female port is configured as Data Communications Equipment (DCE) for direct cable connection to Data Terminal Equipment (DTE) such as an IBM-PC serial port.

The pin descriptions of the SC532A PC and PERIPHERAL connectors are listed in the following table.

TABLE A-1. SC532A Pin Descriptions

PIN = Pin number
I = Signal Into the SC532A
O = Signal Out of the SC532A

PC CONNECTOR
9-PIN D-SUB FEMALE

<u>PIN</u>	<u>I/O</u>	<u>DESCRIPTION</u>
1	I	not used
2	O	RX
3	I	TX
4		DTR
5		GND
6		not used
7	I	RTS
8	O	not used
9	I	RING

PERIPHERAL CONNECTOR
9-PIN D-SUB FEMALE

<u>PIN</u>	<u>I/O</u>	<u>DESCRIPTION</u>
1	O	+5V SUPPLY
2		GND
3	I	RING
4	I	RX
5	O	ME
6	O	SDE EN
7	O	CLK/HS
8	O	+12V
9	O	TX

A PC configured as DTE, such as the IBM-PC, adheres to the description in Table A-2 or A-3

TABLE A-2. DTE 25 Pin Configuration

PIN= 25-pin number
 ABR = Abbreviation for the function name
 I = Signal Into the computer
 O = Signal Out of the computer


PIN	ABR	I/O	Function
1			Frame Ground.
2	TX	O	Transmit Data: Characters are transmitted from the computer on this line.
3	RX	I	Receive Data: Characters transmitted by a peripheral are received on this line.
4	RTS	O	Request To Send: The computer uses this line to control the peripheral's PE lines.
20	DTR	O	Data Terminal Ready: The computer uses this line to control the peripheral's ME and CLK/HS line.
22	RING	I	Ring Indicator: Raised to get the attention of the computer.
7	SG		Signal Ground: Voltages are measured relative to this point.

TABLE A-3. DTE 9 Pin Configuration


PIN = 9-pin number
 ABR = Abbreviation for the function name
 I = Signal Into the computer
 O = Signal Out of the computer


PIN	ABR	I/O	Function
1	CD	I	Carrier Detect
2	RX	I	Receive Data
3	TX	O	Transmit Data
4	DTR	O	Data Terminal Ready
5	SG		Signal Ground
6	DSR	I	Data Set Ready
7	RTS	O	Request to Send
8	CTS	I	Clear to Send
9	RING	I	Ring Indicator

Appendix B. Schematic

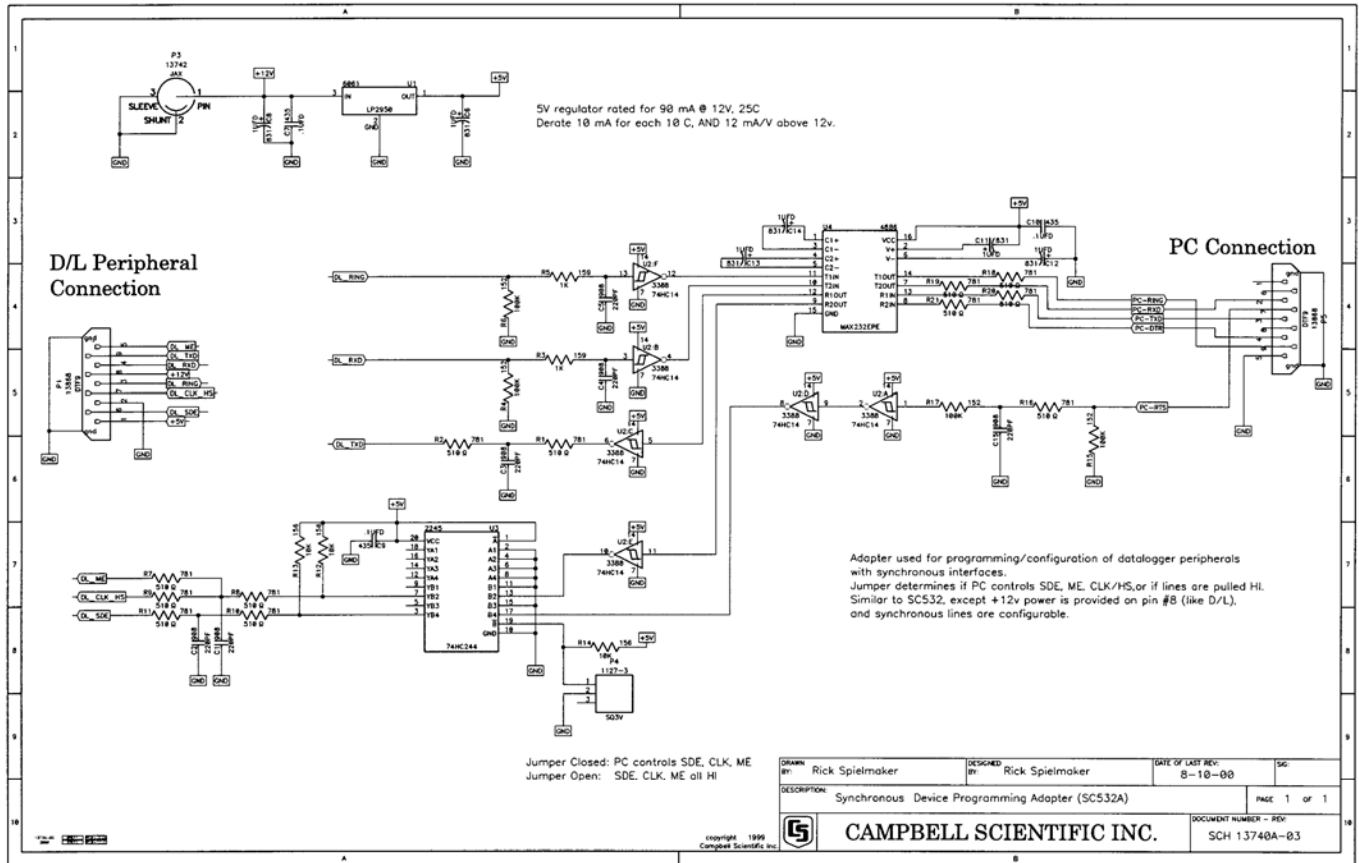

Appendix C. Component Location

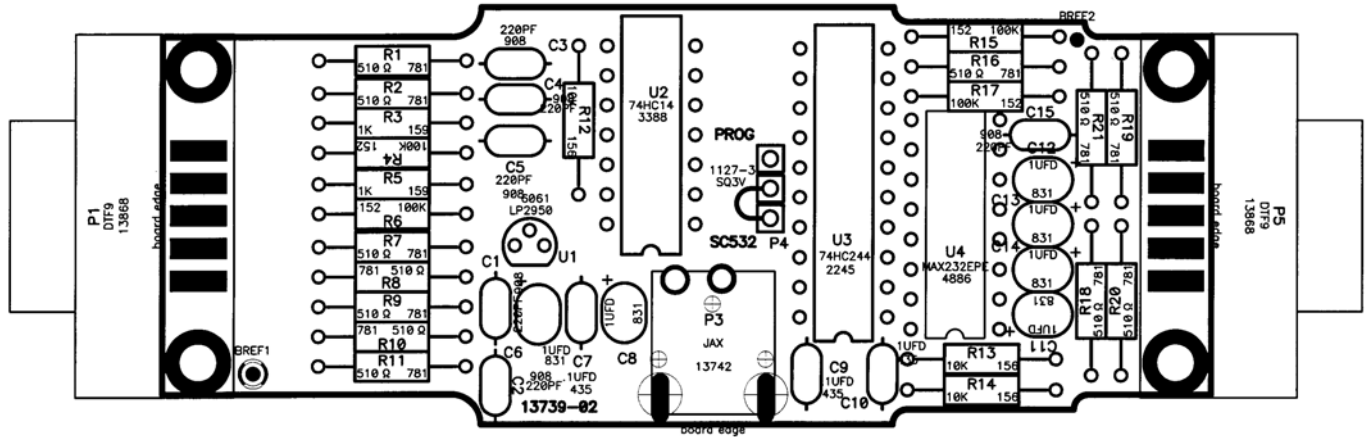

	DESIGNED By: Craig Dahl	PROJECT MANAGER: Rick Spielmaker	DATE OF LAST REV: 08-10-00
	DESCRIPTION: ASY PCS SM532A		SIG:
CAMPBELL SCIENTIFIC INC <small>copyright 1999</small>		DOCUMENT NUMBER - REV: ADR 13740A-03	

Campbell Scientific Companies

Campbell Scientific, Inc. (CSI)

815 West 1800 North
Logan, Utah 84321
UNITED STATES

www.campbellsci.com • info@campbellsci.com

Campbell Scientific Africa Pty. Ltd. (CSAf)

PO Box 2450
Somerset West 7129
SOUTH AFRICA

www.csafrica.co.za • cleroux@csafrica.co.za

Campbell Scientific Australia Pty. Ltd. (CSA)

PO Box 444
Thuringowa Central
QLD 4812 AUSTRALIA

www.campbellsci.com.au • info@campbellsci.com.au

Campbell Scientific do Brazil Ltda. (CSB)

Rua Luisa Crapsi Orsi, 15 Butantã
CEP: 005543-000 São Paulo SP BRAZIL

www.campbellsci.com.br • suporte@campbellsci.com.br

Campbell Scientific Canada Corp. (CSC)

11564 - 149th Street NW
Edmonton, Alberta T5M 1W7
CANADA

www.campbellsci.ca • dataloggers@campbellsci.ca

Campbell Scientific Centro Caribe S.A. (CSCC)

300 N Cementerio, Edificio Breller
Santo Domingo, Heredia 40305
COSTA RICA

www.campbellsci.cc • info@campbellsci.cc

Campbell Scientific Ltd. (CSL)

Campbell Park
80 Hathern Road
Shepshed, Loughborough LE12 9GX
UNITED KINGDOM

www.campbellsci.co.uk • sales@campbellsci.co.uk

Campbell Scientific Ltd. (France)

Miniparc du Verger - Bat. H
1, rue de Terre Neuve - Les Ulis
91967 COURTABOEUF CEDEX
FRANCE

www.campbellsci.fr • info@campbellsci.fr

Campbell Scientific Spain, S. L.

Psg. Font 14, local 8
08013 Barcelona
SPAIN

www.campbellsci.es • info@campbellsci.es

Please visit www.campbellsci.com to obtain contact information for your local US or International representative.